

Always here to help you

Register your product and get support at
www.philips.com/welcome

HD7854


Question?
Contact
Philips
























EN	User manual	5
----	-------------	---

CS	Příručka pro uživatele	19
----	------------------------	----

PHILIPS

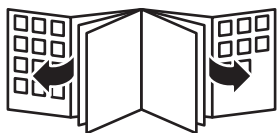

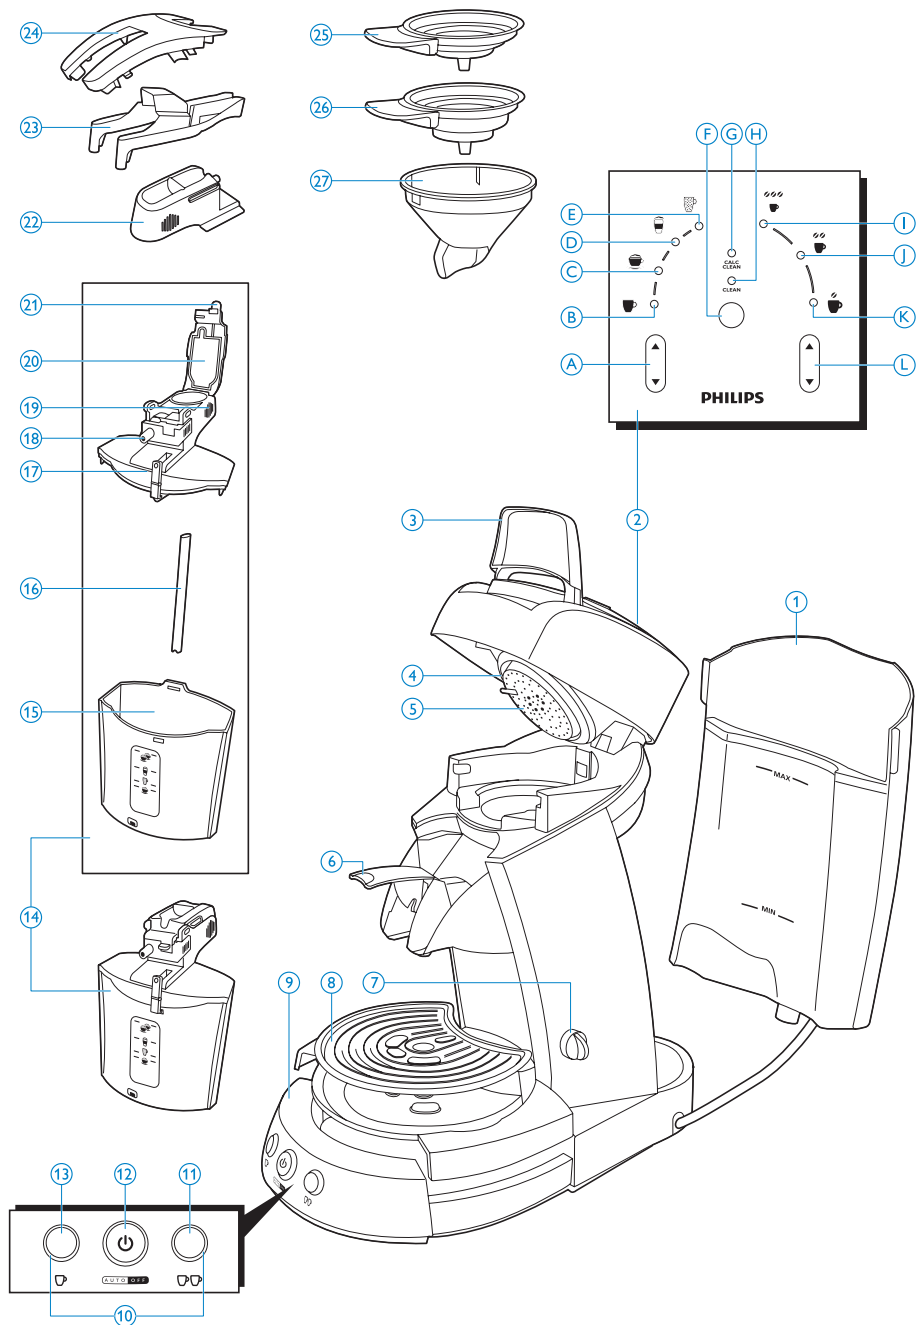

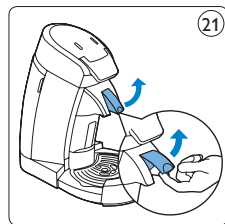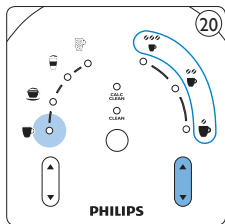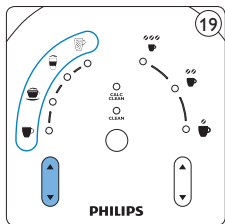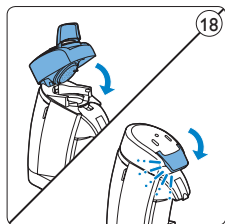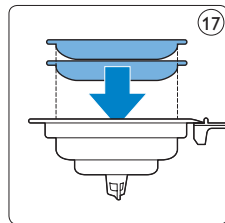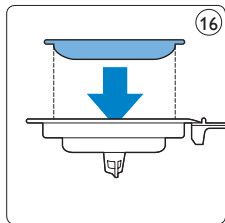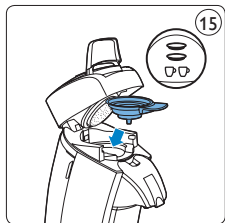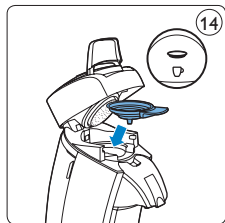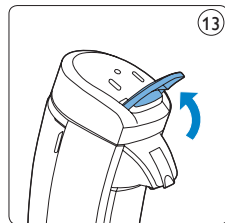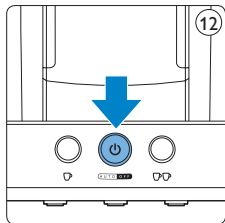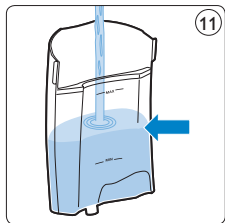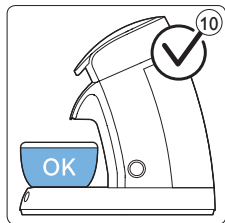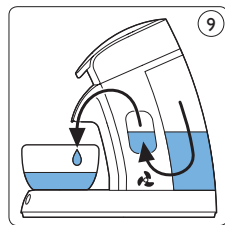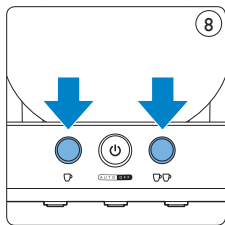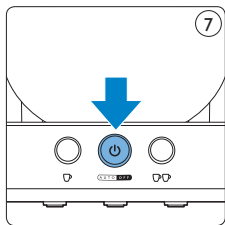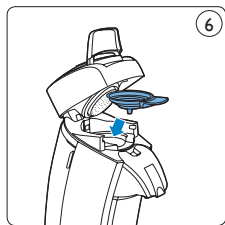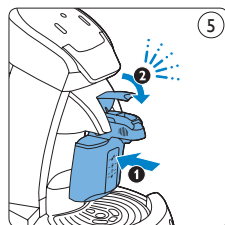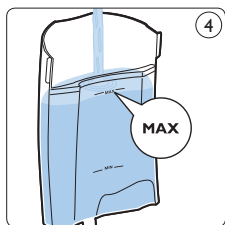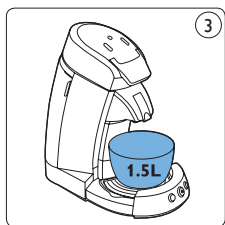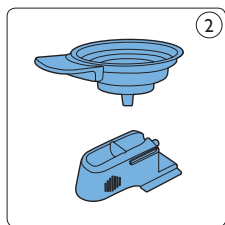

1 Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Make your coffee moments truly special with SENSEO®. This unique system combines the easy-to-use Philips SENSEO® coffee machine with the specially developed Douwe Egberts SENSEO® coffee pods, giving you a full, smooth coffee with a delicious foam layer.

The SENSEO® Latte Select coffee machine offers you delicious coffee specialties made with fresh frothed milk. Choose from cappuccino, latte macchiato, caffè latte and regular SENSEO® black coffee - all at the touch of a button.

- 10 Light rings
- 11 2-cup button ☞☞
- 12 On/off button with light ring
- 13 1-cup button ☞
- 14 Milk container unit
- 15 Milk container
- 16 Milk tube
- 17 Milk container lid release lever
- 18 Steam inlet
- 19 Milk container lid, including frothing unit
- 20 Milk container lid cover
- 21 Release tab of milk container lid cover
- 22 Calc-Clean tool
- 23 Coffee spout
- 24 Coffee spout cover
- 25 1-cup pod holder ☞
- 26 2-cup pod holder ☞☞
- 27 Coffee collector

2 General description (Fig. 1)

- 1 Water reservoir
- 2 Control panel
 - A Coffee selector
 - B SENSEO® black coffee indicator
 - C Cappuccino indicator
 - D Latte macchiato indicator
 - E Caffè latte indicator
 - F CLEAN/CALC CLEAN button
 - G CALC CLEAN indicator
 - H CLEAN indicator
 - I Strong black coffee indicator
 - J Normal black coffee indicator
 - K Mild black coffee indicator
 - L Strength selector
- 3 Lid lever
- 4 Sealing ring
- 5 Water distribution disc
- 6 Milk container lever
- 7 Height adjustment knob for drip tray
- 8 Cup tray
- 9 Drip tray

3 Important

Read this user manual carefully before you use the machine and save it for future reference.

3.0.1 Danger

- Never immerse the machine in water or any other liquid.

3.0.2 Warning

- Check if the voltage indicated on the bottom of the machine corresponds to the local mains voltage before you connect the machine.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children shall not play with the appliance.

- Do not use the machine if the plug, the mains cord or the machine itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- Philips strongly advises you to descale this SENSEO® machine when the CALC CLEAN indicator tells you that descaling is required. If the machine is not descaled in time and according to the procedure described in chapter 'Descaling', this may lead to technical failures.

3.0.3 Caution

- Correct cleaning of the milk container is very important for reliable performance of the milk container unit and good frothing results. See chapter 'Cleaning the milk container unit'.
- Always return the machine to a service centre authorised by Philips for examination or repair. Do not attempt to repair the machine yourself, otherwise your guarantee becomes invalid.
- Never put normal ground coffee or use torn pods in the SENSEO® machine, as this causes it to become blocked.
- Do not use the machine in combination with a transformer, as this could cause hazardous situations.
- Always put the machine on a flat and stable surface.
- Never let the machine operate unattended.
- Do not use the machine at altitudes higher than 2200 metres above sea level.
- The machine does not work at temperatures below 10°C.
- Flush the coffee machine with fresh water before you use it for the first time (see chapter 'First use'). This causes the boiler to fill with water, which is essential for the machine to work properly.
- Do not use the SENSEO® machine in combination with water softeners based on sodium exchange.
- Never use a descaling agent based on mineral acids such as sulphuric acid, hydrochloric acid, sulphamic acid and acetic acid (e.g. vinegar). These descaling agents may damage your SENSEO® coffee machine.
- Never turn your SENSEO® machine on its side, as water may leak from the boiler. Always keep it in upright position, also during transport.
- This machine is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.

3.1 Compliance with standards

- This machine complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the machine is safe to use based on scientific evidence available today.
- The energy consumption of this machine in off mode is less than 1 watt. This means that this machine complies with European Directive 2005/32/EC, which sets the ecological design requirements for energy-using products.

4 First use

4.1 Unpacking

- 1 Remove the machine from the box.

Note: (Fig. 2)

Make sure that you store the loose parts, i.e. the 2-cup pod holder and the Calc-Clean tool, in a safe place. They are essential parts of the machine.

Warning:

The Calc-Clean tool is equipped with a magnet. To avoid damage, keep the Calc-Clean tool away from credit cards, bank cards or other data carriers that can be damaged by magnetism.

4.2 Flushing the machine to fill the boiler

Warning:

YOU CANNOT BREW COFFEE IF YOU HAVE NOT FLUSHED THE SENSEO COFFEE MACHINE FIRST!

Flushing causes the boiler to be filled with water. After this, the machine is ready for use. Flush the machine in the following way:

- 1 Place a bowl with a capacity of at least 1.5 litres on the cup tray. (Fig. 3)
- 2 Fill the water reservoir with cold water up to the **MAX** indication and put it back onto the machine. (Fig. 4)
- 3 Make sure that the milk container unit is in place (Fig. 5).
- 4 Make sure that a pod holder, without pod or pods, is in place. (Fig. 6)
- 5 Put the plug in an earthed wall socket.

- 6 Press the on/off button . (Fig. 7)

- *The light rings around the 1-cup button  and the 2-cup button  light up continuously.*

- 7 To start flushing, press the 1-cup button  and the 2-cup button  briefly at the same time. (Fig. 8)

- *During the flushing cycle, the water in the water reservoir is flushed through the machine and the boiler is filled with water. The flushing cycle takes some time (approx. 90 to 150 seconds) (Fig. 9).*

Warning:

Never interrupt the flushing cycle halfway. If you do, the boiler does not fill itself properly.

Note:

During the flushing cycle, the machine produces more noise than during a regular brewing cycle.

- *The machine switches off automatically when the flushing cycle ends (Fig. 10). Now your Philips SENSEO® coffee machine is ready for use.*

Note:

If the machine does not work, repeat steps 1-7. Do not interrupt the flushing cycle.

5 Brewing SENSEO® coffee

5.1 Tips for the best SENSEO® quality

- Use fresh water every time.
- Use the SENSEO® coffee pods that have been specially developed by Douwe Egberts for your SENSEO® coffee machine for a full, round taste.
- Always use milk at refrigerator temperature (5-8°C) to obtain hot frothed milk of high quality for your cappuccino, latte macchiato or caffè latte.
- We advise you not to use rice or soy milk. These types of milk do not produce high-quality frothed milk.
- Remove used coffee pods directly after brewing.
- Rinse the milk container unit after you have brewed a cappuccino, latte macchiato or caffè latte with the CLEAN button (see section 'Rinsing after every use' in chapter 'Cleaning the milk container unit').
- Clean the milk container and the lid thoroughly if you are not going to use the milk container again that day (see section 'Cleaning all parts after the last use of the day' in chapter 'Cleaning the milk container unit').
- If you have not used the coffee machine for some time, flush the machine before you use it again (see section 'Flushing the coffee machine' in chapter 'Cleaning the machine') with fresh water before you use it again.

5.2 Filling the water reservoir

- 1 Fill the water reservoir with cold water to a level above the MIN indication and place it back onto the machine. (Fig. 11)



Warning:

The MIN indication indicates the minimum amount of water required for brewing coffee. Always fill the water reservoir beyond the MIN level.



Warning:

Never pour milk, coffee, hot water or carbonated water into the water reservoir.

5.3 Switching on the machine

- 1 Put the plug in an earthed wall socket.
- 2 Press the on/off button . (Fig. 12)

- *The light ring light flashes slowly while the water is heating up. Heating up takes approx. 90 seconds.*
- *The coffee machine is ready for use when the light ring around the on/off button lights up continuously.*
- *If the light ring around the on/off button flashes rapidly, the water reservoir does not contain enough water for brewing coffee.*

5.4 Placing a pod holder

- 1 Move the lid lever upwards to release the lid (Fig. 13).
- 2 Open the lid.
- 3 Place the appropriate pod holder in the machine.



Note:

You can only brew 2 cups at the same time if you brew SENSEO® black coffee.

- Use the 1-cup pod holder  if you want to make cappuccino, latte macchiato or caffè latte or one cup of SENSEO® black coffee, (Fig. 14)
- Use the 2-cup pod holder  if you want to make two cups of SENSEO® black coffee. (Fig. 15)

5.5 Placing one or two pods

Warning:

Never put normal ground coffee or use torn pods in the SENSEO® machine, as this causes it to become blocked.

- 1** Place the SENSEO® coffee pod or pods properly in the centre of the pod holder, with the convex side pointing downwards.
 - Place 1 SENSEO® coffee pod in the 1-cup pod holder . (Fig. 16)
 - Place 2 SENSEO® coffee pods in the 2-cup pod holder . (Fig. 17)

Note:

Make sure that the coffee in the pod or pods is evenly distributed and press the pod or pods lightly into the pod holder.

- 2** Close the lid and lock the lid lever (Fig. 18). Make sure that you push down the lid lever until it snaps home with a click.

Note:

Make sure the lid is closed properly and the lid lever is locked before you start brewing coffee.

5.6 Selecting the desired coffee variety

- 1** Press the coffee selector to select the desired coffee variety with or without milk (Fig. 19).
 - Select  to brew SENSEO® black coffee.
 - Select  to brew cappuccino.
 - Select  to brew latte macchiato.
 - Select  to brew caffè latte.
- 2** If you have selected SENSEO® black coffee , press the strength selector to select the desired coffee strength. By varying the strength, you also change the amount of coffee that is brewed. (Fig. 20)
 - Select  for a smaller amount of strong black coffee (60ml).
 - Select  for a normal amount of normal black coffee (125ml).
 - Select  for a larger amount of mild black coffee (145ml).

Note:

You cannot press the strength selector when you have selected one of the coffee varieties with milk.

5.7 Filling the milk container unit

Note:

This section only applies if you have selected one of the coffee varieties with milk as described in the previous section 'Selecting the desired coffee variety'. If you have selected SENSEO® black coffee, go straight to section 'Adjusting the cup tray height'.

- 1** Pull the milk container lever upwards with your finger to release the milk container unit (Fig. 21).
- 2** Pull the milk container unit forwards to remove it from the machine (Fig. 22).
- 3** Press the milk container lid release lever (1), tilt the milk container lid slightly (2) and pull the milk container lid upwards to remove it from the milk container (3) (Fig. 23).
- 4** Fill the milk container with cold milk straight from the refrigerator (5-8°C) up to the level required for the coffee variety (Fig. 24).

Note:

The amount of milk added to the coffee may vary due to variations in milk temperature or type of milk. It may also depend on how clean the milk container unit is.

- 5** Fasten the milk container lid onto the milk container ('click') (Fig. 25).

Warning:

Always check if the lid is fixed properly onto the milk container to prevent spillage when you place the milk container unit in the machine.

- 6** Slide the milk container unit into the coffee machine (1) and push down the milk container lever ('click') (2) (Fig. 5).

Note:

Push down the milk container lever as far as possible ('click') to make sure that the milk container unit is placed properly in the machine. You only obtain properly frothed milk if the milk container unit is placed properly.

5.8 Adjusting the cup tray height

- 1 Place one or two cups under the coffee spout.

Tip:

Do not use cups that are too large as they cause the coffee to get cold more quickly.

- 2 To minimise splattering, turn the knob to adjust the height of the cup tray so that the top of your cup is just under the spout (Fig. 26).

5.9 Brewing the desired coffee variety

- 1 Press the button indicating the number of cups of SENSEO® coffee you want to brew. (Fig. 8)
 - Press the 1-cup button  for one cup of SENSEO® black coffee, cappuccino, latte macchiato or caffè latte.
 - Press the 2-cup button  for two cups of SENSEO® black coffee.
 - *The SENSEO® coffee machine starts brewing and automatically supplies the correct amount of water and milk, depending on the coffee variety you have selected.*

Warning:

Do not remove the water reservoir during a brewing cycle, as this causes the machine to draw in air. When this happens, the next cup is only partly filled.

Warning:

Do not remove the milk container during a brewing cycle.

- 2 Remove the coffee pod or pods after use by lifting the pod holder out of the machine and emptying it.
Be careful when you do this, as there may still be some water or coffee on the coffee pod or pods.

5.9.1 Coffee varieties with milk

Each coffee variety with milk has its own distinctive brewing process:

- **Cappuccino**  is a rich combination of one-third coffee and two-thirds of freshly frothed hot milk with a creamy froth layer. When you brew a cappuccino, your cup is first filled with hot milk froth and then strong black coffee is brewed onto the froth. This causes the coffee to sink below the froth layer.

Note:

It is not possible to brew 2 cups of cappuccino at the same time. If you want to brew 2 cups of cappuccino, you have to fill the milk container up to the 2-cup cappuccino indication and brew two cups of cappuccino after each other by pressing the 1-cup button .

- **Latte macchiato**  is a 3-layer drink. It contains more milk than coffee. When you brew a latte macchiato, the machine first fills your cup with hot milk and milk froth and then stops for 15 seconds. During this time the milk sinks below the froth. Then the machine brews black coffee, which also sinks below the froth and settles above the layer of hot milk.
- **Caffè latte**  is a drink that contains milk and coffee in more or less equal amounts. When you brew a caffè latte, your cup is first filled with coffee and then hot frothed milk is added.

Note: (Fig. 27)

Each time you have used the milk container unit to brew a coffee variety with milk, the CLEAN indicator lights up to remind you to rinse the milk container unit if you no longer intend to brew a coffee variety with milk straightaway. See section 'Rinsing after every use' in chapter 'Cleaning the milk container unit'

5.10 Interrupting the brewing process

- 1 Press the on/off button  to interrupt the brewing process. (Fig. 12)

Note:

If you switch the machine back on after having interrupted the brewing process, the machine does not complete the interrupted brewing cycle.

5.11 Switching off

- 1 After use, press the on/off button  to switch off the machine. (Fig. 12)

Note:

If you do not switch off the machine, it switches off automatically after 30 minutes.

6 Cleaning the milk container unit

It is important that you clean the milk container unit regularly and thoroughly. Only a properly cleaned milk container unit performs well and produces consistently good frothing results.

- 1 If you do not plan to brew a coffee variety with milk again straightaway, **rinse the milk container within 30 minutes after use.**
- 2 After the last use of the day, **clean all parts of the milk container unit thoroughly.**

To clean the milk container unit properly, follow the procedure described below.

Note:

If you are unable to obtain high-quality milk froth, the milk container unit is probably dirty.

6.1 Rinsing after every use

- The CLEAN indicator lights up to remind you to rinse the milk container unit each time after you have used the machine to brew a coffee variety with milk (Fig. 27).

Note:

If you do not plan to brew a coffee variety with milk again straightaway, rinse the milk container unit within 30 minutes after use.

- 1 Pull the milk container lever upwards with your finger to release the milk container unit. Then pull the milk container unit forwards to remove it from the machine (Fig. 28).
- 2 Press the milk container lid release lever (1), tilt the milk container lid slightly (2) and pull the milk container lid upwards to remove it from the milk container (3) (Fig. 23).
- 3 Pour out any milk that is left in the milk container and rinse the milk container briefly under the tap.
- 4 Fill the milk container with **cold** water up to 2-cup cappuccino  indication.

Note:

Do not fill the milk container with warm or hot water. If you do, the machine only produces steam and does not clean the milk container unit properly.

- 5 Fasten the milk container lid onto the milk container ('click') (Fig. 25).
- 6 Slide the milk container unit into the coffee machine (1) and push down the milk container lever ('click') (2) (Fig. 5).
- 7 Place an empty cup under the coffee spout (Fig. 29).
- 8 Press the CLEAN button (Fig. 30).
 - *The milk container unit is rinsed.*

6.2 Cleaning all parts after the last use of the day

- 1 Press the milk container lid release lever (1), tilt the milk container lid slightly (2) and pull the milk container lid upwards to remove it from the milk container (3) (Fig. 23).
- 2 Pull the release tab at the front of the milk container lid cover upwards to open the cover. (Fig. 31)
- 3 Open the steam inlet by pulling it forward (1) and then move the steam inlet to the right (2). This part stays attached to the lid by means of a hinge. (Fig. 32)

Note:

You can only open the steam inlet if the milk container lid cover is open.

- 4 Pull the milk tube off the milk container lid (Fig. 33).
- 5 Clean the milk container, the milk container lid and the milk tube in the dishwasher or with a washing-up brush in hot water with some washing-up liquid. Rinse the parts with fresh water after cleaning (Fig. 34).

Note:

Cleaning in the dishwasher is recommended, especially when the milk container unit is very dirty. Before you put the milk container unit in the dishwasher, all parts that can be opened should be opened and all detachable parts should be detached.

- 6 After cleaning, push back the steam inlet (1), connect the milk tube (2) and close the milk container lid cover (3) (Fig. 35).

Note:

Push back the steam inlet before you close the lid, otherwise the steam inlet does not fit anymore.

Note:

Make sure that you push the milk tube far enough onto the connector so that the holes in the connector are covered. If you do not push the milk tube far enough onto the connector, you get less milk froth.

- 7 Fasten the milk container lid onto the milk container ('click') (Fig. 25).

Note:

Make sure that all parts of the milk container lid are dry before you reassemble the lid.

- 8 Slide the milk container unit into the coffee machine (1) and push down the milk container lever ('click') (2) (Fig. 5).

7 Cleaning the machine

Danger:

Never immerse the machine in water or any other liquid.

7.1 Cleaning the coffee machine

- 1 Always unplug the machine before you clean it.
- 2 Clean the outside of the machine with a damp cloth.
- 3 Remove the coffee collector (Fig. 36).
- 4 Remove the coffee spout cover and take the coffee spout out of the machine (Fig. 37).
- 5 Clean the coffee spout cover, the coffee spout, the coffee collector and the drip tray in hot water; if necessary with some washing-up liquid, or in the dishwasher (Fig. 38).
- 6 Hold the cup tray in your hand while you clean it with hot water. If necessary, use some washing-up liquid (Fig. 39).
The cup tray can also be cleaned in the dishwasher.

Warning:

To clean the cup tray, always remove it from the machine. It may prove sharp when handled incorrectly. Always handle it carefully.

- 7** Clean the pod holders in hot water; if necessary with some washing-up liquid, or in the dishwasher. (Fig. 40)
If the sieve in the centre of the pod holder is clogged, rinse the pod holder under a running tap. If necessary, use a washing-up brush.
- 8** Clean the water reservoir in hot water; if necessary with some washing-up liquid. (Fig. 41)

 Note:

If you use a washing-up brush, be careful not to damage the valve and float in the bottom of the water reservoir.

 Note:

The water reservoir can also be cleaned in the dishwasher.

- 9** Clean the water inlet on the machine with a moist cloth (Fig. 42).

 Warning:

Do not use an object with sharp edges to clean the water inlet.

- 10** Rinse the parts with fresh water after cleaning and put them back into the machine.
- 11** Clean the water distribution disc with a moist cloth (Fig. 43).
Be careful when you do this. Make sure that the rubber sealing ring does not get stuck under the edge of the water distribution disc. If it does, the coffee machine starts leaking.

 Note:

Be careful not to damage the metal tab on the water distribution disc.

7.2 Flushing the coffee machine

If you have not used the coffee machine for three days, you have to flush it with fresh water to refresh the water in the boiler before you use it again.

Flush the machine in the following way:

- 1** Fill the water reservoir with cold water up to the **MAX** indication and put it back onto the machine. (Fig. 4)
- 2** Put the 1-cup pod holder  or the 2-cup pod holder  in the machine without pod or pods. (Fig. 44)
- 3** Close the lid and lock the lid lever (Fig. 18).
- 4** Put a bowl (with a capacity of 1.5 litres) under the coffee spout to collect the water (Fig. 3).
- 5** Press the on/off button . (Fig. 7)
 - *The light rings around the 1-cup button  and the 2-cup button  light up continuously.*
- 6** To start flushing, press the 1-cup button  and the 2-cup button  briefly at the same time. (Fig. 8)
 - *During the flushing cycle, the water in the water reservoir is flushed through the machine and the boiler is filled with fresh water. The flushing cycle takes some time (approx. 90 to 150 seconds).*

 Warning:

Never interrupt the flushing cycle halfway. If you do, the boiler does not fill itself properly with fresh water.

 Note:

During the flushing cycle, the machine produces more noise than during a regular brewing cycle.

- *The machine switches off automatically when the flushing cycle ends.
Now your Philips SENSEO® coffee machine is ready for use again.*

8 Descaling

8.0.1 When to descale

- Descale the SENSEO® coffee machine as described below when the CALC CLEAN indicator goes on. The CALC CLEAN indicator goes on after you have brewed approx. 1000 cups of SENSEO® black coffee or 250 cups of SENSEO® coffee varieties with milk. You can also descale the SENSEO® coffee machine more often in the same way. You have to descale the machine at least every 3 months. The descaling procedure takes approx. 45 minutes (Fig. 45).

8.0.2 Why to descale

Scale builds up inside the machine during use. It is essential to descale the SENSEO® coffee machine when the CALC CLEAN indicator goes on. Your reasons to descale:

- It prolongs the life of your SENSEO® coffee machine
- It ensures maximum cup volume
- It ensures maximum coffee temperature
- The machine produces less sound during brewing
- It prevents malfunctioning

If the descaling procedure is not performed correctly, scale residues remain behind in the machine. This causes scale to build up more quickly and may cause permanent and irreparable damage to the machine.

8.0.3 Use the correct descaling agent

Only citric acid-based descalers are suitable for descaling the SENSEO® machine. This type of descaler descales the machine without damaging it. For the correct amount, see section 'Descaling procedure' below. Each descaling mixture can be used only once. After use, the descaling mixture is no longer active.

Philips SENSEO® has developed a special descaler (HD7012, HD7011, HD7006) for SENSEO® machines. For more information about this descaler, visit our website www.philips.com.

Warning:

Never use a descaling agent based on mineral acids such as sulphuric acid, hydrochloric acid, sulphamic acid and acetic acid (e.g. vinegar). These descaling agents will certainly damage your SENSEO® coffee machine.

8.1 Descaling procedure

The descaling procedure consists of 3 cycles:

- 1 descaling cycle (approx. 35 minutes)
- 2 rinsing cycles (approx. 10 minutes)

Warning:

You cannot descale the machine if the Calc-Clean tool is not placed in the coffee spout.

8.1.1 Descaling cycle

- 1** Remove the milk container unit from the machine, insert the Calc-Clean tool into the coffee spout and push down the milk container lever (Fig. 46).
- 2** Place the 1-cup pod holder  with a used coffee pod in the coffee machine. Close the lid and make sure that it is locked properly. (Fig. 47)

Note:

Always put a used coffee pod in the pod holder when you descale the machine. This pod serves as a 'filter' to prevent the sieve in the pod holder from getting clogged with scale residues.

- 3** Mix 50 grams of citric acid with 1 litre of water in a measuring jug. Stir until the powder has completely dissolved (Fig. 48).
- 4** Remove the water reservoir and fill it with the descaling mixture. Then put the water reservoir back onto the coffee machine (Fig. 49).
- 5** Put a bowl with a capacity of at least 1.5 litres under the spout to collect the descaling mixture. (Fig. 3)
- 6** Press the on/off button  to switch on the machine. (Fig. 7)

- *The machine is ready for descaling when the light ring around the on/off button lights up continuously.*

- 7 Press the CLEAN/CALC CLEAN button to start the descaling cycle. (Fig. 50)

Warning:

Never interrupt the descaling cycle. If you interrupt the descaling cycle, see chapter Troubleshooting for further instructions.

- The CALC light and the light ring around the on/off button start to flash slowly to indicate that the descaling cycle has started.
- The descaling cycle takes approx. 35 min. During this cycle, hot water comes out of the coffee spout at intervals because the machine pauses several times to let the descaler mixture act (Fig. 51).
- When all the water in the water reservoir has been used up, the descaling cycle is finished. The light ring around the on/off button starts to flash rapidly to indicate that the water reservoir is empty.

8.1.2 Rinsing cycle

- 1 Empty the bowl and place it back under the spout (Fig. 52).
- 2 Rinse the water reservoir (Fig. 53).
- 3 Fill the water reservoir with fresh tap water and place it back onto the coffee machine (Fig. 54).

Note:

Do not refill the water reservoir with used hot water or the used descaling mixture.

- *The machine is ready for the rinsing cycle when the on/off light lights up continuously.*
- 4 Press the CLEAN/CALC CLEAN button to rinse the machine. (Fig. 50)
 - *During the rinsing cycle, the indicators on the control panel on the lid light up anticlockwise sequentially to indicate that the machine is rinsing.*

Note:

The rinsing cycle takes a few minutes.

- 5 Repeat steps 1 to 4 one more time.

Note:

When all the water in the water reservoir has been used up, the rinsing cycle is finished and the appliance switches off automatically.

- 6 Remove the Calc-Clean tool from the coffee spout.
- 7 Remove the used pod and clean the pod holder to prevent the sieve in the centre from getting clogged.

9 Frost-free storage

If the coffee machine has already been used and therefore has been flushed with water, it may only be used and stored in a frost-free place to prevent it from becoming damaged.

10 Ordering accessories

To purchase accessories for this appliance, please visit our website www.shop.philips.com/service. If you have any difficulties obtaining accessories for your appliance, please contact the Philips Consumer Care Centre in your country. You will find the contact details at www.philips.com/support.

11 Environment

- Do not throw away the machine with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 55).

12 Guarantee and service

If you need service or information or if you have a problem, please visit the Philips website at **www.philips.com** or contact the Philips Consumer Care Centre in your country. You find its phone number in the worldwide guarantee leaflet. If there is no Consumer Care Centre in your country, go to your local Philips dealer. The purchase of the Philips SENSEO® coffee machine does not exhaust any of the rights of Sara Lee/Douwe Egberts or Philips under any of their patents nor does it confer upon the purchaser a licence under these patents.

13 Troubleshooting

This chapter summarises the most common problems you could encounter with the machine. If you cannot find the solution to your problem, you can find more solutions at www.philips.com/support. If you still cannot solve the problem, contact the Consumer Care Centre in your country (see chapter 'Guarantee and service').

The SENSEO® machine does not produce good or enough frothed milk.

- The milk container unit may be dirty. Clean the milk container unit by following the instructions in chapter 'Cleaning the milk container unit', section 'Cleaning all parts after the last use of the day'. We advise you to clean the milk container unit in the dishwasher.
- Make sure that you push the milk tube far enough onto the connector so that the holes in the connector are covered. If you do not push the milk tube far enough onto the connector, you get less milk froth.

- You may have used milk that is not cold enough. If the milk temperature is above the 8°C, the machine uses less milk. Make sure that you use cold milk straight from the refrigerator (5-8°C).
- You have used another type of milk than cow's milk (e.g. rice or soy milk). These kinds of milk do not produce high-quality frothed milk. To get the best frothed milk, we advise you to use semi-skimmed cow's milk.

Steam escapes from the SENSEO® machine during the brewing or cleaning cycle.

- When you brew a coffee variety with milk, some steam may escape from the machine. To ensure a perfect cup of coffee and to minimise steaming, fill the milk container up to the required level for the coffee variety.
- You may have forgotten to fill the milk container before brewing a coffee variety with milk. Fill the milk container up to the required level for the coffee variety.
- Perhaps the milk tube is not connected to the milk container lid. Connect the milk tube to the milk container lid. Make sure that you push the milk tube far enough onto the connector so that the holes in the connector are covered.
- Perhaps the milk container unit is dirty. Clean the milk container unit thoroughly as described in chapter 'Cleaning the milk container unit'. We advise you to clean the milk container unit in the dishwasher.
- Perhaps you did not push the milk container far enough into the machine. Make sure that the milk container is placed properly by pushing down the milk container lever as far as possible ('click'). This is necessary to ensure proper frothing results.
- You may have pressed the CLEAN/CALC CLEAN button to rinse the milk container unit without putting water in the milk container first. Make sure that you always fill the milk container with water to rinse it. Some steam always escapes from the machine during the rinsing process. This steam is necessary to clean the milk container unit thoroughly.

- You may have filled the milk container with warm water to rinse the milk container unit. Fill the milk reservoir with cold water.

There is some milk left in the milk container after brewing a coffee variety with milk.

- It is normal that there is some milk left in the milk container after you have brewed a coffee variety with milk. This extra milk is required to ensure high-quality frothed milk.
- Perhaps you filled the milk container beyond the level required for the coffee variety you wanted to brew.
- You may have used milk that is not cold enough. If the milk temperature is above the 8°C, the machine uses less milk. Make sure that you use cold milk straight from the refrigerator (5-8°C).

The coffee varieties with milk are not hot enough.

- It is normal that a coffee variety with milk is less hot than a cup of SENSEO® black coffee, as the milk is heated to a lower temperature to ensure high-quality frothed milk.
- You can preheat the cups with hot water to keep the coffee hot longer. The best way to do this is by pressing the 1-cup button  without using a coffee pod.
- You may have used cups that are too large. Large cups cause the coffee to get cold more quickly. We advise you to use a 180ml cup for cappuccino, a 260ml cup for latte macchiato and a 220ml cup for caffè latte.

The SENSEO® machine splatters when it brews a coffee variety with milk.

- You may have used milk that is too warm. Make sure that you use cold milk straight from the refrigerator (5-8°C).

The CALC CLEAN indicator lights up continuously.

- The CALC CLEAN indicator goes on when you need to descale the machine. This happens after 1000 cups of SENSEO® black coffee or 250 cups of cappuccino, latte macchiato or caffè latte have been brewed. To descale your SENSEO® machine, follow the instructions in chapter 'Descaling'. The CALC CLEAN indicator only goes out after the descaling procedure has been performed correctly and the Calc-Clean tool has been removed.

I pressed the CLEAN/CALC CLEAN button, but the machine does not work.

- If you want to rinse the milk container unit, make sure that you fill the milk container with cold water and that you insert the milk container unit properly into the machine.
- If you want to descale the machine, make sure that the Calc-Clean tool is placed correctly. See chapter 'Descaling' for more details.
- Perhaps the machine is still heating up (the light ring around the on/off button flashes slowly). The machine needs some time to heat up before descaling is possible.

The descaling cycle lasted only 5 minutes.

- The descaling cycle was probably interrupted. This can have several causes: 1) You pressed the on/off button during the descaling cycle 2) You removed the water reservoir during the descaling cycle 3) You did not place the Calc-Clean tool correctly or removed it from the machine during the descaling cycle.
- To restart the descaling procedure: 1) Remove the Calc-Clean tool 2) Flush the machine by pressing the 1-cup button  and the 2-cup button  briefly at the same time 3) Reinsert the Calc-Clean tool and press the CLEAN/CALC CLEAN button to start the descaling procedure.

The light ring around the on/off button continues to flash rapidly.

- When the light ring around the on/off button flashes, there is not enough water in the water reservoir to brew coffee. To brew coffee, the water in the water reservoir must be above the MIN level.
- You may have selected a coffee variety with milk (cappuccino, caffè latte or latte macchiato) while the milk container unit is not placed in the machine or is not placed in the machine correctly. Place the milk container unit filled with milk in the machine if you want to brew a coffee variety with milk.
- The water reservoir has not been placed properly. Remove the water reservoir and put it back onto the machine in the correct position.
- You may be using the SENSEO® machine in a room with a temperature below 10°C. The SENSEO® machine does not work below 10°C. Check if the SENSEO® machine functions normally when you use it in a room with a temperature above 10°C.

The SENSEO® machine produces more sound than usual.

- When the machine froths milk for a coffee variety with milk, it is perfectly normal that it produces more sound than when it brews SENSEO® black coffee.
- Perhaps the cover of the milk container lid is not closed properly. Always close the cover properly ('click') before you slide the milk container unit back into the machine.

I do not know what types of milk to use.

- To get the best milk froth, we advise you to use semi-skimmed cow's milk. Other types of milk (e.g. rice milk or soy milk) do not produce high-quality frothed milk.

I do not know how to use the SENSEO® machine to produce frothed milk only.

- It is not possible to make frothed milk only. The machine has been designed to produce coffee varieties with fresh frothed milk.

1 Úvod

Blahopřejeme vám k nákupu a vítáme vás ve společnosti Philips. Abyste mohli plně využít podpory, kterou Philips poskytuje, zaregistrujte svůj výrobek na adrese **www.philips.com/welcome**.

Dopřejte si opravdu mimořádné okamžiky s kávou díky systému SENSEO®. Tento jedinečný systém v sobě spojuje snadno použitelný kávovar SENSEO® společnosti Philips s kávovými sáčky SENSEO® speciálně vytvořenými společností Douwe Egberts, které vám poskytnou jemnou, bohatě aromatickou kávu s lahodnou krémovou vrstvou.

Kávovar SENSEO® Latte Select nabízí lahodné kávové speciality vyrobené pomocí čerstvě napěněného mléka. Cappuccino, Latte Macchiato, Café Latte a obvyklá černá káva SENSEO® – vše po stisknutí tlačítka.

- 7 Knoflík nastavení výšky tácku na odkapávání
- 8 Táček na šálky
- 9 Táček na odkapávání
- 10 Světelné kroužky
- 11 Tlačítko pro dva šálky ☞☞
- 12 Vypínač se světelným kroužkem
- 13 Tlačítko pro jeden šálek ☞
- 14 Jednotka nádržky na mléko
- 15 Nádržka na mléko
- 16 Trubička na mléko
- 17 Páčka pro uvolnění víka nádržky na mléko
- 18 Vstup páry
- 19 Víko nádržky na mléko včetně napěňovací jednotky
- 20 Kryt víka nádržky na mléko
- 21 Uvolňovací jazyček krytu víka nádržky na mléko
- 22 Nástroj Calc-Clean
- 23 Výstup kávy
- 24 Kryt výstupu kávy
- 25 Držák sáčků pro jeden šálek ☞
- 26 Držák sáčků pro dva šálky ☞☞
- 27 Sběrač kávy

2 Všeobecný popis (Obr. 1)

- 1 Zásobník na vodu
- 2 Ovládací panel
 - A Volič kávy
 - B Kontrolka černé kávy SENSEO®
 - C Kontrolka kávy Cappuccino
 - D Kontrolka kávy Latte Macchiato
 - E Kontrolka kávy Café Latte
 - F Tlačítko CLEAN/CALC CLEAN
 - G Tlačítko CALC CLEAN
 - H Tlačítko CLEAN
 - I Kontrolka silné černé kávy
 - J Kontrolka normální černé kávy
 - K Kontrolka slabé černé kávy
 - L Volič intenzity
- 3 Páčka víka
- 4 Těsnicí kroužek
- 5 Destička pro rozvod vody
- 6 Páčka nádržky na mléko

3 Důležité

Před použitím přístroje si pečlivě přečtěte tuto uživatelskou příručku a uschovejte ji pro budoucí použití.

3.0.1 Nebezpečí

- Nikdy neponořujte přístroj do vody ani do jiné kapaliny.

3.0.2 Varování

- Zkontrolujte, zda napětí uvedené na spodní části přístroje odpovídá napětí sítě. Teprve pak připojte přístroj k napájení.
- Děti od 8 let a osoby s omezenými fyzickými, senzorickými nebo mentálními schopnostmi nebo nedostatečnou zkušeností či znalostí mohou přístroj používat jedině v případě, že jsou pod dohledem nebo byly poučeny o bezpečném používání přístroje a rozumí všem rizikům spojeným s používáním přístroje. Čištění a uživatelskou údržbu nesmí provádět děti bez dozoru.

- Děti si s přístrojem nesmí hrát.
- Pokud byste zjistili závadu na zástrčce, napájecím kabelu nebo na přístroji, dále jej nepoužívejte.
- Pokud je poškozen napájecí kabel, musí jeho výměnu provést společnost Philips, autorizovaný servis společnosti Philips nebo obdobně kvalifikovaný pracovník, aby se předešlo možnému nebezpečí.

3.0.3 Upozornění

- Správné čištění nádržky na mléko je velmi důležité pro spolehlivé fungování jednotky nádržky na mléko a pro kvalitní napěňování. Další informace naleznete v kapitole „Čištění jednotky nádržky na mléko“.
- Kontrolu nebo opravu přístroje svěřte vždy servisu společnosti Philips. Nepokoušejte se přístroj opravit sami, záruka by pozbyla platnosti.
- Do přístroje SENSEO® nikdy nedávejte běžnou mletou kávu ani nepoužívejte roztrhané sáčky s kávou, aby nedošlo k jeho ucpání.
- Nepoužívejte přístroj v kombinaci s transformátorem – mohlo by to přivodit nebezpečné situace.
- Přístroj vždy umístěte na rovnou stabilní podložku.
- Nikdy nenechte přístroj v chodu bez dozoru.
- Přístroj nepoužívejte v nadmořských výškách nad 2 200 metrů.
- Přístroj nefunguje při teplotách nižších než 10 °C.
- Před prvním použitím vypláchněte kávovar čerstvou vodou (viz kapitola „První použití“). Nádržka se naplní vodou, což je nezbytné pro správné fungování přístroje.
- V přístroji SENSEO® nepoužívejte změkčovače vody založené na principu výměny sodíku.

- Společnost Philips vám důrazně doporučuje odstraňovat vodní kámen v přístroji SENSEO®, když se rozsvítí kontrolka CALC CLEAN, což indikuje, že je nutné odstranit vodní kámen. Pokud nedojde k včasnému odstranění vodního kamene podle pokynů uvedených v kapitole „Odstraňování vodního kamene“, může dojít k technické poruše.
- Nikdy nepoužívejte prostředek na odstranění vodního kamene založený na minerálních kyselinách, jako jsou kyselina sírová, chlorovodíková, sulfaminová a octová (např. ocet). Tyto prostředky pro odstranění vodního kamene mohou kávovar SENSEO® poškodit.
- Nikdy nepokládejte kávovar SENSEO® na bok, protože by mohla unikat voda z ohřívače. Vždy jej uchovávejte ve svislé poloze – to platí i pro přepravu.
- Tento přístroj je určen pouze pro běžné domácí používání. Není určen pro používání v prostředích jako jsou kuchyňky pro personál obchodů, kancelář nebo farem nebo v jiných pracovních prostředích. Přístroj není určen ani pro používání klienty v hotelech, motelech, zařízeních poskytujících nocleh se snídaní a ani jiných ubytovacích zařízeních.

3.1 Soulad s normami

- Tento přístroj odpovídá všem normám týkajícím se elektromagnetických polí (EMP). Pokud je správně používán v souladu s pokyny uvedenými v této uživatelské příručce, je jeho použití podle dosud dostupných vědeckých poznatků bezpečné.
- Spotřeba energie tohoto přístroje při vypnutí je nižší než 1 W. To znamená, že tento přístroj odpovídá evropské směrnici 2005/32/ES, která stanovuje ekologické požadavky na konstrukci elektrických výrobků.

4 První použití

4.1 Rozbalení

- 1 Vytáhněte přístroj z krabice.

Poznámka: (Obr. 2)

Dbejte na to, abyste volné součásti, tedy držák sáčků pro dva šálky a nástroj Calc-Clean, uložili na bezpečné místo. Jedná se o nezbytné součásti přístroje.

Varování:

Nástroj Calc-Clean je opatřen magnetem. Abyste zabránili škodám, uchovávejte nástroj Calc-Clean mimo dosah kreditních karet, bankovních karet a jiných nosičů dat, které se mohou poškodit vlivem magnetismu.

4.2 Vypláchnutí přístroje pro naplnění ohřívače

Varování:

NEPŘIPRAVUJTE KÁVU BEZ PŘEDCHOZÍHO VYPLÁCHNUTÍ KÁVOVARU SENSEO!

Vypláchnutí zajistí naplnění nádržky vodou. Pak je přístroj připraven k použití.

Přístroj vypláchněte následujícím způsobem:

- 1 Umístěte nádobu s kapacitou alespoň 1,5 litru na tácek na šálky. (Obr. 3)
- 2 Naplňte zásobník na vodu studenou vodou až po značku **MAX** a nasadte jej zpět na přístroj. (Obr. 4)
- 3 Ujistěte se, že je jednotka nádržky na mléko na svém místě (Obr. 5).
- 4 Ujistěte se, že je držák sáčků, bez sáčku nebo sáčků, na svém místě. (Obr. 6)
- 5 Zasuňte síťovou zástrčku do uzemněné zásuvky ve zdi.
- 6 Stiskněte vypínač přístroje . (Obr. 7)
 - **Světelné kroužky kolem tlačítka pro jeden šálek  a tlačítka pro dva šálky  trvale svítí.**

- 7 Chcete-li spustit vyplachování, stiskněte tlačítko pro jeden šálek  a zároveň krátce stiskněte  tlačítko pro dva šálky. (Obr. 8)

- **Během vyplachovacího cyklu voda v zásobníku na vodu propláchně přístroj a nádržka se naplní vodou. Vyplachovací cyklus trvá určitou dobu (asi 90 až 150 sekund) (Obr. 9).**

Varování:

Nikdy nepřerušujte průběh vyplachovacího cyklu. Pokud byste tak učinili, nádržka by se správně nenaplnila.

Poznámka:

Během vyplachovacího cyklu je přístroj hlučnější než během běžného varného cyklu.

- **Po skončení vyplachovacího cyklu se přístroj automaticky vypne (Obr. 10). Kávovar Philips SENSEO® je nyní připraven k použití.**

Poznámka:

Pokud přístroj nepracuje, zopakujte kroky 1–7. Vyplachovací cyklus nepřerušujte.

5 Vaření kávy SENSEO®

5.1 Tipy na nejlepší kvalitu SENSEO®

- Používejte vždy čerstvou vodu.
- Použijte sáčky kávy SENSEO®, které společnost Douwe Egberts speciálně vyvinula pro váš kávovar SENSEO®. Tak dosáhnete plné, zaoblené chuti.
- Vždy používejte mléko vychlazené v chladničce (o teplotě 5–8 °C), abyste získali horké napěněné mléko vysoké kvality pro své Cappuccino, Latte Macchiato nebo Café Latte.

- Použití rýžového ani sójového mléka nedoporučujeme. Tyto typy mléka neprodukuje vysoce kvalitní napěněné mléko.
- Použité sáčky kávy vyjměte ihned po uvaření.
- Po uvaření kávy Cappuccino, Latte Macchiato nebo Café Latte vypláchněte jednotku nádržky na mléko pomocí tlačítka CLEAN (viz část „Vypláchnutí po každém použití“ v kapitole „Čištění jednotky nádržky na mléko“).
- Pokud již ve stejný den nehodláte použít nádržku na mléko, důkladně vyčistěte nádržku na mléko a víko nádržky na mléko (viz část „Čištění všech součástí po posledním použití v daný den“ v kapitole „Čištění jednotky nádržky na mléko“).
- Pokud jste kávovar nějakou dobu nepoužívali, před dalším použitím jej vypláchněte čerstvou vodou (viz část „Vyplachování kávovaru“ v kapitole „Čištění přístroje“).

5.2 Plnění zásobníku na vodu

- 1 Naplňte zásobník na vodu studenou vodou po úroveň přesahující značku MIN a vložte jej zpět do přístroje. (Obr. 11)

Varování:

Značka MIN označuje minimální množství vody nutné pro přípravu kávy. Zásobník na vodu vždy naplňte nad úroveň značky MIN.

Varování:

Do zásobníku na vodu nikdy nelijte mléko, kávu, horkou vodu ani syčenou vodu.

5.3 Zapnutí přístroje

- 1 Zasuňte síťovou zástrčku do uzemněné zásuvky ve zdi.
- 2 Stiskněte vypínač přístroje . (Obr. 12)
 - *Během ohřívání vody pomalu bliká světelný kroužek. Ohřívání trvá přibližně 90 sekund.*
 - *Kávovar je připraven k použití, jakmile světelný kroužek okolo vypínače trvale svítí.*
 - *Pokud světelný kroužek okolo vypínače rychle bliká, zásobník na vodu neobsahuje dost vody na přípravu kávy.*

5.4 Vložení držáku sáčků

- 1 Pohybem páčky víka směrem nahoru uvolníte víko (Obr. 13).
- 2 Otevřete víko.
- 3 Nejprve do přístroje vložte příslušný držák sáčků kávy.

Poznámka:

Připravujete-li černou kávu SENSEO®, je možné najednou připravit pouze 2 šálky kávy.

- Použijte držák sáčků pro jeden šálek , chcete-li připravit Cappuccino, Latte Macchiato nebo Café Latte nebo jeden šálek černé kávy SENSEO®. (Obr. 14)
- Použijte držák sáčků pro dva šálky , pokud chcete připravit dva šálky černé kávy SENSEO®. (Obr. 15)

5.5 Vložení jednoho nebo dvou sáčků

Varování:

Do přístroje SENSEO® nikdy nedávejte běžnou mletou kávu ani nepoužívejte roztrhané sáčky s kávou, aby nedošlo k jeho ucpaní.

- 1 Potom správným způsobem vložte sáček nebo sáčky kávy SENSEO® do středu držáku sáčků tak, aby jejich vypouklá strana směřovala dolů.
 - Vložte jeden sáček kávy SENSEO® do držáku sáčků pro jeden šálek . (Obr. 16)
 - Vložte dva sáčky kávy SENSEO® do držáku sáčků pro dva šálky . (Obr. 17)

Poznámka:

Ujistěte se, že je káva v sáčku nebo sáčcích rovnoměrně rozložena, a jemně zatlačte sáček nebo sáčky do držáku sáčků.

- 2 Zavřete víko a dejte páčku víka do polohy uzamknutí (Obr. 18).
Dbejte, abyste páčku víka stiskli tak, aby zaklapla na místo.

Poznámka:

Než začnete vařit kávu, zkontrolujte, zda je víko nasazeno správně a páka víka je zajištěna.

5.6 Výběr požadovaného druhu kávy

- 1** Stisknutím voliče kávy vyberte požadovaný druh kávy s mlékem nebo bez mléka (Obr. 19).
 - Výběrem ikony ☐ připravíte černou kávu SENSEO®.
 - Výběrem ikony ☕ připravíte Cappuccino.
 - Výběrem ikony ☕ připravíte Latte Macchiato.
 - Výběrem ikony ☕ připravíte Café Latte.
- 2** Pokud jste vybrali černou kávu SENSEO® ☐, vyberte požadovanou sílu kávy stisknutím voliče kávy. Změnou síly kávy můžete rovněž změnit množství připravované kávy. (Obr. 20)
 - Chcete-li připravit menší množství silné černé kávy (60 ml), stiskněte ikonu ☐.
 - Chcete-li připravit normální množství normálně silné černé kávy (125 ml), stiskněte ikonu ☐.
 - Chcete-li připravit větší množství slabé černé kávy (145 ml), stiskněte ikonu ☐.

☐ Poznámka:

Volič kávy nelze stisknout, pokud jste vybrali jeden z druhů kávy s mlékem.

5.7 Naplnění jednotky nádržky na mléko

☐ Poznámka:

Tato část se vztahuje pouze na případy, kdy jste vybrali jeden z druhů kávy s mlékem podle popisu v předchozí části nazvané „Výběr požadovaného druhu kávy“. Pokud jste vybrali černou kávu SENSEO®, přejděte rovnou k části „Nastavení výšky táčku na šálky“.

- 1** Prstem zvedněte páčku nádržky na mléko a uvolněte jednotku nádržky na mléko (Obr. 21).
- 2** Vytažením jednotky směrem dopředu vyjměte jednotku nádržky na mléko z přístroje (Obr. 22).
- 3** Zatlačte na páčku pro uvolnění víka nádržky na mléko (1), trochu nakloňte víko nádržky na mléko (2) a vytažením nahoru sejměte víko nádržky na mléko z nádržky na mléko (3) (Obr. 23).

- 4** Naplňte nádržku na mléko studeným mlékem vychlazeným v chladničce (5–8 °C) až po značku nutnou k přípravě zvoleného druhu kávy (Obr. 24).

☐ Poznámka:

Množství mléka přidávaného do kávy se může lišit v důsledku proměnlivé teploty mléka nebo typu mléka. Může také záviset na tom, jak je jednotka nádržky na mléko čistá.

- 5** Připevňte víko nádržky na mléko na nádržku na mléko (ozve se klapnutí) (Obr. 25).

⚠ Varování:

Vždy zkontrolujte, zda je víko na nádržku na mléko správně připevněné, aby při vkládání jednotky nádržky na mléko nedošlo k rozlití.

- 6** Zasuňte jednotku nádržky na mléko do kávovaru (1) a zatlačte páčku nádržky na mléko dolů (ozve se klapnutí) (2) (Obr. 5).

☐ Poznámka:

Zatlačte páčku nádržky na mléko co nejdál (ozve se klapnutí), aby bylo jisté, že je jednotka nádržky na mléko správně vložena do přístroje. Správně napěněné mléko získáte pouze v případě, že je jednotka nádržky na mléko umístěna správně.

5.8 Nastavení výšky táčku na šálky

- 1** Položte jeden nebo dva šálky pod výstup kávy.

⚙ Tip:

Nepoužívejte příliš velké šálky, protože způsobují rychlejší chladnutí kávy.

- 2** Aby docházelo k co nejmenšímu rozstříkání, otočením knoflíku nastavte výšku táčku na šálky tak, aby byla horní část šálku těsně pod výstupem (Obr. 26).

5.9 Příprava požadovaného druhu kávy

- 1** Stiskněte tlačítko označující počet šálků kávy SENSEO®, který chcete připravit. (Obr. 8)
- Chcete-li připravit jeden šálek černé kávy SENSEO®, Cappuccino, Latte Macchiato nebo Café Latte, stiskněte tlačítko pro jeden šálek ☐.
 - Chcete-li připravit dva šálky černé kávy SENSEO®, stiskněte tlačítko pro dva šálky ☐☐.
 - *Kávovar SENSEO® začne s vařením a automaticky dodá správné množství vody a mléka podle toho, jaký druh kávy jste vybrali.*

Varování:

Během cyklu přípravy kávy nevyjímejte zásobník vody – přístroj by nasával vzduch. Pokud tato situace nastane, bude další šálek naplněn pouze částečně.

Varování:

Nevyjímejte nádržku na mléko během cyklu přípravy.

- 2** Po použití vyjměte sáček nebo sáčky kávy nadzvednutím držáku sáčku z přístroje a jeho vyprázdněním.
- Buďte přitom opatrní, protože v sáčcích mohla zůstat voda nebo káva.

5.9.1 Káva s mlékem

Každý druh kávy s mlékem má svůj vlastní, typický postup přípravy:

- **Cappuccino** ☐☐ je bohatá kombinace jedné třetiny kávy a dvou třetin čerstvě napěněného horkého mléka s krémovou pěnovou vrstvou. Když připravujete Cappuccino, šálek se nejprve naplní horkou mléčnou pěnou a poté se do pěny připraví silná černá káva. To způsobí ponoření kávy pod vrstvu pěny.

Poznámka:

Není možné připravit dva šálky Cappuccina současně. Chcete-li připravit dva šálky kávy Cappuccino současně, je nutné naplnit nádržku na mléko po značku pro 2 šálky Cappuccina a připravit šálky kávy Cappuccino jeden po druhém, stisknutím tlačítka pro jeden šálek ☐.

- **Latte Macchiato** ☐☐ je nápoj se třemi vrstvami. Obsahuje více mléka než káva. Připravujete-li Latte Macchiato, přístroj nejprve naplní šálek horkým mlékem a mléčnou pěnou a poté přípravu na 15 sekund zastaví. Během této doby mléko klesne pod pěnu. Poté přístroj připraví černou kávu, která rovněž klesne pod pěnu a usadí se nad vrstvou horkého mléka.
- **Café Latte** ☐☐ je nápoj, který obsahuje víceméně stejné množství mléka a kávy. Připravujete-li Café Latte, šálek se nejprve naplní kávou a poté se přidá horké napěněné mléko.

Poznámka: (Obr. 27)

Pokaždé, když použijete jednotku nádržky na mléko k přípravě kávy s mlékem, rozsvítí se kontrolka CLEAN: připomíná, že je třeba vypláchnout jednotku nádržky na mléko, pokud již bezprostředně poté nehodláte vařit kávu s mlékem. Další informace naleznete v části „Vypláchnutí po každém použití“ v kapitole „Čištění jednotky nádržky na mléko“).

5.10 Přerušování procesu přípravy kávy

- 1** Stisknutím vypínače ☐ přerušíte proces přípravy kávy. (Obr. 12)

Poznámka:

Pokud přístroj zapnete po přerušování procesu přípravy kávy, nebude přerušovaný cyklus přípravy znovu obnoven.

5.11 Vypnutí

- 1** Po použití přístroj vypnete stisknutím vypínače ☐. (Obr. 12)

Poznámka:

Pokud přístroj nevypnete, vypne se po 30 minutách automaticky.

6 Čištění jednotky nádržky na mléko

Je důležité čistit jednotku nádržky na mléko pravidelně a důkladně. Pouze správně vyčištěná jednotka nádržky na mléko podává správný výkon a zajišťuje stále kvalitní výsledky při napěnění.

- 1 Nechcete-li bezprostředně znovu připravovat kávu s mlékem, **vypláchněte nádržku na mléko do 30 minut po použití.**
- 2 Po posledním použití v daný den **důkladně vyčistěte všechny součásti jednotky nádržky na mléko.**

Správný postup čištění jednotky nádržky na mléko naleznete níže.

Poznámka:

Pokud se vám nedaří získat vysoce kvalitní mléčnou pěnu, je jednotka nádržky na mléko pravděpodobně znečištěná.

6.1 Vypláchnutí po každém použití

- Kontrolka CLEAN se rozsvítí na znamení, že je třeba vypláchnout jednotku nádržky na mléko pokaždé, co přístroj použijete k přípravě kávy s mlékem (Obr. 27).

Poznámka:

Nechcete-li bezprostředně znovu připravovat kávu s mlékem, vypláchněte jednotku nádržky na mléko do 30 minut po použití.

- 1 Prstem vytáhněte páčku nádržky na mléko nahoru a jednotku nádržky na mléko uvolněte. Poté jednotku nádržky na mléko vytáhněte dopředu a vyjměte ji z přístroje (Obr. 28).
- 2 Zatlačte na páčku pro uvolnění víka nádržky na mléko (1), trochu nakloňte víko nádržky na mléko (2) a vytažením nahoru sejměte víko nádržky na mléko z nádržky na mléko (3) (Obr. 23).
- 3 Vylijte všechno mléko, které v nádržce na mléko zůstalo, a krátce vypláchněte nádržku na mléko pod tekoucí vodou.
- 4 Naplňte nádržku na mléko **studenou** vodou po značku pro 2 šálky kávy Cappuccino .

Poznámka:

Nenaplňujte nádržku na mléko teplou ani horkou vodou. Pokud byste to udělali, přístroj by vyprodukoval pouze páru a jednotka nádržky na mléko by se správně nevyčistila.

- 5 Připevněte víko nádržky na mléko na nádržku na mléko (ozve se klapnutí) (Obr. 25).
- 6 Zasuňte jednotku nádržky na mléko do kávovaru (1) a zatlačte páčku nádržky na mléko dolů (ozve se klapnutí) (2) (Obr. 5).
- 7 Pod výstup kávy postavte prázdný šálek (Obr. 29).
- 8 Stiskněte tlačítko CLEAN (Obr. 30).
 - *Jednotka nádržky na mléko se vypláchne.*

6.2 Čištění všech součástí po posledním použití v daný den

- 1 Zatlačte na páčku pro uvolnění víka nádržky na mléko (1), trochu nakloňte víko nádržky na mléko (2) a vytažením nahoru sejměte víko nádržky na mléko z nádržky na mléko (3) (Obr. 23).
- 2 Zatažením za uvolňovací jazyček na přední části krytu víka nádržky na mléko směrem nahoru otevřete kryt. (Obr. 31)
- 3 Otevřete vstup páry vytažením dopředu (1) a poté posuňte vstup páry doprava (2). Tato část zůstane připojena k víku pomocí závěsu. (Obr. 32)

Poznámka:

Vstup páry lze otevřít pouze v případě, že je otevřeno víko krytu nádržky na mléko.

- 4 Vytáhněte trubičku na mléko z víka nádržky na mléko (Obr. 33).
- 5 Umyjte nádržku na mléko, víko nádržky na mléko a trubičku na mléko v myčce nebo je vyčistěte kartáčkem v horké vodě s prostředkem na mytí nádobí. Po vyčištění součástí opláchněte čerstvou vodou (Obr. 34).

Poznámka:

Doporučuje se mytí v myčce, zvláště v případě, že je jednotka nádržky na mléko velmi znečištěná. Než dáte jednotku nádržky na mléko do myčky, měli byste otevřít všechny části, které lze otevřít, a odpojit všechny části, které lze odpojit.

- 6 Po vyčištění zasuněte zpět vstup páry (1), připojte trubičku na mléko (2) a zavřete kryt víka nádržky na mléko (3) (Obr. 35).

Poznámka:

Vstup páry je třeba zasunout před zavřením víka, jinak jej již nelze vložit.

Poznámka:

Dbejte na to, abyste zasunuli trubičku na mléko dostatečně daleko do konektoru – tak, aby otvory konektoru byly zakryté. Pokud trubičku na mléko nezatláčíte dostatečně daleko do konektoru, získáte méně mléčné pěny.

- 7 Připevněte víko nádržky na mléko na nádržku na mléko (ozve se klapnutí) (Obr. 25).

Poznámka:

Než znovu sestavíte víko, ujistěte se, že jsou všechny součásti víka nádržky na mléko suché.

- 8 Zasuňte jednotku nádržky na mléko do kávovaru (1) a zatlačte páčku nádržky na mléko dolů (ozve se klapnutí) (2) (Obr. 5).

7 Čištění přístroje

Nebezpečí:

Nikdy neponořujte přístroj do vody ani do jiné kapaliny.

7.1 Čištění kávovaru

- 1 Před čištěním přístroj vždy odpojte ze sítě.
- 2 Vnější povrch přístroje čistěte navlhčeným hadříkem.
- 3 Vyjměte sběrač kávy (Obr. 36).
- 4 Sejměte kryt výstupu kávy a vytáhněte výstup kávy z přístroje (Obr. 37).
- 5 Kryt výstupu kávy, výstup kávy, sběrač kávy a tácek na odkapávání umývejte horkou vodou. V případě potřeby použijte prostředek na mytí nádobí nebo myčku na nádobí (Obr. 38).
- 6 Při oplachování horkou vodou držte tácek na šálky v ruce. V případě potřeby použijte vodu s mycím prostředkem (Obr. 39). Lze jej rovněž umývat v myčce.

Varování:

Při čištění tácek na šálky vždy vyjměte z přístroje, protože při nesprávné manipulaci může být ostrý. Držte jej vždy opatrně.

- 7 Držáky sáčků umývejte horkou vodou; pokud je to nutné, použijte přípravek na mytí nádobí nebo jej umyjte v myčce. (Obr. 40)
Je-li sítko pod středem držáku ucpané, opláchněte držák sáčků pod tekoucí vodou. V případě potřeby použijte kartáček na mytí nádobí.
- 8 Zásobník na vodu umývejte horkou vodou a v případě potřeby použijte prostředek na umývání nádobí. (Obr. 41)

Poznámka:

Pokud používáte kartáček, dejte pozor, abyste nepoškodili ventil a plovák v dolní části zásobníku na vodu.

Poznámka:

Zásobník na vodu lze rovněž umývat v myčce.

- 9** Vstup vody na přístroji vyčistěte navlhčeným hadříkem (Obr. 42).

Varování:

Vstup vody na přístroji nečistěte předměty s ostrými hranami.

- 10** Po vyčištění opláchněte jednotlivé díly čerstvou vodou a vložte je zpět do přístroje.
- 11** Destičku pro rozvod vody čistěte navlhčeným hadříkem (Obr. 43).
Buďte přitom opatrní a dbejte na to, aby gumový těsnicí kroužek neuvízl pod okrajem destičky pro rozvod vody. Pokud se tak stane, z kávovaru začne unikat voda.

Poznámka:

Dbejte na to, aby se nepoškodil kovový jazyček na destičce pro rozvod vody.

7.2 Vyplachování kávovaru

Pokud kávovar nepoužijete tři dny, je třeba jej před dalším použitím vypláchnout čerstvou vodou.

Přístroj vypláchněte následujícím způsobem:

- 1** Naplňte zásobník na vodu studenou vodou až po značku **MAX** a nasadte jej zpět na přístroj. (Obr. 4)
- 2** Vložte držák sáčků pro jeden ☐ nebo pro dva šálky ☐☐ do přístroje bez sáčku (sáčků) kávy. (Obr. 44)
- 3** Zavřete víko a dejte páčku víka do polohy uzamknutí (Obr. 18).
- 4** Pod výstup kávy vložte misku (s kapacitou nejméně 1,5 l), aby se zachytila voda (Obr. 3).
- 5** Stiskněte vypínač přístroje ☐. (Obr. 7)
 - ***Světelné kroužky kolem tlačítka pro jeden šálek ☐ a tlačítka pro dva šálky ☐☐ trvale svítí.***

- 6** Chcete-li spustit vyplachování, stiskněte tlačítko pro jeden šálek ☐ a zároveň krátce stiskněte ☐☐ tlačítko pro dva šálky. (Obr. 8)

- ***Během vyplachovacího cyklu voda v zásobníku na vodu propláchně přístroj a ohřívač se naplní čerstvou vodou. Vyplachovací cyklus trvá určitou dobu (asi 90 až 150 sekund).***

Varování:

Nikdy nepřerušujte průběh vyplachovacího cyklu. Pokud byste tak učinili, ohřívač by se správně nenaplnil čerstvou vodou.

Poznámka:

Během vyplachovacího cyklu je přístroj hlučnější než během běžného varného cyklu.

- ***Po skončení vyplachovacího cyklu se přístroj automaticky vypne.***
Kávovar Philips SENSEO® je nyní opět připraven k použití.

8 Odstranění vodního kamene

8.0.1 Kdy je potřeba odstranit vodní kámen

- Odstraňte z kávovaru SENSEO® vodní kámen následujícím postupem, jakmile se rozsvítí kontrolka CALC CLEAN. Kontrolka CALC CLEAN se rozsvítí přibližně po uvaření 1 000 šálků černé kávy SENSEO® nebo 250 šálků kávy SENSEO® s mlékem. Stejným způsobem můžete odstraňovat vodní kámen z kávovaru SENSEO® i častěji. Je důležité jej odstranit z kávovaru alespoň jednou za 3 měsíce. Postup odstraňování vodního kamene trvá přibližně 45 minut (Obr. 45).

8.0.2 Proč je potřeba odstranit vodní kámen

Během používání se uvnitř přístroje usazuje vodní kámen. Je důležité jej z kávovaru SENSEO® odstranit, jakmile se rozsvítí kontrolka CALC CLEAN. Důvody pro odstraňování vodního kamene:

- Prodloužíte tím životnost kávovaru SENSEO®
- Zaručíte tím maximální objem šálku
- Zaručíte tím maximální teplotu kávy
- Přístroj vydává během vaření méně hluku
- Předcházíte tak poruchám

Není-li vodní kámen správně odstraněn, zůstanou jeho zbytky v přístroji. Tím dochází k rychlejšímu usazování vodního kamene a může dojít k trvalému a neopravitelnému poškození přístroje.

8.0.3 Používejte správný prostředek na odstranění vodního kamene

Pro odstranění vodního kamene z přístroje SENSEO® jsou vhodné pouze prostředky založené na kyselině citrónové. Tento typ prostředku odstraní vodní kámen z přístroje, aniž by jej poškodil. Správné množství je uvedeno níže v kapitole „Proces odstranění vodního kamene“. Směs pro odstranění vodního kamene je možné použít pouze jednou. Po použití již není směs účinná.

Společnost Philips SENSEO® vyvinula speciální prostředek pro odstraňování vodního kamene (HD7012, HD7011, HD7006) pro kávovary SENSEO®. Další informace o tomto prostředku pro odstraňování vodního kamene získáte na našich webových stránkách **www.philips.com**.

Varování:

Nikdy nepoužívejte prostředek pro odstraňování vodního kamene založený na minerálních kyselinách, jako jsou kyselina sírová, chlorovodíková, sulfaminová a octová (např. ocet). Tyto prostředky pro odstraňování vodního kamene zcela jistě kávovar SENSEO® poškodí.

8.1 Proces odstranění vodního kamene

Proces odstranění vodního kamene sestává ze 3 cyklů:

- 1 cyklus odstranění vodního kamene (přibližně 35 minut)
- 2 oplachovací cykly (přibližně 10 minut)

Varování:

Z přístroje nelze odstraňovat vodní kámen, pokud není ve výstupu kávy umístěn nástroj Calc-Clean.

8.1.1 Cyklus odstranění vodního kamene

- 1** Vyměte z přístroje jednotku nádržky na mléko, vložte nástroj Calc-Clean do výstupu kávy a stiskněte páčku nádržky na mléko (Obr. 46).
- 2** Do kávovaru vložte držák jednoho šálku  s použitým sáčkem kávy. Zavřete víko a ujistěte se, že je řádně uzamknuté. (Obr. 47)
- ⚠ Poznámka:**
Při odstraňování vodního kamene vždy vložte do držáku sáčků jeden použitý sáček kávy. Bude sloužit jako „filtr“ zabraňující ucpání sítka v držáku zbytky vodního kamene.
- 3** V odměrce smíchejte 50 gramů kyseliny citrónové s jedním litrem vody. Míchejte, dokud se prášek zcela nerozpustí (Obr. 48).
- 4** Vyměte zásobník na vodu a naplňte jej směsí pro odstraňování vodního kamene. Poté zásobník na vodu vložte zpět do kávovaru (Obr. 49).
- 5** Pod místo výstupu kávy vždy vložte misku s kapacitou nejméně 1,5 litru, aby se zachytila směs na odstranění vodního kamene. (Obr. 3)
- 6** Stisknutím vypínače  přístroj zapněte. (Obr. 7)
 - *Přístroj je připraven k odstraňování vodního kamene, jakmile světelný kroužek okolo vypínače trvale svítí.*
- 7** Stisknutím tlačítka CLEAN/CALC CLEAN spustíte cyklus odstranění vodního kamene. (Obr. 50)

Varování:

Cyklus odstranění vodního kamene nikdy nepřerušujte. Pokud cyklus odstranění vodního kamene přerušíte, vyhledejte si další pokyny v kapitole Řešení problémů.

- Kontrolka CALC a světelný kroužek kolem vypínače začnou pomalu blikat na znamení, že se spustil cyklus odstranění vodního kamene.
- Cyklus odstranění vodního kamene trvá přibližně 35 minut. Během tohoto cyklu vychází z výstupu kávy v určitých intervalech horká voda a kávovar několikrát proces pozastaví, aby mohla směs pro odstranění vodního kamene působit (Obr. 51).
- Po úplném vyprázdnění zásobníku na vodu se cyklus odstranění vodního kamene dokončí. Světelný kroužek kolem tlačítka pro zapnutí/vypnutí začne rychle blikat na znamení, že zásobník na vodu je prázdný.

Poznámka:

Po úplném vyprázdnění zásobníku na vodu se vyplachovací cyklus dokončí a přístroj se automaticky vypne.

- 6 Vymějte nástroj Calc-Clean z výstupu kávy.
- 7 Vymějte použitý sáček a vyčistěte držák sáčků kávy, aby se neucpalo sítko v jeho prostřední části.

9 Skladování s ochranou před zamrznutím

Pokud byl již kávovar používán, a proto naplněn vodou, lze jej používat a skladovat pouze na místě, kde nemůže voda zamrznout, aby nedošlo k jeho poškození.

8.1.2 Vyplachovací cyklus

- 1 Vylijte misku a postavte ji zpět pod výstup (Obr. 52).
- 2 Vypláchněte zásobník na vodu (Obr. 53).
- 3 Naplňte zásobník na vodu čerstvou vodou z vodovodu a vložte jej zpět do kávovaru (Obr. 54).

Poznámka:

Do zásobníku na vodu znovu nelijte použitou horkou vodu nebo použitou směs pro odstranění vodního kamene.

- *Přístroj je připraven na vyplachovací cyklus, jakmile se kontrolka vypínače trvale rozsvítí.*
- 4 Stisknutím tlačítka CLEAN/CALC CLEAN přístroj vypláchněte. (Obr. 50)
 - *Během vyplachovacího cyklu se indikátory na ovládacím panelu postupně rozsvěcují proti směru hodinových ručiček na znamení, že se přístroj vyplachuje.*

Poznámka:

Vyplachovací cyklus trvá několik minut.

- 5 Kroky 1 až 4 zopakujte ještě jednou.

10 Objednávání příslušenství

Příslušenství pro tento přístroj lze zakoupit na webu www.shop.philips.com/service. Budete-li mít jakékoli potíže se získáním příslušenství pro svůj přístroj, obraťte se na středisko péče o zákazníky společnosti Philips ve své zemi. Kontaktní informace naleznete na webových stránkách www.philips.com/support.

11 Životní prostředí

- Až přístroj doslouží, nevyhazujte jej do běžného komunálního odpadu, ale odevzdejte jej do sběrný určené pro recyklaci. Pomůžete tím chránit životní prostředí (Obr. 55).

12 Záruka a servis

Pokud budete potřebovat servis, informace nebo pokud dojde k potížím, navštivte web společnosti Philips **www.philips.com** nebo se obraťte na středisko péče o zákazníky společnosti Philips ve své zemi. Telefonní číslo na střediska naleznete na záručním listu s celosvětovou platností. Pokud se ve vaší zemi středisko péče o zákazníky nenachází, můžete kontaktovat místního dodavatele výrobků Philips.

Zakoupení kávovaru Philips SENSEO® nezaručuje žádná práva společností Sara Lee/Douwé Egberts nebo Philips na žádné jejich patenty a kupujícímu neuděluje licenci na tyto patenty.

13 Řešení problémů

V této kapitole jsou shrnuty nejběžnější problémy, se kterými se můžete u přístroje setkat. Jestliže se vám nepodaří nalézt řešení svého problému, další řešení naleznete na webové stránce www.philips.com/support. Pokud ani tak nelze problém vyřešit, obraťte se na středisko péče o zákazníky společnosti Philips ve své zemi (viz kapitola „Záruka a servis“).

Kávovar SENSEO® neprodukuje kvalitní napěněné mléko nebo ho není dostatek.

- Jednotka nádržky na mléko může být znečištěná. Vyčistěte jednotku nádržky na mléko podle pokynů uvedených v kapitole „Čištění jednotky nádržky na mléko“, v části „Čištění všech součástí po posledním použití v daný den“. Doporučujeme mýt jednotku nádržky na mléko v myčce.
- Dbejte na to, abyste zasunuli trubičku na mléko dostatečně daleko do konektoru – tak, aby otvory konektoru byly zakryté. Pokud trubičku na mléko nezatlačíte dostatečně daleko do konektoru, získáte méně mléčné pěny.

- Pravděpodobně používáte mléko, které není dostatečně studené. Pokud teplota mléka přesahuje 8 °C, přístroj použije méně mléka. Dbejte na to, abyste používali studené mléko přímo z chladničky (5–8 °C).
- Použili jste jiné mléko než kravské (například rýžové nebo sójové mléko). Tyto druhy mléka neprodukují vysoce kvalitní napěněné mléko. Chcete-li získat nejlepší napěněné mléko, doporučujeme používat polotučné kravské mléko.

Během přípravy kávy nebo cyklu čištění vychází z kávovaru SENSEO® pára.

- Připravujete-li kávu s mlékem, může z přístroje vystupovat trochu páry. Chcete-li si zajistit dokonalý šálek kávy a snížit únik páry na minimum, naplňte nádržku na mléko po požadovanou značku podle druhu kávy.
- Pravděpodobně jste před přípravou kávy s mlékem zapomněli naplnit nádržku na mléko. Naplňte nádržku na mléko po požadovanou značku podle druhu kávy.
- Trubička na mléko možná není připojena k víku nádržky na mléko. Připojte trubičku na mléko k víku nádržky na mléko. Dbejte na to, abyste zasunuli trubičku na mléko dostatečně daleko do konektoru – tak, aby otvory konektoru byly zakryté.
- Jednotka nádržky na mléko je možná znečištěná. Důkladně vyčistěte jednotku nádržky na mléko podle popisu uvedeného v kapitole „Čištění jednotky nádržky na mléko“. Doporučujeme mýt jednotku nádržky na mléko v myčce.
- Možná jste nezasunuli nádržku na mléko dostatečně daleko do přístroje. Ujistěte se, že je nádržka na mléko umístěna správně: zatlačte páčku nádržky na mléko co nejnižší (ozve se klapnutí). Tento postup je nezbytný pro dosažení správného napěnění.

- Pravděpodobně jste stiskli tlačítko CLEAN/CALC CLEAN pro vypláchnutí jednotky nádržky na mléko, aniž byste nejprve nalili do nádržky na mléko vodu. Dbejte na to, abyste před vypláchnutím vždy naplnili nádržku na mléko vodou. Během vyplachování z přístroje vždy uniká trochu páry. To je nezbytné pro důkladné vyčištění jednotky nádržky na mléko.
- Pravděpodobně jste před vypláchnutím naplnili nádržku na mléko teplou vodou. Naplňte nádržku na mléko studenou vodou.

V nádržce na mléko zůstalo po přípravě kávy s mlékem trochu mléka.

- Je normální, že v nádržce na mléko zůstane po přípravě kávy s mlékem trochu mléka. Toto mléko navíc je nutné k zajištění vysoce kvalitního napěněného mléka.
- Možná jste naplnili nádržku na mléko nad značku požadovanou pro druh kávy, který jste chtěli připravit.
- Pravděpodobně jste použili mléko, které není dostatečně studené. Pokud teplota mléka přesahuje 8 °C, přístroj použije méně mléka. Dbejte na to, abyste používali studené mléko přímo z chladničky (5–8 °C).

Druhy kávy s mlékem nejsou dostatečně horké.

- Je normální, že káva s mlékem je méně horká než šálek černé kávy SENSEO®, protože se mléko ohřívá na nižší teplotu, aby se zajistilo vysoce kvalitní napěněné mléko.
- Šálky můžete předeřhát horkou vodou, aby byla káva déle horká. To lze nejlépe provést stisknutím tlačítka pro jeden šálek ☞ bez použití sáčku kávy.
- Pravděpodobně jste použili příliš velké šálky. Velké šálky způsobují rychlejší chladnutí kávy. Doporučujeme používat 180ml šálek na kávu Cappuccino, 260ml šálek na Latte Macchiato a 220ml šálek na Café Latte.

Kávovar SENSEO® při přípravě kávy s mlékem stříká.

- Pravděpodobně jste použili příliš teplé mléko. Dbejte na to, abyste používali studené mléko přímo z chladničky (5–8 °C).

Kontrolka CALC CLEAN trvale svítí.

- Kontrolka CALC CLEAN se rozsvítí, když je třeba odstranit z přístroje vodní kámen. To nastane po uvaření 1 000 šálků černé kávy SENSEO® nebo 250 šálků kávy Cappuccino, Latte Macchiato či Café Latte. Chcete-li odstranit vodní kámen z kávovaru SENSEO®, postupujte podle pokynů v kapitole „Odstranění vodního kamene“. Kontrolka CALC CLEAN zhasne teprve po správném provedení postupu odstranění vodního kamene a vyjmutí nástroje Calc-Clean.

Stisk(a) jsem tlačítko CLEAN/CALC CLEAN, ale přístroj nefunguje.

- Chcete-li vypláchnout jednotku nádržky na mléko, dbejte, abyste naplnili nádržku na mléko studenou vodou a správně vložili jednotku nádržky na mléko do přístroje.
- Chcete-li z přístroje odstranit vodní kámen, ujistěte se, že je správně vložen nástroj Calc-Clean. Podrobnosti naleznete v kapitole „Odstranění vodního kamene“.
- Přístroj se možná ještě zahřívá (světelný kroužek kolem vypínače pomalu bliká). Přístroj se musí nějakou dobu zahřívát, než je možné provést odstranění vodního kamene.

Cyklus odstranění vodního kamene trval pouze 5 minut.

- Cyklus odstranění vodního kamene byl pravděpodobně přerušen. Příčin může být několik: 1) stiskli jste vypínač během cyklu odstranění vodního kamene 2) vyjmuli jste zásobník na vodu během cyklu odstranění vodního kamene 3) neumístili jste nástroj Calc-Clean správně nebo jste jej vyjmuli z přístroje během cyklu odstranění vodního kamene.
- Postup restartování procesu odstranění vodního kamene: 1) Vyjměte nástroj Calc-Clean. 2) Vypláchněte přístroj krátkým stisknutím tlačítka pro jeden šálek a ☞ tlačítka pro dva šálky ☞☞ současně. 3) Znovu vložte nástroj Calc-Clean a stisknutím tlačítka CLEAN/CALC CLEAN spustíte proces odstranění vodního kamene.

Světelný kroužek kolem vypínače stále rychle bliká.

- Pokud bliká světelný kroužek kolem vypínače, v zásobníku na vodu není dostatek vody pro uvaření kávy. Chcete-li připravit kávu, musí být voda v zásobníku na vodu nad značkou MIN.
- Pravděpodobně jste vybrali druh kávy s mlékem (Cappuccino, Café Latte nebo Latte Macchiato), když v přístroji není vložena jednotka nádržky na mléko nebo do něho není vložena správně. Chcete-li připravit kávu s mlékem, vložte do přístroje jednotku nádržky na mléko naplněnou mlékem.
- Zásobník na vodu nebyl vložen správně. Vyjměte zásobník na vodu a vložte jej zpět do přístroje ve správné poloze.
- 4. Pravděpodobně používáte kávovar SENSEO® v místnosti s teplotou nižší než 10 °C. Kávovar SENSEO® nefunguje při teplotách nižších než 10 °C. Zkontrolujte, zda kávovar SENSEO® funguje normálně, pokud jej použijete v místnosti s teplotou přesahující 10 °C.

Kávovar SENSEO® vydává více zvuků než obvykle.



















- Jestliže přístroj napěňuje mléko pro přípravu mléka s kávou, je zcela normální, že vydává více zvuků než při přípravě černé kávy SENSEO®.
- Kryt víka nádržky na mléko pravděpodobně není správně zavřený. Kryt vždy správně zavřete (ozve se klapnutí), než jednotku nádržky na mléko zasunete zpět do přístroje.















Nevím, jaké typy mléka mám používat.


- Chcete-li získat nejlepší mléčnou pěnu, doporučujeme používat polotučné kravské mléko. Jiné typy mléka (například rýžové nebo sójové mléko) neprodukuje vysoce kvalitní napěněné mléko.

Nevím, jak mám kávovar SENSEO® používat pouze k přípravě napěněného mléka.

- Není možné připravit pouze napěněné mléko. Kávovar byl navržen pro přípravu druhů kávy s čerstvým napěněným mlékem.

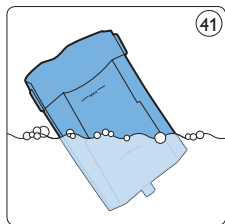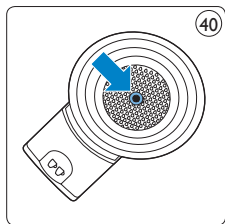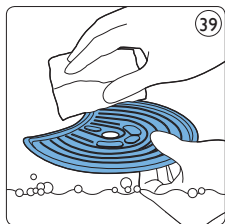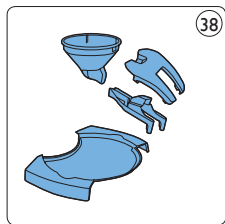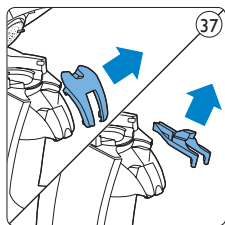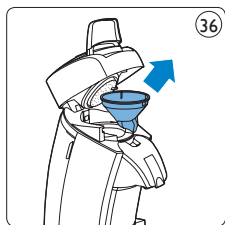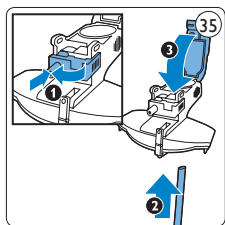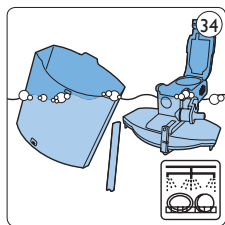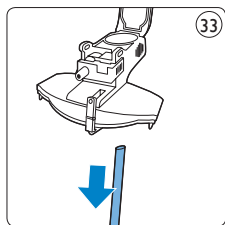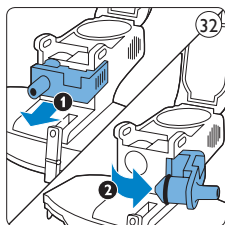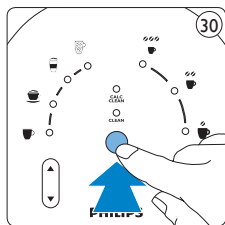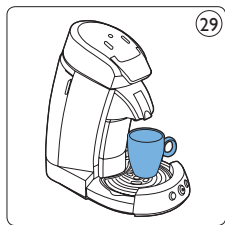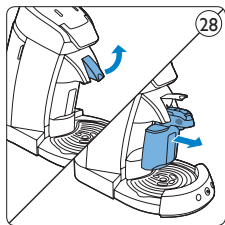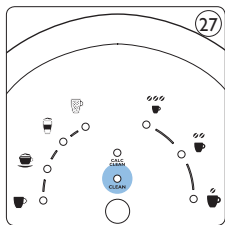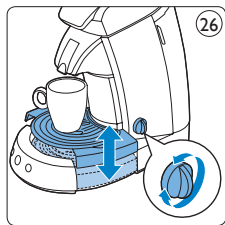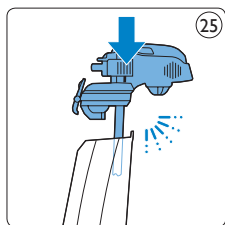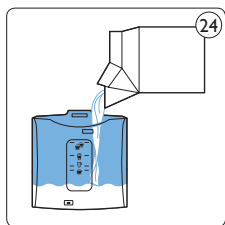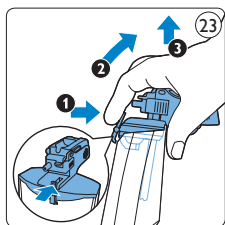

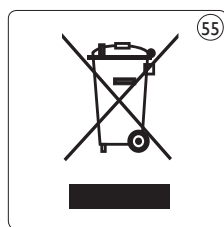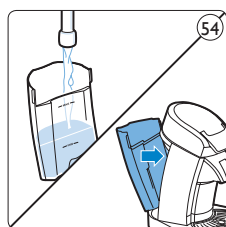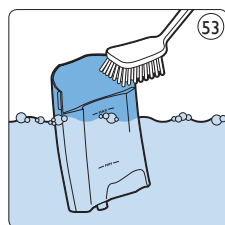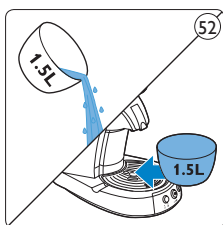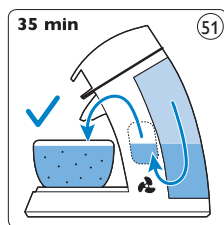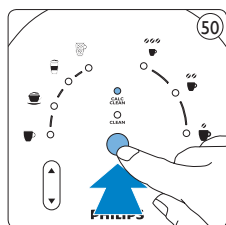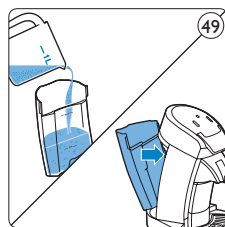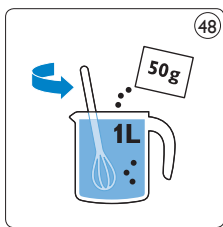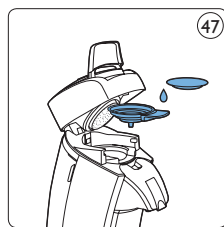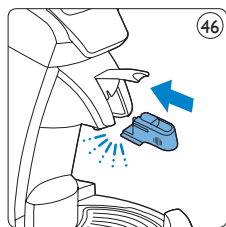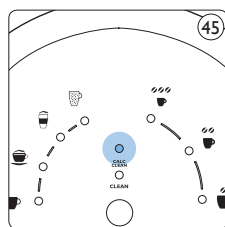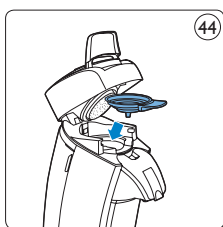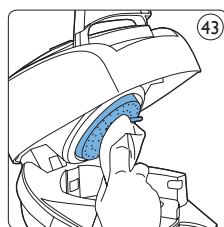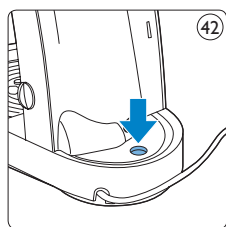

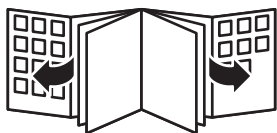



100% recycled paper
100% papier recyclé

© 2014 Koninklijke Philips Electronics N.V.

All rights reserved.

4222.200.0226.1