


INSTRUCTION SHEET
CWR SERIES
CABLING WALL CABINET

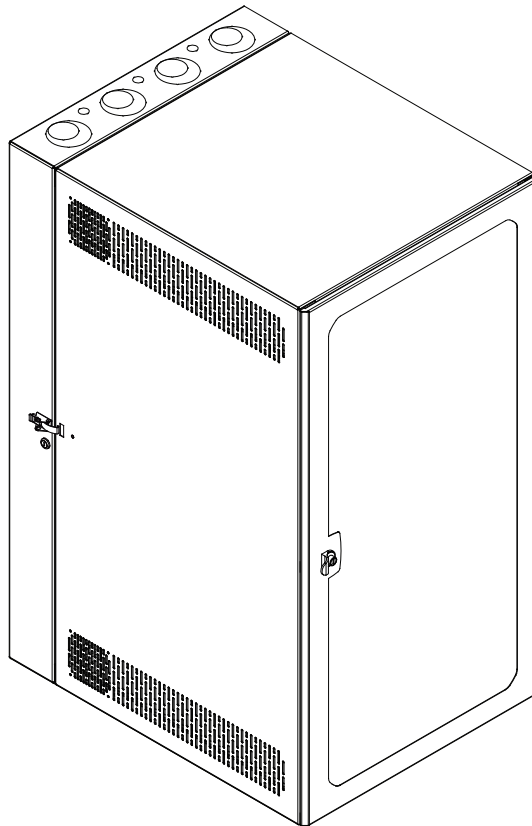

**CABLING WALL CABINET WITH
STANDARD DOOR**

THANK YOU

Thank you for purchasing the CWR Series Cabling Wall Cabinet. Please read these instructions thoroughly before installing or assembling this product.

PRODUCT FEATURES

- 26" width provides abundant space for patching
- Ships with front rackrail at a 4" setback to accommodate cable managers
- Swing open center section allows for easy front and rear access to equipment and cabling
- Available with vented or plexiglass doors



**MIDDLE
ATLANTIC**
A brand of  **legrand**
I-00347 Rev D

SAVE ALL INSTRUCTIONS / CONSERVER CES INSTRUCTIONS



DANGER HAZARDOUS VOLTAGE/DANGER HAUTE TENSION

The lightning flash with the arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

L'éclair avec le symbole de flèche dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence d'une tension dangereuse non isolée dans l'enceinte du produit qui peut être d'une ampleur suffisante pour constituer un risque de choc électrique pour les personnes.



CAUTION/ATTENTION The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Le point d'exclamation dans un triangle équilatéral est destiné à alerter l'utilisateur de la présence d'importants instructions d'opération et de maintenance (entretien) dans la documentation accompagnant l'appareil.



WARNING: Failure to read, understand and follow the following information can result in serious personal injury, damage to the equipment or voiding of the warranty.

AVERTISSEMENT: Ne pas lire, comprendre et suivre les informations suivantes peut entraîner des blessures graves, des dommages à l'équipement ou de la nullité de la garantie.



CAUTION: To avoid an unstable condition, place heavier components at the bottom of the enclosure. When more than one component is placed in the enclosure, begin at the bottom of the enclosure and place equipment at the lowest available point, evenly distribute weight (horizontally) within the enclosure.

Component weight should be distributed as follows:

- 1/2 of the total component weight (at a minimum) placed in the bottom third of the cabinet
- 1/4 of the total component weight (at a maximum) placed in the middle third of the cabinet
- 1/4 of the total component weight (at a maximum) placed in the top third of the cabinet

ATTENTION: Pour éviter un état instable, placez composants les plus lourds au fond de l'enceinte. Lorsque plus d'un composant est placé dans la enceinte, commencer par le bas de l'enceinte et placer l'équipement à la point le plus bas disponible, de distribuer uniformément le poids (horizontalement) dans le enceinte.

Le poids des composants devrait être réparti comme suit:

- 1/2 du poids total de la composante (au minimum) placé dans le tiers inférieur de l'armoire
- 1/4 du poids total de la composante (au maximum) placé dans le tiers médian de l'armoire
- 1/4 du poids total de la composante (au maximum) placé dans le tiers supérieur de l'armoire



CAUTION: All installation and assembly steps must be performed by qualified personnel.

ATTENTION: Toutes installation et de montage étapes doivent être effectuées par du personnel qualifié.

IMPORTANT SAFETY INSTRUCTIONS / INSTRUCTIONS IMPORTAANTES SUR LA SÉCURITÉ



CAUTION: Ensure that the wall has a structural load capacity that will support the weight of the cabinet fully loaded with equipment.

ATTENTION: Veiller à ce que le mur a une capacité de charge structurelle qui supporter le poids de le cabinet entièrement chargé avec l'équipement.



CAUTION: The following parts are not effectively bonded to the protective earth terminal: Rack rails, lace bars, Lever Lock™, shelves, baffle, blanking panels, and cable management. If any part needs to be bonded to the protective earth terminal it shall be done in accordance with Article 250 of the National Electrical Code.

ATTENTION: Les pièces suivantes ne sont pas correctement liés à la borne de terre de protection: rails de rack, des bars de dentelle, Lever Lock™, des étagères, des chicanes, des panneaux d'obturation, et la gestion des câbles. Si une partie doit être lié à la borne de terre de protection, il doit être fait conformément à l'article 250 du Code national de l'électricité.



CAUTION: Power cord(s), for fans or other accessories, need to be secured to ensure that they are routed away from pinch points and moving parts.

ATTENTION: Le cordon d'alimentation (s), pour les fans ou autres accessoires, doivent être fixé à veiller à ce que ils sont acheminés loin des points de pincement et des pièces mobiles.



CAUTION: Do not attempt to unload or move the enclosures alone. Make sure to have sufficient amount of personnel and equipment to safely move this product.

ATTENTION: Ne essayez pas de décharger ou déplacer les enceintes seul. Assurez-vous d'avoir quantité suffisante de personnel et de matériel pour déplacer ce produit en toute sécurité.



CAUTION: To reduce the risk of personal injury, these mounting instructions must be followed and proper weight capacities must be observed.





ATTENTION: Pour réduire le risque de blessures, ces instructions de montage doivent être respectées et les capacités de poids appropriées doivent être respectées.

WEIGHT RATINGS

Model	Weight Rating
All	200 lbs.

TOOLS REQUIRED

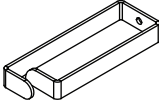- 5/16" Wrench
- 5/16" Socket
- 5/32" Hex Key

SUPPLIED HARDWARE				
	STANDARD D-RING	8-32 ACORN NUT	8-32 STUD	12-24 RACKSCREW
				
	<u>QTY</u>	<u>QTY</u>	<u>QTY</u>	<u>QTY</u>
12 SPACE	4	4	4	50
18 SPACE	6	6	6	50
26 SPACE	8	8	8	50

CABINET INSTALLATION

NOTE: The cabinet must be installed plumb and level for proper operation.

1. Separate backpan from center section and determine hinge side.

NOTE:

- CWR center section can be opened from left-to-right or vice versa depending on how backpan is installed.
 - Ensure the wall to which the backpan will be mounted, consists of two (2) 3/4" plywood screwed to the studs.
2. Locate the studs in the wall behind the two (2) 3/4" plywood. Align the mounting holes in the cabinet with the studs. Using 3/8" diameter lag bolts with a minimum length of 2" and flat washers in each mounting hole, secure the cabinet to the wall.

CABINET INSTALLATION (CONTINUED)

NOTE: A minimum of 1" clearance on the top and bottom of the cabinet is required. **(FIGURE A)**






FIGURE A

NOTE: Center section removed for clarity

GROUNDING AND BONDING

Protective Earth Terminals (PET) are located in backpan of the wall rack. These terminals are marked with the symbol . Wall rack parts, center section and door, contain or are provided with bonding points for connection to the backpan / PET. Protective earth and bonding connections shall be in accordance with Article 250 of the National Electric Code.

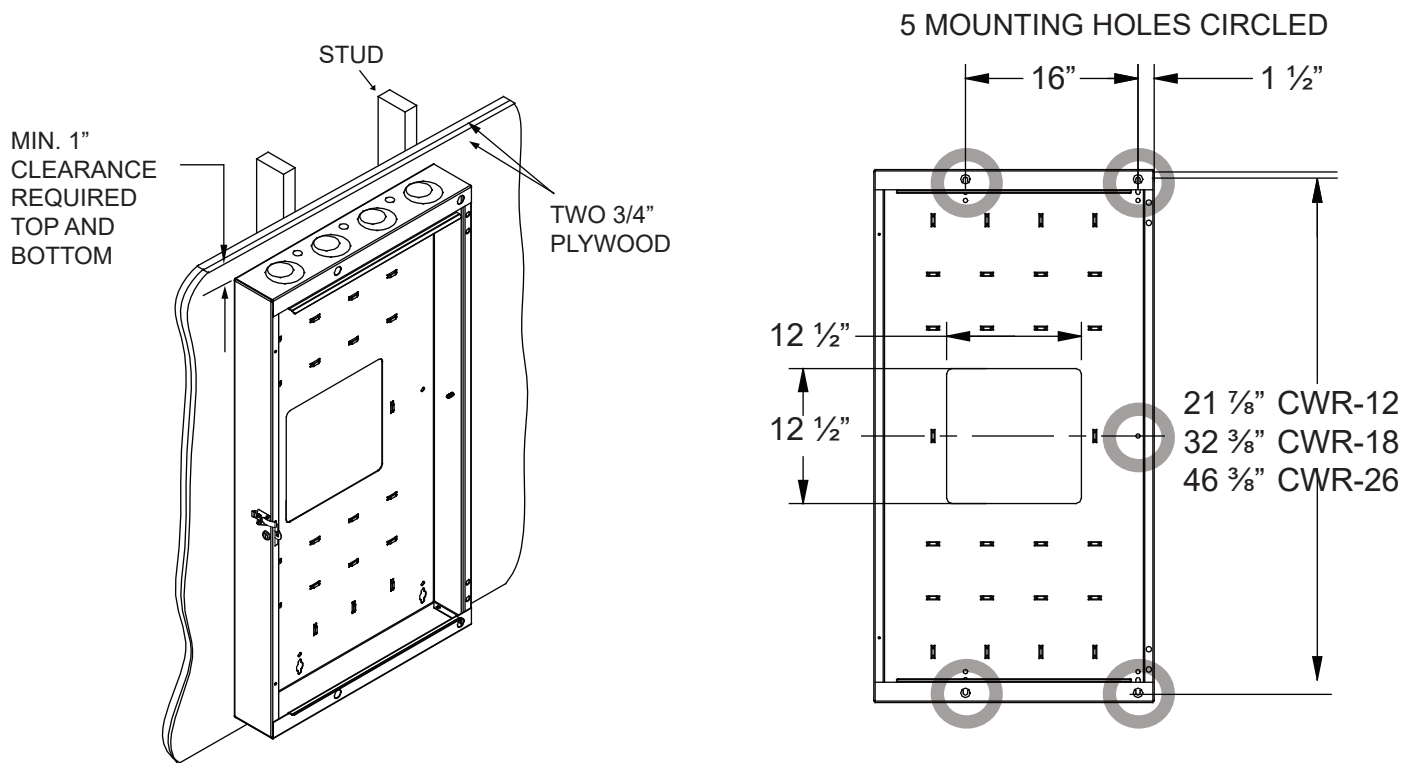
PROTECTIVE EARTH TERMINAL KIT (MODEL NO. PET-K-CWR, OPTIONAL)



12 Gauge Backpan Bonding Wire
9" (229 mm) Length
(#10 to 1/4" ring terminals)



M4 x 0.7
Thread Forming Screw



12 Gauge Door Bonding Wire
9" (229 mm) Length
(#10 to #10 ring terminals)



(3x)
10-32 Locking Nut




1/4-20
Flange Nut

GROUNDING AND BONDING (CONTINUED)

1. Attach **backpan bonding wire** from 1/4"-20 backpan protective earth terminal (PET) to nearest center section bonding stud (10-32) using hardware provided. **(FIGURE G)**


NOTE: The main protective earth ground needs to be the first terminal placed on the PET and this terminal needs to be secured on its own with a nut. The bonding wire for the center section can be added to the PET after securing the nut for the main ground. **(FIGURE G)**

2. Attach **door bonding wire** (with male or female disconnect end) to door bonding stud with nut (included). **(FIGURE G)**
3. Attach remaining door bonding wire to nearest center section bonding stud (10-32) using hardware provided. **(FIGURE G)**
4. Connect male and female ends of door bonding wire set.

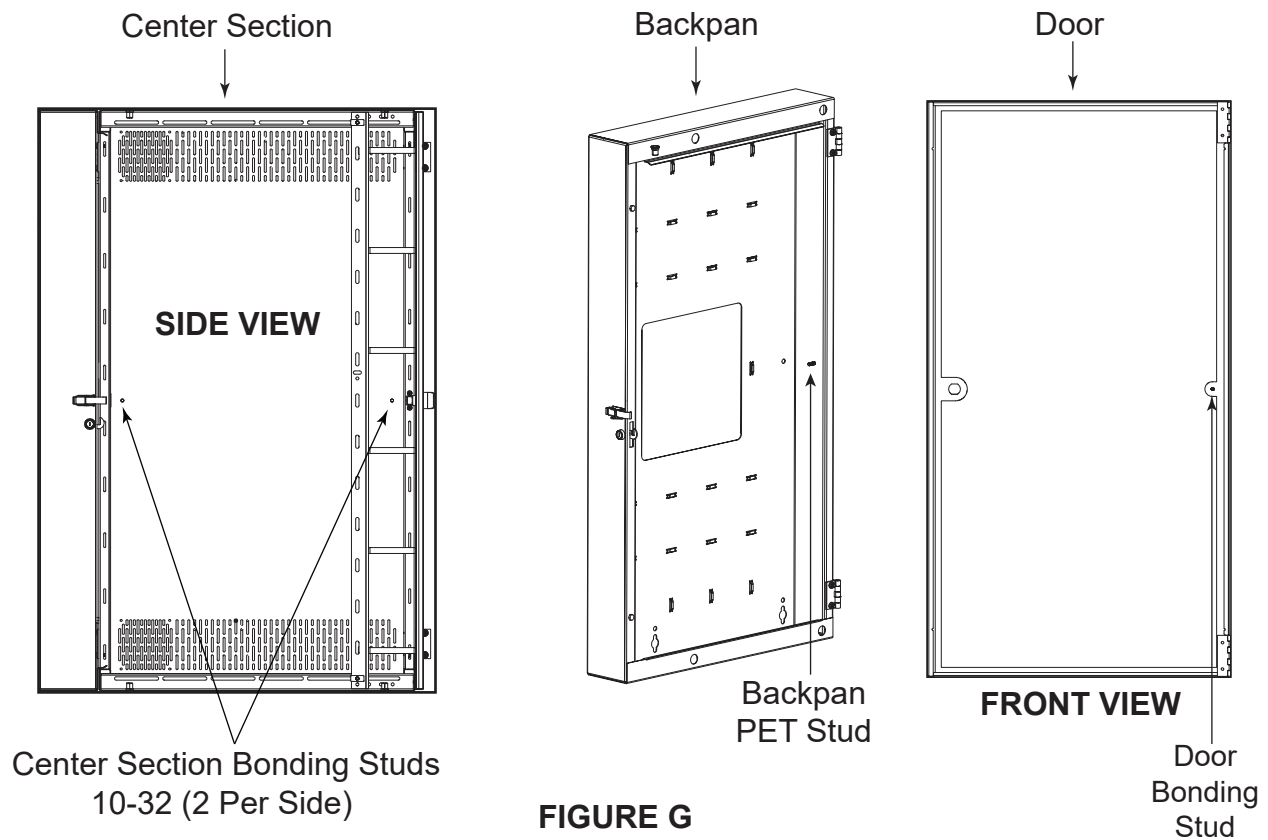


D-RING INSTALLATION

1. Install the supplied D-Rings to the pre-installed rackrail on both sides of the rack as shown with the supplied hardware. (FIGURE B)

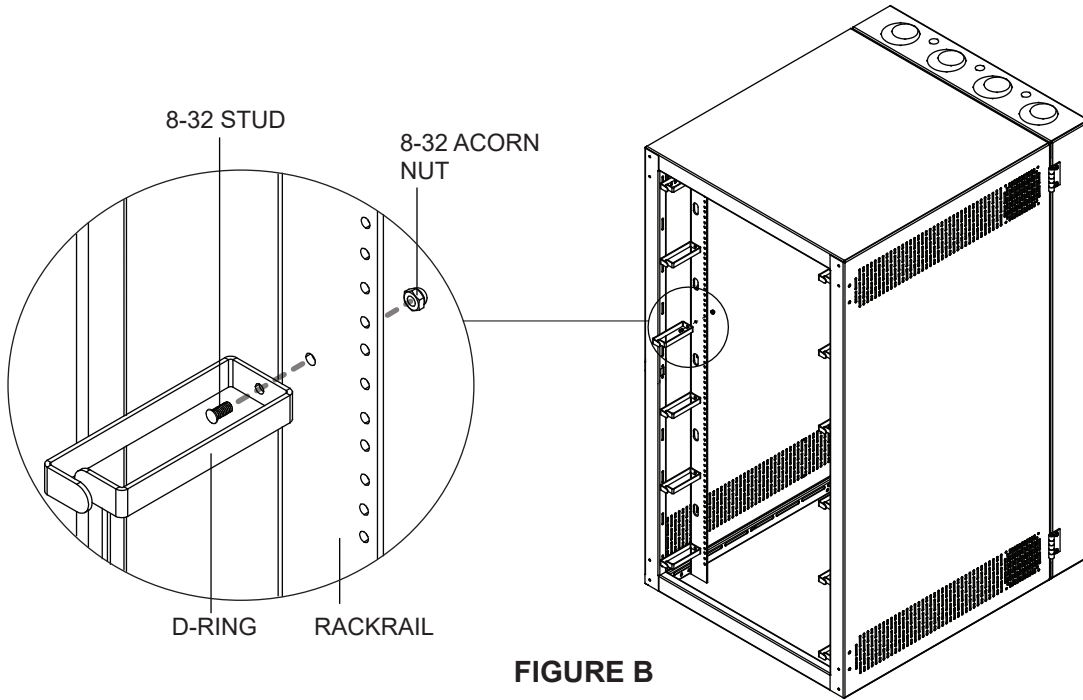

STANDARD DOOR SWING REVERSAL


1. Remove the two (2) 10-32 screws from both top and bottom hinges to remove the door (remove 4 screws total). (FIGURE C)
2. Reverse the door to install to the opposite side of the rack. Install the two (2) 10-32 screws to the top and bottom hinges.

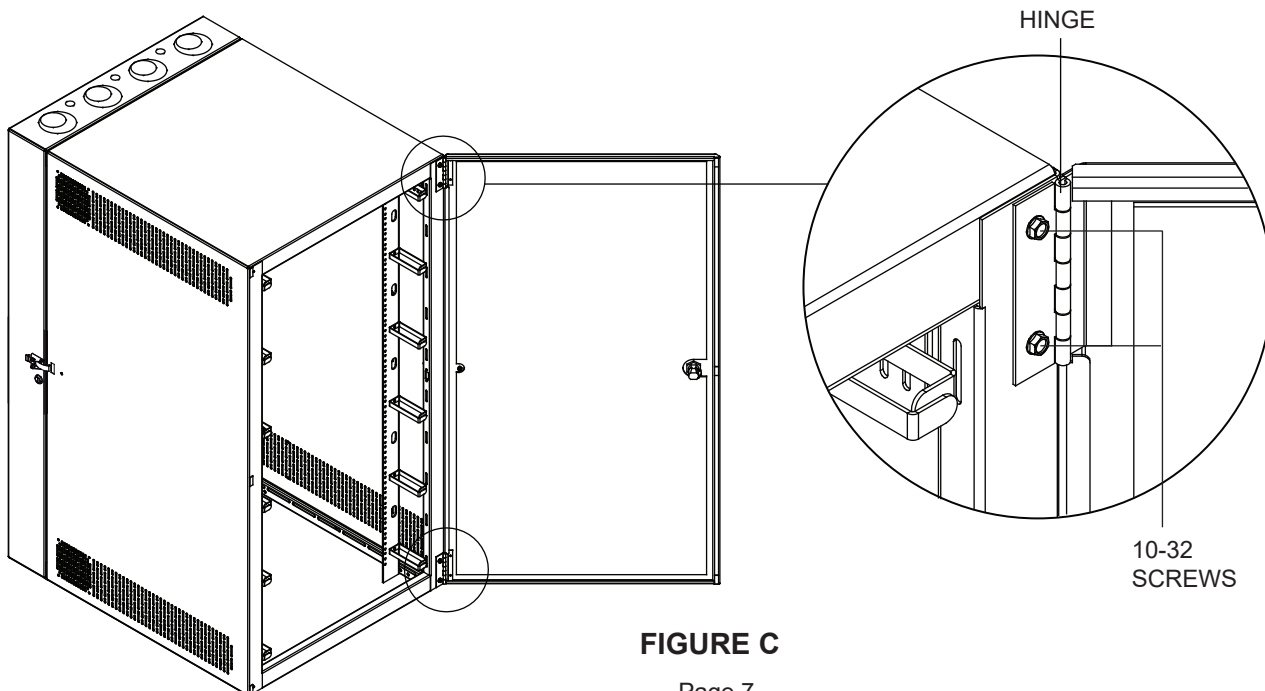

OPTIONAL COOLING KIT

CWR FAN KIT

PART NO.	DESCRIPTION	QTY
CWR-FKIT	FANS (95 CFM per fan)	2
	CORDS	2
	GUARDS	2
	VENT BLOCKER	1
	NYLON PUSH RIVET	20

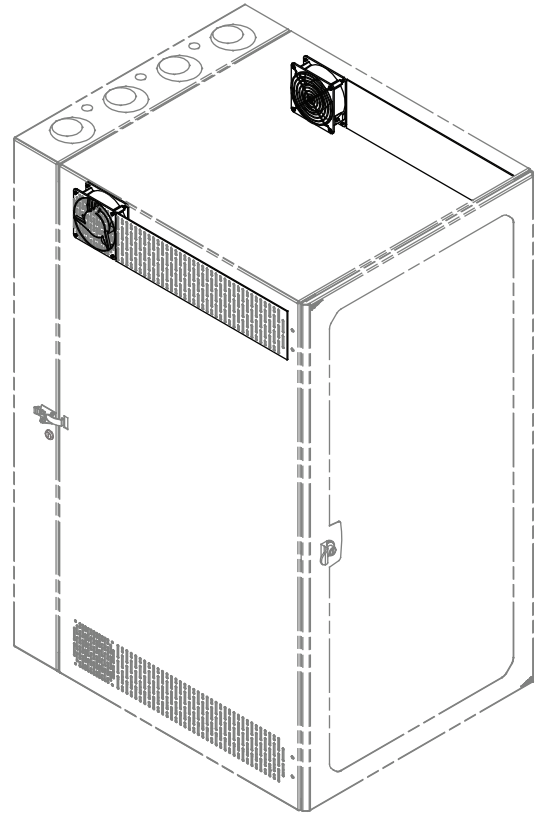

WARRANTY

For warranty information, refer to www.legrandav.com/policies/warranty_information.

Contacting Corporate Headquarters

P: (866) 977-3901 | F: (877) 894-6918 | www.legrandav.com | av.support@legrand.com

Contacting Middle Atlantic Canada

P: (888) 766-9770 | F: (888) 599-5009 | www.legrand.ca/middle-atlantic-products | av.canada.customerservice@legrand.com

United States (US)

Legrand | AV Headquarters
10900 Red Circle Drive
Minnetonka, MN, 55343, USA

At Legrand AV Inc we are always listening. Your comments are welcome.

Legrand AV Inc is an ISO 9001 and ISO 14001 Registered Company.