

Dell Pro 13 Plus

PB13250

(Intel Core Ultra 200V Series)

Owner's Manual

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Chapter 1: Views of Dell Pro 13 Plus.....	7
Right.....	7
Left.....	7
Front.....	9
Top.....	10
Bottom.....	11
Service Tag.....	11
Battery-status light.....	12
Chapter 2: Set up your Dell Pro 13 Plus	13
Chapter 3: Specifications of Dell Pro 13 Plus.....	15
Dimensions and weight.....	15
Processor.....	15
Chipset.....	16
Operating system.....	16
Memory.....	16
External ports and slots.....	17
Internal slots.....	17
Wireless module.....	17
WWAN module.....	18
Audio.....	19
Storage.....	20
Keyboard.....	20
Keyboard function keys of Dell Pro 13 Plus	21
Camera.....	22
Touchpad.....	23
Power adapter.....	23
Power adapter requirements (for computers that are shipped with 3-cell, 45 Wh battery).....	24
Power adapter requirements (for computers that are shipped with 3-cell, 55 Wh battery).....	25
Battery.....	25
Power requirements (for computers that are shipped with a 3-cell, 45 Wh battery)	27
Power requirements (for computers that are shipped with a 3-cell, 55 Wh battery)	27
Display.....	28
Fingerprint reader (optional).....	28
GPU—Integrated.....	29
Hardware security.....	29
Smart card reader.....	29
Contactless smart card reader.....	29
Contacted smart card reader.....	31
Operating and storage environment.....	32
ComfortView Plus.....	32
Chapter 4: Working inside your computer.....	33

Safety instructions.....	33
Before working inside your computer.....	33
Safety precautions.....	34
Electrostatic discharge—ESD protection.....	34
ESD Field Service kit	35
Transporting sensitive components.....	36
After working inside your computer.....	36
BitLocker.....	36
Recommended tools.....	36
Screw list.....	37
Major components of Dell Pro 13 Plus.....	38
Chapter 5: Removing and installing Customer Replaceable Units (CRUs).....	41
SIM-card tray (optional).....	41
Removing the SIM-card tray (optional).....	41
Installing the SIM-card tray (optional).....	42
Base cover.....	43
Removing the base cover.....	43
Installing the base cover.....	46
Battery.....	49
Rechargeable Li-ion battery precautions.....	49
Removing the battery.....	49
Installing the battery.....	50
Battery cable.....	51
Removing the battery cable.....	51
Installing the battery cable.....	52
Wireless Wide Area Network (WWAN) card.....	53
Removing the 5G WWAN card (optional).....	53
Installing the 5G WWAN card (optional).....	55
Solid State Drive (SSD).....	56
Removing the M.2 2230 SSD.....	56
Installing the M.2 2230 SSD.....	57
Removing the M.2 2280 SSD.....	58
Installing the M.2 2280 SSD.....	59
Speakers.....	60
Removing the speakers.....	60
Installing the speakers.....	61
Chapter 6: Removing and installing Field Replaceable Units (FRUs).....	63
Fan.....	63
Removing the fan.....	63
Installing the fan.....	65
USH board.....	66
Removing the USH board.....	66
Installing the USH board.....	67
Smart card reader.....	69
Removing the optional Smart card reader.....	69
Installing the optional Smart card reader.....	70
Heat sink.....	72

Removing the heat sink.....	72
Installing the heat sink.....	73
Display assembly.....	74
Removing the display assembly.....	74
Installing the display assembly.....	75
System board.....	78
Removing the system board.....	78
Installing the system board.....	80
USB Type-C connector module.....	82
Removing the USB Type-C connector module.....	82
Installing the USB Type-C connector module.....	83
Wireless Local Area Network (WLAN) antenna modules.....	85
Removing the WLAN antenna module.....	85
Installing the WLAN antenna module.....	86
I/O board.....	88
Removing the I/O board.....	88
Installing the I/O board.....	90
Power button with optional fingerprint reader.....	91
Removing the power button with an optional fingerprint reader.....	91
Installing the power button with optional fingerprint reader.....	92
Keyboard.....	93
Removing the keyboard.....	93
Installing the keyboard.....	95
Palm-rest assembly.....	97
Removing the palm-rest assembly.....	97
Installing the palm-rest assembly.....	98
Display bezel.....	100
Removing the display bezel	100
Installing the display bezel.....	106
Display hinges.....	107
Removing the display hinges.....	107
Installing the display hinges.....	108
Display panel.....	110
Removing the display panel.....	110
Installing the display panel.....	111
Camera module.....	114
Removing the camera module.....	114
Installing the camera module.....	115
Display cable.....	116
Removing the display cable.....	116
Installing the display cable.....	117
Display back cover.....	119
Removing the display back cover.....	119
Installing the display back cover.....	120
Chapter 7: Software.....	122
Operating system.....	122
Drivers and downloads.....	122

Chapter 8: BIOS Setup.....	123
Entering BIOS Setup program.....	123
Navigation keys.....	123
F12 One Time Boot menu.....	123
View Advanced Setup options.....	124
View Service options.....	124
BIOS Setup options.....	124
Updating the BIOS.....	141
Updating the BIOS in Windows.....	141
Updating the BIOS in Linux and Ubuntu.....	141
Updating the BIOS using the USB drive in Windows.....	141
Updating the BIOS from the One-Time boot menu.....	142
System and setup password.....	142
Assigning a System Setup password.....	143
Deleting or changing an existing system password or setup password.....	143
Clearing system and setup passwords.....	144
Chapter 9: Troubleshooting.....	145
Handling swollen rechargeable Li-ion batteries.....	145
Locating the Service Tag or Express Service Code of your Dell computer	145
Dell SupportAssist Pre-boot System Performance Check diagnostics.....	146
Running the SupportAssist Pre-Boot System Performance Check.....	146
Built-in self-test (BIST).....	146
Motherboard Built-In Self-Test (M-BIST).....	146
Logic Built-in Self-test (L-BIST).....	147
LCD Built-in Self-Test (LCD-BIST).....	147
System-diagnostic lights.....	148
Recovering the operating system.....	149
Real-Time Clock (RTC Reset).....	150
Backup media and recovery options.....	150
Network power cycle.....	150
Drain flea power (perform hard reset).....	150
Chapter 10: Getting help and contacting Dell.....	152

Views of Dell Pro 13 Plus

Right



Figure 1. Right view

1. Nano-SIM card slot (optional)

Insert a SIM card to connect to a mobile broadband network

NOTE: Availability of the SIM-card slot depends on the region and configuration ordered.

2. Global headset jack

Connect headphones or a headset (headphone and microphone combo).

3. USB 3.2 Gen 1 port with PowerShare

Connect devices such as external storage devices and printers. It provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

NOTE: If your computer is turned off or in a hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.

NOTE: Certain USB devices may not charge when the computer is turned off or in a sleep state. In such cases, turn on the computer to charge the device.

4. Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

Left

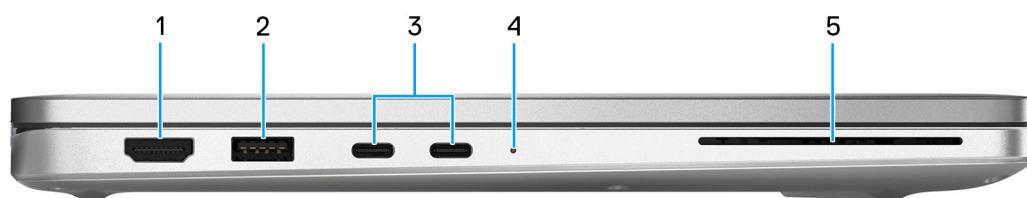


Figure 2. Left view

1. HDMI 2.1 Transition-minimized differential signaling (TMDS) port


Connect to a TV, external display, or another HDMI-in enabled device. Provides video and audio output.


2. **USB 3.2 Gen 1 port**


Connect devices such as external storage devices and printers. It provides data transfer speeds up to 5 Gbps


3. **Thunderbolt 4 ports with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery (2)**

Supports USB4, DisplayPort 2.1, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Provides data transfer rates of up to 40 Gbps for USB4 and Thunderbolt 4.

 **NOTE:** You can connect a Dell Docking Station to one of the Thunderbolt 4 ports. For more information, search in the Knowledge Base Resource at [Dell Support Site](#).

 **NOTE:** A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

 **NOTE:** USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.

 **NOTE:** Thunderbolt 4 supports two 4K displays or one 8K display.

4. **Battery-status light**

Battery-status light indicates the battery-charge status.

- White-Battery is charging.
- Solid yellow-Battery charge is low.
- Blinking yellow-Battery charge is critical.
- Off—Battery is fully charged.

5. **smart card reader slot (optional)**

Using smart card provides authentication in corporate networks.

Front

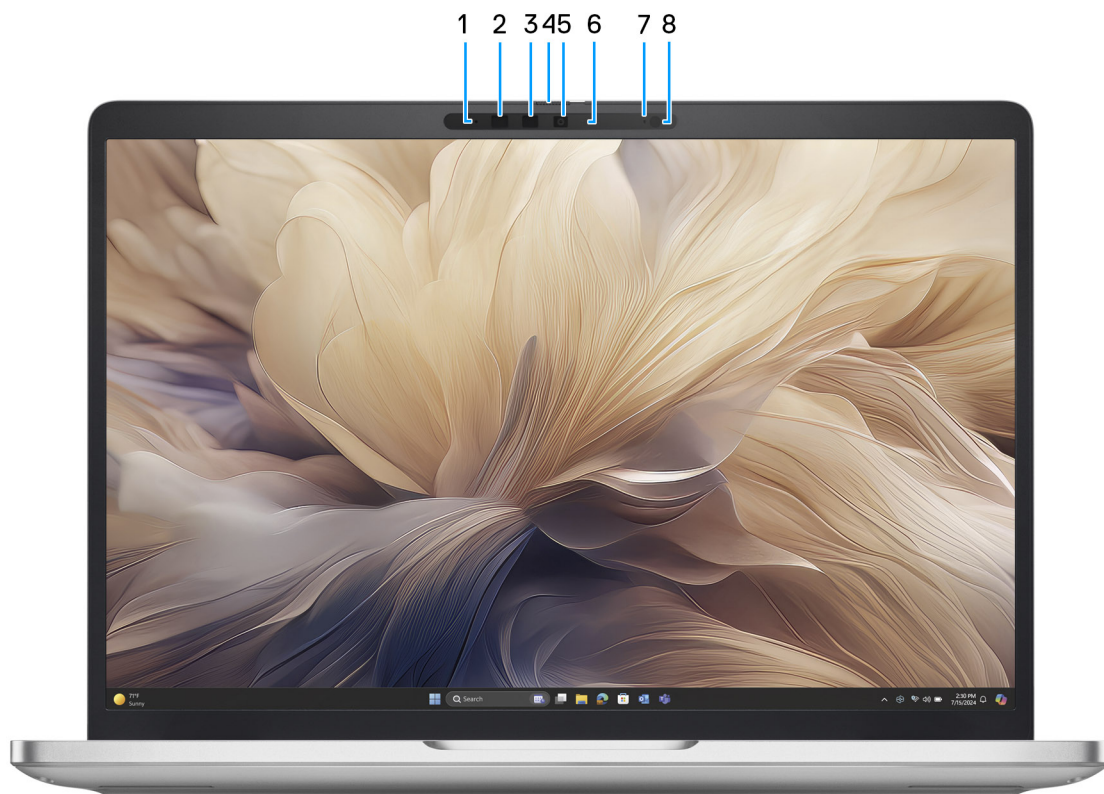


Figure 3. Front view

1. Left microphone

Provides digital sound input for audio recording and voice calls.

2. IR Sensor (optional)

Sensor detects the absence of the user and locks the computer for securing the computer and reducing power consumption.

3. Infrared emitter (optional)

The infrared emitter emits infrared light, which enables the infrared camera to sense and track motion.

4. Camera Shutter

Slide the privacy shutter to the left to access the camera lens.

5. Camera

A camera enables you to video chat, capture photos, and record videos.

6. Camera-status light

Turns on when the camera is in use.

7. Right microphone

Provides digital sound input for audio recording and voice calls.

8. Ambient-light sensor (optional)

The sensor detects the ambient light and automatically adjusts the display brightness.

Top



Figure 4. Top view

1. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button steadily to log in.

NOTE: You can customize the power-button behavior in Windows.

NOTE: The power-status light on the power button is available only on computers without the fingerprint reader. Computers that are shipped with the fingerprint reader that is integrated on the power button does not have the power-status light on the power button.

2. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two fingers tap to right-click.

3. NFC/contactless smart card reader (optional)

Enables NFC-enabled devices to communicate with your computer.

Bottom

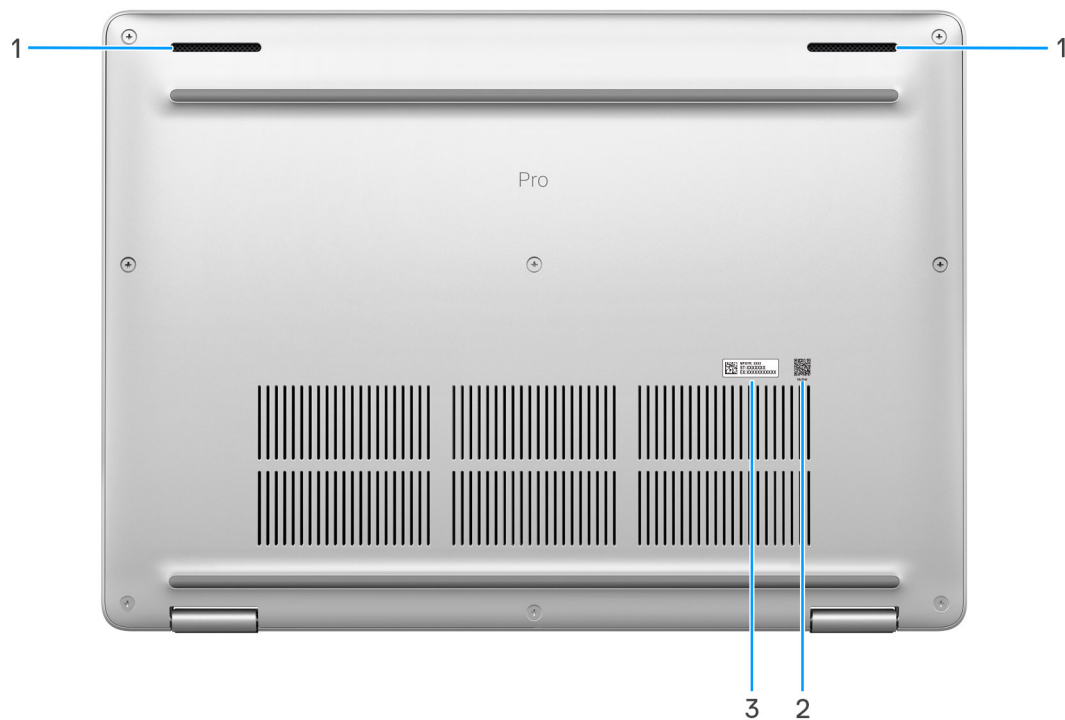


Figure 5. Bottom view

1. Speakers (2)

Provide audio output.

2. MyDell QR code

MyDell is your hub for content that is personalized to your Dell Pro 13 Plus/Dell Pro 13 Plus 2-in-1, including videos, articles, manuals, and easy access to support.

3. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

Service Tag

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information.

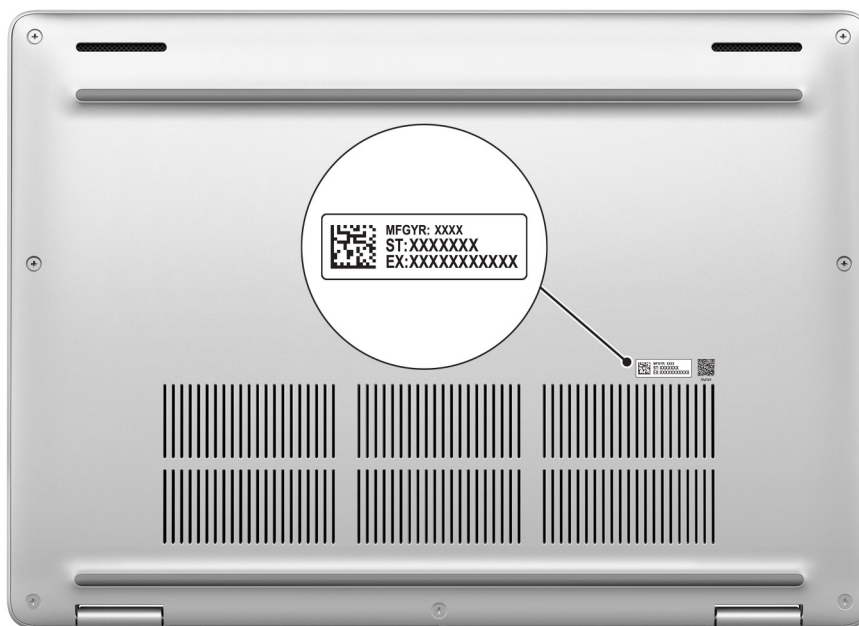


Figure 6. Service tag location

Battery-status light

The following table lists the battery-status light of your Dell Pro 13 Plus.

Table 1. Battery-status light behavior

Power source	LED behavior	System power state	Battery charge level
AC adapter	Off	S0 or S5	100%
AC adapter	Solid white	S0 or S5	< 100%
Battery	Off	S0 or S5	11-100%
Battery	Solid amber (590+/-3 nm)	S0 or S5	< 10%

- S0 (ON): The computer is turned on.
- S4 (Hibernate): The computer consumes the least power in the Hibernate state than in the ON or OFF state. The computer is almost in the OFF state. The context data is written to a storage device, allowing you to resume from where you left after the computer is turned on.
- S5 (OFF): The computer is in a shutdown state.

Set up your Dell Pro 13 Plus

About this task

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Steps

1. Connect the power adapter and press the power button.



Figure 7. Connect the power adapter and press the power button

NOTE: The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.

2. Finish the operating system setup.

For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, search in the Knowledge Base Resource at [Dell Support Site](#).

For Windows:

Follow the on-screen instructions to complete the setup. When setting up, it is recommended that you:

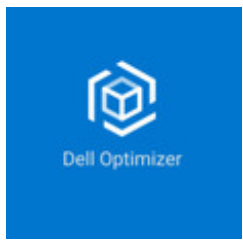




- Connect to a network for Windows updates.

NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign-in with an existing Microsoft account or create an account. If not connected to the Internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 2. Locate Dell apps


Resources	Description
	<p>Dell Optimizer is an application that is designed to enhance computer performance and productivity by optimizing settings for power, battery, display, collaboration touchpad, and presence detection. It also provides access to applications purchased with your new computer.</p> <p>For more information, see Dell Optimizer User's Guide at Dell Support Site.</p>
	<p>Dell Product Registration</p> <p>Register your computer with Dell.</p>
	<p>Dell Help & Support</p> <p>Access help and support for your computer.</p>
	<p>SupportAssist</p> <p>SupportAssist is a proactive and predictive technology that offers automated technical support for Dell computers. It proactively monitors both hardware and software, addressing performance issues, preventing security threats, and automating engagement with Dell Technical Support.</p> <p>For more information, see SupportAssist documentation at Dell Support Site.</p> <p> NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.</p>

Specifications of Dell Pro 13 Plus

Dimensions and weight

The following table lists the height, width, depth, and weight of your Dell Pro 13 Plus .

Table 3. Dimensions and weight

Dimensions and weight specifications	300 nits FHD and Non-touch	300 nits FHD and touch 400 nits FHD and Non-touch
Height:		
Front height	19.79 mm (0.78 in.)	19.78 mm (0.78 in.)
Rear height	19.79 mm (0.78 in.)	19.79 mm (0.78 in.)
Maximum Height	20.75 mm (0.82 in.)	19.95 mm (0.79 in.)
Width	300 mm (11.81 in.)	300 mm (11.81 in.)
Depth	215 mm (8.46 in.)	215 mm (8.46 in.)
Weight  NOTE: The weight of your computer depends on the configuration that is offered.	1.34 kg (2.95 lb) - minimum	1.23 kg (2.71 lb) - minimum

Processor

The following table lists the details of the processors that are supported by your Dell Pro 13 Plus .

Table 4. Processor

Description	Processor wattage	Processor core count	Processor thread count	Processor speed	Processor cache	Integrated graphics
Intel Core Ultra 5 226V	20 W	8	8	up to 4.5 GHz	8 MB	Intel Arc Graphics
Intel Core Ultra 5 236V	20 W	8	8	up to 4.7 GHz	8 MB	Intel Arc Graphics
Intel Core Ultra 5 238V	20 W	8	8	up to 4.7 GHz	8 MB	Intel Arc Graphics
Intel Core Ultra 7 266V	20 W	8	8	up to 5 GHz	12 MB	Intel Arc Graphics
Intel Core Ultra 7 268V	20 W	8	8	up to 5 GHz	12 MB	Intel Arc Graphics

Chipset

The following table lists the details of the chipset that is supported by your Dell Pro 13 Plus .


Table 5. Chipset

Description	Values
Chipset	Integrated in the processor
Processor	Intel Core Ultra 5/7
DRAM bus width	64-bit
Flash EPROM	64 MB
PCIe bus	Up to Gen5

Operating system

Your Dell Pro 13 Plus supports the following operating systems:


- Windows 11 Professional
- Windows 11 Home
- Ubuntu Linux 24.04

 **NOTE:** If you downgrade your computer from Windows 11 to Windows 10 22H2, Dell Technologies support will follow the Microsoft Windows 10 End of Support plan.

Memory

The following table lists the memory specifications of your Dell Pro 13 Plus .

Table 6. Memory specifications

Description	Values
Memory slots	Memory on Package  NOTE: The memory is integrated in the processor and is not upgradable.
Memory type	LPDDR5X
Memory speed	8533 MT/s
Maximum memory configuration	32 GB
Minimum memory configuration	16 GB
Memory configurations supported	<ul style="list-style-type: none">• 16 GB: LPDDR5X, 8533 MT/s• 32 GB: LPDDR5X, 8533 MT/s

External ports and slots

The following table lists the external ports and slots and specifications of your Dell Pro 13 Plus.

Table 7. External ports and slots

Description	Values
USB ports	<ul style="list-style-type: none">Two Thunderbolt 4 ports with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery <p>NOTE: You can connect a Dell Docking Station to these ports. For more information, search in the Knowledge Base Resources at Dell Support Site.</p> <ul style="list-style-type: none">One USB 3.2 Gen 1 port with Power ShareOne USB 3.2 Gen 1 port
Audio port	One global headset jack
Video port	One HDMI 2.1 Transition-minimized differential signaling (TMDS) port
Power-adaptor port	Supported through the USB Type-C port.
Security-cable slot	One security-cable slot (wedge-shaped)
SIM-card Slot	Nano-SIM card slot (optional)

Internal slots

The following table lists the internal slots of your Dell Pro 13 Plus.

Table 8. Internal slots

Description	Values
M.2	<ul style="list-style-type: none">One M.2 2230 or M.2 2280 solid state drive slotOne M.2 3042/3052 for WWAN slot (optional) <p>NOTE: To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at Dell Support Site.</p>

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module that is supported on your Dell Pro 13 Plus.

Table 9. Wireless module specifications

Description	Option one
Model number	Intel Wi-Fi 7 BE201
Transfer rate	Up to 5760 Mbps
Frequency bands supported	2.4 GHz/5 GHz/6 GHz
Wireless standards	<ul style="list-style-type: none">WiFi 802.11a/b/gWi-Fi 4 (WiFi 802.11n)Wi-Fi 5 (WiFi 802.11ac)Wi-Fi 6E (WiFi 802.11ax)

Table 9. Wireless module specifications (continued)

Description	Option one
	<ul style="list-style-type: none"> • Wi-Fi 7 (WiFi 802.11be)
Encryption	<ul style="list-style-type: none"> • 64-bit/128-bit WEP • AES-CCMP • TKIP
Bluetooth wireless card	Bluetooth 5.4
	<i>i</i> NOTE: The functionality of the Bluetooth wireless card may vary depending on the operating system that is installed on your computer.

WWAN module

The following table lists the Wireless Wide Area Network (WWAN) module that is supported in your Dell Pro 13 Plus.

i **NOTE:** The WWAN module is available only on certain configurations and in certain regions.

i **NOTE:** Availability of the eSIM feature on this module depends on your region.

i **NOTE:** For instructions on how to setup SIM or eSIM connections on your computer, see the *SIM/eSIM Setup Guide* available with your product documentation at [Dell Support Site](#).

Table 10. WWAN module specifications

Description	Values
Model number	DW5933e MediaTek T700 Global 5G Modem
Form factor	M.2 3052 Key-B
Host interface	PCIe Gen3
Network standard	<ul style="list-style-type: none"> • NR FR1(Sub6) FDD/ • TDD, LTE FDD • TDD, WCDMA • HSPA+ • GPS • GLONASS • BDS • QZSS • Galileo
Transfer data rate	<ul style="list-style-type: none"> • SA: DL 4.67 Gbps/UL 1.25 Gbps • NSA: DL 3.74 Gbps/UL 835 Mbps • LTE: DL 1.6 Gbps (CAT19)/UL 211 Mbps • UMTS: DL 384 kbps/UL 384 kbps • DL DC-HSPA+: 42 Mbps (CAT24)/UL 11.5 Mbps (CAT7)
Operating frequency bands	<ul style="list-style-type: none"> • NR (n1, n2, n3, n5, n7, n8, n20, n25, n28, n30, n38, n40, n41, n48, n66, n71, n77, n78, n79) • LTE (B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B17, B18, B19, B20, B25, B26, B28, B29, B30, B32, B34, B38, B39, B40, B41, B42, B43, B46, B48, B66, B71) • WCDMA/HSPA+ (1, 2, 4, 5, 8)
Power supply	DC 3.135 V to 4.4 V, Typical 3.3 V

Table 10. WWAN module specifications (continued)

Description	Values
SIM card	Supported through the external SIM slot. i NOTE: The availability of eSIM functionality that is embedded on the module depends on the region and specific carrier requirements.
eSIM with dual SIM (DSSA)	Supported
Antenna diversity	Supported
Radio on/off	Supported
Wake On Wireless	Supported
Temperature	<ul style="list-style-type: none"> Normal operating temperature: -10°C to + 55°C Extended operating temperature: -40°C to +85°C Storage temperature: -60°C to +100°C
Antenna connector	<ul style="list-style-type: none"> WWAN TX0 and PRX Connector × 1 WWAN DRX Combined GPS Connector × 1 WWAN MIMO PRX Connector × 1 WWAN TX1 and MIMO DRX Connector × 1 4x4 MIMO Antenna × 2
i NOTE: For instructions to find your computer's International Mobile Equipment Identity (IMEI) number, search in the Knowledge Base Resource at Dell Support Site .	

Audio

The following table lists the audio specifications of your Dell Pro 13 Plus.

Table 11. Audio specifications

Description	Values
Audio controller	Cirrus Logic CS42L43
Stereo conversion	Supported
Internal audio interface	Soundwire Interface
External audio interface	Global headset jack
Number of speakers	Two
Internal-speaker amplifier	Supported (audio codec integrated)
External volume controls	Keyboard shortcut controls
Speaker output:	
Average	2.0 W
Peak	2.5 W
Microphone	Dual-array microphones

Storage

This section lists the storage options on your Dell Pro 13 Plus.

The availability of eSIM functionality that is embedded on the module depends on the region and specific carrier requirements.

Table 12. Storage specifications

Storage type	Interface type	Capacity
M.2 2280 solid-state drive, self-encrypting drive, TLC	PCIe Gen4 NVMe, up to 64 Gbps	2 TB
M.2 2280 solid-state drive, self-encrypting drive, TLC	PCIe Gen4 NVMe, up to 64 Gbps	1 TB
M.2 2230 solid-state drive, TLC	PCIe Gen4 NVMe, up to 64 Gbps	1 TB
M.2 2230 solid-state drive, TLC	PCIe Gen4 NVMe, up to 64 Gbps	512 GB
M.2 2230 solid-state drive, QLC	PCIe Gen4 NVMe, up to 64 Gbps	512 GB
M.2 2230 solid-state drive, TLC	PCIe Gen4 NVMe, up to 64 Gbps	256 GB


Keyboard

The following table lists the keyboard specifications of your Dell Pro 13 Plus.

Table 13. Keyboard specifications

Description	Values
Keyboard type	<ul style="list-style-type: none">Standard backlit keyboardStandard non-backlit keyboard
Keyboard layout	QWERTY
Number of keys	<ul style="list-style-type: none">United States and Canada: 79 keysUnited Kingdom: 80 keysJapan: 83 keys
Key pitch	X=18.05 mm key pitch Y=18.05 mm key pitch
Keyboard shortcuts	<p>Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.</p> <p>NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in the BIOS setup program.</p> <p>NOTE: If Copilot in Windows is not available on your computer, pressing the Copilot key launches Windows search. For more information about Copilot in Windows, search in the Knowledge Base Resource at the Dell Support site.</p>

Keyboard function keys of Dell Pro 13 Plus

 **NOTE:** Keyboard characters may differ depending on the keyboard language configuration. Keys that are used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key. The symbol that is shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol that is shown on the upper part of the key is typed out. For example, if you press **2**, 2 is typed out; if you press **Shift + 2**, @ is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multimedia control, as indicated by the icon on the key. Press the function key to enable the task represented by the icon. For example, pressing F1 mutes the audio (see the table below).

However, if the function keys F1-F12 are needed for specific software applications, multimedia functionality can be disabled by pressing **Fn + Esc**. Later, multimedia control can be invoked by pressing **Fn** and the respective function key. For example, mute audio by pressing **Fn + F1**.




 **NOTE:** You can also define the primary behavior of the function keys (F1–F12) by changing **Function Key Behavior** in the BIOS setup program.

Table 14. Function key primary behavior

Function key	Primary behavior
F1	Mute or unmute audio
F2	Decrease volume
F3	Increase volume
F4	Mute/Unmute
F5	Turn on or turn off keyboard backlight (optional).  NOTE: Nonbacklight keyboards have the F10 function key without the backlight icon and do not support the toggle keyboard backlight function.  NOTE: Toggle to cycle the keyboard backlight status through off, low-backlight, and high-backlight.
F6	Decrease brightness
F7	Increase brightness
F8	Switch to external display
F10	Print Screen
F11	Home
F12	End

The **Fn** key is also used with selected keys on the keyboard to invoke secondary functions.

Table 15. Secondary behavior

Function key	Secondary behavior
Fn + F1	Operating system and application-specific F1 behavior
Fn + F2	Operating system and application-specific F2 behavior
Fn + F3	Operating system and application-specific F3 behavior
Fn + F4	Operating system and application-specific F4 behavior
Fn + F5	Operating system and application-specific F5 behavior
Fn + F6	Operating system and application-specific F6 behavior

Table 15. Secondary behavior (continued)

Function key	Secondary behavior
Fn + F8	Operating system and application-specific F8 behavior
Fn + F9	Operating system and application-specific F9 behavior
Fn + F10	Operating system and application-specific F10 behavior
Fn + F11	Operating system and application-specific F11 behavior
Fn + F12	Operating system and application-specific F12 behavior
Fn + PrtScr	Turn off or on wireless
Fn + B	Pause or Break
Fn + Insert	Enable sleep state
Fn + S	Toggle scroll lock
Fn + H	Toggle between power and battery-status light or hard drive activity light
Fn + R	Snip screen
Fn + Ctrl	Open the application menu
Fn + Esc	Toggle between multimedia and function key behavior
Fn + PgUp	Scroll up the document or page
Fn + PgDn	Scroll down the document or page
Fn + Home	Move to the beginning of the document
Fn + End	Move to the end of the document

Camera

The following table lists the camera specifications of your Dell Pro 13 Plus.

Table 16. Camera specifications

Description	Values
Number of cameras	One
Camera type	There are 3 camera options: <ul style="list-style-type: none"> • RGB camera • RGB + IR camera • MIPI + IR camera
Camera location	Front camera
Camera sensor type	CMOS sensor technology
Camera resolution:	
Still image	<ul style="list-style-type: none"> • 2.07 megapixels • 5.20 megapixels
Video	<ul style="list-style-type: none"> • 1920 x 1080 at 30 fps • 2560 x 1440 at 30 fps
Infrared camera resolution:	

Table 16. Camera specifications (continued)

Description		Values
	Still image	0.23 megapixels
	Video	640 x 360 at 15 fps
Diagonal viewing angle:		
	Camera	<ul style="list-style-type: none"> 80.20 degrees 91.20 degrees
	Infrared camera	86.60 degrees

Touchpad

The following table lists the touchpad specifications of your Dell Pro 13 Plus.

Table 17. Touchpad specifications

Description		Values
Touchpad resolution:		>=300dpi
Touchpad dimensions:		
	Horizontal	125 mm (4.92 in.)
	Vertical	71 mm (2.80 in.)
Touchpad gestures		For more information about the touchpad gestures that are available on: <ul style="list-style-type: none"> Windows, see the Microsoft Knowledge Base article at Microsoft Support Site. Ubuntu, see Ubuntu Support Site.


Power adapter

The following table lists the power adapter specifications of your Dell Pro 13 Plus.

Table 18. Power-adapter specifications

Description		Option one	Option two	Option three
Type		60 W adapter, USB Type-C	65 W adapter, USB Type-C	100 W adapter, USB Type-C
Power-adapter dimensions:				
	Height	22 mm (0.86 in.)	28 mm (1.10 in.)	26.5 mm (1.04 in.)
	Width	55 mm (2.16 in.)	51 mm (2.01 in.)	60 mm (2.36 in.)
	Depth	66 mm (2.59 in.)	112 mm (4.41 in.)	122 mm (4.80 in.)
Input voltage		100 to 240 VAC	100 to 240 VAC	100 to 240 VAC
Input frequency		50 Hz to 60 Hz	50 to 60 Hz	50 to 60 Hz
Input current (maximum)		1.7 A	1.7 A	1.7 A

Table 18. Power-adaptor specifications (continued)

Description	Option one	Option two	Option three
Output current (continuous)	<ul style="list-style-type: none"> 20 V/3 A (continuous) 15 V/3 A (continuous) 9.0 V/3 A (continuous) 5.0 V/3 A (continuous) 	<ul style="list-style-type: none"> 20 V/3.25 A (continuous) 15 V/3 A (continuous) 9 V/3 A (continuous) 5 V/3 A (continuous) 	<ul style="list-style-type: none"> 20 V/5 A (continuous) 15 V/3 A (continuous) 9.0 V/3 A (continuous) 5.0 V/3 A (continuous)
Rated output voltage	20 VDC/15 VDC/9 VDC/5 VDC	20 VDC/15 VDC/9 VDC/5 VDC	20 VDC/15 VDC/9 VDC/5 VDC
Temperature range:			
Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)	0°C to 35°C (32°F to 95°F)
Storage	-20°C to 70°C (-4°F to 158°F)	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.			

Power adapter requirements (for computers that are shipped with 3-cell, 45 Wh battery)

This section contains the power adapter requirements for the Dell Pro 13 Plus






 **NOTE:** If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter that you use meets the following requirements:

Table 19. Power adapter requirements

Description	Value
Power that is required from a power adapter to achieve optimal performance.	65 W
Power that is required to charge the computer at a slower speed.  NOTE: A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	Less than 60 W
Minimum power that is required from a power adapter to operate the computer and charge the battery.  NOTE: A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	27 W
USB Power Delivery (PD) fast charging	Supported
ExpressCharge mode	45 Whr battery needs a 65 W AC adapter to achieve Express Charge.  NOTE: Ensure that the computer is connected to a 65 W power adapter for this feature to be supported.  NOTE: ExpressCharge mode must also be enabled in the BIOS Setup screen by selecting Power > Battery Configuration > ExpressCharge, then pressing Enter.

Power adapter requirements (for computers that are shipped with 3-cell, 55 Wh battery)

This section contains the power adapter requirements for the Dell Pro 13 Plus

NOTE: If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter that you use meets the following requirements:

Table 20. Power adapter requirements

Description	Value
Power that is required from a power adapter to achieve optimal performance.	100 W
Power that is required to charge the computer at a slower speed. NOTE: A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	Less than 60 W
Minimum power that is required from a power adapter to operate the computer and charge the battery. NOTE: A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	27 W
USB Power Delivery (PD) fast charging	Supported
ExpressCharge mode	<p>NOTE: 55 Whr battery needs a 100 W AC adapter to achieve Express Charge.</p> <p>Ensure that the computer is connected to a 100 W power adapter for this feature to be supported.</p> <p>NOTE: ExpressCharge mode must also be enabled in the BIOS Setup screen by selecting Power > Battery Configuration > ExpressCharge, then pressing Enter.</p>

Battery

The following table lists the battery specifications of your Dell Pro 13 Plus.

Table 21. Battery specifications

Description	Option one	Option two	Option three	Option four
Battery type	3-cell, 45 Wh, ExpressCharge, ExpressCharge Boost	3-cell, 55 Wh, ExpressCharge, ExpressCharge Boost	3-cell, 45 Wh, Long Life Cycle, ExpressCharge	3-cell, 55 Wh, Long Cycle Life, ExpressCharge
Battery voltage	11.25 V	11.70 VDC	11.25 VDC	11.70 VDC
Battery weight (minimum)	0.20 Kg (0.44 lb)	0.22 kg (0.48 lb)	0.20 kg (0.44 lb)	0.22 kg (0.48 lb)
Battery dimensions:				
Height	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)	72.80 mm (2.83 in.)
Width	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)	254.80 mm (10.03 in.)

Table 21. Battery specifications (continued)

Description		Option one	Option two	Option three	Option four
	Depth	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)	6.30 mm (0.25 in.)
Temperature range:					
	Operating	0°C to 45°C (32°F to 113°F)	0°C to 45°C (32°F to 113°F)	0°C to 60°C (32°F to 140°F)	0°C to 60°C (32°F to 140°F)
	Storage	-20°C to 65°C (-4°F to 149°F)	-20°C to 65°C (-4°F to 149°F)	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)
Battery operating time		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Battery charging time (approximate) i NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information about Dell Power Manager, search in the Knowledge Base Resource at Dell Support Site .		Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours ExpressCharge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 80% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 2 hours ExpressCharge Boost charge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 35% RSOC is 20 min 	Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours ExpressCharge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 80% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 2 hours ExpressCharge Boost charge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 35% RSOC is 20 min 	Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours ExpressCharge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 80% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 2 hours 	Standard charge/ Predominately AC User Charge Method: <ul style="list-style-type: none"> 0°C to 15°C maximum allowable charge time from 0% to 100% RSOC is 4 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 3 hours ExpressCharge Method: <ul style="list-style-type: none"> 16°C to 45°C maximum allowable charge time from 0% to 80% RSOC is 1 hours 16°C to 45°C maximum allowable charge time from 0% to 100% RSOC is 2 hours
Coin-cell battery		No	No	No	No

Table 21. Battery specifications (continued)

Description	Option one	Option two	Option three	Option four
<div><div></div><div>CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</div></div> <div><div></div><div>CAUTION: Dell recommends that you charge the battery regularly for optimal power consumption. If your battery charge is completely depleted, connect the power adapter, turn on your computer, and then restart your computer to reduce the power consumption.</div></div>				

Power requirements (for computers that are shipped with a 3-cell, 45 Wh battery)

NOTE: The information in this section is applicable to the European Union (EU) countries.

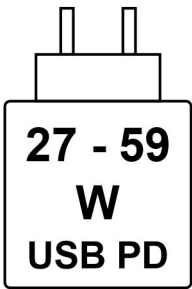


Figure 8. Pictogram for power charging requirements

The power that is delivered by the charger must be between a minimum of 27 Watts that is required by the radio equipment, and a maximum of 59 Watts in order to achieve the maximum charging speed.

This computer supports USB Power Delivery (PD) fast charging.

Power requirements (for computers that are shipped with a 3-cell, 55 Wh battery)

NOTE: The information in this section is applicable to the European Union (EU) countries.

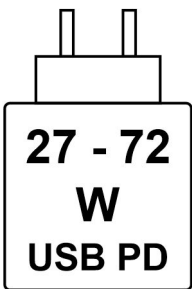


Figure 9. Pictogram for power charging requirements

The power that is delivered by the charger must be between a minimum of 27 Watts that is required by the radio equipment, and a maximum of 72 Watts in order to achieve the maximum charging speed.

This computer supports USB Power Delivery (PD) fast charging.

Display

The following table lists the display specifications of your Dell Pro 13 Plus .

Table 22. Display specifications

Description		Option one	Option two	Option three
Display type		13.3-inch Full High Definition Plus (FHD+)	13.3-inch Full High Definition Plus (FHD+), ComfortView Plus	13.3-inch Full High Definition Plus (FHD+), ComfortView Plus
Touch options		No	Yes	No
Display-panel technology		In-plane Switching (IPS), White Light Emitting Diode (WLED)	In-plane Switching (IPS), White Light Emitting Diode (WLED)	In-plane Switching (IPS), White Light Emitting Diode (WLED)
Display-panel dimensions (active area):				
	Height	178.78 mm (7.04 in.)	178.78 mm (7.04 in.)	178.78 mm (7.04 in.)
	Width	286.04 mm (11.26 in.)	286.04 mm (11.26 in.)	286.04 mm (11.26 in.)
	Diagonal	337.31 mm (13.20 in.)	337.31 mm (13.20 in.)	337.31 mm (13.20 in.)
Display-panel native resolution		1920 x 1200	1920 x 1200	1920 x 1200
Luminance (typical)		300 nits	300 nits	400 nits
Megapixels		2.304	2.304	2.304
Color gamut		45% NTSC	100% sRGB	100% sRGB
Pixels Per Inch (PPI)		170	170	170
Contrast ratio (typical)		800:1	900:01	1200:01
Response time (maximum)		35 ms	35 ms	35 ms
Refresh rate		60 Hz	60 Hz	60 Hz
Horizontal view angle		+/- 80 degrees (min)	+/- 80 degrees (min)	+/- 80 degrees (min)
Vertical view angle		+/- 80 degrees (min)	+/- 80 degrees (min)	+/- 80 degrees (min)
Pixel pitch		0.149 x 0.149 mm	0.149 x 0.149 mm	0.149 x 0.149 mm
Power consumption (maximum)		3.77 W	3.50 W	2.45 W
Anti-glare vs glossy finish		Anti-glare	Anti-glare	Anti-glare

Fingerprint reader (optional)

The following table lists the specifications of the optional fingerprint-reader of your Dell Pro 13 Plus.

Table 23. Fingerprint reader specifications

Description	Values
Sensor technology	Trans-capacitive sensing
Sensor resolution	500 dpi
Sensor pixel size	108 mm x 88 mm

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Dell Pro 13 Plus .

Table 24. GPU—Integrated

Controller	Memory size	Processor
Intel Arc Graphics	Shared system memory	Intel Core Ultra 5/7

Hardware security

The following table lists the hardware security of your Dell Pro 13 Plus.

Table 25. Hardware security

Hardware security
Trusted Platform Module (TPM) 2.0 discrete
FIPS 140-2 certification for TPM
TCG Certification for Trusted Computing Group (TPM)
Fingerprint reader in power button with ControlVault 3+
Contacted Smart Card and ControlVault 3+
Contactless Smart Card, NFC, and ControlVault 3+
SED SSD NVMe, SSD, and hard drive (Opal and non-Opal) per SDL
Chassis intrusion detection
BIOS-TPM clear and/or system boot lock after chassis intrusion detection

Smart card reader

Contactless smart card reader

This section lists the contactless smart card reader specifications of your Dell Pro 13 Plus. This module is only available in computers that are shipped with smart card readers.

Table 26. Contactless smart card reader specifications

Title	Description	Dell ControlVault 3 Plus Contactless smart card reader with NFC
FeliCa Card Support	Reader and software capable of supporting FeliCa contactless cards	Yes
Prox (Proximity) (125 kHz) Card support	Reader and software capable of supporting Prox /Proximity/125 kHz contactless cards	No
ISO 14443 Type A Card Support	Reader and software capable of supporting ISO 14443 Type A contactless cards	Yes
ISO 14443 Type B Card Support	Reader and software capable of supporting ISO 14443 Type B contactless cards	Yes

Table 26. Contactless smart card reader specifications (continued)

Title	Description	Dell ControlVault 3 Plus Contactless smart card reader with NFC
ISO/IEC 21481	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO/IEC 18092	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO 15693 Card Support	Reader and software capable of supporting ISO15693 contactless cards	Yes
NFC Tag Support	Supports reading and processing of NFC-compliant tag information	Yes
NFC Reader Mode	Support for NFC Forum Defined Reader mode	Yes
NFC Writer Mode	Support for NFC Forum Defined Writer mode	Yes
NFC Peer-to-Peer Mode	Support for NFC Forum Defined Peer to Peer mode	Yes
NFC Proximity OS Interface	Enumerates NFP (Near Field Proximity) device for operating system to use	Yes
PC/SC operating system interface	Personal Computer/Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Dell ControlVault support	The device connects to Dell ControlVault for usage and processing	Yes

Table 27. Supported cards

Manufacturer	Card
HID	jCOP readertest3 A card (14443a)
	1430 1L
	DESFire D8H
	iClass (Legacy)
	iClass SEOS
NXP/Mifare	Mifare DESFire 8K White PVC Cards
	Mifare Classic 1K White PVC Cards
	NXP Mifare Classic S50 ISO Card
G&D	idOnDemand - SCE3.2 144K
	SCE6.0 FIPS 80K Dual+ 1 K Mifare
	SCE6.0 nonFIPS 80K Dual+ 1 K Mifare
	SCE6.0 FIPS 144K Dual + 1 K Mifare
	SCE6.0 nonFIPS 144K Dual + 1 K Mifare
	SCE7.0 FIPS 144K

Table 27. Supported cards (continued)

Manufacturer	Card
Oberthur	ID OnDemand - OCS5.2 80K
	ID-One Cosmo 64 RSA D V5.4 T = 0 card

Contacted smart card reader

The following table lists the contacted smart card reader specifications of your Dell Pro 13 Plus.

Table 28. Contacted smart card reader specifications


Standards	Description	Dell ControlVault 3 smart card reader
FeliCa Card Support	Reader and software capable of supporting FeliCa contactless cards	Yes
Prox (Proximity) (125 kHz) Card support	Reader and software capable of supporting Prox /Proximity/125 kHz contactless cards	No
ISO 14443 Type A Card Support	Reader and software capable of supporting ISO 14443 Type A contactless cards	Yes
ISO 14443 Type B Card Support	Reader and software capable of supporting ISO 14443 Type B contactless cards	Yes
ISO/IEC 21481	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO/IEC 18092	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO 15693 Card Support	Reader and software capable of supporting ISO15693 contactless cards	Yes
NFC Tag Support	Supports reading and processing of NFC-compliant tag information	Yes
NFC Reader Mode	Support for NFC Forum Defined Reader mode	Yes
NFC Writer Mode	Support for NFC Forum Defined Writer mode	Yes
NFC Peer-to-Peer Mode	Support for NFC Forum Defined Peer to Peer mode	Yes
NFC Proximity OS Interface	Enumerates NFP (Near Field Proximity) device for operating system to use	Yes
PC/SC operating system interface	Personal Computer or Smart Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for operating system level drivers	Yes
Dell ControlVault support	The device connects to Dell ControlVault for usage and processing	Yes

Operating and storage environment

This table lists the operating and storage specifications of your Dell Pro 13 Plus.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 29. Computer environment

Description	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G†
Altitude range	-15.2 m to 3048 m (4.64 ft to 5518.4 ft)	-15.2 m to 10668 m (4.64 ft to 19234.4 ft)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		

* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

ComfortView Plus

 **WARNING:** Prolonged exposure to blue light from the display may lead to long-term effects such as eye strain, eye fatigue, or damage to the eyes.

Blue light is a color in the light spectrum which has a short wavelength and high energy. Chronic exposure to blue light, particularly from digital sources may disrupt sleep patterns and cause long-term effects such as eye strain, eye fatigue, or damage to the eyes.

The display on this computer is designed to minimize blue light and complies with TÜV Rheinland's requirement for low blue light displays.

Low blue light mode is enabled at the factory, so no further configuration is necessary.











To reduce the risk of eye strain, it is also recommended that you:

- Position the display at a comfortable viewing distance between 20 and 28 inches (50 cm and 70 cm) from your eyes.
- Blink frequently to moisten your eyes, wet your eyes with water, or apply suitable eye drops.
- Take an extended break for 20 minutes every two hours.
- Look away from your display, and gaze at a distant object at 20 ft (609.60 cm) away for at least 20 seconds during each break.

Working inside your computer



Safety instructions


Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.

-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see [Dell Regulatory Compliance Home Page](#).
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **WARNING:** For laptop computers, discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty.
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.
-  **CAUTION:** Press and eject any installed card from the media-card reader.
-  **CAUTION:** Exercise caution when handling rechargeable Li-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.

Before working inside your computer

Steps


1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** >  **Power** > **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for instructions.
3. Turn off all the attached peripherals.
4. Disconnect your computer from the electrical outlet.
5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.


6. Remove any media card and optical drive from your computer, if applicable.
7. To clean the air vents, use a soft brush and move vertically.
 **NOTE:** Do not remove the base cover or use any blower to clean the vents.

8. Enter the Service Mode.

Service Mode

Service Mode is used to cut off power without disconnecting the battery cable from the system board before conducting repairs in the computer.

 **CAUTION:** If you are unable to turn on the computer to put it into Service Mode, proceed to disconnect the battery cable. To disconnect the battery cable, follow the steps in [Removing the battery](#).

 **NOTE:** Ensure that your computer is shut down and the power adapter is disconnected.

- a. Press and hold the B key and the power button for 3 seconds or until the Dell logo appears on the screen.
- b. Press any key to continue.
- c. If the power adapter is not disconnected, a message prompting you to disconnect the power adapter appears on the screen. Disconnect the power adapter and then press any key to enter into the Service Mode. The Service Mode process automatically skips the following step if the **Owner Tag** of the computer is not set up in advance by the user.
- d. When the **ready-to-proceed** message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately.
The computer shuts down and enters the Service Mode.

Safety precautions

This section details the primary steps to be followed before disassembling any device or component.

Observe the following safety precautions before any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside your computer to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Press and hold the power button for 15 seconds to discharge the residual power in the system board.

Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.
- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms

that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.


Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-static wrist strap to discharge the static electricity from your body. For more information about the wrist strap and ESD wrist strap tester, see [Components of an ESD Field Service Kit](#).
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

 **CAUTION: It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.**

Working Environment

Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.

ESD Packaging


All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.

Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the anti-static mat is not required, or connect to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.
- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap before each service, and at a minimum, test once per week. A wrist strap tester

is the best method for doing this test. To perform the test, plug the bonding-wire of the wrist-strap into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.


 **NOTE:** It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.


After working inside your computer

About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.


Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, disks, or any other parts that you removed before working on your computer.
4. Connect your computer to their electrical outlets.

 **NOTE:** To exit service mode, ensure to connect the AC adapter to the power-adapter port on your computer.

5. Press the power button to turn on the computer.

BitLocker

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time that you reboot the computer. You will be prompted to enter the recovery key to progress, and the computer displays a prompt for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an operating system reinstall. For more information, see Knowledge Article: [updating the BIOS on Dell computers with BitLocker enabled](#).

The installation of the following components triggers BitLocker:

- Hard disk drive or solid state drive
- System board

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Phillips screwdriver #1
- Plastic scribe
- Fat head (slotted) screwdriver (<4 mm)

Screw list

- NOTE:** When removing screws from a component, it is recommended to note the screw type and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- NOTE:** Screw color may vary depending on the configuration ordered.

Table 30. Screw list
















Component	Screw type	Quantity	Screw image
Base cover	Captive screws M2.5x7	8	
Battery	Captive screws M2.5x7	4	 
Display-cable bracket	M2x2.5	2	
Display hinge	M2.5x3.5	6	
Display-hinge cap	M2x2.5	2	
Display panel	M2x2.5	2	
Fan	M2x4	2	
Heat sink	Captive screws M2x2.25	4	
I/O board	M2x4 M1.2x1.4	1 3	 
Keyboard bracket Keyboard	M2x2.5 M2x2 M2x2.2	1 16 2	  
M.2 2230 solid state drive	M2x4	1	

Table 30. Screw list (continued)

Component	Screw type	Quantity	Screw image
M.2 2280 solid state drive	M2x4	1	
Power button with optional fingerprint reader	M2x2	2	
smart card reader	M2x2	4	
Solid state drive thermal shield	M2x3	2	
Speakers	M1.6x3	6	
System board	M2x3	3	
USB Type-C connector module	M2x5	2	
USH board	M2x2.5	2	
Wireless-card bracket	M2x2.5	1	
5G WWAN-card shield	M2x4	2	
5G WWAN-card bracket	Captive screw M2x4	1 2	
Wireless card bracket	M2x2.5	1	

Major components of Dell Pro 13 Plus

The following image shows the major components of Dell Pro 13 Plus.

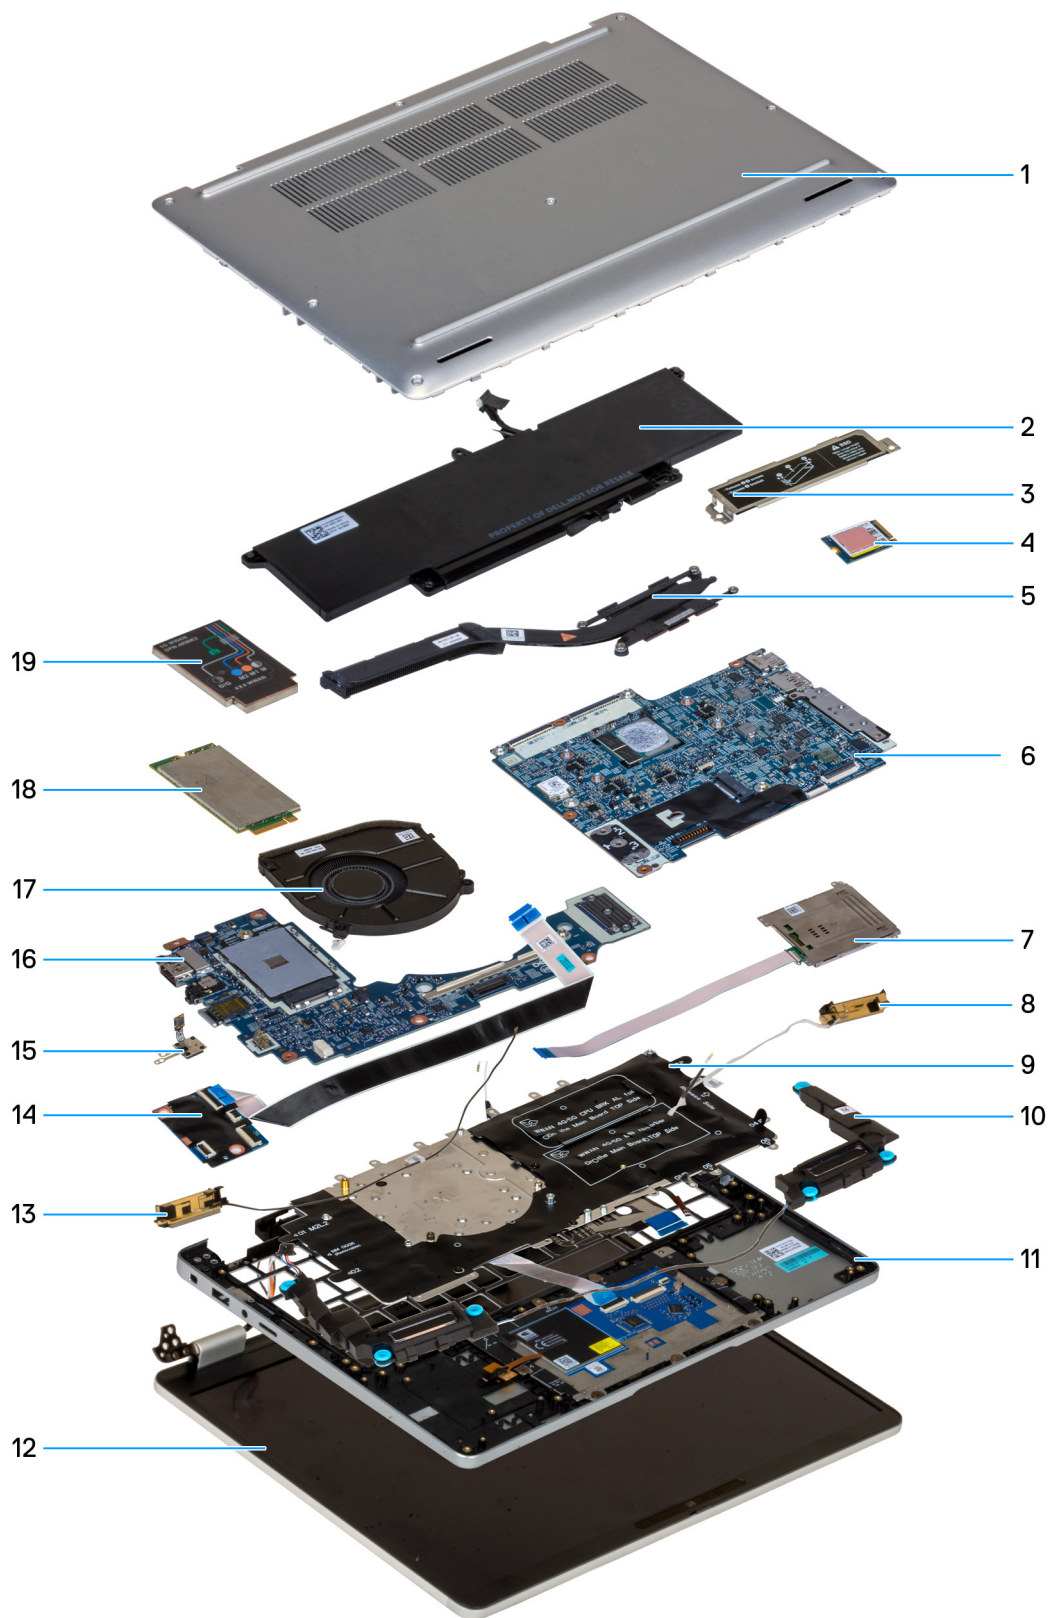



Figure 10. Major Components of your Dell Pro 13 Plus

1. Base cover
2. Battery


3. M.2 2230/M.2 2280 SSD thermal shield
4. M.2 2230 solid state drive (SSD)
5. Heat sink
6. System board
7. smart card reader (optional)
8. WLAN-antenna module
9. Keyboard
10. Speakers
11. Palm-rest assembly
12. Display bezel
13. WLAN-antenna module
14. USH board
15. Power button
16. I/O board
17. Fan
18. 5G WWAN card
19. 5G WWAN-card shield

 **NOTE:** Dell provides a list of components and their part numbers for the original computer configuration purchased. These parts are available according to warranty coverage purchased by the customer. Contact your Dell sales representative for purchase options.

Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).

 **CAUTION:** Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.


 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

SIM-card tray (optional)

Removing the SIM-card tray (optional)

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

 **NOTE:** The procedure for SIM-card tray removal is only applicable for computers that are shipped with a WWAN module.

 **CAUTION:** Removing the SIM card when the computer is turned on can cause data loss or damage to the card. Ensure that your computer is turned off or the network connections are disabled.

About this task

The following images indicate the location of the SIM-card tray and provide a visual representation of the removal procedure.

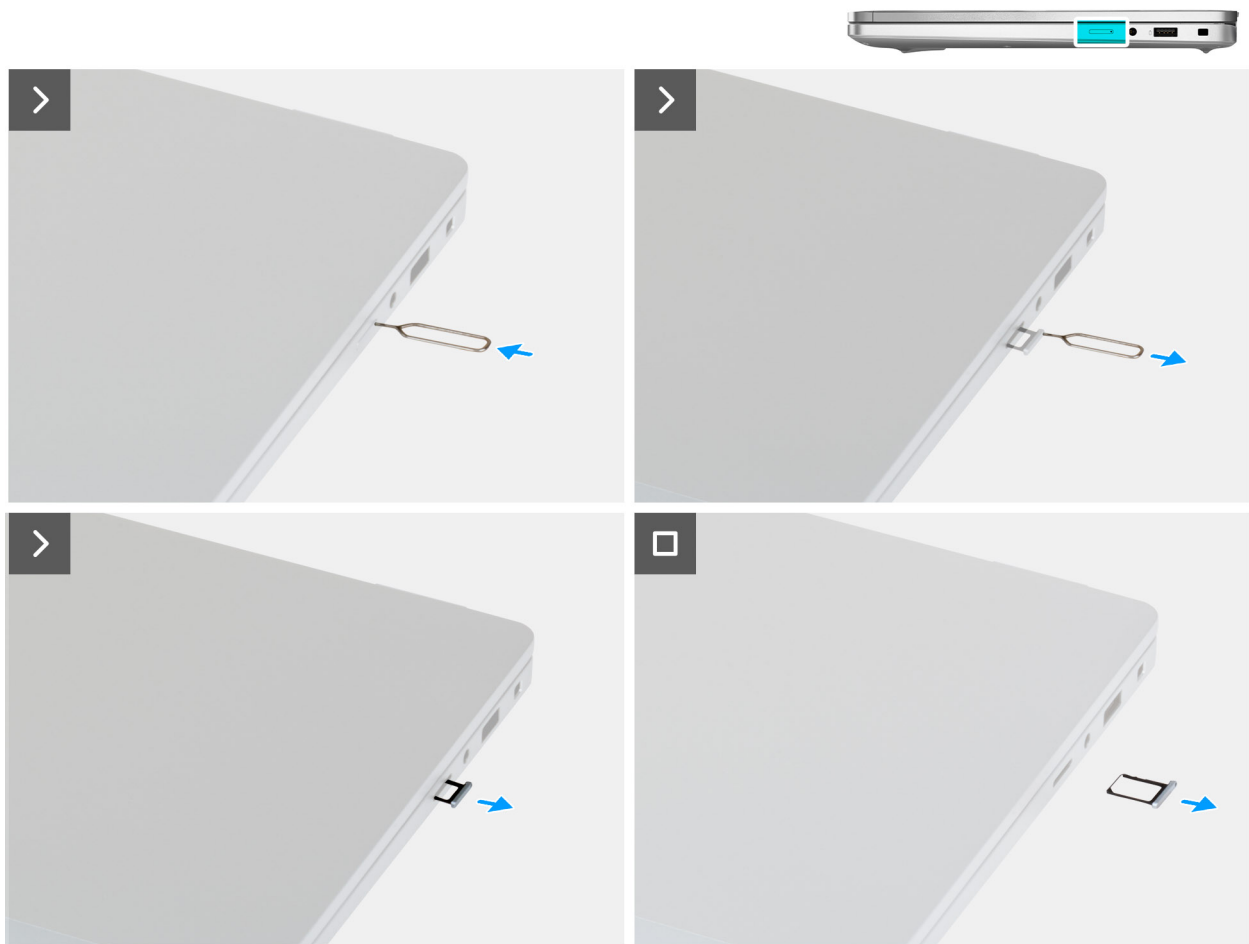


Figure 11. Removing the SIM-card tray

Steps

1. Insert a SIM-ejector pin into the release hole to release the SIM-card tray.
2. Push the SIM-ejector pin to disengage the lock, and eject the SIM-card tray.
3. Slide the SIM-card tray out of the slot on the computer.

Installing the SIM-card tray (optional)

Prerequisites

NOTE: The procedure for SIM-card tray installation is only applicable for computers that are shipped with a WWAN module.

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the SIM-card tray and provide a visual representation of the installation procedure.

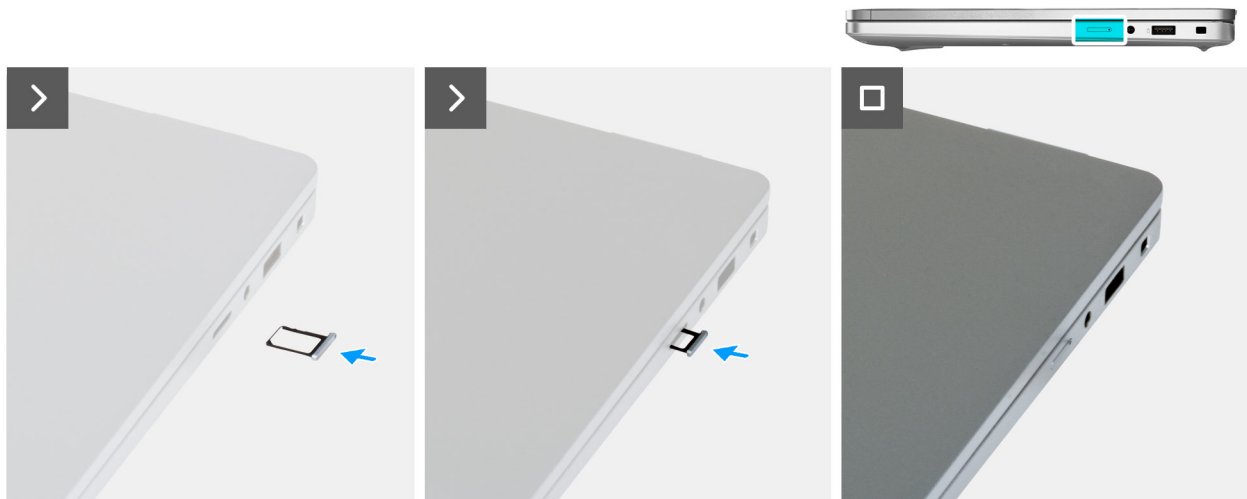


Figure 12. Installing the SIM-card tray

Steps

1. Align the SIM-card tray with the slot on the computer and carefully slide it in.
2. Slide the SIM-card tray into the slot, until it clicks into place.

Next steps

1. Follow the procedure in [After working inside your computer](#).

Base cover

Removing the base cover

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).

NOTE: Ensure that your computer is in Service Mode. For more information, see [Before working inside your computer](#).

CAUTION: If you are unable to turn on the computer, if your computer is unable to enter Service Mode, or the computer does not support Service Mode, proceed to disconnect the battery cable.

2. Remove the [SIM-card tray](#) (optional).

About this task

NOTE: Before removing the base cover, ensure that there is no microSD-card that is installed in the microSD-card slot on your computer.

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.



8x

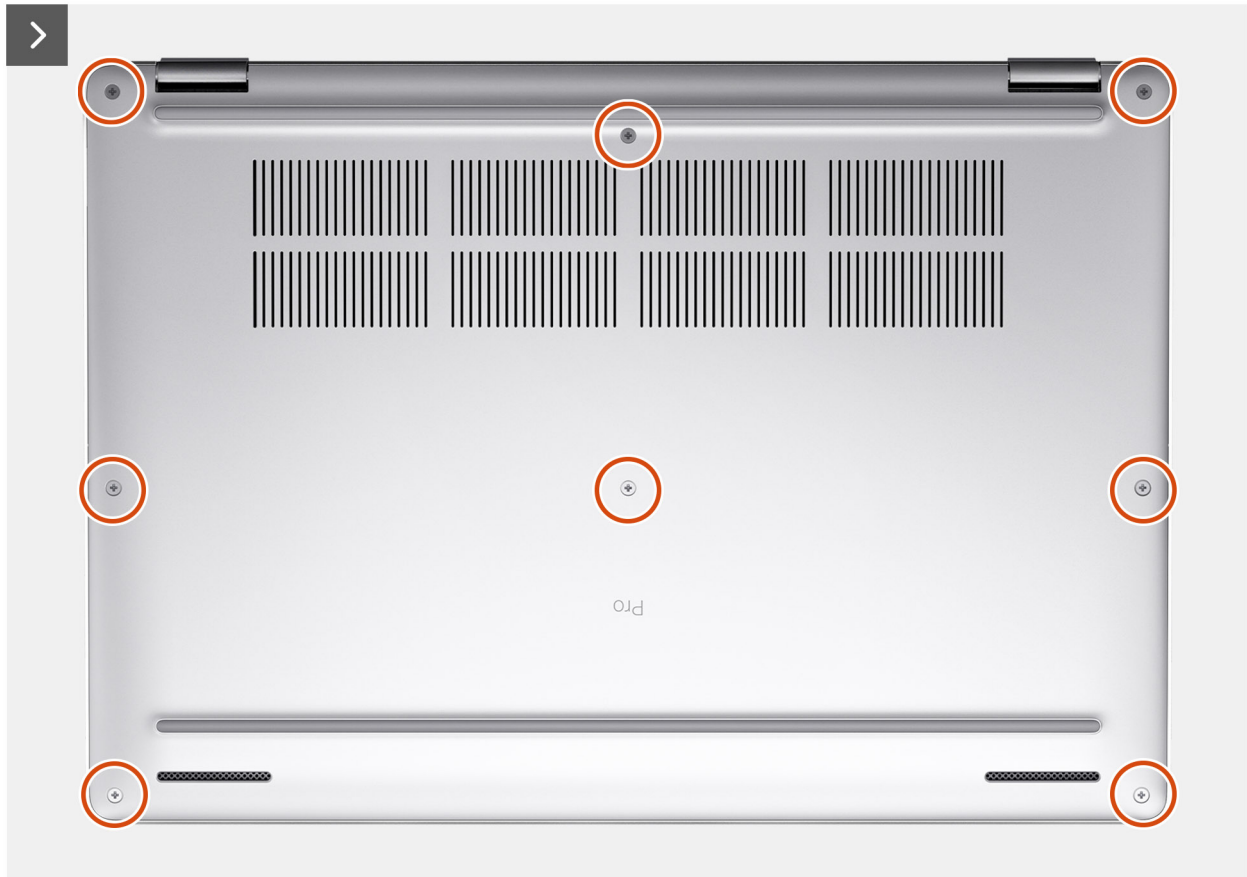


Figure 13. Removing the base cover

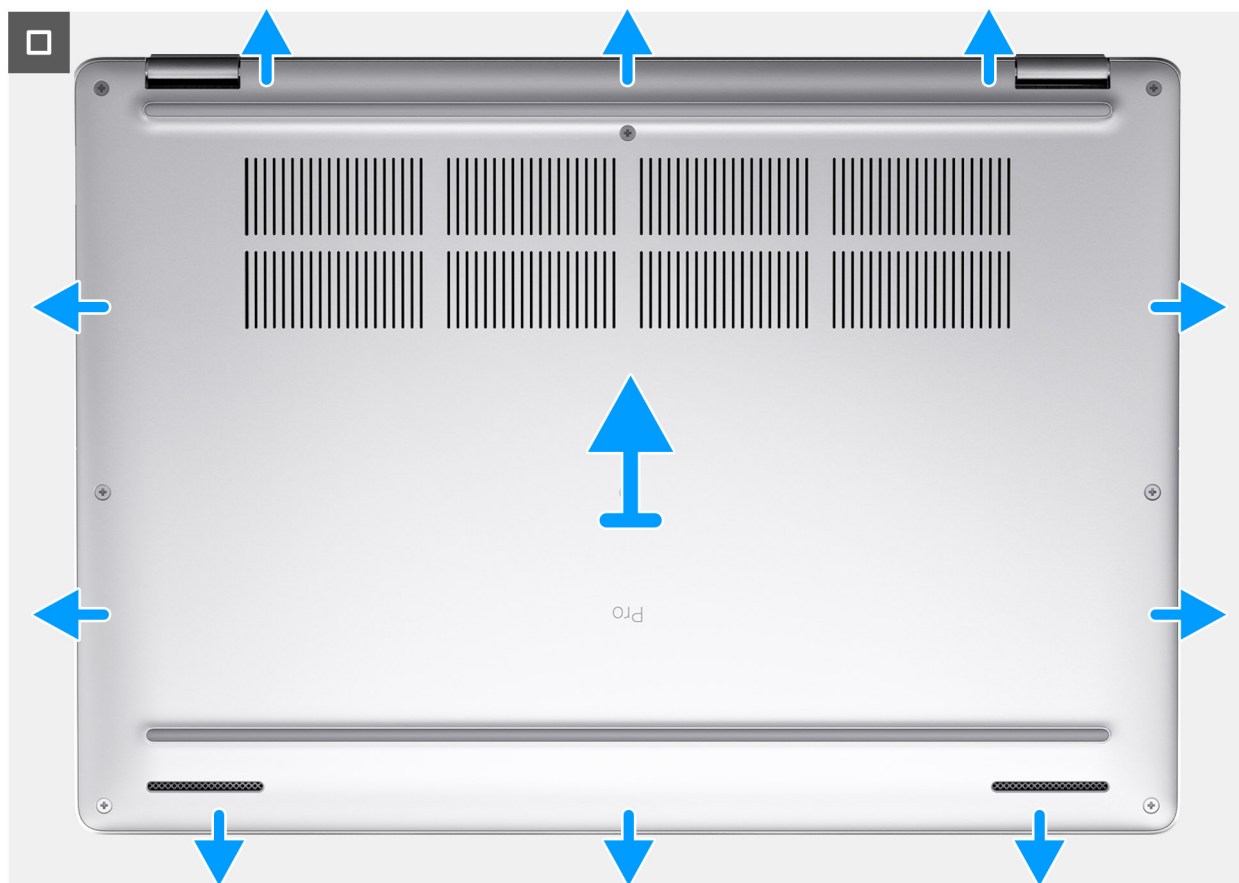


Figure 14. Removing the base cover

Steps

1. Loosen the eight captive screws that secure the base cover to the palm-rest assembly.
2. Using a plastic scribe, pry open the base cover from the recesses that are located in the U-shaped indents at the top edge of the base cover near the hinges.
3. Lift the base cover off the palm-rest assembly.

NOTE:

Ensure that your computer is in [Service Mode](#). If your computer is unable to enter Service Mode, peel off the tape and disconnect the battery cable from the battery-cable connector (BATT1) on the system board. Press and hold the power button for five seconds to ground the computer and drain the flea power.



Figure 15. Disconnecting the battery cable

4. Press and hold the power button for five seconds to ground the computer and drain the flea power.

Installing the base cover

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the base cover and provide a visual representation of the installation procedure.



Figure 16. Connecting the battery cable

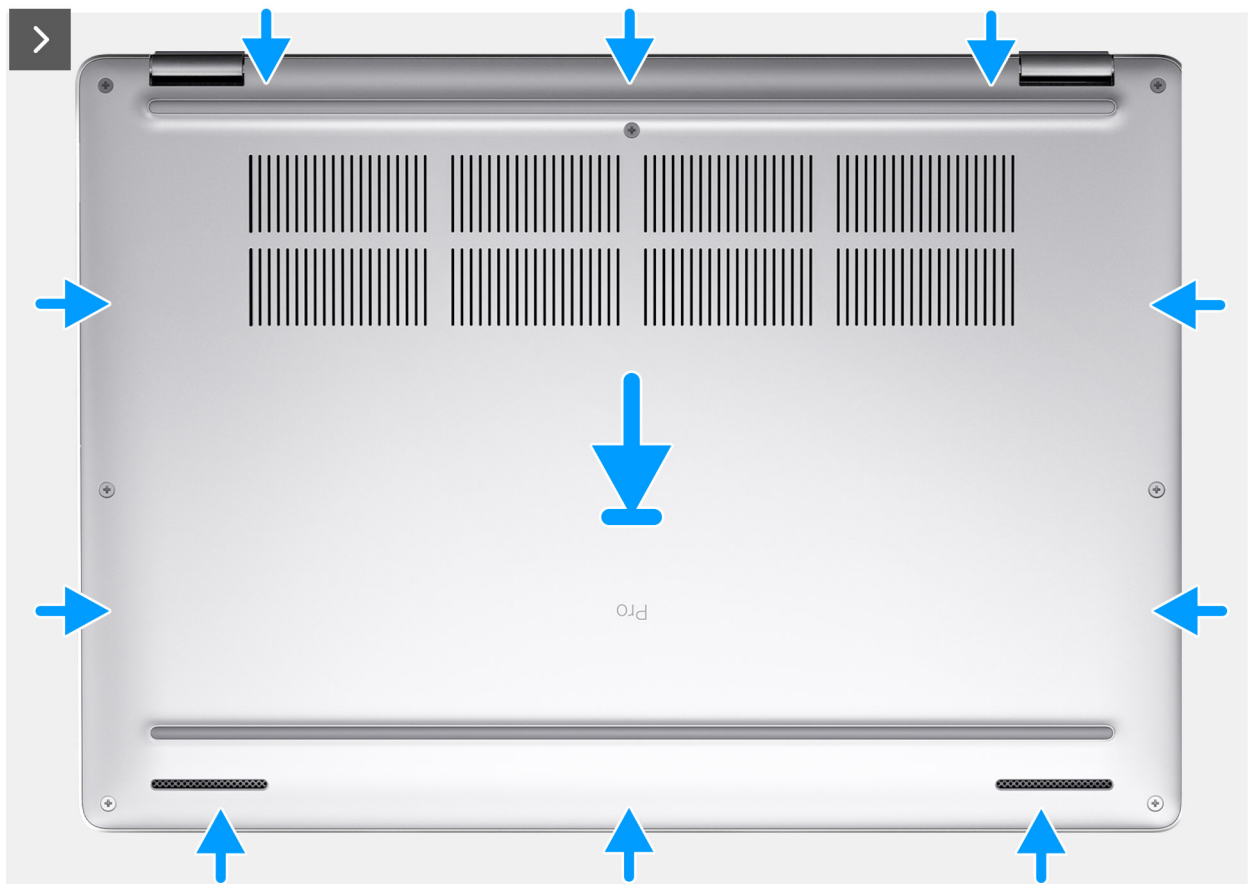


Figure 17. Installing the base cover

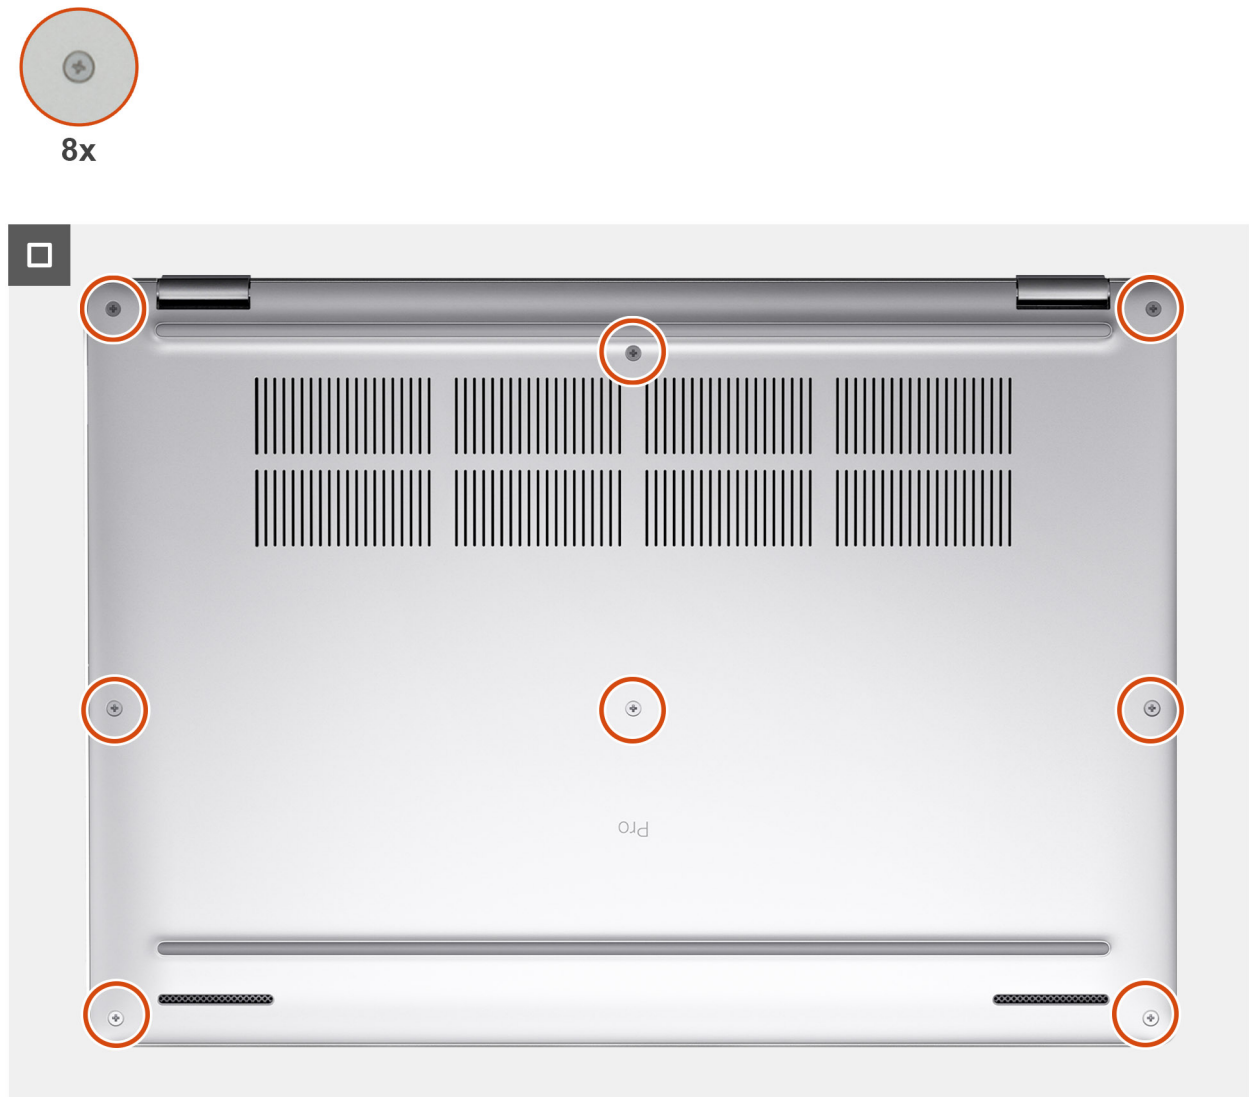


Figure 18. Installing the base cover

NOTE: If the battery is not a pre-requisite and if you have disconnected the battery cable, ensure to connect the battery cable. To connect the battery cable, follow step 1 in the procedure.

Steps

1. Connect the battery cable to the battery-cable connector (BATT1) on the system board.
2. Adhere the tape on the battery cable to the battery.
3. Align the screw holes on the base cover with the screw holes on the palm-rest assembly, and then snap the base cover into place.
4. Tighten the eight captive screws that secure the base cover to the palm-rest assembly.

Next steps

1. Install the [SIM-card tray](#) (optional).
2. Follow the procedure in [After working inside your computer](#).

NOTE: Ensure that your computer is in Service Mode. For more information, see [Before working inside your computer](#).

Battery

Rechargeable Li-ion battery precautions

WARNING:

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- To prevent accidental puncture or damage to the battery and other components, ensure that no screws are lost or misplaced during the servicing of the computer.
- Always purchase genuine batteries from [Dell Site](#) or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen rechargeable Li-ion batteries, see [Handling swollen rechargeable Li-ion batteries](#).

Removing the battery

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).

About this task

 **CAUTION:** Removing the battery resets the BIOS setup settings to default. It is recommended that you note the BIOS setup settings before removing the battery.

The following images indicate the location of the battery and provide a visual representation of the removal procedure.



Figure 19. Removing the battery

Steps

1. Disconnect the battery cable from the battery cable connector (BATT1) on the system board (if not disconnected earlier).
2. Loosen the four captive screws that secure the battery to the palm-rest assembly.
3. Lift the battery off the palm-rest assembly.
4. If you are replacing the battery, remove the battery cable to transfer it to the replacement battery. For more information, see [Removing the battery cable](#).

Installing the battery

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the battery and provide a visual representation of the installation procedure.



Figure 20. Installing the battery

Steps

1. If the battery cable was removed for replacing the battery, you must transfer the battery cable from the old battery to the replacement battery. For more information, see [Installing the battery cable](#).
2. Using the alignment posts, place the battery on the palm-rest assembly.
3. Align the screw holes on the battery with the screw holes on the palm-rest assembly.
4. Tighten the four captive screws that secure the battery to the palm-rest assembly.

Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#) (optional).
3. Follow the procedure in [After working inside your computer](#).

Battery cable

Removing the battery cable

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).

About this task

The following images indicate the location of the battery cable and provide a visual representation of the removal procedure.

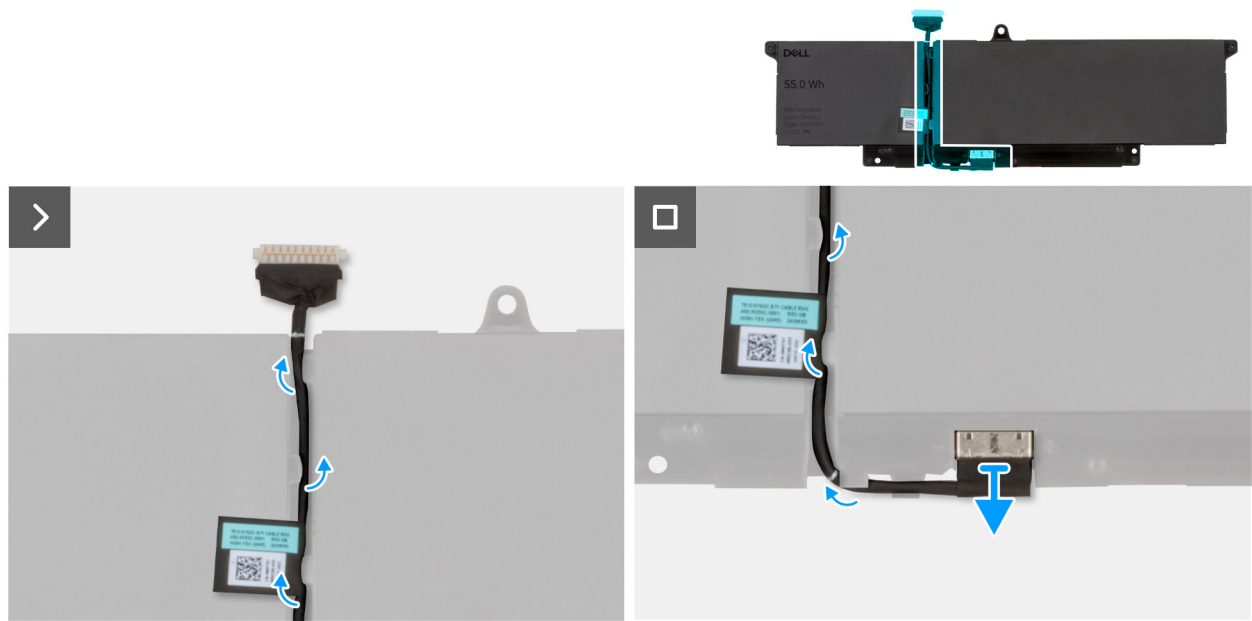


Figure 21. Removing the battery cable

Steps

1. Turn the battery and remove the battery cable from the routing guides on the battery.
2. Pull the battery cable downward to disconnect the cable from the connector and remove it from the battery.

Installing the battery cable

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the battery cable and provide a visual representation of the installation procedure.

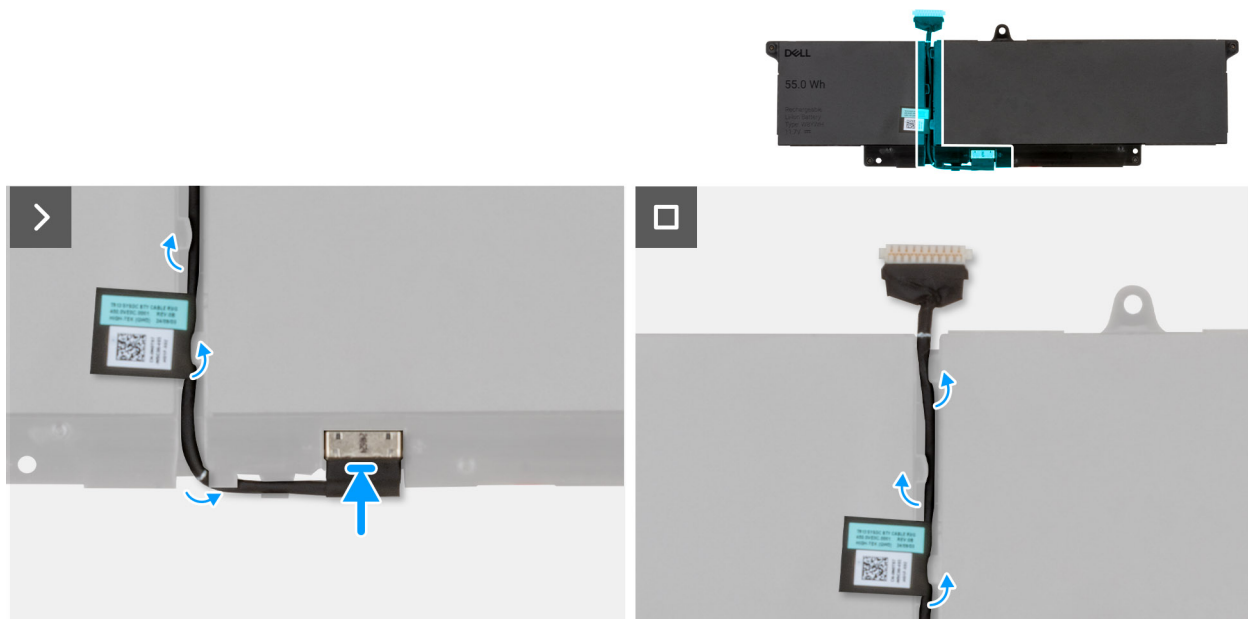


Figure 22. Installing the battery cable

Steps

1. Connect the battery cable to the connector on the battery.
2. Route the battery cable along the routing guides on the battery.

NOTE: When installing the battery cable, ensure that the cable is properly routed under the routing guides.

Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Install the [SIM-card tray](#) (optional).
4. Follow the procedure in [After working inside your computer](#).

Wireless Wide Area Network (WWAN) card

Removing the 5G WWAN card (optional)

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).

About this task

NOTE: The 5G WWAN card is available only on certain configurations. It is connected to the computer with four antenna cables.

The following images indicate the location of the 5G WWAN card and provide a visual representation of the removal procedure.

NOTE: The WWAN cable color and the number of antenna cables varies based on the 4G WWAN or 5G WWAN card that is installed in your computer.

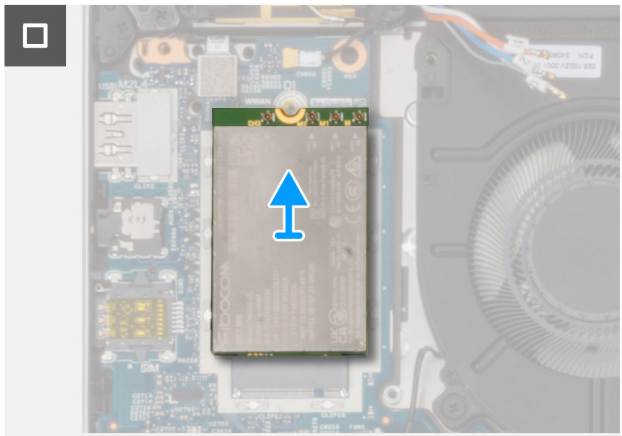
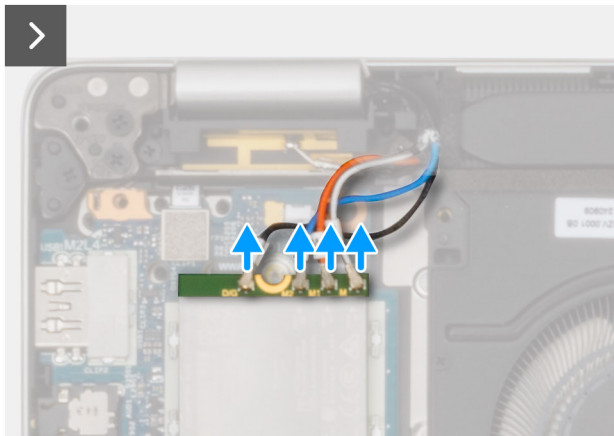
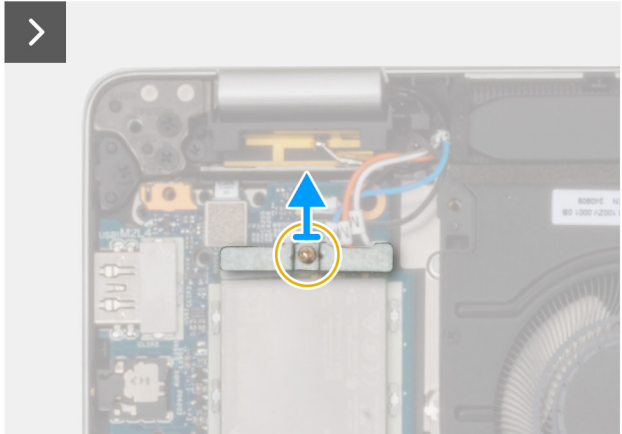
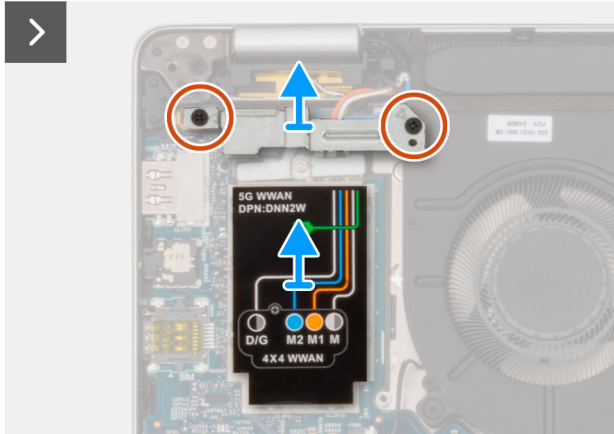
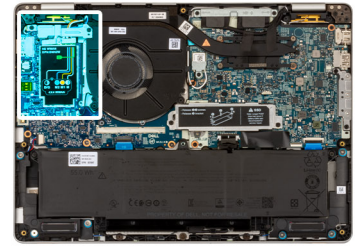
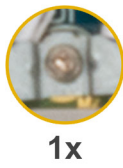


Figure 23. Removing the 5G WWAN card

Steps

1. Remove the two screws (M2x4) that secure the 5G WWAN-card bracket to the 5G WWAN card.
2. Lift the WWAN-card shield off the WWAN card.
3. Lift the WWAN-card bracket off the 5G WWAN card.
4. Loosen the captive screw that secures the 5G WWAN-card bracket to the 5G WWAN card.
5. Disconnect the antenna cables from the 5G WWAN card.
6. Slide and remove the 5G WWAN card off the 5G WWAN-card slot on the system board.

NOTE: If you are replacing the 5G WWAN card, ensure that the thermal pad is in place.

NOTE: If you are replacing the system board, ensure to transfer the thermal pad from the old system board to the new system board. If the thermal pad is damaged, peel the thermal pad from the system board and replace it with a new thermal pad. The thermal pad must be purchased separately.

Installing the 5G WWAN card (optional)

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: The 5G WWAN card is available only on certain configurations. It is connected to the computer with four antenna cables.

The following images indicate the location of the 5G WWAN card and provide a visual representation of the installation procedure.

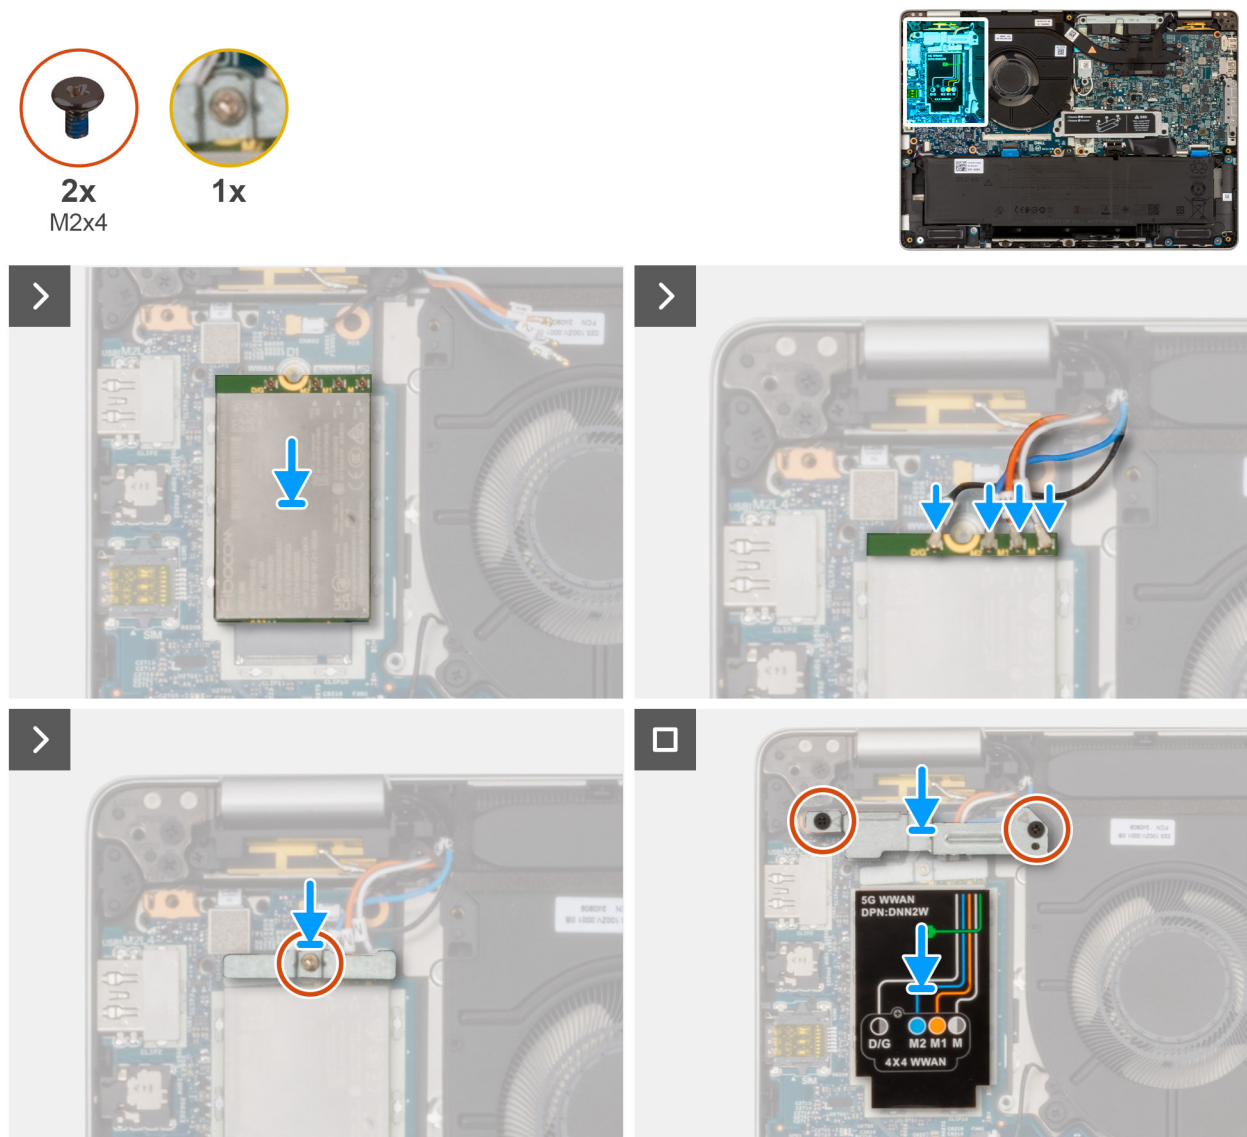


Figure 24. Installing the 5G WWAN card

Steps

1. Align the notch on the 5G WWAN card with the tab on the 5G WWAN-card slot.

NOTE: If you are replacing the 5G WWAN card, ensure that the thermal pad is in place.

NOTE: If you are replacing the system board, ensure to peel the thermal pad from the old system board to the new system board.

NOTE: If the thermal pad is damaged, peel the thermal pad from the system board and replace it with a new thermal pad. The thermal pad must be purchased separately.

2. Connect the antenna cables to the 5G WWAN card.

The following table provides the antenna-cable color scheme for the 5G WWAN card that is supported on your computer.

Table 31. Antenna-cable color scheme for 5G WWAN cards

Connectors on the WWAN card	Antenna-cable color	Silkscreen marking	
D/G	Black with a thin white stripe	ANT3 D/G	△ (white triangle)
M2	Blue	ANT2 M2	△ (white triangle)
M1	Orange	ANT1 M1	△ (white triangle)
M	White with a thin gray stripe	ANT0 M	△ (white triangle)

3. Insert the 5G WWAN card at an angle into the 5G WWAN-card slot.
4. Align the notch on the 5G WWAN card with the tab on the 5G WWAN-card slot.
5. Tighten the captive screw that secures the WWAN bracket to the palm-rest assembly.
6. Replace the two (M2x4) screws that secure the WWAN-card shield to the WWAN card.

Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#) (optional).
3. Follow the procedure in [After working inside your computer](#).

Solid State Drive (SSD)

Removing the M.2 2230 SSD

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).

About this task

The following images indicate the location of the M.2 2230 SSD and provide a visual representation of the removal procedure.

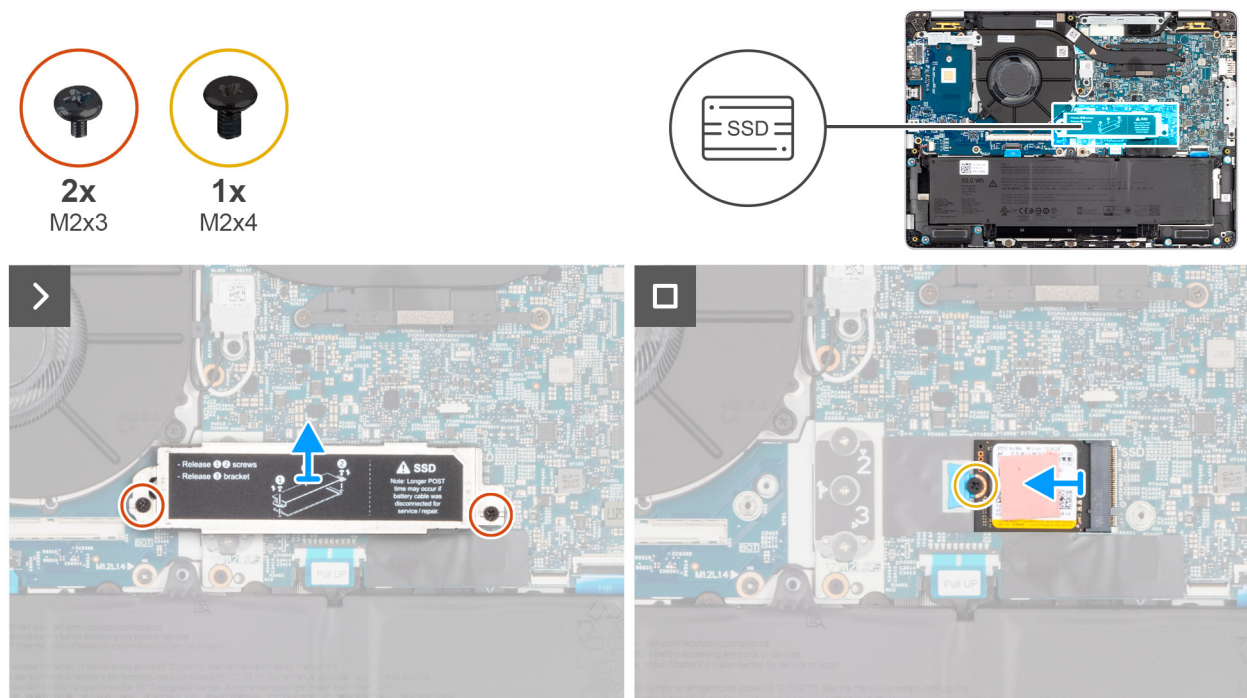


Figure 25. Removing the M.2 2230 SSD

Steps

1. Remove the two screws (M2x3) that secure the SSD thermal shield to the palm-rest assembly.
2. Remove the solid-state thermal shield off the SSD.
i **NOTE:** If the thermal pads get separated from the shielding cover or gets adhered to the SSD while replacing the SSD, they must be adhered back to the SSD cover before reinstalling it to the computer.
3. Remove the screw (M2x4) that secures the M.2230 SSD to the system board.
4. Slide and remove the SSD from the SSD slot.
i **NOTE:** For models shipped with M.2 2230 SSD, ensure that the SSD screw holder is transferred when the system board is removed or replaced.

Installing the M.2 2230 SSD

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the M.2 2230 SSD and provide a visual representation of the installation procedure.

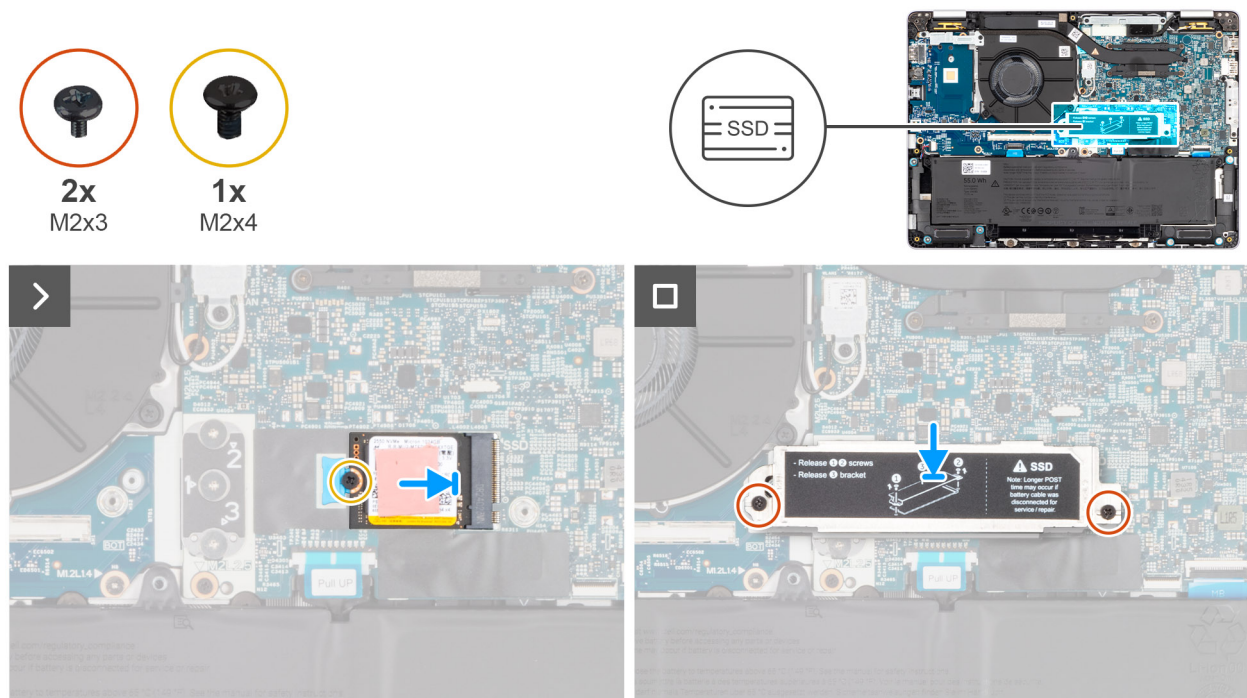


Figure 26. Installing the M.2 2230 SSD

Steps

1. Align and place the SSD screw holder on the system board.
NOTE: For models shipped with M.2 2230 SSD, ensure that the SSD screw holder is transferred when the system board is removed or replaced.
2. Align the notch on the M.2 2230 SSD with the tab on the M.2 2230 SSD slot.
3. Slide the M.2 2230 SSD into the M.2 2230 SSD slot.
4. Replace the screw (M2x4) that secures the M.2 2230 SSD to the system board.
5. Align and place the SSD thermal shield on top of the SSD slot so that it holds the SSD in place.
6. Replace the two screws (M2x3) that secures the SSD thermal shield to the SSD and the palm-rest assembly.

Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#) (optional).
3. Follow the procedure in [After working inside your computer](#).

Removing the M.2 2280 SSD

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).

About this task

The following images indicate the location of the M.2 2280 SSD and provide a visual representation of the removal procedure.

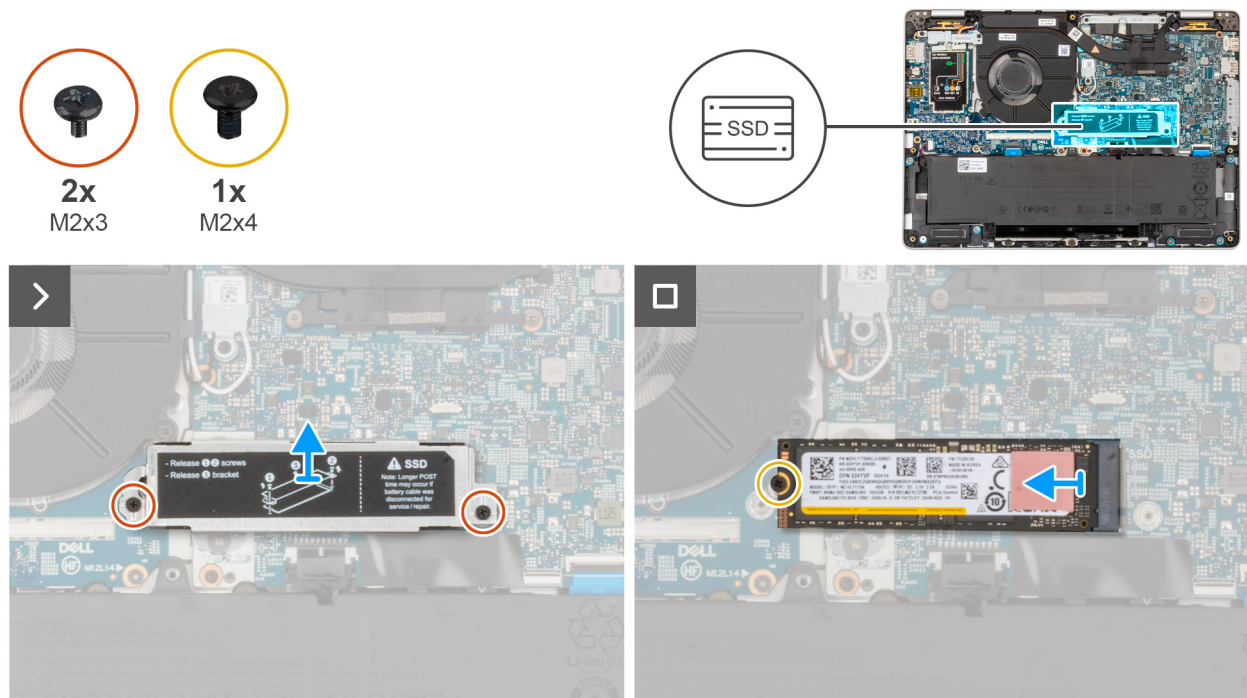


Figure 27. Removing the M.2 2280 SSD

Steps

1. Remove the three screws (M2x3) that secure the SSD thermal shield to the palm-rest assembly.
2. Lift the SSD thermal shield off the palm-rest assembly.

NOTE: If the thermal pads get separated from the SSD thermal shield or gets adhered to the SSD while replacing the SSD, the technicians must readhere the thermal pad to the thermal shield before reinstalling it to the computer.
3. Remove the screw (M2x4) that secures the M.2280 SSD to the system board.
4. Slide and remove the M.2 2280 SSD off the SSD slot.

Installing the M.2 2280 SSD

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the M.2 2280 SSD and provide a visual representation of the installation procedure.

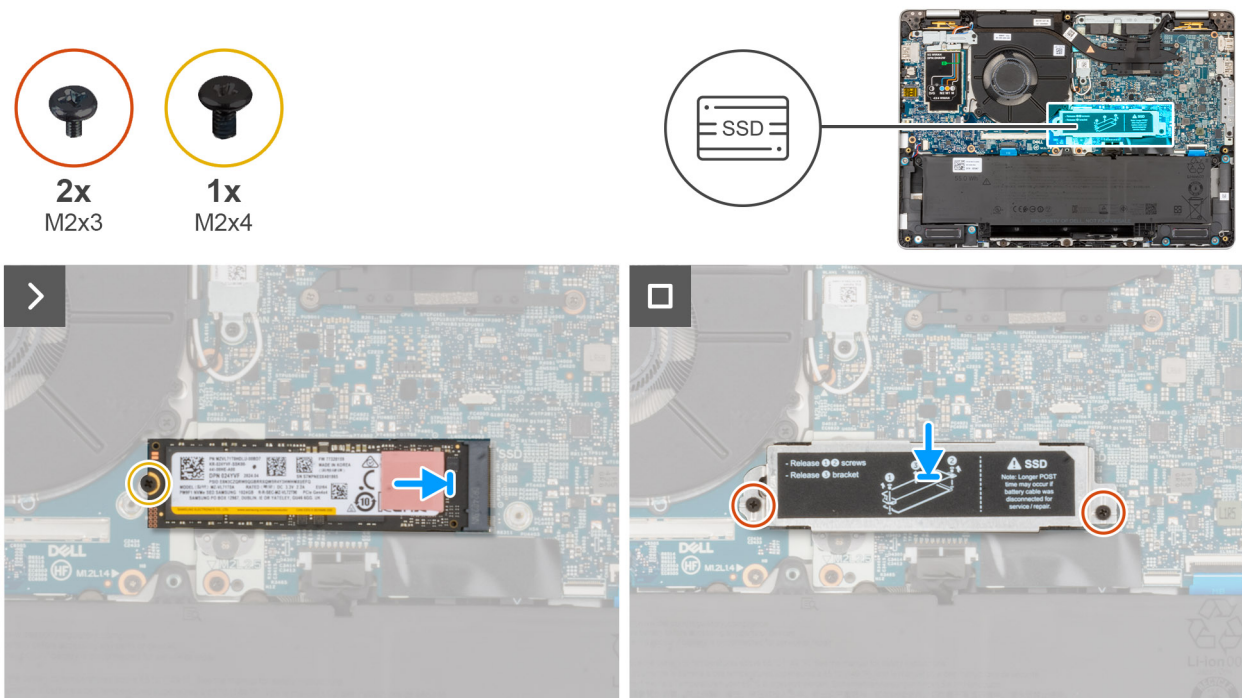


Figure 28. Installing the M.2 2280 SSD

Steps

1. Align the notch on the M.2 2280 SSD with the tab on the M.2 2280 SSD slot.
2. Slide the M.2 2280 SSD into the M.2 2280 SSD slot.
3. Replace the screw (M2x3) that secures the M.2 2280 SSD to the system board.
4. Align and place the SSD thermal shield on the SSD.
5. Replace the two screws (M2x3) that secure the SSD thermal shield to the palm-rest assembly.

Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#) (optional).
3. Follow the procedure in [After working inside your computer](#).

Speakers

Removing the speakers

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).

About this task

The following images indicate the location of the speakers and provide a visual representation of the removal procedure.



6x
M1.6x3

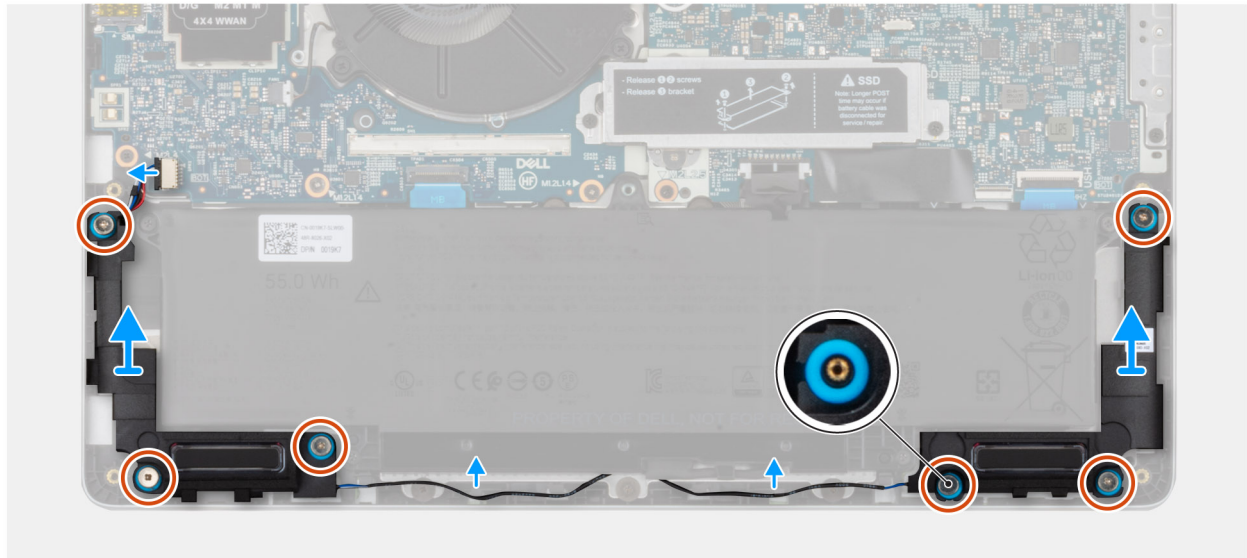
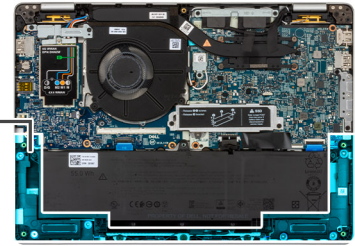
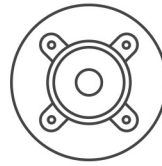


Figure 29. Removing the speakers

Steps

1. Disconnect the speaker cable from the I/O board.
2. Remove the six screws (M1.6x3) that secure the speakers to the palm-rest assembly.
3. Remove the speaker cables from the routing guides on the palm-rest assembly.
4. Release the right and left speakers from the rubber grommets and lift the speakers along with the cable, off the palm-rest assembly.

Installing the speakers

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the speakers and provide a visual representation of the installation procedure.

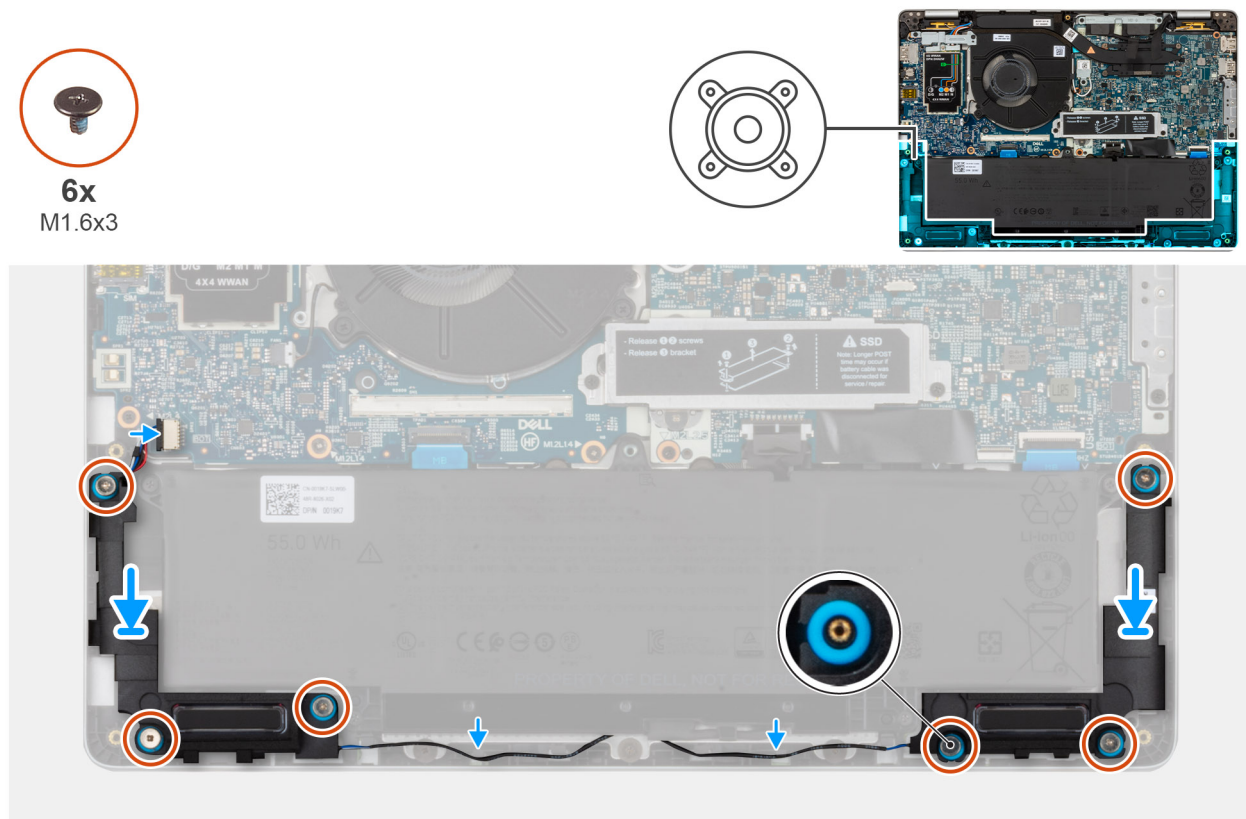


Figure 30. Installing the speakers

Steps

1. Using the alignment posts, place the left and right speakers into their slots on the palm-rest assembly.
2. Route the speaker cable through the routing guides on the palm-rest assembly.
3. Replace the six screws (M1.6x3) that secure the speakers to the palm-rest assembly.
4. Route the speaker cable through the routing guides on the palm-rest assembly.
5. Connect the speaker cable to the speaker cable connector on the I/O board.


Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Install the [SIM-card tray](#) (optional).
4. Follow the procedure in [After working inside your computer](#).


Removing and installing Field Replaceable Units (FRUs)


The replaceable components in this chapter are Field Replaceable Units (FRUs).

 **CAUTION:** The information in this section is intended for authorized service technicians only.

 **CAUTION:** To avoid any potential damage to the component or loss of data, ensure that an authorized service technician replaces the Field Replaceable Units (FRUs).

 **CAUTION:** Dell Technologies recommends that these procedures be performed by trained technical repair specialists.

 **CAUTION:** Your warranty does not cover damages that may occur during FRU repairs that are not authorized by Dell Technologies.

 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Fan

Removing the fan



 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).

About this task

The following images indicate the location of the fan and provide a visual representation of the removal procedure.

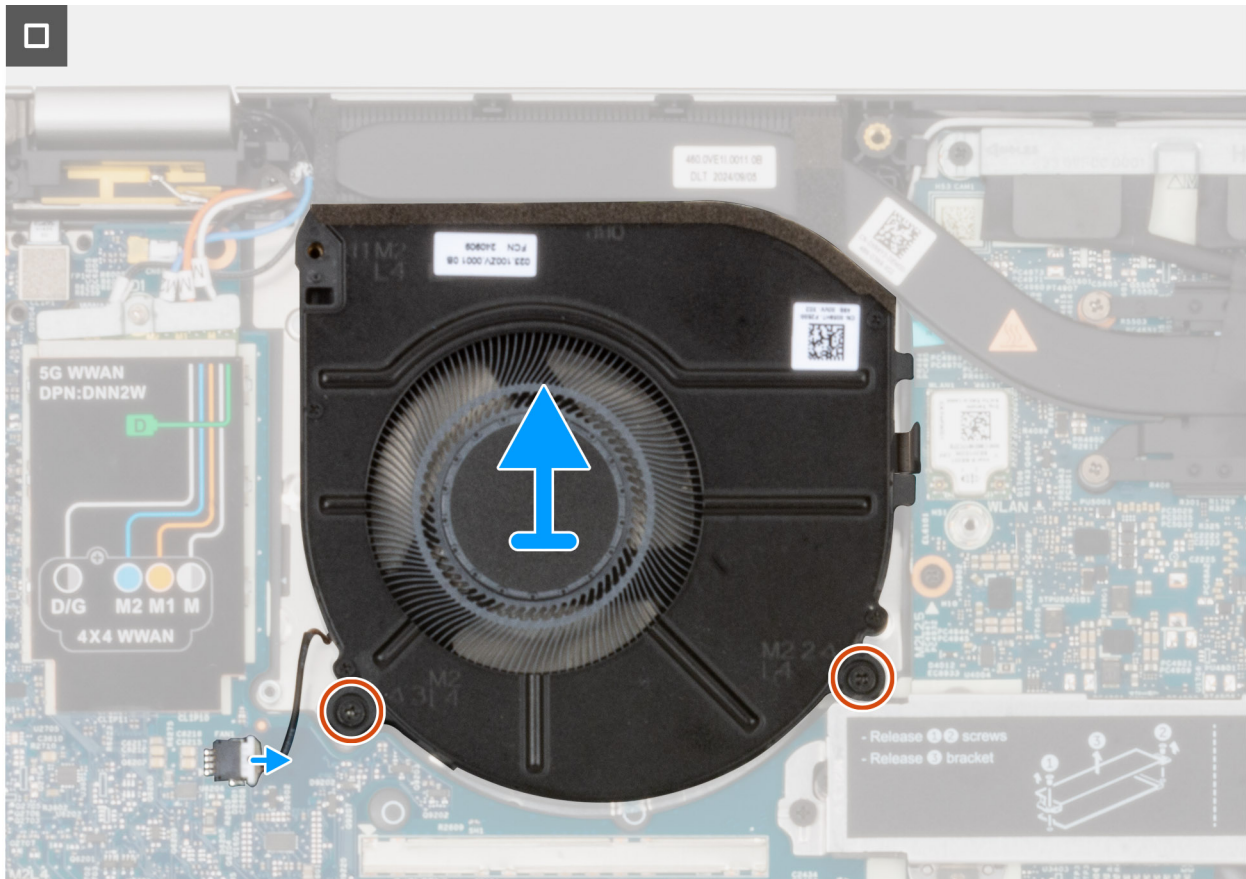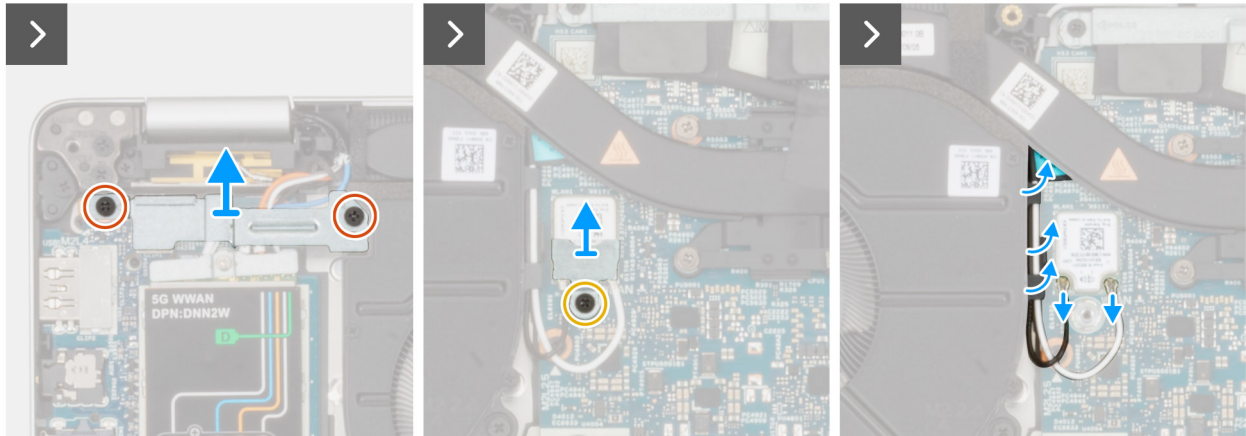

1. Remove the two screws (M2x4) that secure the 5G WWAN-card bracket to the 5G WWAN card .
2. Remove the screw (M2x2.5) that secures the WWAN card bracket.

3. Remove the WWAN cable and antenna cable from the routing guides on the palm-rest assembly.
4. Remove the two screws (M2x4) that secure the fan on the palm-rest assembly.
5. Disconnect the fan cable from the fan-cable connector (FAN1) on the I/O board.
6. Lift the fan off the palm-rest assembly.

Installing the fan

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the fan and provide a visual representation of the installation procedure.

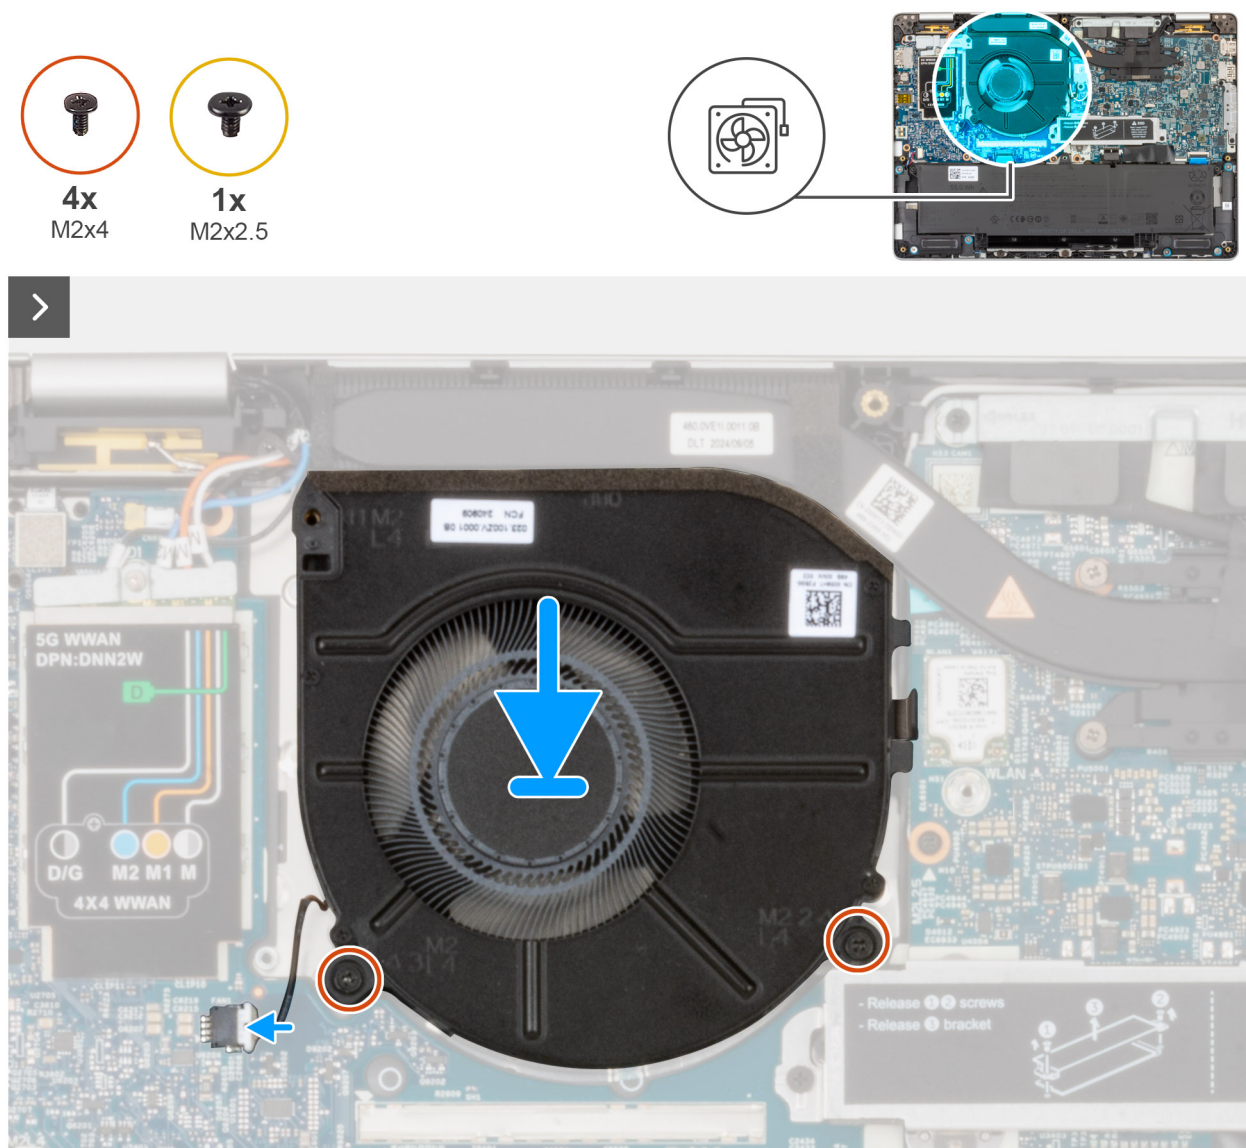


Figure 32. Installing the fan

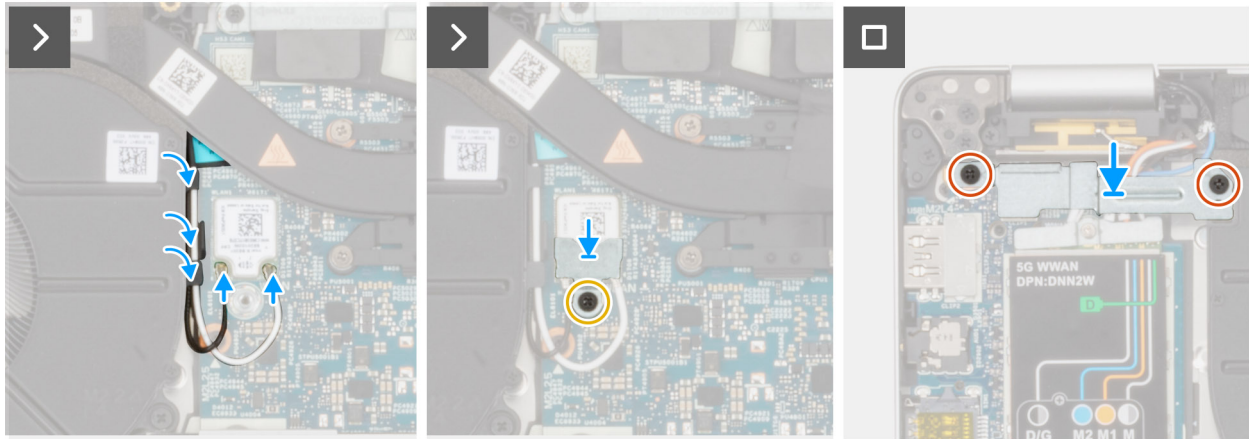


Figure 33. Installing the fan

Steps

1. Align the screw holes on the fan with the screw holes on the palm-rest assembly.
2. Replace the two screws (M2x4) that secure the fan to the palm-rest assembly.
3. Connect the fan cable to the fan-cable connector (FAN1) on the system board.
4. Replace the two screws (M2x4) that secure the 5G WWAN-card bracket to the 5G WWAN card.
5. Route the WWAN cable and antenna cable through the routing guides on the palm-rest assembly.
6. Connect the antenna cable to the WLAN card and tighten the captive screw to secure the WWAN bracket.

Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#) (optional).
3. Follow the procedure in [After working inside your computer](#).

USH board

Removing the USH board

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).



2x
M2.0x2.0

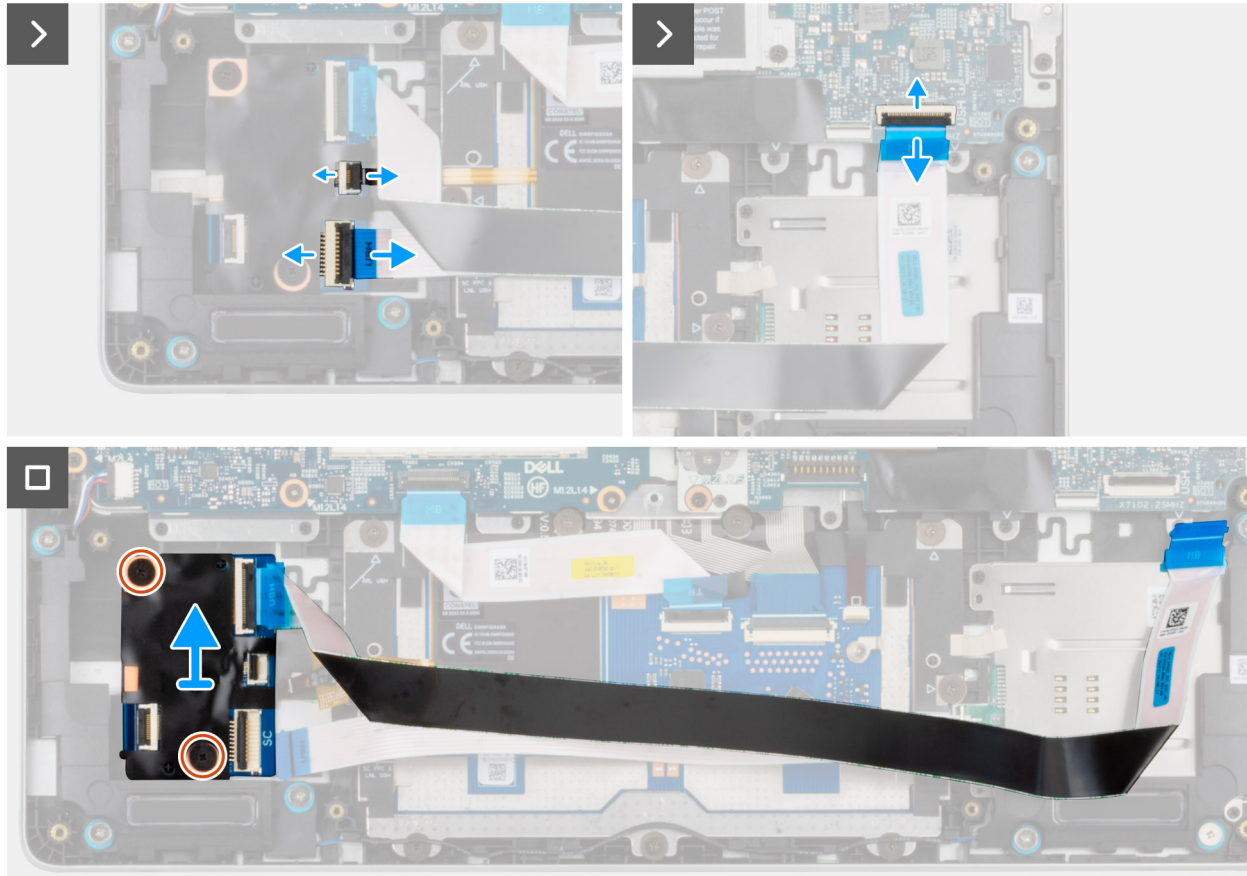
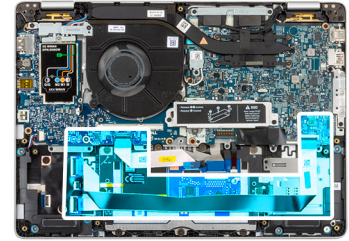


Figure 34. Removing the USH board

Steps

1. Lift the latch and disconnect the smart card reader flexible flat cable (FFC) from the connector on the USH board.
2. Lift the latch and disconnect USH board FFC from the system board.
3. Peel the USH board FFC from the palm-rest assembly.
4. Remove the two screws (M2.0x2.0) that secure the USH board in place.
5. Lift the USH board off the chassis.

Installing the USH board

CAUTION: The information in this installation section is intended for authorized service technicians only.



2x
M2.0x2.0

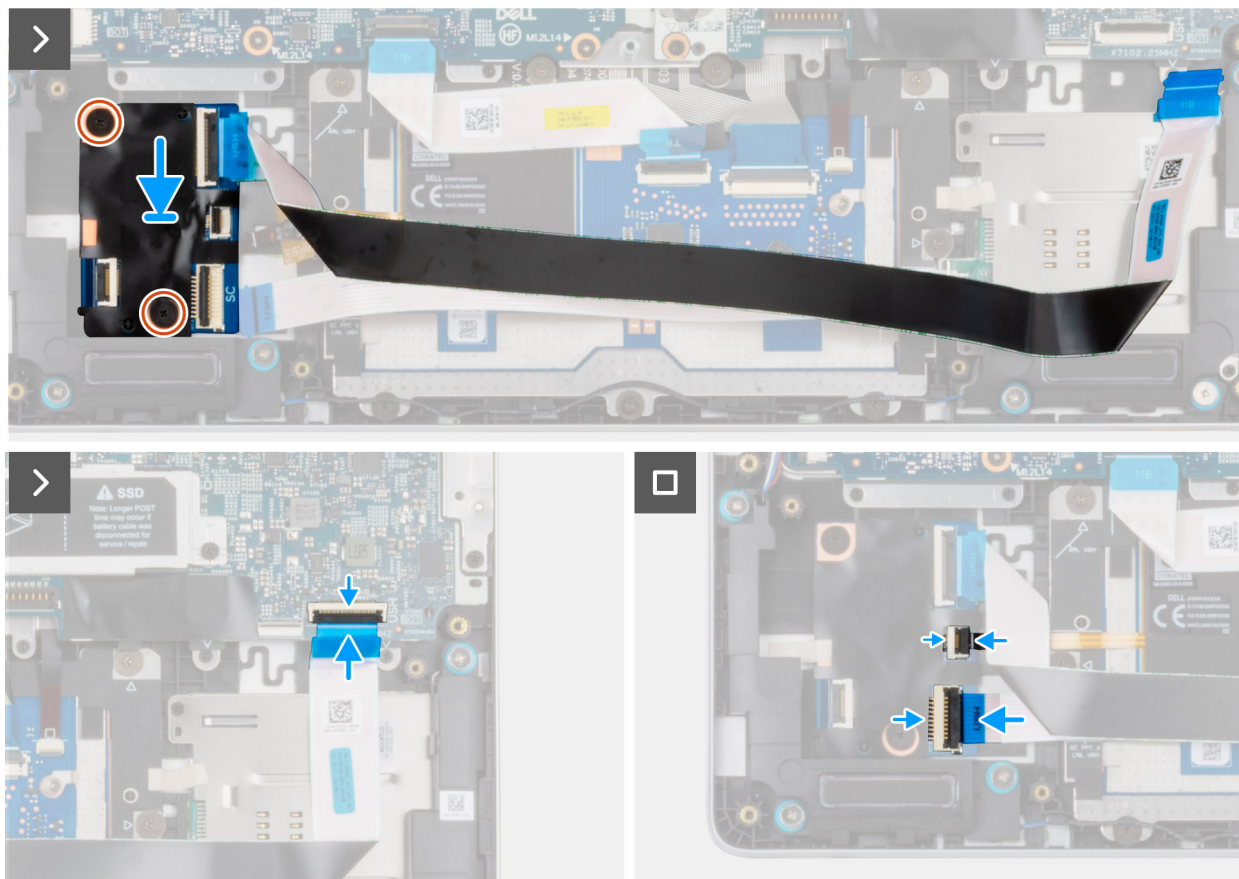
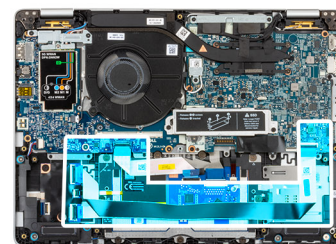


Figure 35. Installing the USH board

Steps

1. Place the USH board on the chassis.
2. Replace the two screws (M2.0x2.0) that secure the USH board in place.
3. Connect the USH board FFC to the connector on the USH board.
4. Adhere the USH board FFC to the chassis.
5. Connect the smart card reader FFC to the connector on the USH board.


Next steps

1. Install the [battery](#).
2. Install the [base cover](#).
3. Install the [SIM-card tray](#) (optional).
4. Follow the procedure in [After working inside your computer](#).

Smart card reader

Removing the optional Smart card reader

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

 **NOTE:** The smart card reader is available only on certain configurations.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [speaker](#).

About this task

The following images indicate the location of the smart card reader and provide a visual representation of the removal procedure.



4x
M2x2

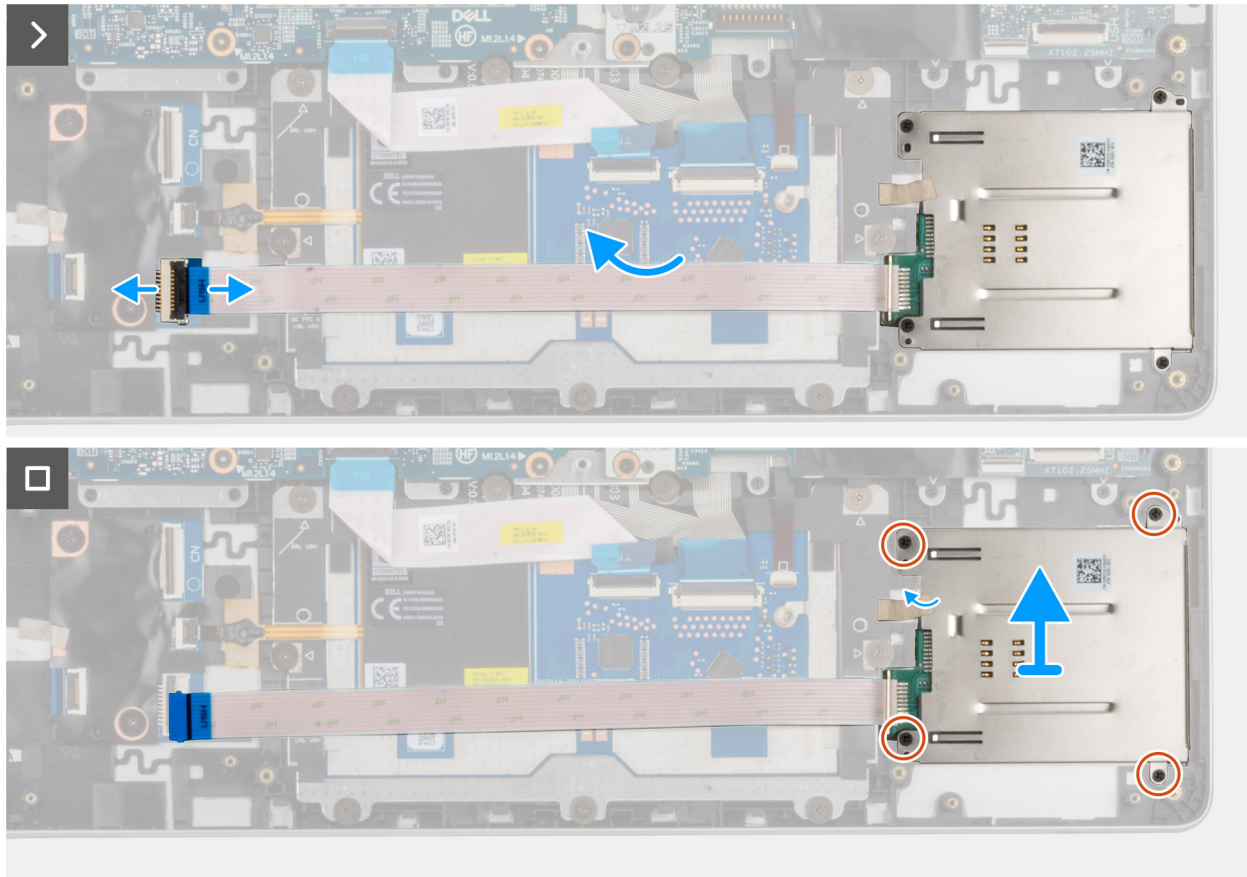
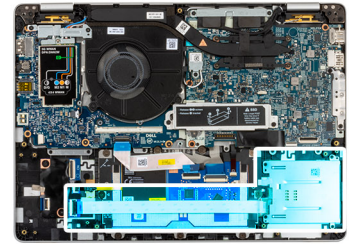


Figure 36. Removing the Smart card reader

Steps

1. Open the latch and disconnect the smart card reader cable from the connector on the USH board.
2. Gently peel the smart card reader cable from the palm-rest assembly.
3. Remove the four screws (M2x2) that secure the smart card reader to the palm-rest assembly.
4. Lift the smart card reader, along with its cable, off the palm-rest assembly.

Installing the optional Smart card reader

CAUTION: The information in this installation section is intended for authorized service technicians only.

NOTE: The smart card reader is available only on certain configurations.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the smart card reader and provide a visual representation of the installation procedure.

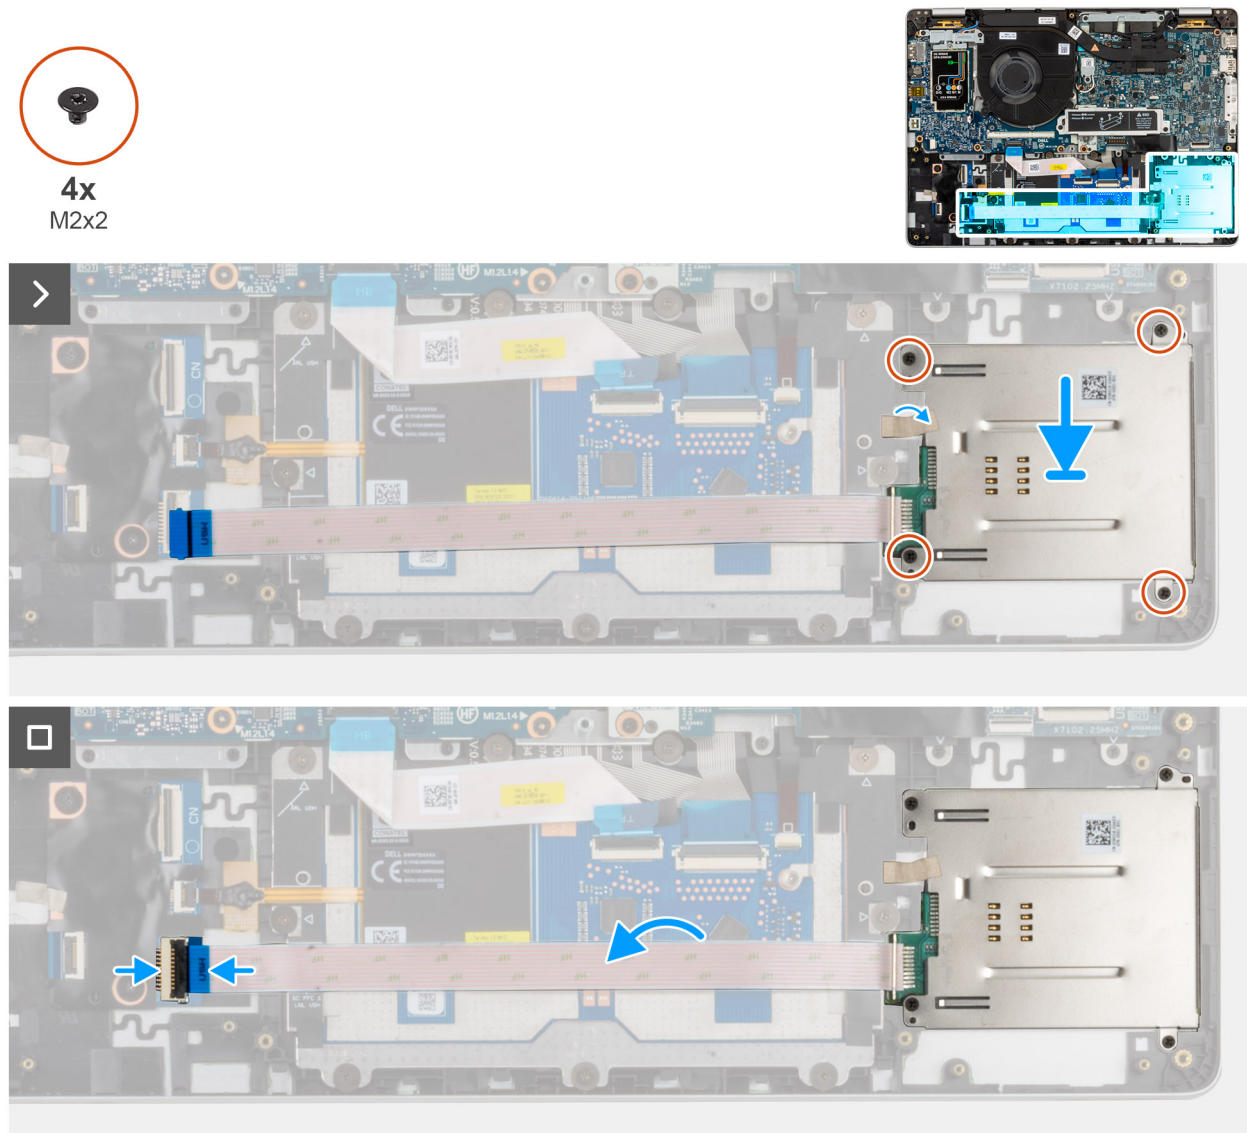


Figure 37. Installing the Smart card reader

Steps

1. Align and place the smart card reader on its slot on the palm-rest assembly.
2. Replace the four screws (M2x2) that secures the smart card reader to the palm-rest assembly.
3. Connect the smart card cable to the connector on the USH board and close the latch to secure the cable.

Next steps

1. Install the [base cover](#).
2. Install the [speaker](#).
3. Install the [battery](#).
4. Install the [SIM-card tray](#) (optional).
5. Follow the procedure in [After working inside your computer](#).

Heat sink



Removing the heat sink

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).

About this task

-  **NOTE:** The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.
-  **NOTE:** For maximum cooling of the processor, do not touch the heat-transfer areas on the heat sink. The oils on your skin can reduce the heat-transfer capability of the thermal grease.

The following images indicate the location of the heat sink and provide a visual representation of the removal procedure.

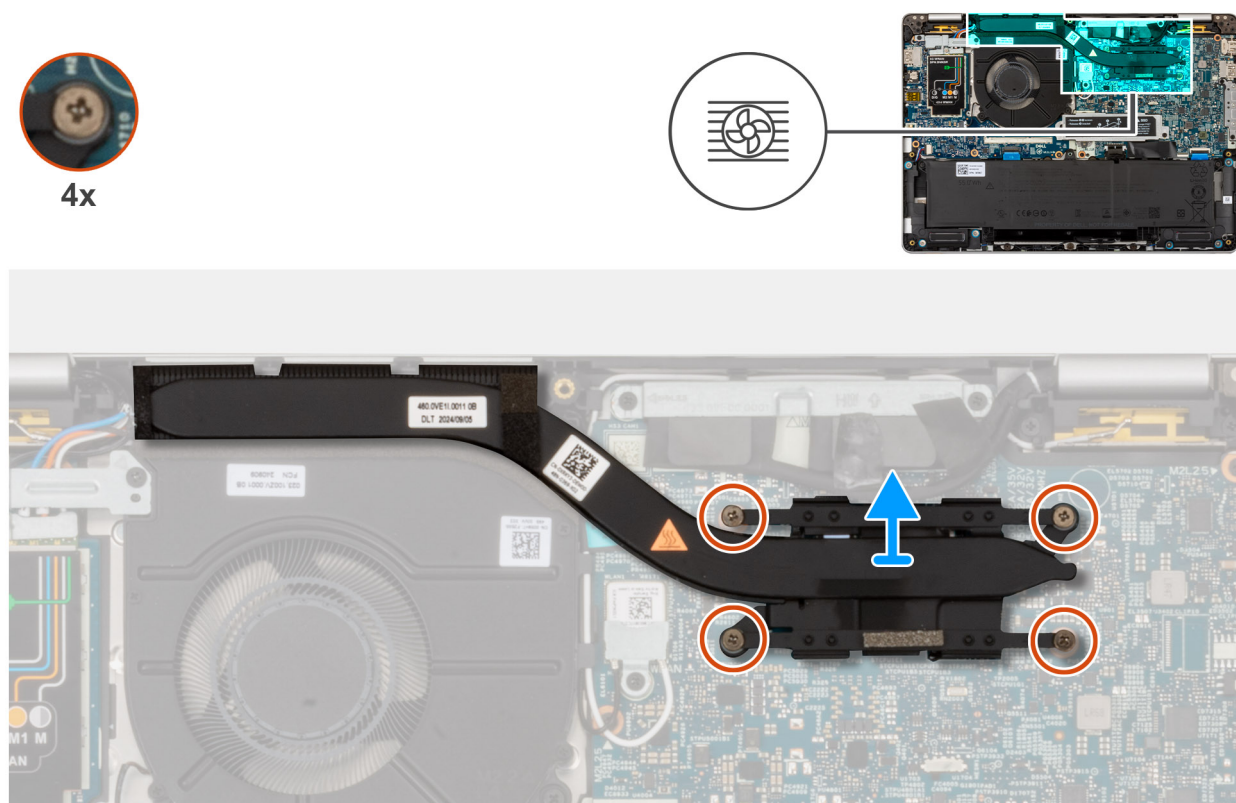




Figure 38. Removing the heat sink

Steps

1. Loosen the four captive screws that secure the heat sink to the system board.
 -  **NOTE:** Loosen the captive screws in the reverse sequential order mentioned on the heat sink [4 > 3 > 2 > 1].
 -  **NOTE:** The number of screws varies depending on the configuration ordered.
2. Lift the heat sink from the system board.

Installing the heat sink

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

NOTE: If either the system board or the heat sink is replaced, use the thermal grease that is provided in the kit to ensure that the thermal conductivity is achieved.

The following images indicate the location of the heat sink and provide a visual representation of the installation procedure.

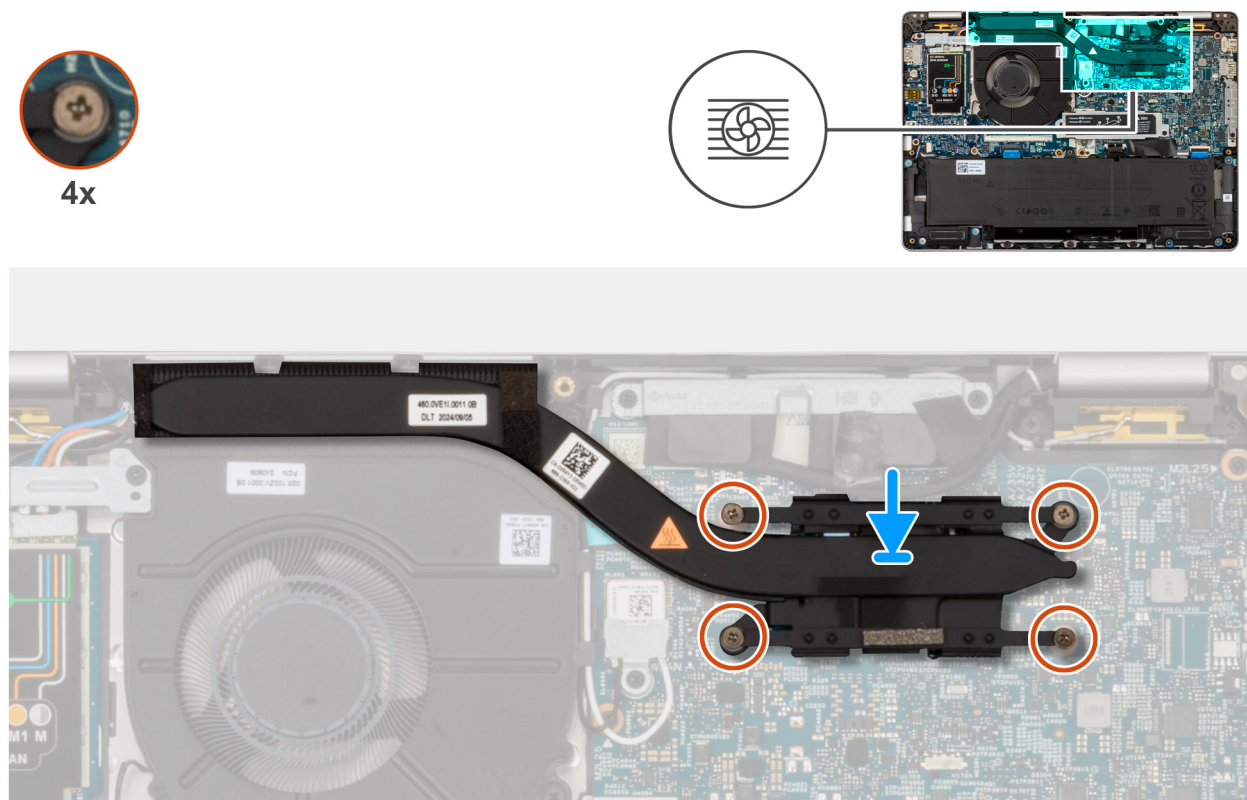


Figure 39. Installing the heat sink

Steps

1. Align and place the heat sink on the system board.
2. Tighten the four captive screws that secure the heat sink to the system board.

NOTE: Tighten the captive screws in the sequential order mentioned on the heat sink [1 > 2 > 3 > 4].

NOTE: The number of screws varies depending on the configuration ordered.

CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.

Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#) (optional).
3. Follow the procedure in [After working inside your computer](#).

Display assembly

Removing the display assembly

 **CAUTION:** The information in this removing section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [5G WWAN card](#).

About this task

The following images indicate the location of the display assembly and provide a visual representation of the removal procedure.


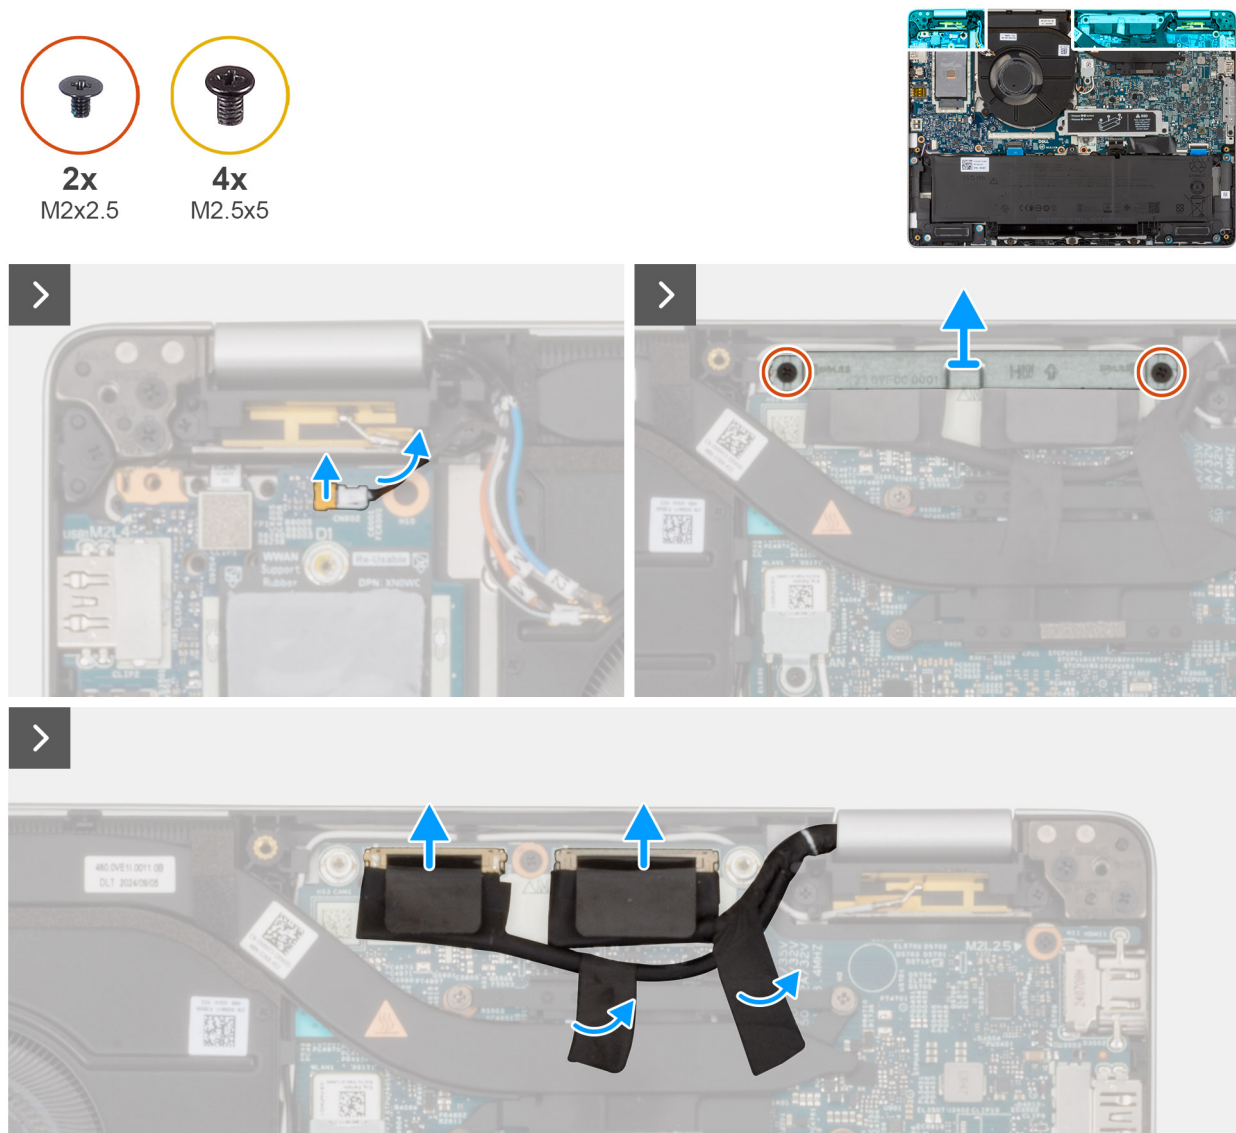


Figure 40. Removing the display assembly

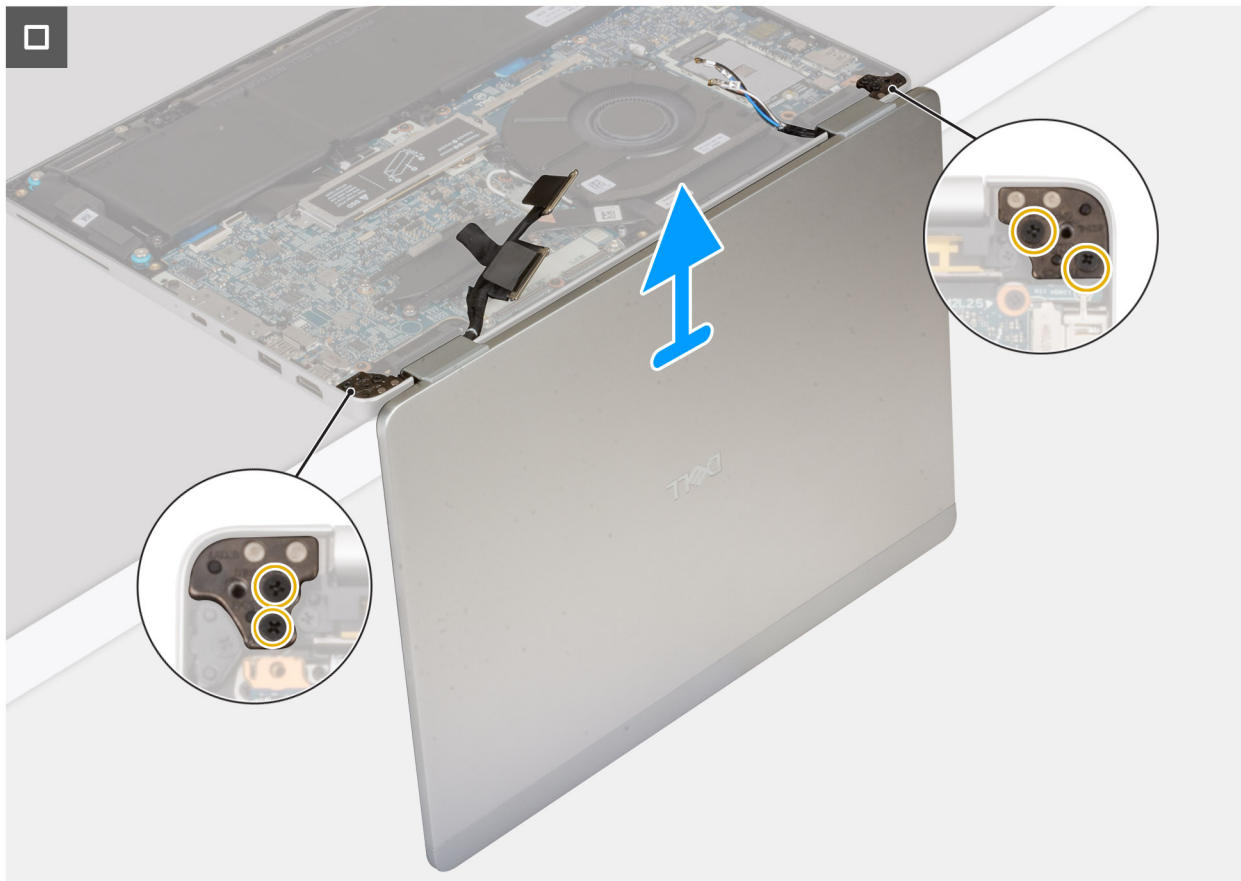

Steps

1. Remove the two (M2x2.5) screws that secure the display-cable bracket to the system board.
2. Remove the display-cable bracket off the palm-rest assembly.
3. Disconnect the display cable from the display cable connector (LCD1) on the system board.
4. Remove the display cable from the routing guides on the system board.
5. Lift the black flap near the antenna cables to uncover the sensor-board cable.
6. Disconnect the sensor-board cable from the connector on the system board.
7. Remove the antenna cables (where applicable) from the routing guides on the system board.
8. Remove the four screws (M2.5x5) that secure the left and right display hinges to the palm-rest assembly.
9. Lift the display assembly from the palm-rest assembly.
10. Place the display assembly on a clean, flat surface.

Installing the display assembly

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the display assembly and provide a visual representation of the installation procedure.

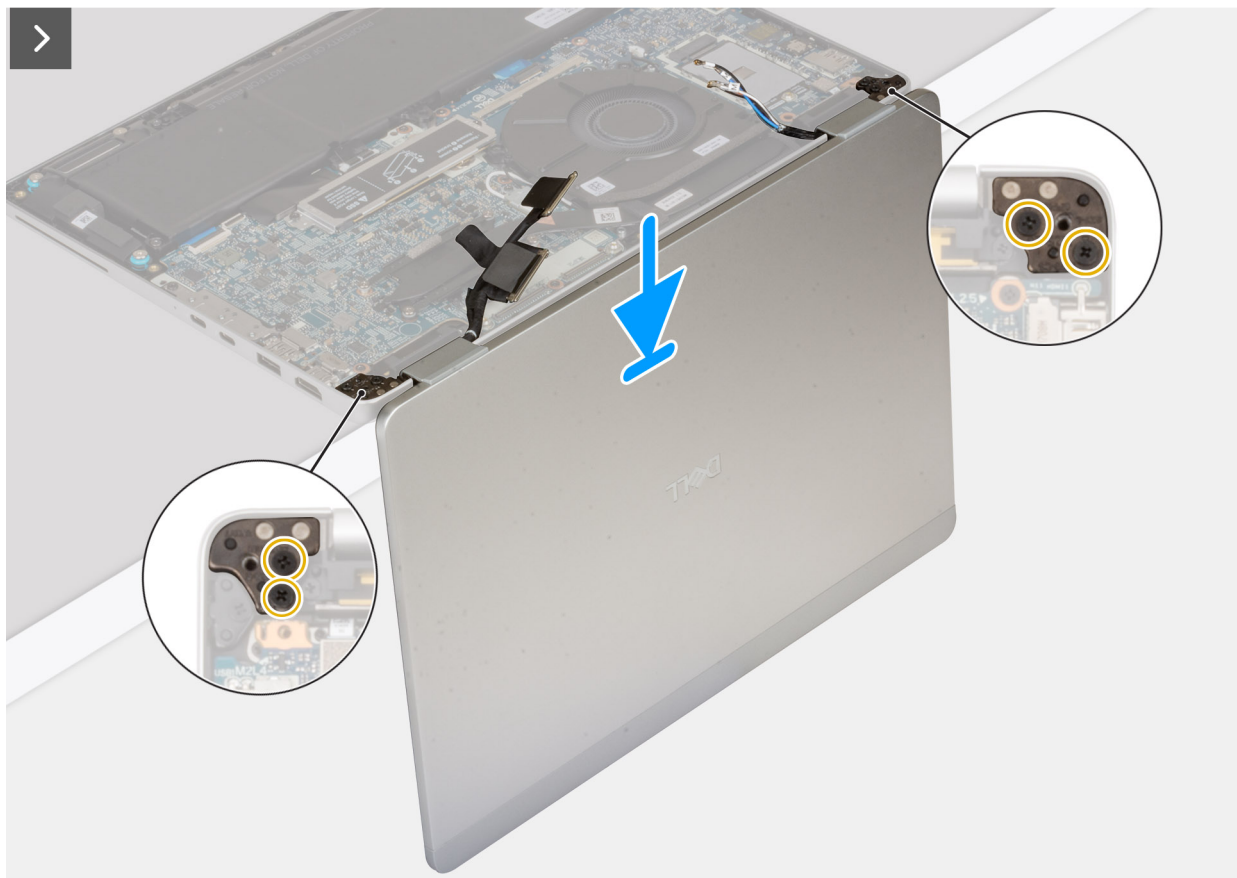
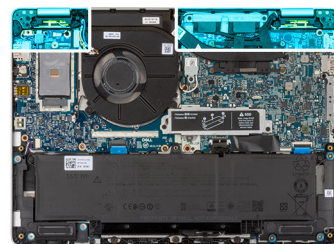
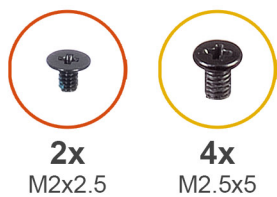


Figure 41. Installing the display assembly

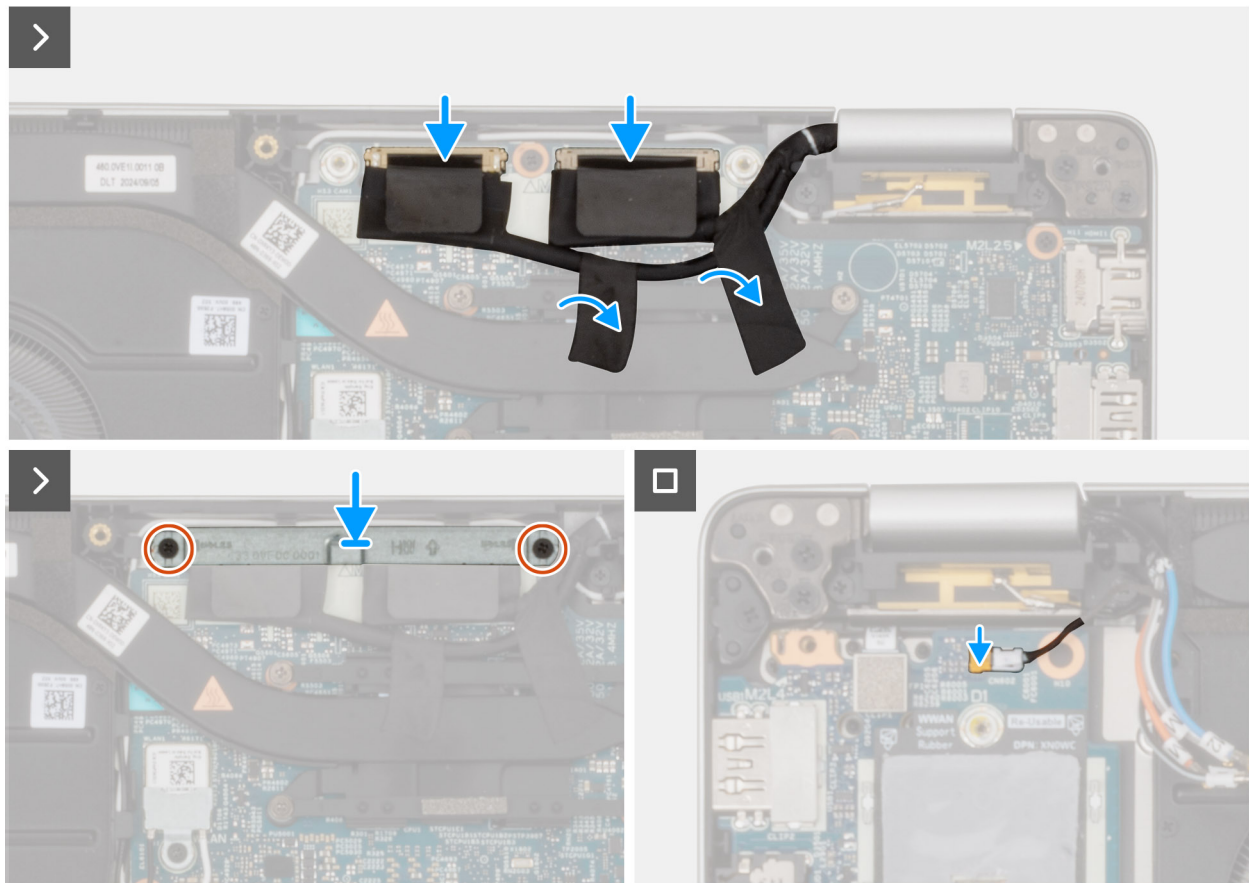


Figure 42. Installing the display assembly

Steps

1. Place the palm-rest assembly at the edge of the table with the speakers facing away from the edge.
2. Align the screw holes on the palm-rest assembly with the screw holes on the display hinges.
3. Replace the four screws (M2.5x5) that secure the left and right display hinges to the palm-rest assembly.
4. Connect the sensor-board cable to the connector on the system board.
5. Cover the sensor-board cable with the black flap near the antenna cables.
6. Route the antenna cables (where applicable) from the routing guides on the system board.
7. Connect the display cable and the display cable to the respective connectors (LCD1) on the system board.
8. Adhere the tape that secures the display cable to the system board.
9. Align the screw holes on the display-cable bracket with the screw holes on the system board.
10. Replace the two (M2x3) screws that secure the display cable bracket to the system board.

Next steps

1. Install the [base cover](#)
2. Install the [5G WWAN card](#).
3. Install the [battery](#).
4. Install the [SIM-card tray](#) (optional).
5. Follow the procedure in [After working inside your computer](#).

System board

Removing the system board

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
5. Remove the [5G WWAN card](#).
6. Remove the [fan](#).
7. Remove the [display assembly](#).

About this task

The following image indicates the system board connectors.


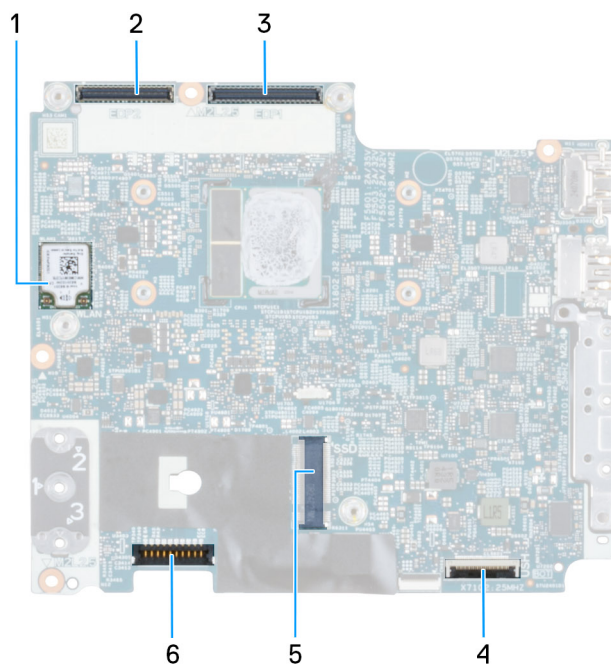


Figure 43. System board connectors

- | | |
|-----------------------------------|--------------------------------|
| 1. Wireless-card (WLAN) | 2. MIPI camera cable connector |
| 3. Display-cable connector (LCD1) | 4. USB cable connector |
| 5. Solid state drive slot | 6. Battery connector |

The following images indicate the location of the system board and provide a visual representation of the removal procedure.

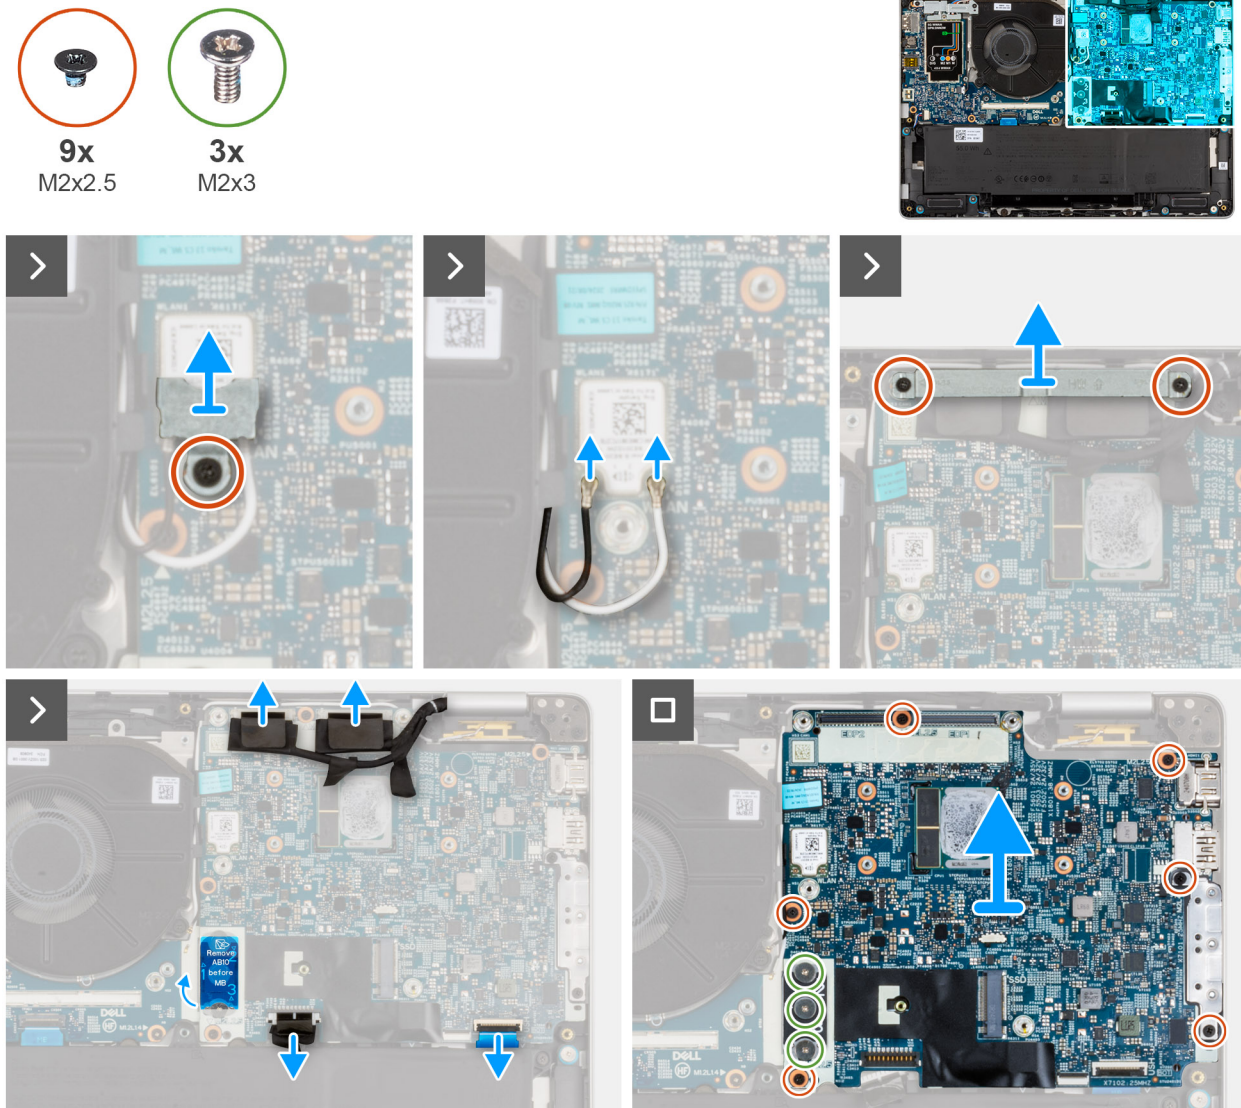Figure 44. Removing the system board



Steps

1. Remove the screw (M2x2.5) that secures the WLAN bracket to the palm-rest assembly.
2. Lift the WLAN bracket off the palm-rest assembly.
3. Disconnect the WLAN cables from the WLAN card.
4. Remove the two screws (M2x2.5) that secure the display-cable bracket to the palm-rest assembly.
5. Lift the display-cable bracket off the palm-rest assembly.
6. Lift the pull tab cable near the antenna cables and uncover the sensor-board cable.
7. Disconnect the camera cable and display cable from the system board.
8. Disconnect the sensor-board cable from the connector on the system board.
9. Remove the display cable from the routing guides on the system board.
10. Disconnect the display cable from the display cable connector (LCD1) on the system board.
11. Partly peel the mylar to access the screws on the middle bracket (AB10) that connects the I/O board and system board to the palm-rest assembly.
12. Open the latch and disconnect the touchpad cable from the touchpad cable connector (TPAD1) on the system board.
13. Open the latch and disconnect the USH cable from the USH board.
14. Remove the four screws (M2x2.5) that secure the system board to the palm-rest assembly.
15. Remove the three (M2x3) screws in reverse sequential order as indicated on the middle bracket.

16. Lift the system board off the palm-rest assembly.

Installing the system board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the system board connectors.

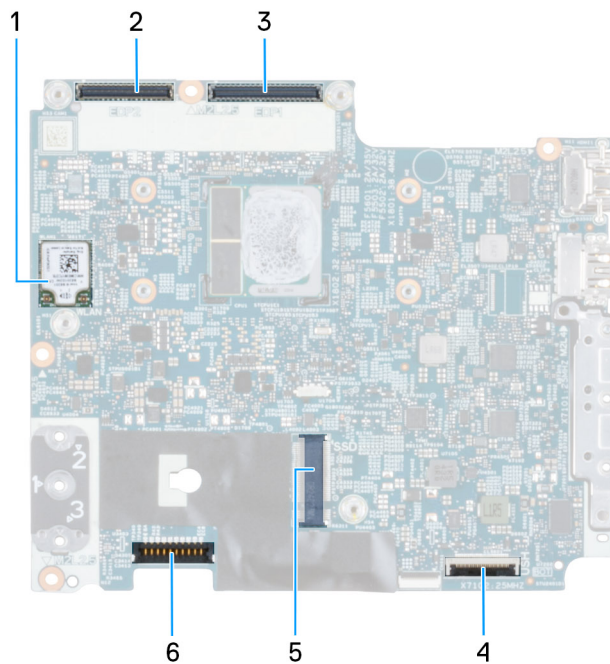



Figure 45. System board connectors

- | | |
|-----------------------------------|--------------------------------|
| 1. Wireless-card (WLAN) | 2. MIPI camera cable connector |
| 3. Display-cable connector (LCD1) | 4. USB cable connector |
| 5. Solid state drive slot | 6. Battery connector |

Figure 46. System board connectors

The following images indicate the location of the system board and provide a visual representation of the installation procedure.

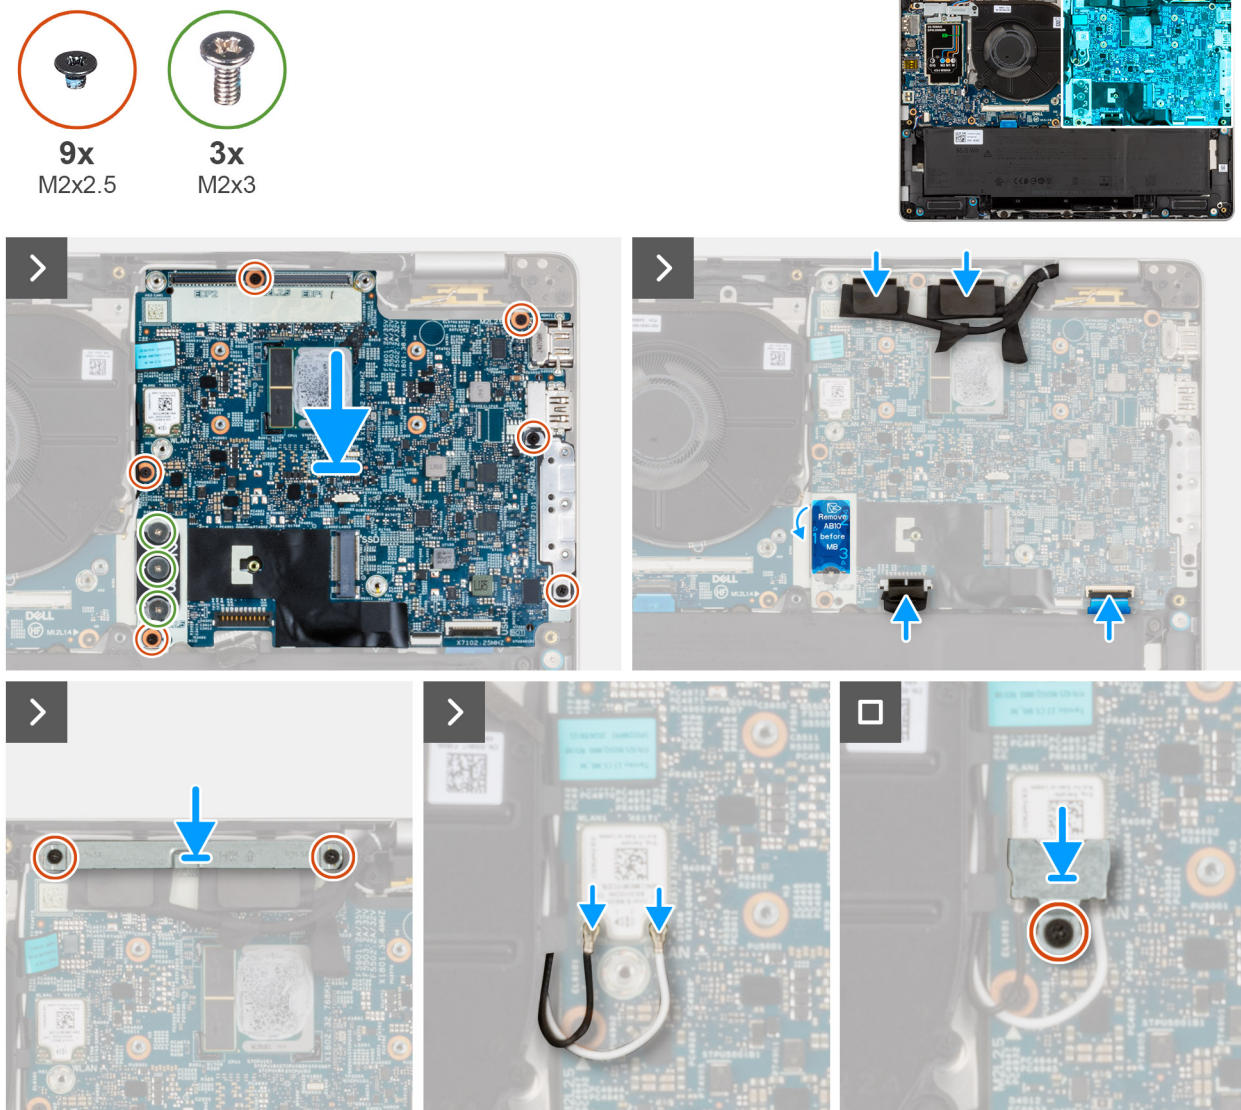Figure 47. Installing the system board



Steps

1. Align and place the system board on its slot on the palm-rest assembly.
2. Replace the three (M2x3) screws in reverse sequential order as indicated on the middle bracket.
3. Replace the four screws (M2x2.5) that secure the system board to the palm-rest assembly.
4. Open the latch and connect the USH cable to the USH board.
5. Open the latch and connect the touchpad cable to the touchpad cable connector (TPAD1) on the system board.
6. Connect the display cable to the display cable connector (LCD1) on the system board.
7. Route the display cable through the routing guides on the system board.
8. Connect the sensor-board cable to the connector on the system board.
9. Connect the camera cable and display cable to the connectors on the system board.
10. Place the pull-tab cable near the antenna cables and cover the sensor-board cable.
11. Place the display-cable bracket on the palm-rest assembly.
12. Adhere the mylar to the screws on the middle bracket (AB10) that connects the I/O board and system board to the palm-rest assembly.
13. Replace the two screws (M2x2.5) that secure the display-cable bracket to the palm-rest assembly.
14. Connect the WLAN cables from the WLAN card.
15. Place the WLAN bracket on the palm-rest assembly.

16. Replace the screw (M2x2.5) that secures the WLAN bracket to the palm-rest assembly.

Next steps

1. Install the [base cover](#).
2. Install the [display assembly](#).
3. Install the [fan](#).
4. Install the [5G WWAN card](#).
5. Install the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
6. Install the [SIM-card tray](#) (optional).
7. Follow the procedure in [After working inside your computer](#).


USB Type-C connector module

Removing the USB Type-C connector module

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
6. Remove the [5G WWAN card](#).
7. Remove the [fan](#).
8. Remove the [display assembly](#).
9. Remove the [system board](#).

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

About this task

The following images indicate the location of the USB Type-C connector module and provide a visual representation of the removal procedure.

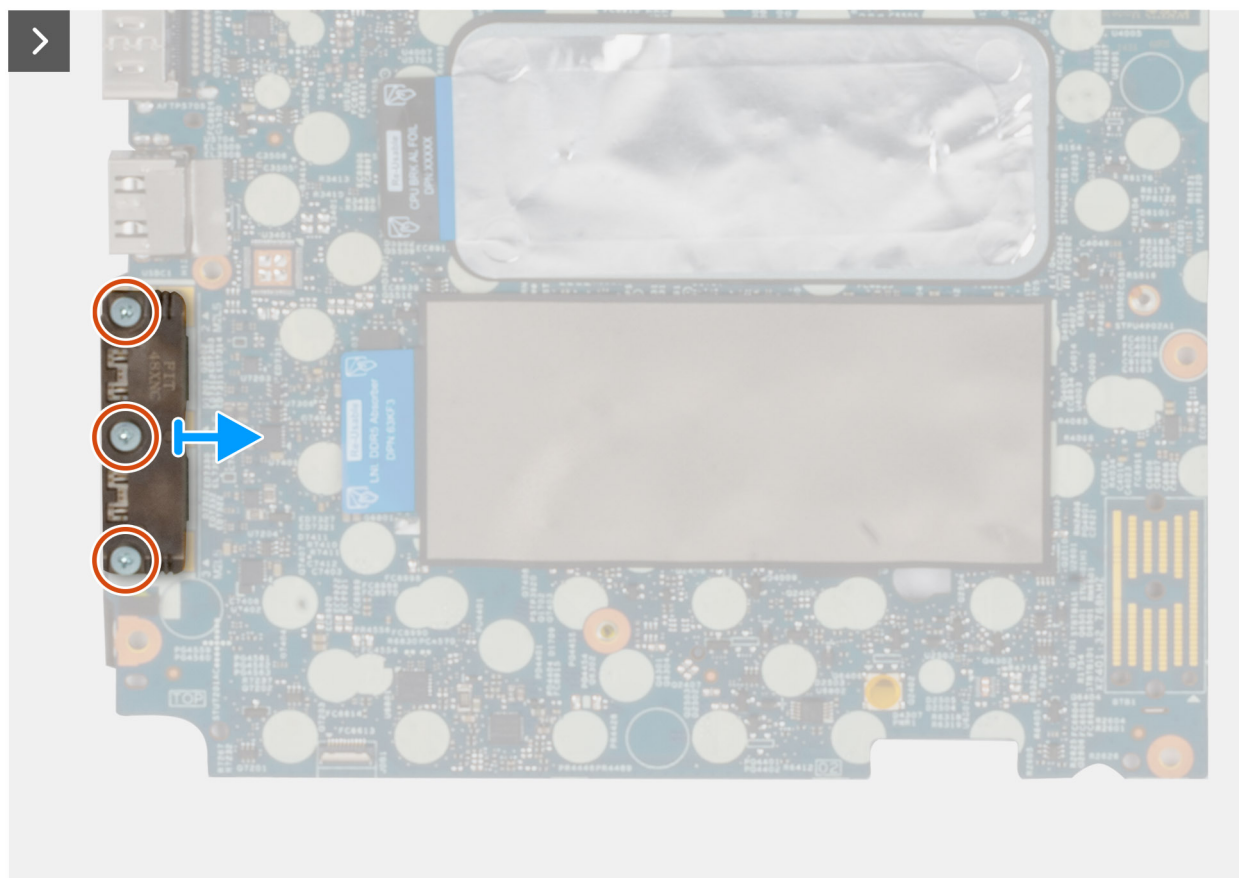
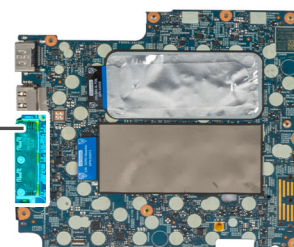
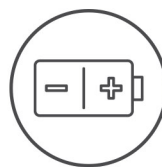


Figure 48. Removing the USB Type-C Connector Module

Steps

1. Remove the three screws (M2x5) that secure the USB Type-C connector module to the bottom side of the system board.
2. Remove the USB Type-C connector module from the system board.

Installing the USB Type-C connector module

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the USB Type-C connector module and provide a visual representation of the installation procedure.



3x
M2x5

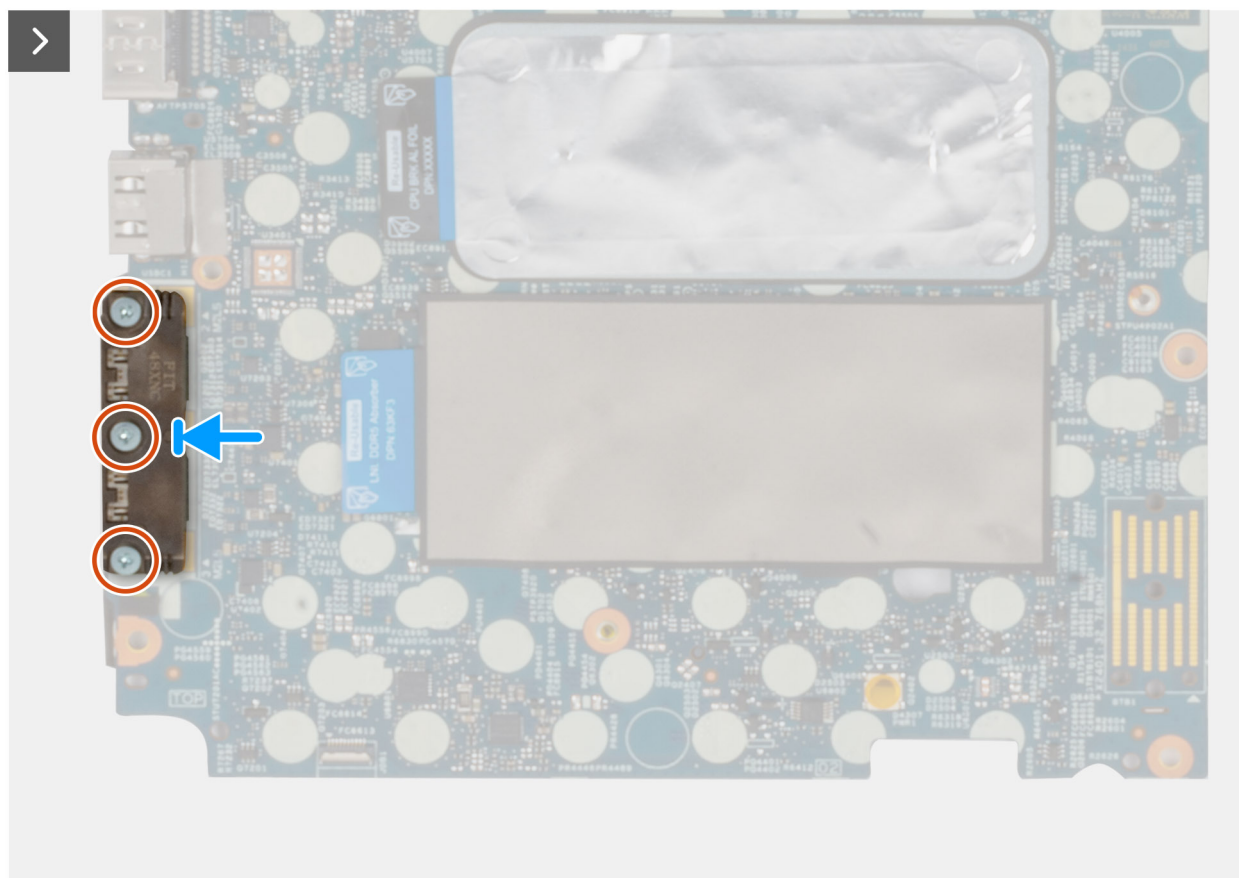
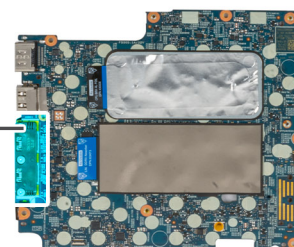
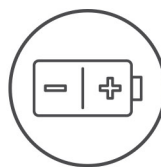


Figure 49. Installing the USB Type-C Connector Module

Steps

1. Align and place the USB Type-C connector module to the slot on the bottom side of the system board.
2. Replace the three screws (M2x5) that secure the USB Type-C connector module in place.

Next steps

1. Install the [base cover](#).
2. Install the [system board](#).

NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

3. Install the [display assembly](#)
4. Install the [fan](#).
5. Install the [5G WWAN card](#).
6. Install the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
7. Install the [battery](#).
8. Install the [SIM-card tray](#) (optional).
9. Follow the procedure in [After working inside your computer](#).

Wireless Local Area Network (WLAN) antenna modules

Removing the WLAN antenna module

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).

About this task

The following image indicates the location of the WLAN antenna module and provides a visual representation of the removal procedure.

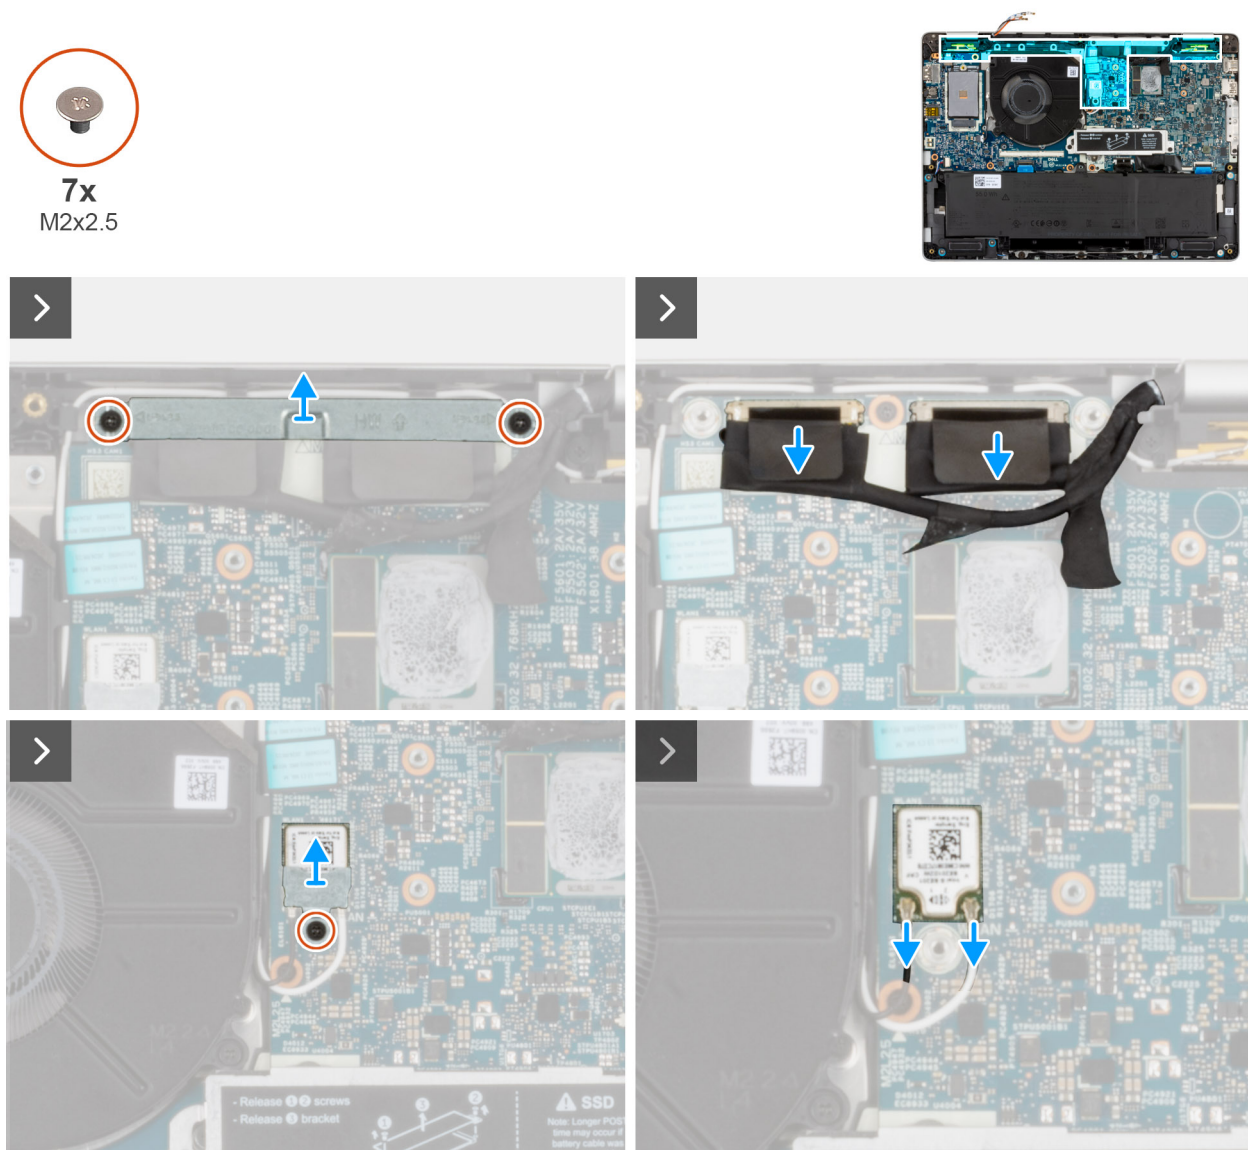


Figure 50. Removing the WLAN antenna module

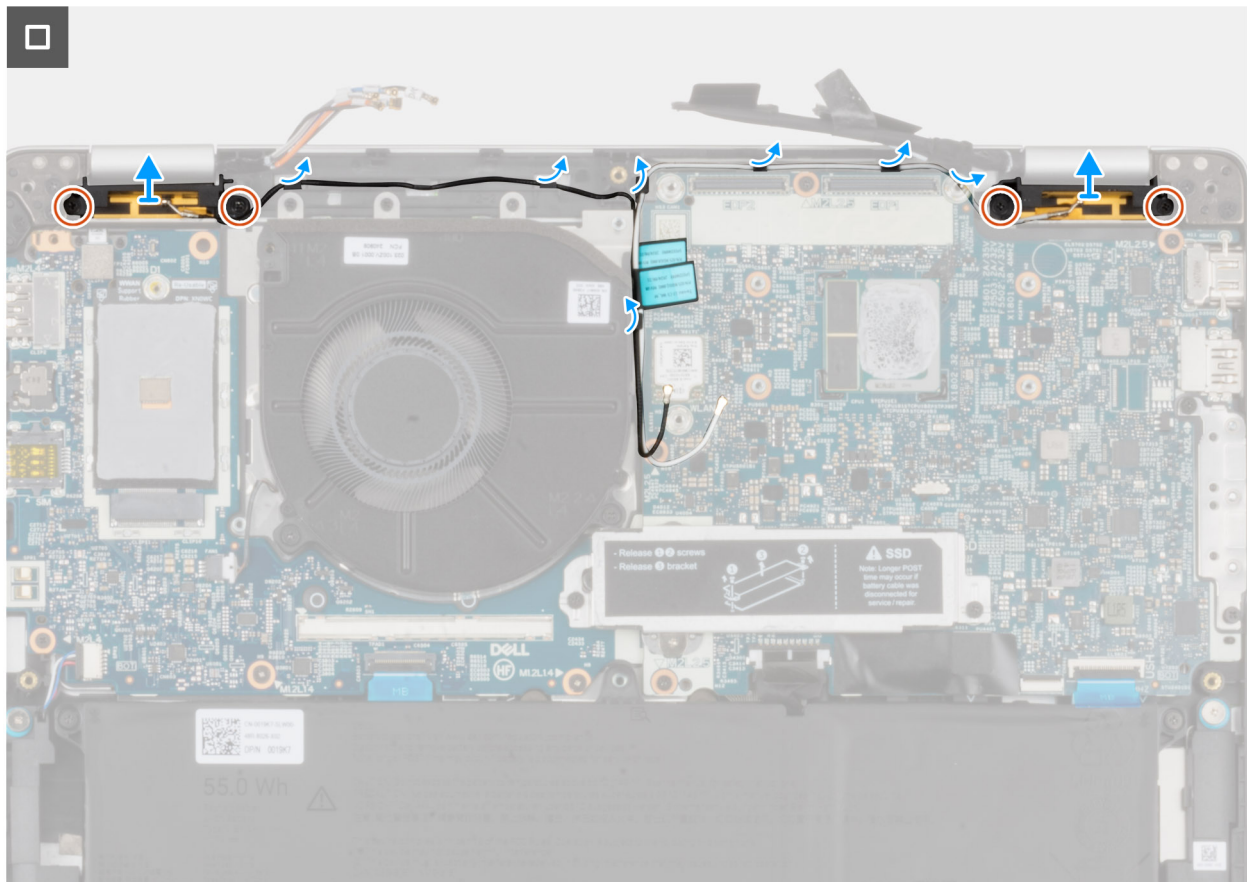


Figure 51. Removing the WLAN antenna module

Steps

1. Remove the two (M2x2.5) screws that secure the display-cable bracket to the system board.
2. Lift the display-cable bracket off the palm-rest assembly
3. Disconnect the sensor-board cable and display cable from the system board.
4. Remove the screw (M2x3) that secures the wireless-card bracket to the system board.
5. Disconnect the WLAN antennas cables from the WLAN card.
6. Remove the cables following the routing guide on the palm-rest assembly.
7. Remove the four (M2x2.5) screws that secure the WLAN antenna modules and remove it from palm-rest assembly.

Installing the WLAN antenna module

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the wireless card and provides a visual representation of the removal procedure.



7x
M2x2.5

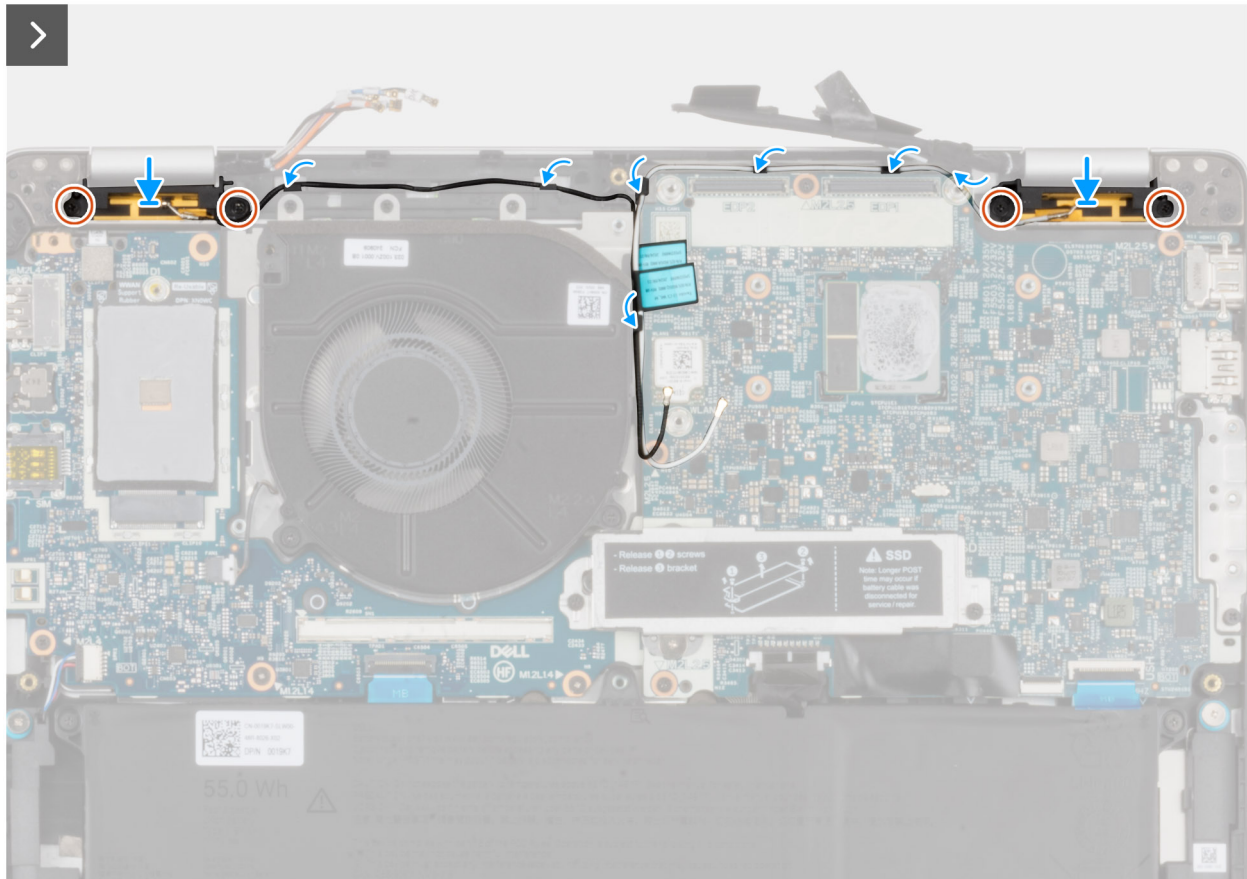


Figure 52. Installing the WLAN antenna module

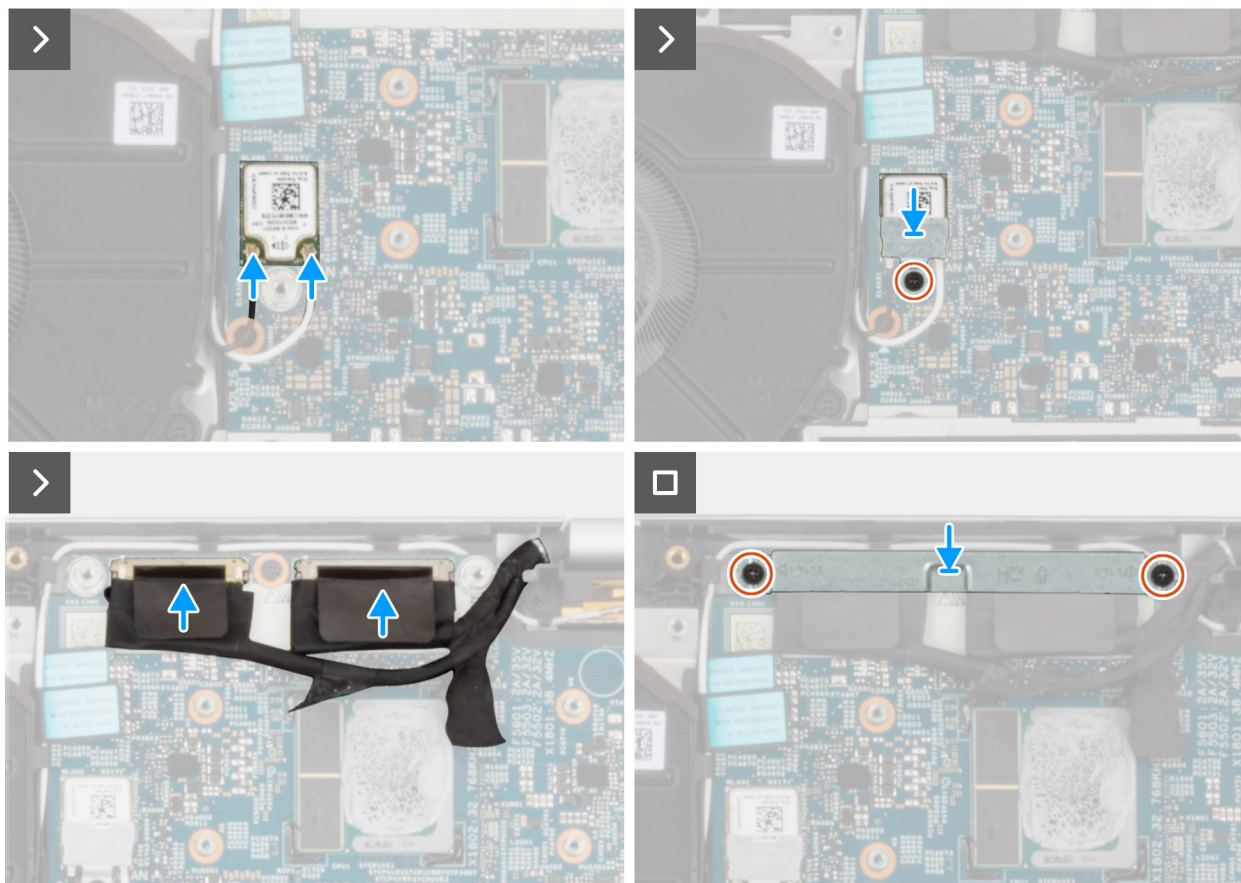


Figure 53. Installing the WLAN antenna module

Steps

1. Connect the four (M2x2.5) screws that secure the WLAN antenna modules to the palm-rest assembly..
2. Route the antenna cables through the routing guides on the palm-rest assembly.
3. Connect the WLAN antennas cables to the WLAN card.
4. Replace the screw (M2x3) that secures the wireless-card bracket to the system board.
5. Connect sensor-board cable and display cable to the connectors on the system board.
6. Replace the two (M2x2.5) screws that secure the display-cable bracket to the system board.

Next steps

1. Install the [base cover](#).
2. Install the [SIM-card tray](#) (optional).
3. Follow the procedure in [After working inside your computer](#).

I/O board

Removing the I/O board

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).

3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
6. Remove the [5G WWAN card](#).
7. Remove the [fan](#).
8. Remove the [display assembly](#).
9. Remove the [system board](#).

NOTE: The system board can be removed and installed with the heat sink to preserve the thermal bond.

About this task

The following images indicate the location of the I/O board and provide a visual representation of the removal procedure.

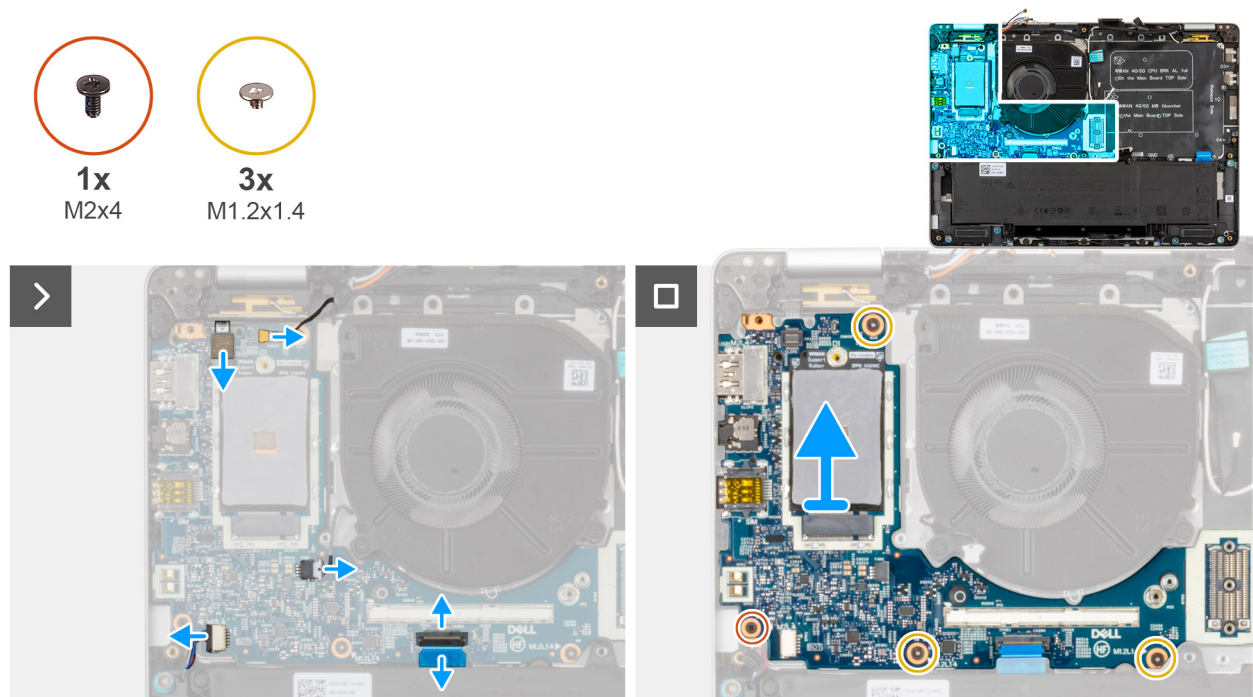


Figure 54. Removing the I/O board

Steps

1. Unroute the WWAN antenna cables from the routing guides on the I/O board.

NOTE: This step applies to models shipped with a USH daughter board.

2. Disconnect the optional fingerprint-reader cable from the I/O board.
3. Disconnect the speaker cable from the I/O board .
4. Disconnect the fan cable from the I/O board.
5. Disconnect the keyboard cable from the I/O board.
6. Remove the three screws (M2x1.4) that secure the I/O board on Plam-rest assembly.
7. Remove the screw (M2x4) that secures the I/O board in place.
8. Lift the I/O board away from the computer.

NOTE: While replacing the I/O board, the WWAN card thermal pad mylar sticker at the top side of the I/O board must be transferred to the replacement I/O board.

Installing the I/O board

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

About this task

The following images indicate the location of the I/O board and provide a visual representation of the installation procedure.

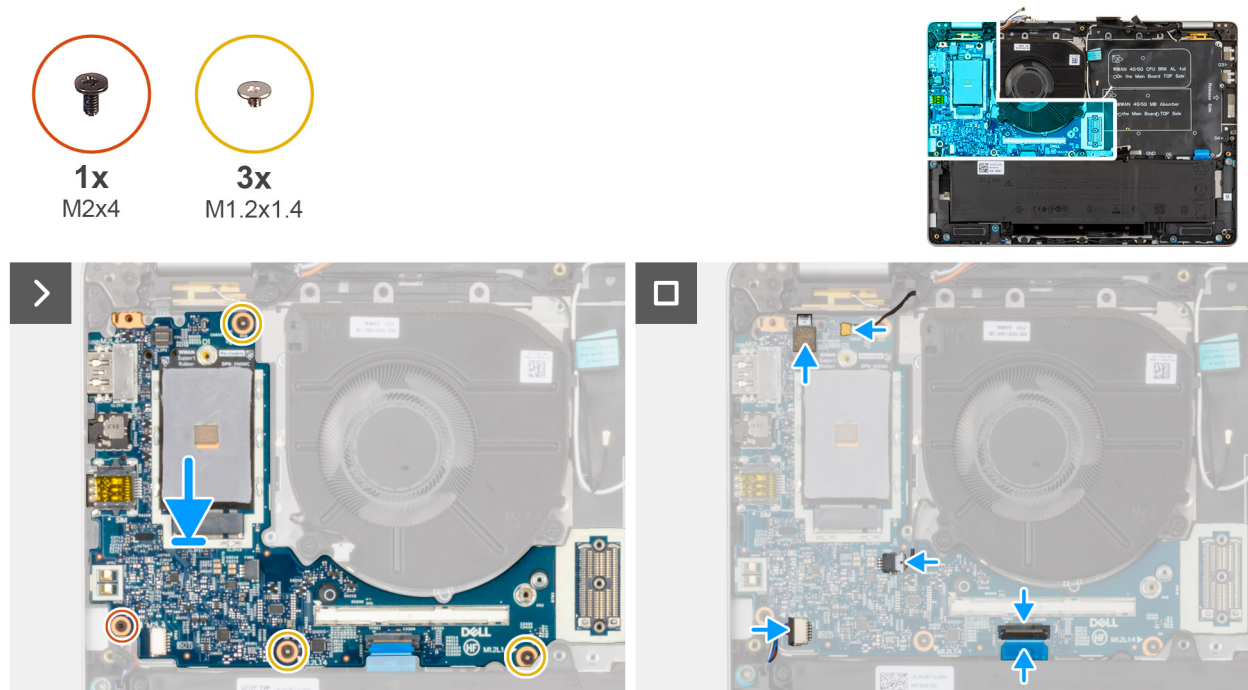



Figure 55. Installing the I/O board

Steps

1. Align the screw holes on the I/O board with the screw holes on the palm-rest assembly.
2. Replace the three screws (M1.2x1.4) that secure the I/O board in place.
3. Replace the screw (M2x4) that secures the I/O board in place.
4. Connect the optional fingerprint-reader cable to the I/O board.
5. Connect the speaker cable and fan cable to the I/O board.
6. Connect the keyboard cable to the I/O board.
7. Peel the USH daughter board FFC on the I/O board (applicable only for models shipped with a USH daughter board).

Next steps

1. Install the [base cover](#).
2. Install the [system board](#).

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

3. Install the [display assembly](#)
4. Install the [fan](#).
5. Install the [5G WWAN card](#).
6. Install the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
7. Install the [battery](#).
8. Install the [SIM-card tray](#) (optional).
9. Follow the procedure in [After working inside your computer](#).


Power button with optional fingerprint reader

Removing the power button with an optional fingerprint reader

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
6. Remove the [5G WWAN card](#).
7. Remove the [fan](#).
8. Remove the [display assembly](#).
9. Remove the [system board](#).

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

10. Remove the [I/O board](#).

About this task

The following images indicate the location of the power button with the optional fingerprint reader and provide a visual representation of the removal procedure.

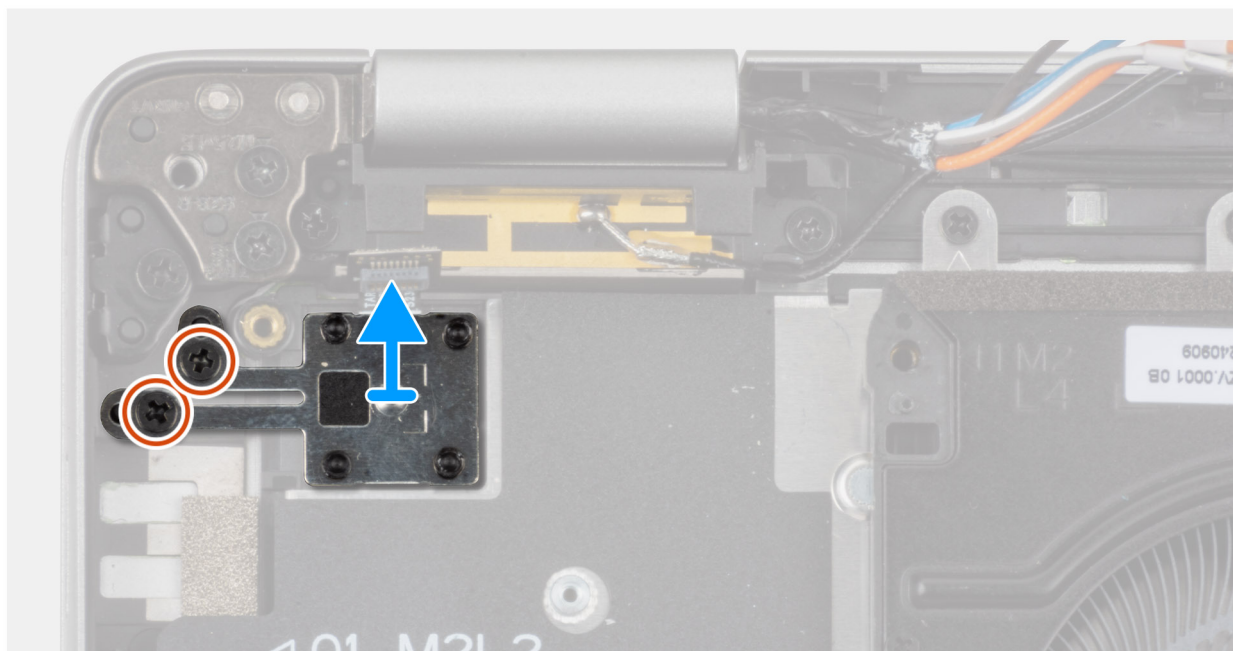
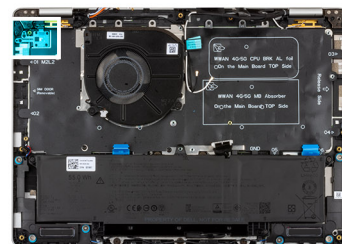


Figure 56. Removing the power button with an optional fingerprint reader

Steps

1. Remove the two screws (M2x2) that secure the power button to the palm-rest assembly.
2. Lift the power button off the palm-rest assembly.

Installing the power button with optional fingerprint reader

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the power button with optional fingerprint reader and provide a visual representation of the installation procedure.

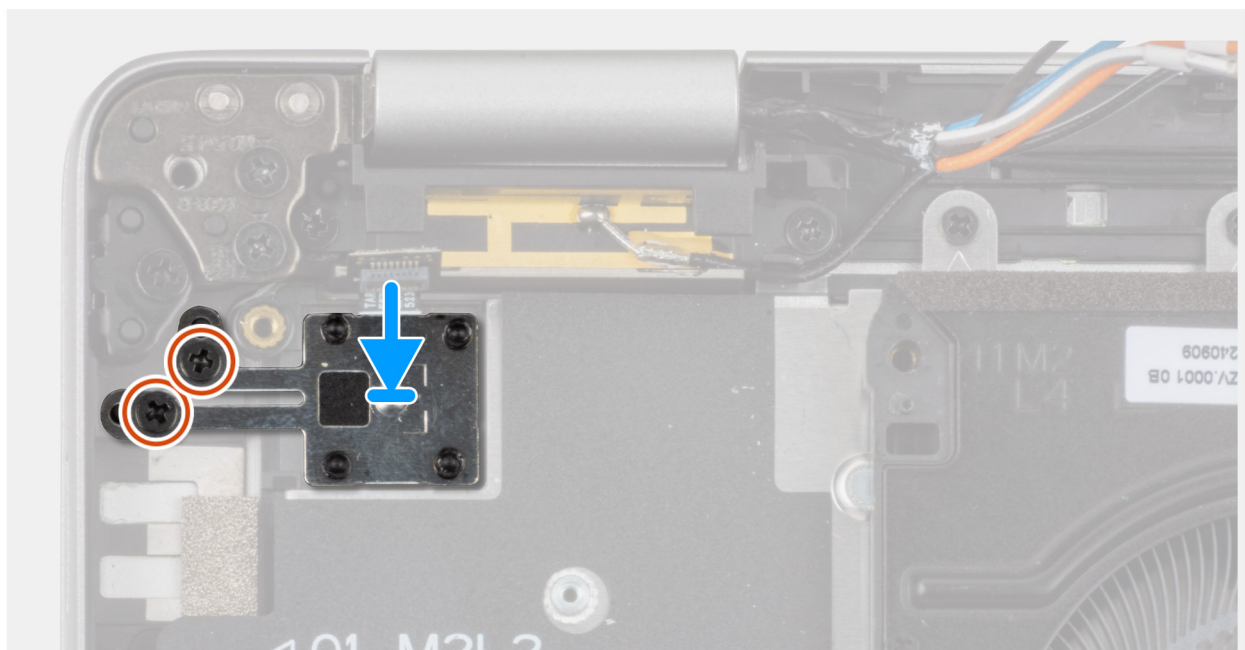
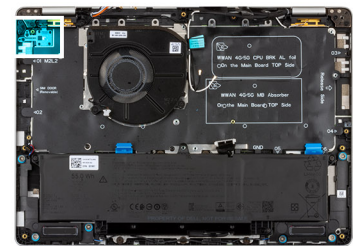



Figure 57. Installing the power button with optional fingerprint reader

Steps

1. Align and place the power button on the palm-rest assembly.
2. Replace the two screws (M2x2) to secure the power button to the palm-rest assembly.

Next steps

1. Install the [base cover](#).
2. Install the [I/O board](#).
3. Install the [system board](#).

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

4. Install the [display assembly](#)
5. Install the [fan](#).
6. Install the [5G WWAN card](#).
7. Install the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
8. Install the [battery](#).
9. Install the [SIM-card tray](#) (optional).
10. Follow the procedure in [After working inside your computer](#).


Keyboard

Removing the keyboard

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
6. Remove the [5G WWAN card](#).
7. Remove the [fan](#).
8. Remove the [display assembly](#).
9. Remove the [system board](#).

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

10. Remove the [I/O board](#).

About this task

The following images indicate the location of the keyboard and provide a visual representation of the removal procedure.

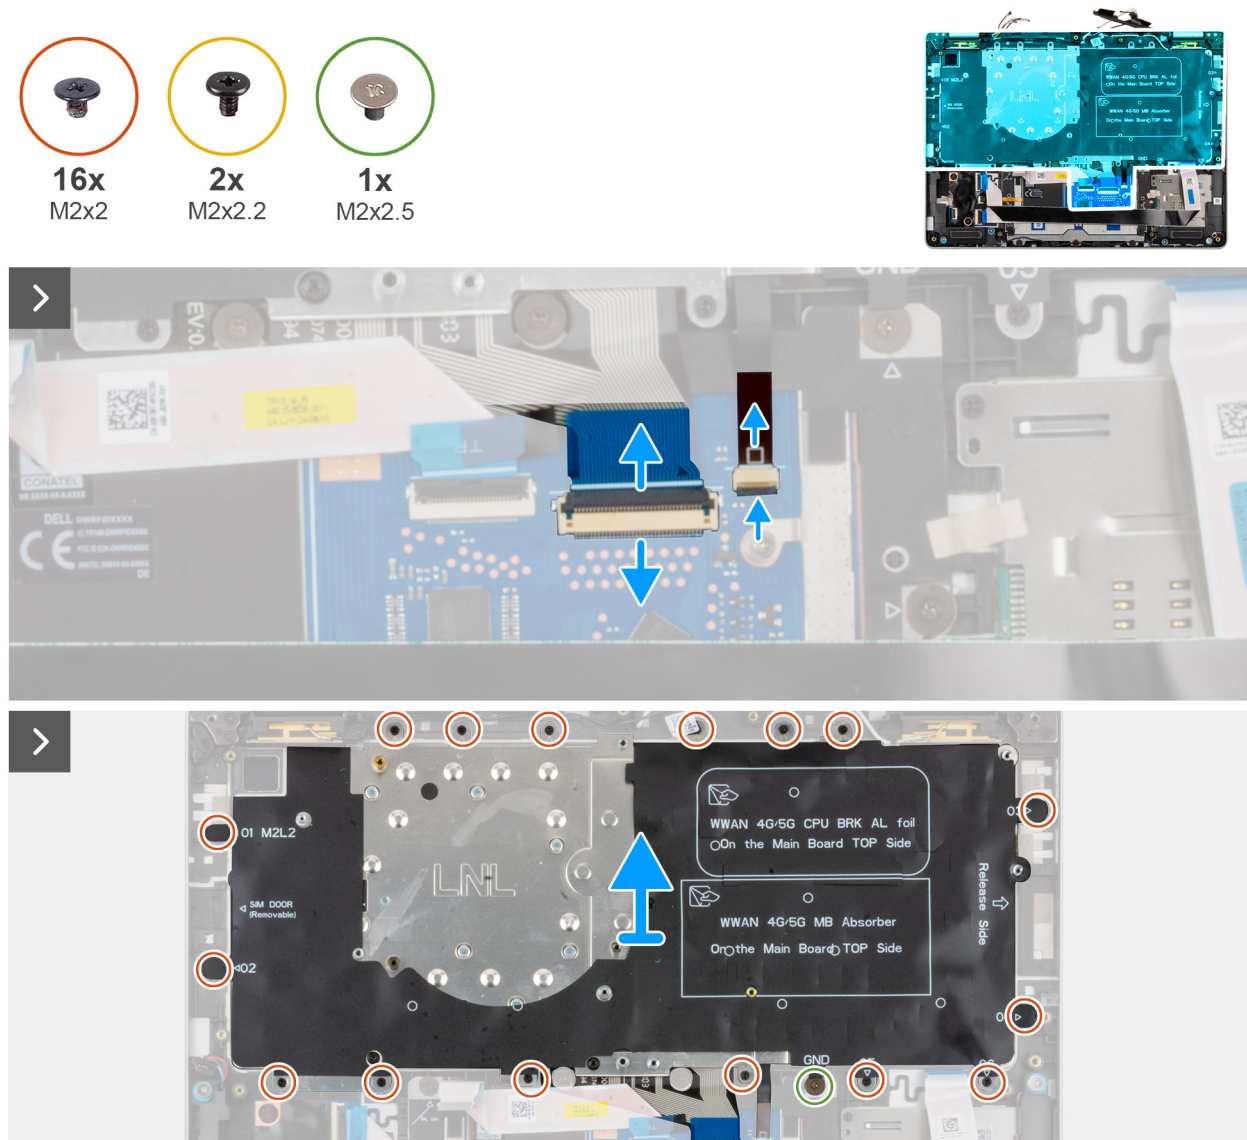



Figure 58. Removing the keyboard




Figure 59. Removing the keyboard

Steps

1. Open the latch and disconnect the keyboard cable from the touchpad.

 **NOTE:** For the keyboard, the latch is the "black" portion of the connector.

2. Open the latch and disconnect the keyboard-backlight cable from the touchpad.

 **NOTE:** For the keyboard-backlight, the latch is the "white" portion of the connector.

3. Remove the 16 screws (M2x2) and (M2x2.5) screw that secure the keyboard bracket to the palm-rest assembly.
4. Lift the keyboard bracket off the palm-rest assembly.
5. Turn the keyboard bracket over.
6. Remove the two screws (M2x2.2) that secure the keyboard to the keyboard bracket.
7. Lift the keyboard off the keyboard bracket.

Installing the keyboard

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the keyboard and provide a visual representation of the installation procedure.





Figure 60. Installing the keyboard

Steps


1. Align and place the keyboard on the keyboard bracket.

2. Replace the two screws (M2x2) to secure the keyboard to the keyboard bracket.
3. Turn the keyboard bracket over.
4. Align and place the keyboard bracket on the palm-rest assembly.
5. Replace the 16 screws (M2x2) that secure the keyboard bracket to the palm-rest assembly.
6. Connect the keyboard-backlight cable to the connector on the touchpad and close the latch to secure the cable.

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.


 **NOTE:** For the keyboard-backlight, the latch is the "white" portion of the connector.

7. Connect the keyboard cable to the connector on the touchpad and close the latch to secure the cable.

 **NOTE:** For the keyboard, the latch is the "black" portion of the connector.

Next steps

1. Install the [base cover](#).
2. Install the [I/O board](#).
3. Install the [system board](#).

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

4. Install the [display assembly](#)
5. Install the [fan](#).
6. Install the [5G WWAN card](#).
7. Install the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
8. Install the [battery](#).
9. Install the [SIM-card tray](#) (optional).
10. Follow the procedure in [After working inside your computer](#).


Palm-rest assembly

Removing the palm-rest assembly

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [battery](#).
5. Remove the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
6. Remove the [5G WWAN card](#).
7. Remove the [speaker](#).
8. Remove the [fan](#).
9. Remove the [USH board](#).
10. Remove the [smart card reader](#).
11. Remove the [display assembly](#).
12. Remove the [system board](#).

 **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

13. Remove the [I/O board](#).
14. Remove the [power button with an optional fingerprint reader](#).
15. Remove the [WLAN antenna module](#).


16. Remove the [keyboard](#).

About this task

NOTE: When replacing the palm-rest assembly, transfer the dummy SIM filler to the new palm-rest assembly.

The following image indicates the location of the palm-rest assembly and provides a visual representation of the removal procedure.

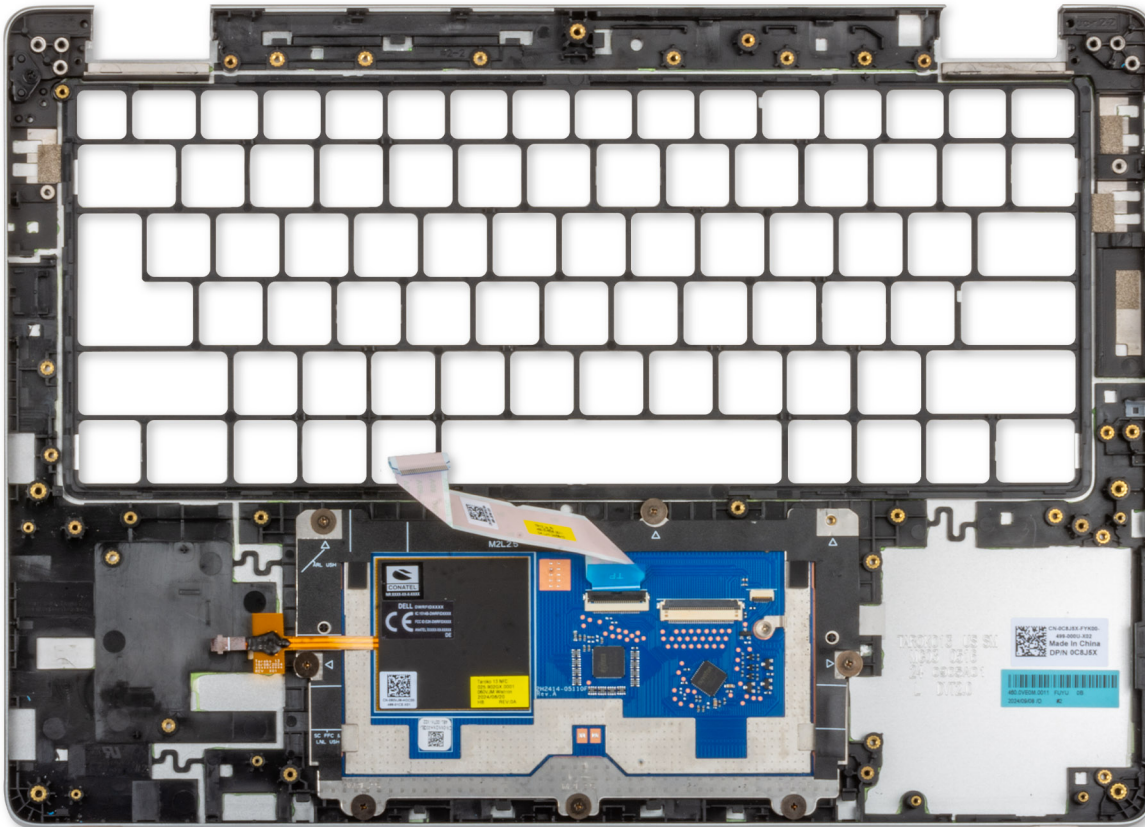Figure 61. Removing the palm-rest assembly



Steps

Remove all the components mentioned in the pre-requisites to get the palm-rest assembly.

NOTE: Do not remove the touchpad from the palm-rest assembly.

NOTE: Battery-support bracket and the keyboard-bracket must be removed from the palm-rest assembly and transferred to the replacement palm-rest assembly.

NOTE: Security-cable slot (wedge-shaped) is part of palm-rest assembly.

Installing the palm-rest assembly

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following image indicates the location of the palm-rest assembly and provides a visual representation of the installation procedure.

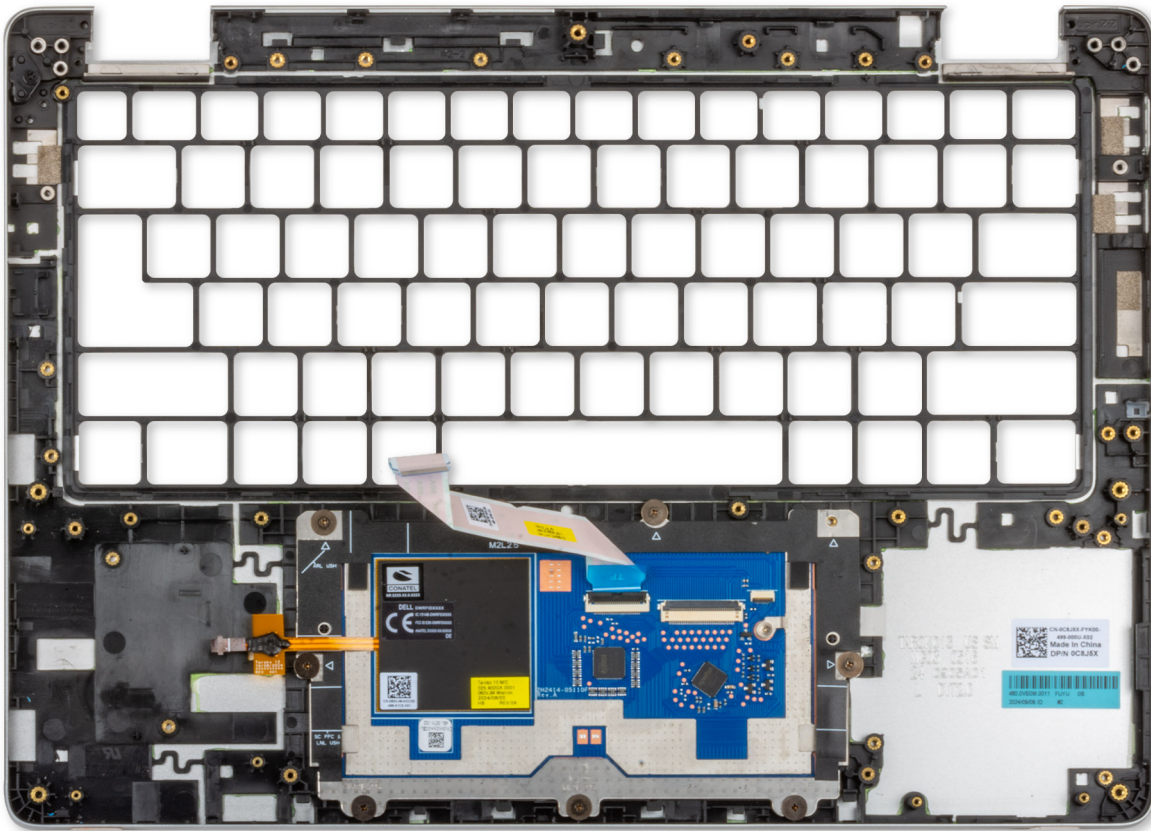


Figure 62. Installing the palm-rest assembly

Steps

Place the palm-rest assembly on a clean and flat surface.

i **NOTE:** The touchpad is pre-assembled with the palm-rest assembly.

i **NOTE:** The battery support bracket and the keyboard support frame must be added to the replacement palm-rest assembly.

i **NOTE:** Security-cable slot (wedge-shaped) is part of palm-rest assembly.

Next steps

1. Install the [base cover](#).
2. Install the [keyboard](#).
3. Install the [WLAN antenna module](#).
4. Install the [power button with an optional fingerprint reader](#).
5. Install the [I/O board](#).
6. Install the [system board](#).

i **NOTE:** The system board can be removed and installed with the heat sink to preserve the thermal bond.

7. Install the [display assembly](#).
8. Install the [smart card reader](#).
9. Install the [USH board](#).

10. Install the [fan](#).
11. Install the [speaker](#).
12. Install the [5G WWAN card](#).
13. Install the [M.2 2230](#) or [M.2 2280 SSD](#), as applicable.
14. Install the [battery](#).
15. Install the [SIM-card tray](#) (optional).
16. Follow the procedure in [After working inside your computer](#).

Display bezel

Removing the display bezel


 **CAUTION:** The information in this removal section is intended for authorized service technicians only.


Prerequisites



1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [5G WWAN card](#).
5. Remove the [display assembly](#).


About this task


The following images indicate the location of the display bezel and provide a visual representation of the removal procedure.

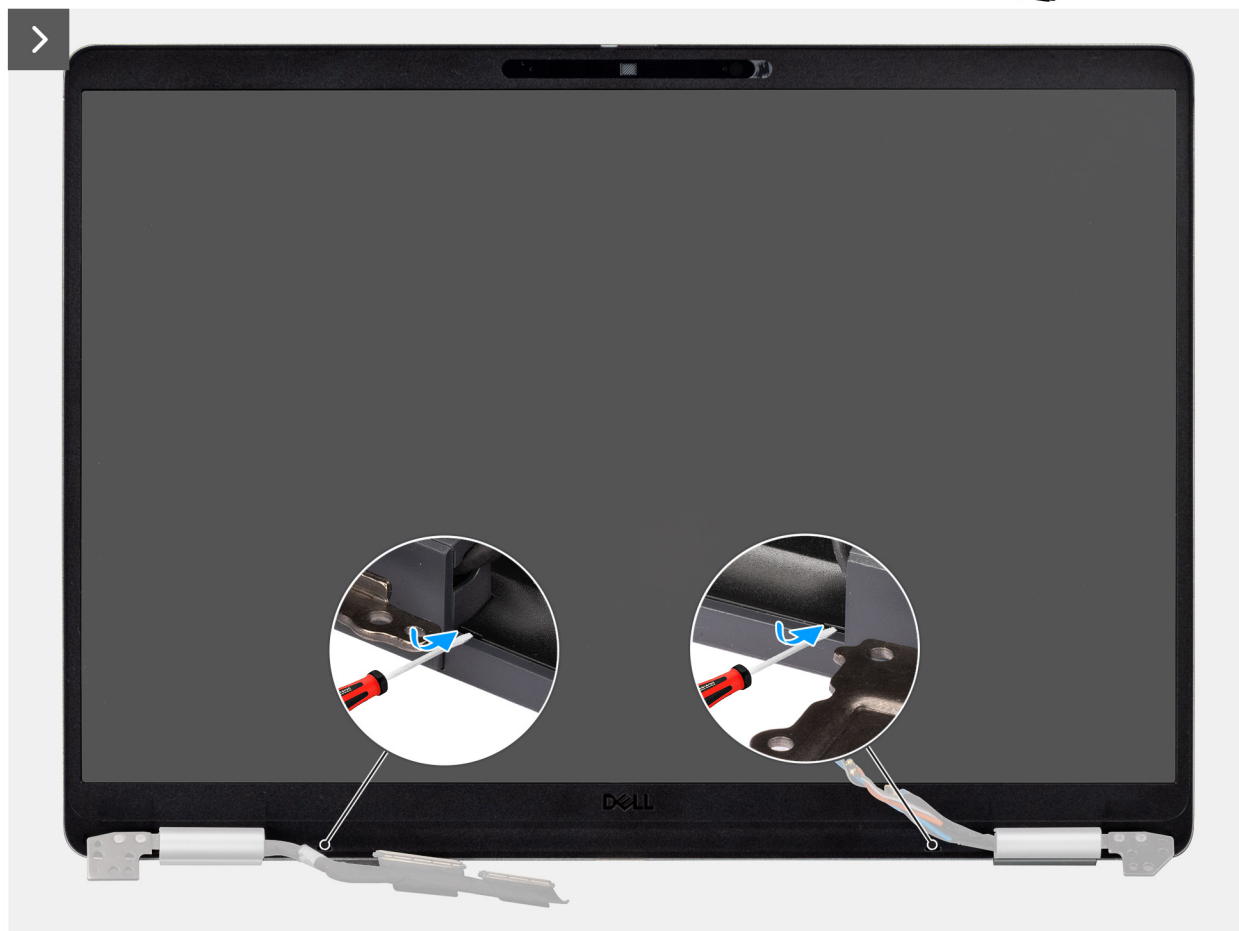

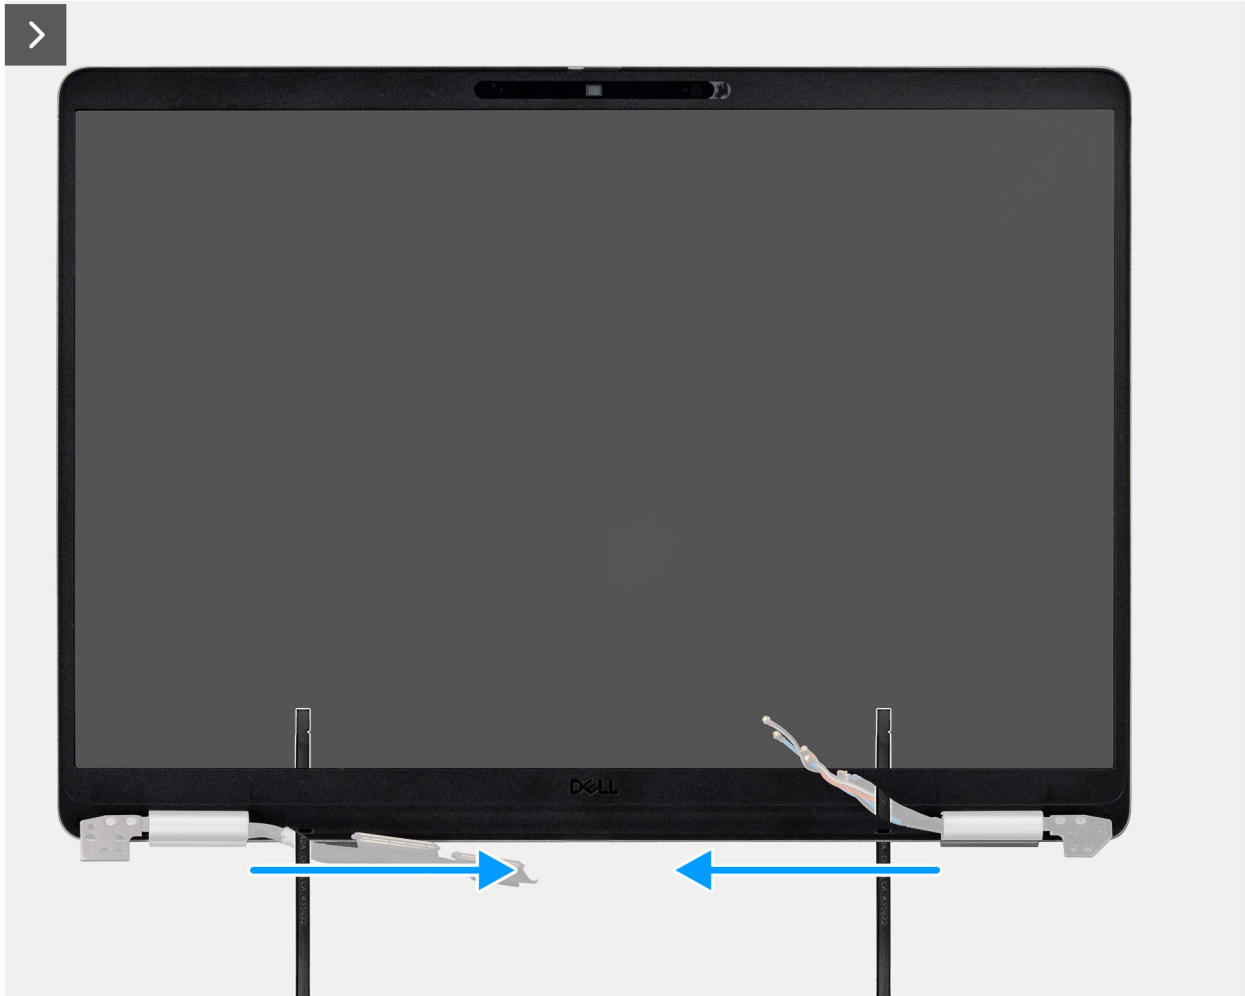

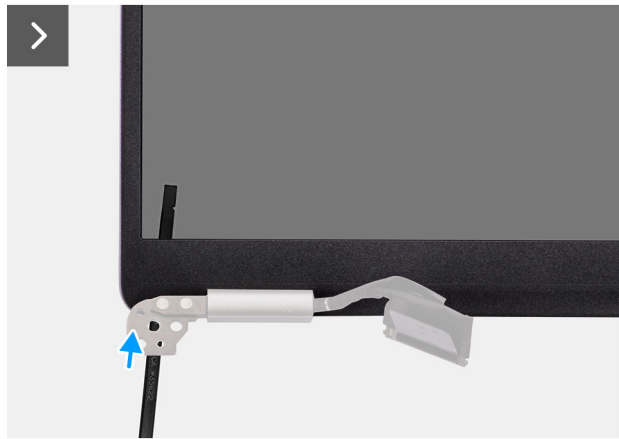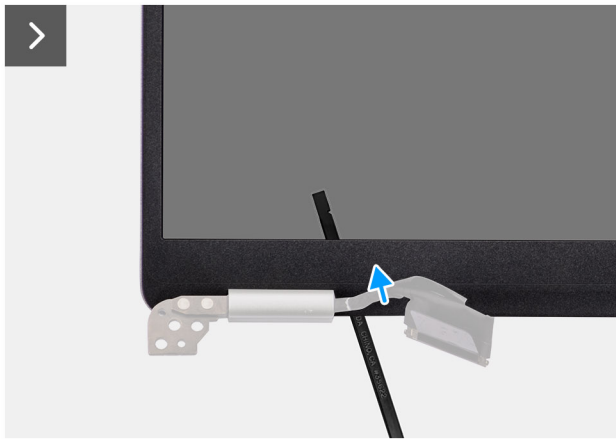

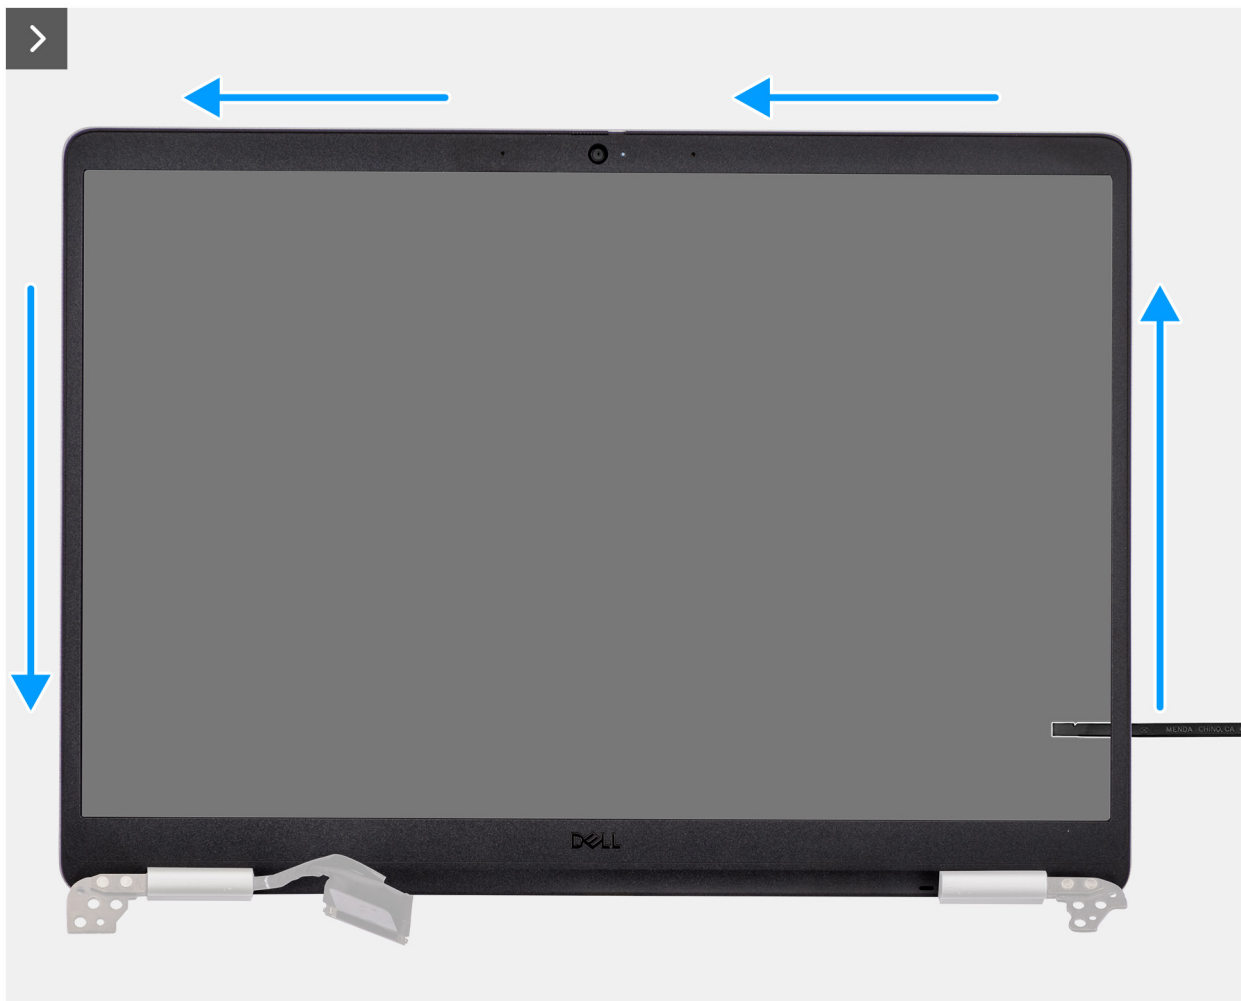

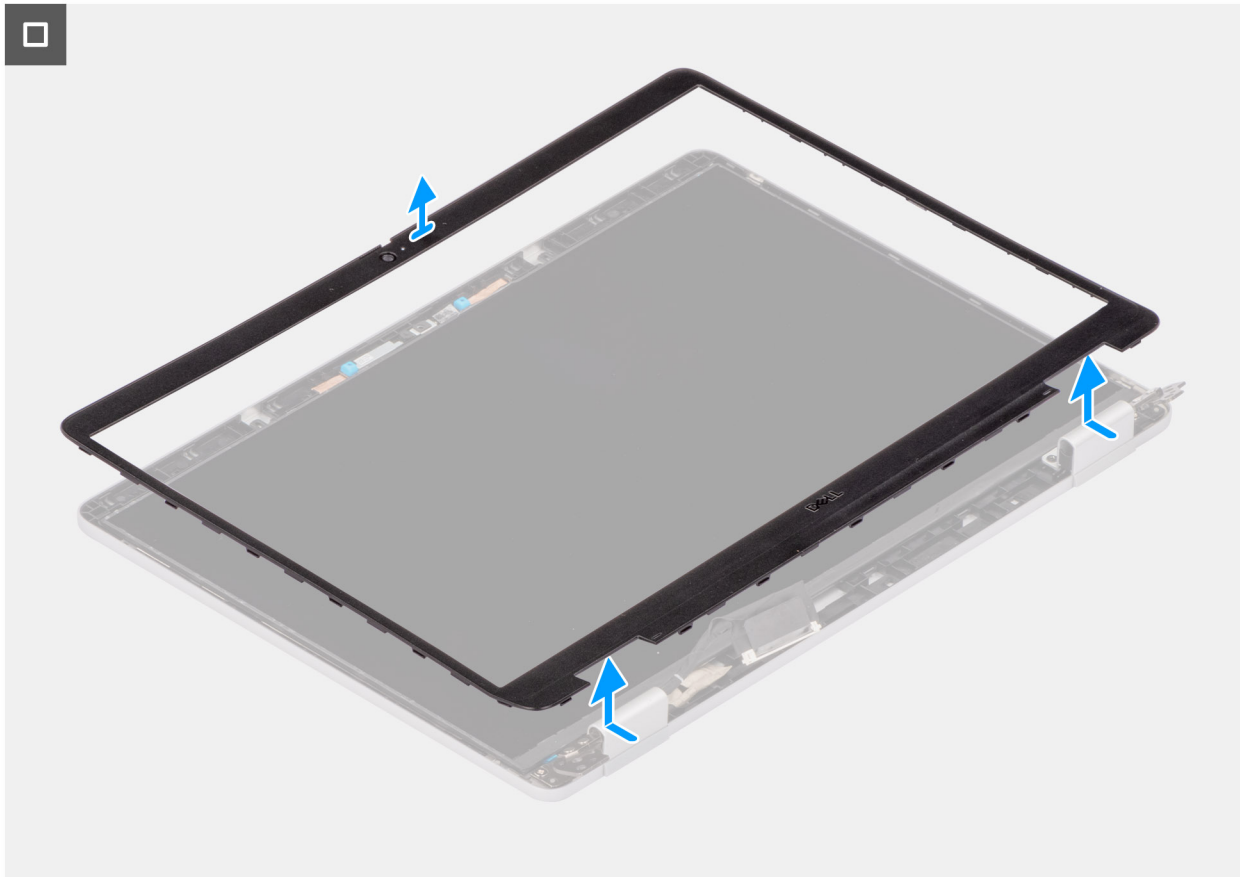

After the display panel screws have been removed, lift up the bottom side of the panel and slide it downward to release the display bracket from the slots at the top side of the display back cover. The panel and its support brackets are defined as a single service part. DO NOT pull the two pieces of elastic tape and separate the brackets from the panel.

Steps

1. Insert a flat-head screwdriver (maximum width: 4 mm) into the recess on the display bezel near the hinges, and gently apply pressure to release the bezel at both ends, creating a gap.

NOTE: The bezel is deformed from this process. This is acceptable because the bezel is defined as a consumable part and should be replaced with a new one.

CAUTION: Do not use the flat head (slotted) screwdriver to release up the rest of the bezel. Switch to the plastic scribe to continue releasing along the bezel.

2. Insert the flat end of the scribe into the gap created under the display bezel.

CAUTION: When inserting the scribe into the bezel, keep it parallel to the display. Pressing it downward can damage the display. Do not use the flat head (slotted) screwdriver to release up the rest of the bezel. Switch to the plastic scribe to continue releasing along the bezel.

3. Keeping the scribe parallel to the display, carefully slide it along the bottom edge of the bezel to release the adhesive and the lower side.

CAUTION: Do NOT lift the scribe up vertically as that damages the LCD. Slide the scribe horizontally to release the adhesive and release the bezel up.

4. Insert the scribe diagonally into the hinge section to release the adhesive near the portion of the bezel above the hinge.
5. Insert the scribe into the corner of the display bezel near the hinge. Keeping the scribe parallel to the display, carefully slide the scribe along the edges from one corner to the other (right to left or left to right). As you do this, use your fingers to help with releasing the bezel from the clips and adhesive.
6. Lift the display bezel off the display assembly.

Installing the display bezel

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.


Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the display bezel and provide a visual representation of the installation procedure.

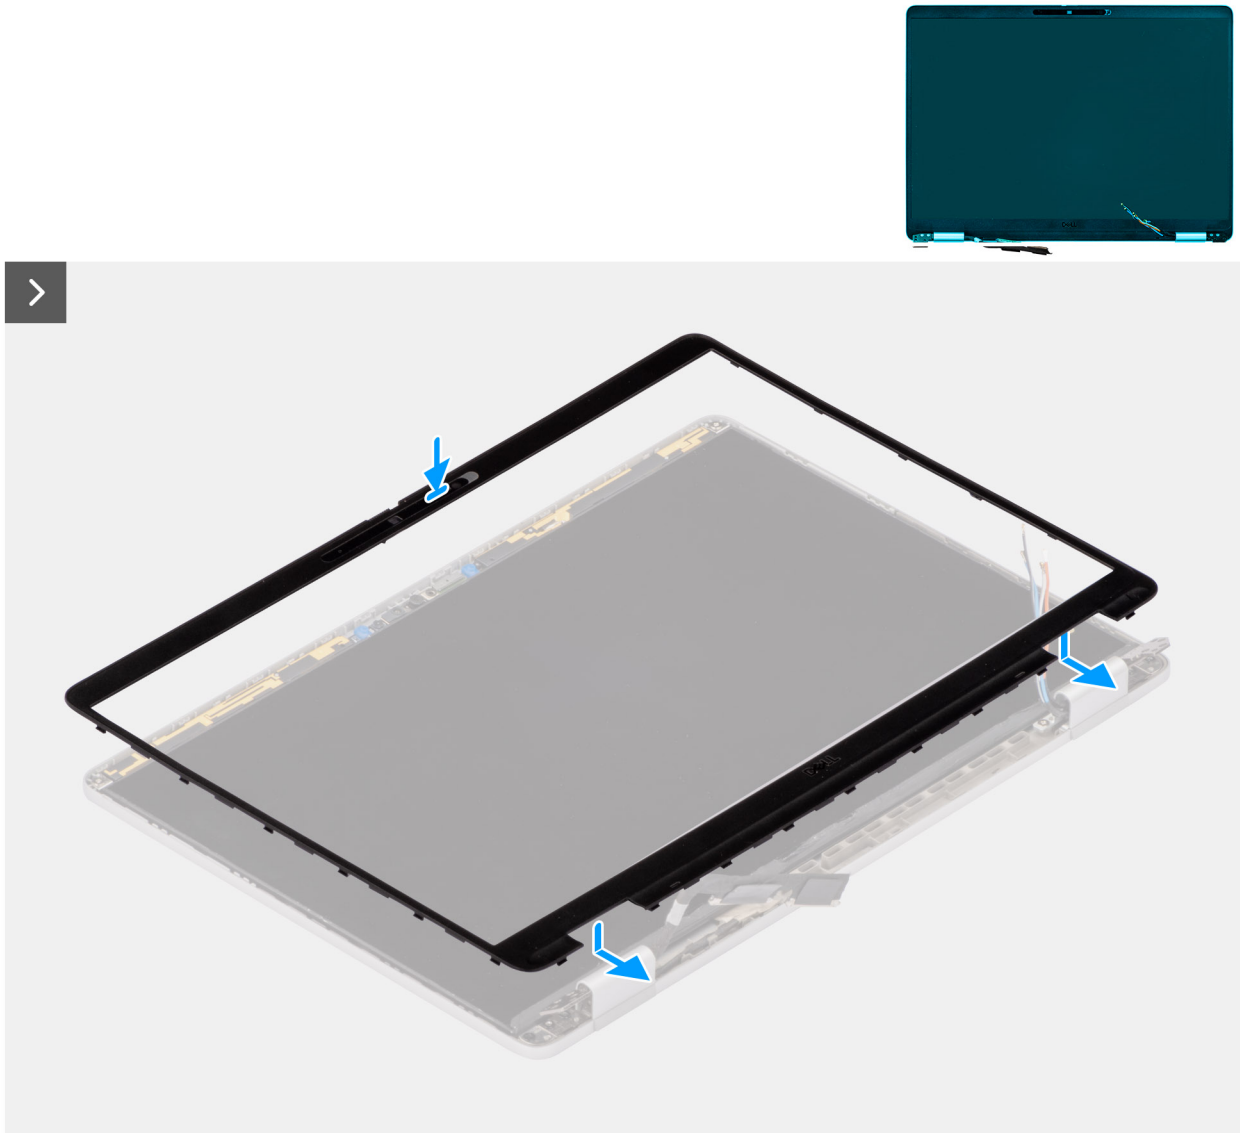Figure 63. Installing the display bezel



Steps

1. Align and place the display bezel on the display assembly.
2. Gently press along the edges of the display bezel to secure it with the clips on the display assembly.

Next steps

1. Install the [base cover](#).
2. Install the [display assembly](#).

3. Install the [5G WWAN card](#).
4. Install the [SIM-card tray](#) (optional).
5. Follow the procedure in [After working inside your computer](#).

Display hinges

Removing the display hinges

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [5G WWAN card](#).
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).

About this task

The following images indicate the location of the display hinges and provide a visual representation of the removal procedure.

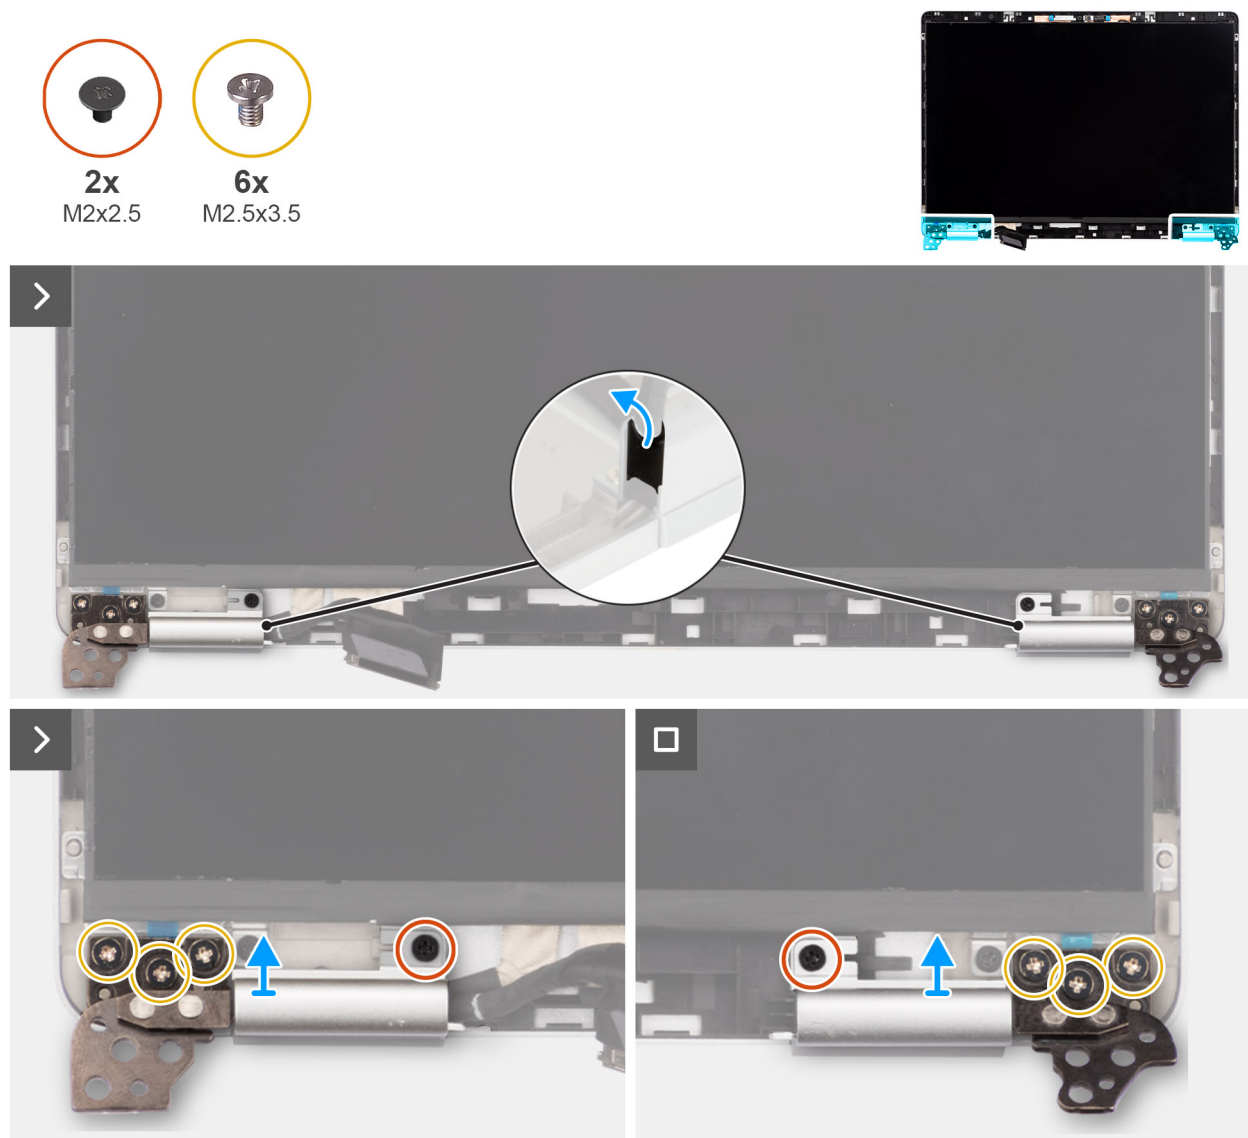


Figure 64. Removing the display hinges

Steps

1. Using a plastic scribe, pry the hinge rubber out of the left and right hinge caps.

CAUTION: Do not pull the display cable, Darwin cable, or the WWAN-antenna cables out of the hinge caps directly.

2. Remove the three screws (M2.5x3.5) that secure the right hinge to the display back cover.
3. Lift the hinge cap securing the hinges to the display back cover.
4. Lift the right hinge off the display back cover.
5. Remove the hinge cap securing the hinge to the display back cover.
6. Remove the three screws (M2.5x3.5) that secure the left hinge to the display back cover.
7. Lift and remove the hinge cap securing the hinges.
8. Lift the left hinge off the display back cover.

Installing the display hinges

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the display hinges and provide a visual representation of the installation procedure.

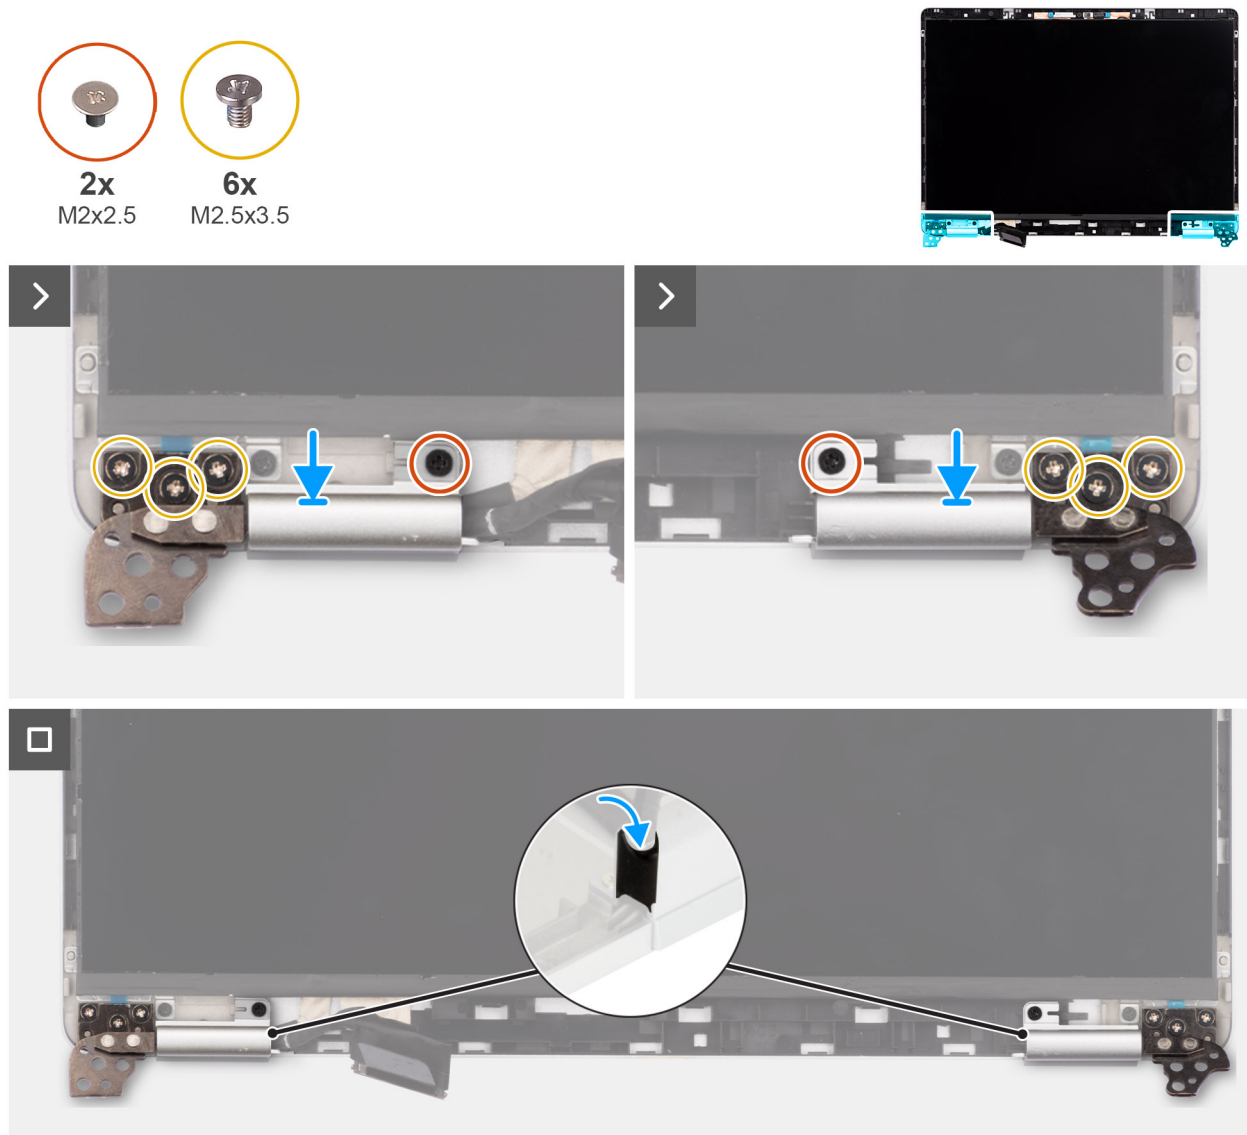


Figure 65. Installing the display hinges

Steps

1. Align the screw hole on the left hinge with the screw hole on the display back cover.
2. Replace the screw (M2.5x3.5) that secures the left hinge cap to the display back cover.
3. Lift and attach the hinge cap securing the hinges on the display back cover.
4. Align the screw hole on the right hinge with the screw hole on the display back cover.
5. Replace the screw (M2.5x3.5) that secures the right hinge to the display back cover.
6. Lift and attach the hinge cap securing the hinges on the display back cover.

Next steps

1. Install the [base cover](#).
2. Install the [display bezel](#).

3. Install the [display assembly](#)
4. Install the [5G WWAN card](#).
5. Install the [SIM-card tray](#) (optional).
6. Follow the procedure in [After working inside your computer](#).

Display panel

Removing the display panel

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#)
4. Remove the [5G WWAN card](#).
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display hinges](#).


About this task

The following images indicate the location of the display panel and provide a visual representation of the removal procedure.

Figure 66. Removing the Display panel



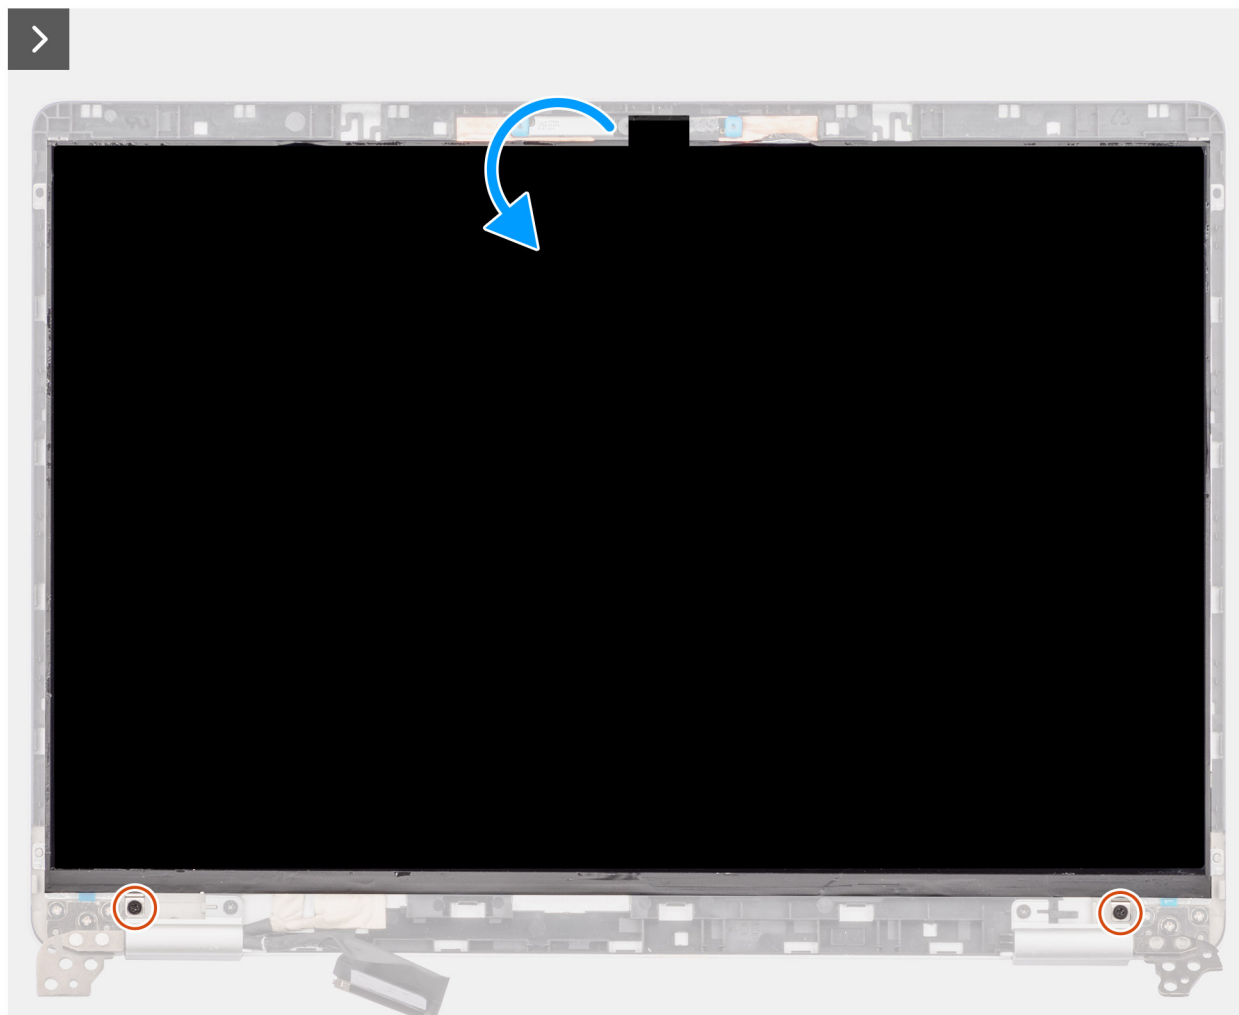2x
M2x2.5



Steps

1. Remove the two screws (M2x2.5) that secure the display panel to the display back cover.
2. Gently flip the display panel to access the display cable.
3. Peel the tape on the display cable connector.
4. Open the latch and disconnect the cable from the connector on the display panel.
5. Lift the display panel off the display back cover.

Installing the display panel

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the display panel and provide a visual representation of the installation procedure.



Figure 67. Installing the display panel



2x
M2x2.5

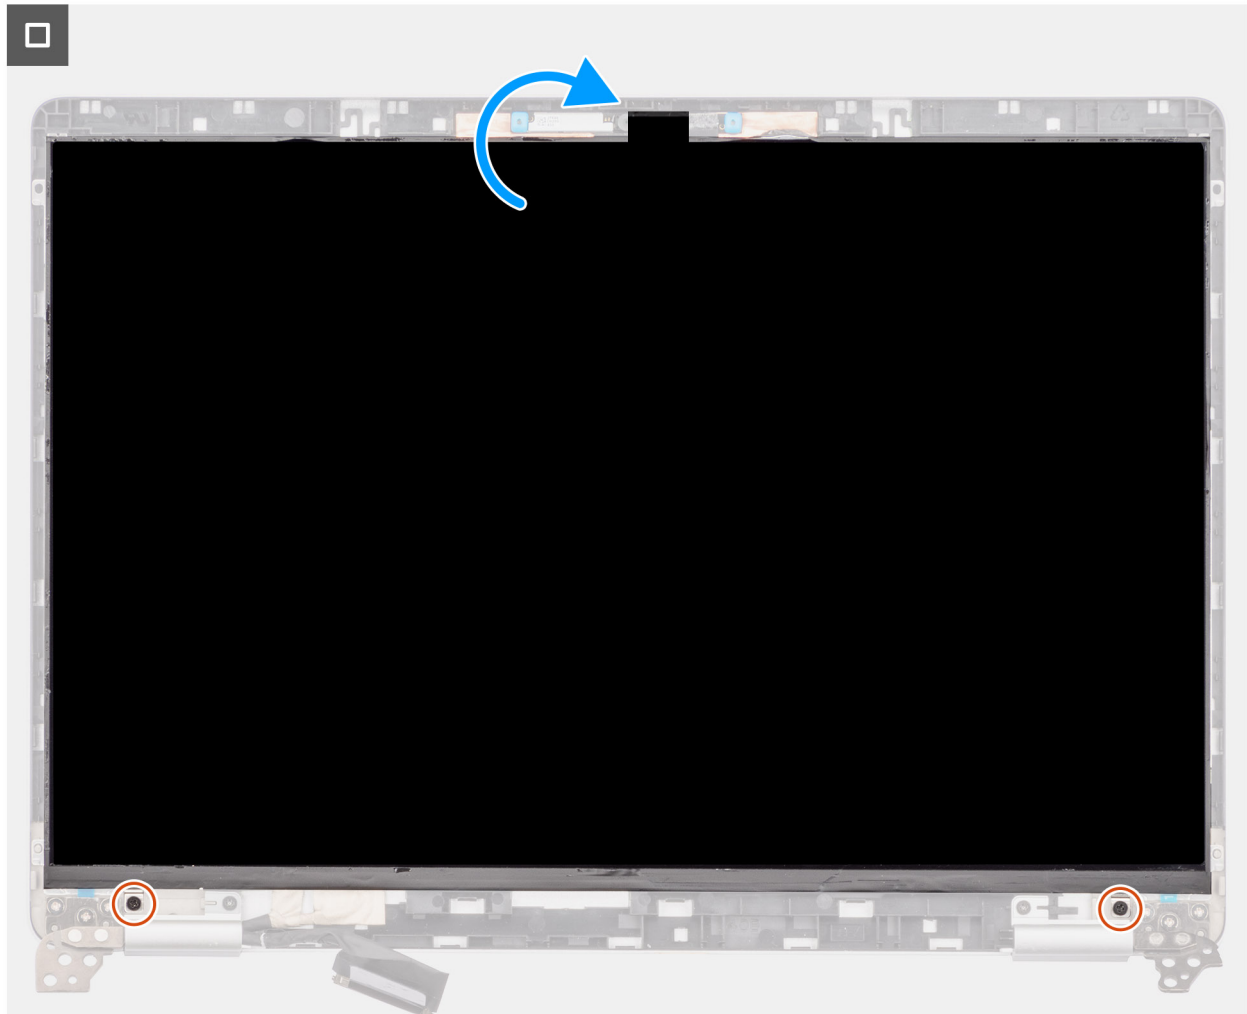


Figure 68. Installing the display panel

Steps

1. Connect the display cable to the connector on the display panel and close the latch.
2. Adhere the conductive tape to secure the display cable to the display panel.
3. Close the display panel and the display back cover to assemble them.
NOTE: Ensure that the display panel tabs are inserted into the slots on the display cover.
4. Replace the two screws (M1.6x1.4) to secure the display panel to the display back cover.

Next steps

1. Install the [base cover](#).
2. Install the [display hinges](#).
3. Install the [display bezel](#).
4. Install the [display assembly](#).
5. Install the [5G WWAN card](#).
6. Install the [SIM-card tray](#) (optional).

7. Follow the procedure in [After working inside your computer](#).

Camera module

Removing the camera module

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [5G WWAN card](#).
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display panel](#)
8. Remove the [display hinges](#).

About this task

The following images indicate the location of the camera module and provide a visual representation of the removal procedure.


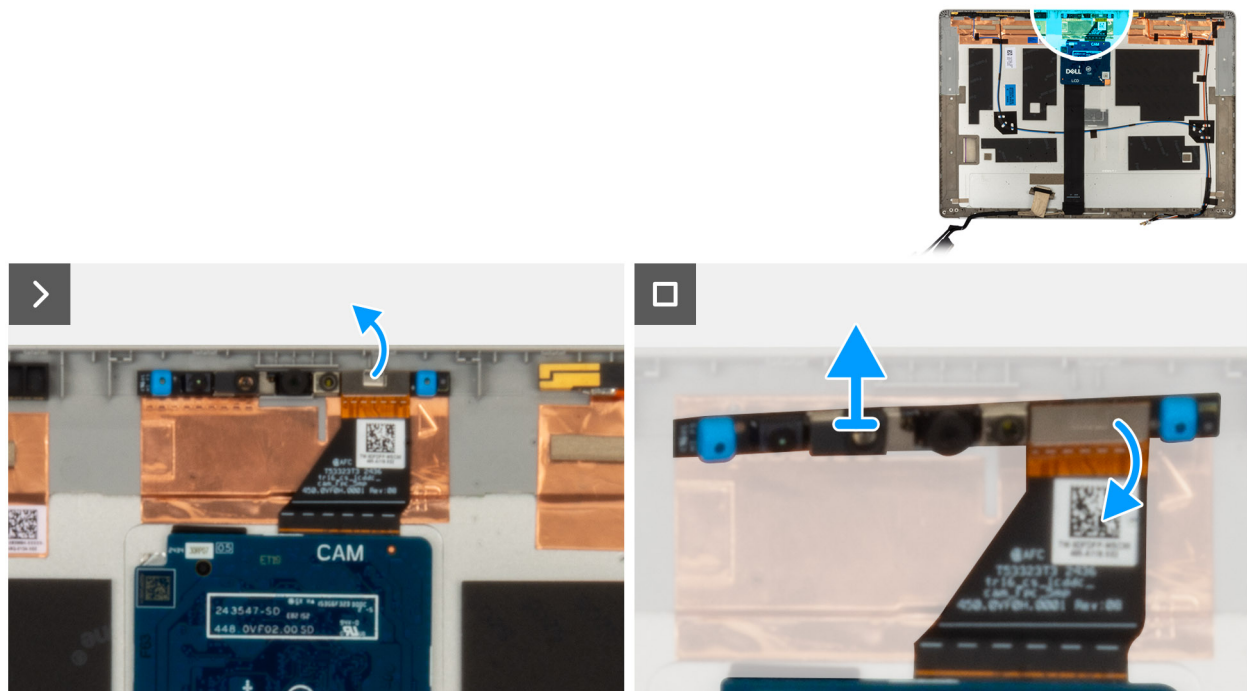


Figure 69. Removing the camera module

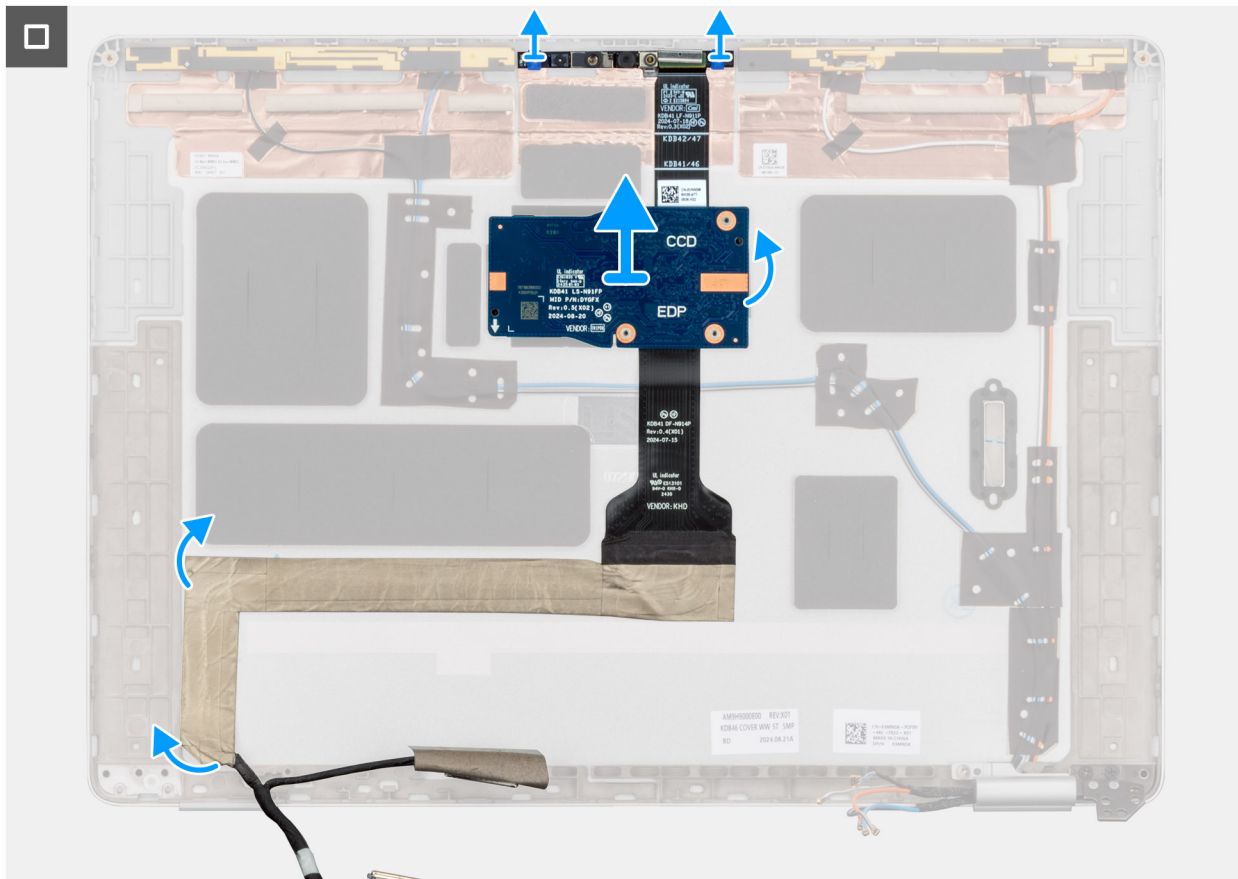

Steps

1. Disconnect the camera cable from the camera.
2. Carefully lift the camera module starting from the prying point at the bottom edge of the camera module.
3. Lift the camera module off the display back cover.

NOTE: While removing the IR/RGB camera module, pry up the module from the recess at its bottom side indicated by an arrow and then slide along the bottom side to detach it from the display back cover.

Installing the camera module

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the camera module and provide a visual representation of the installation procedure.

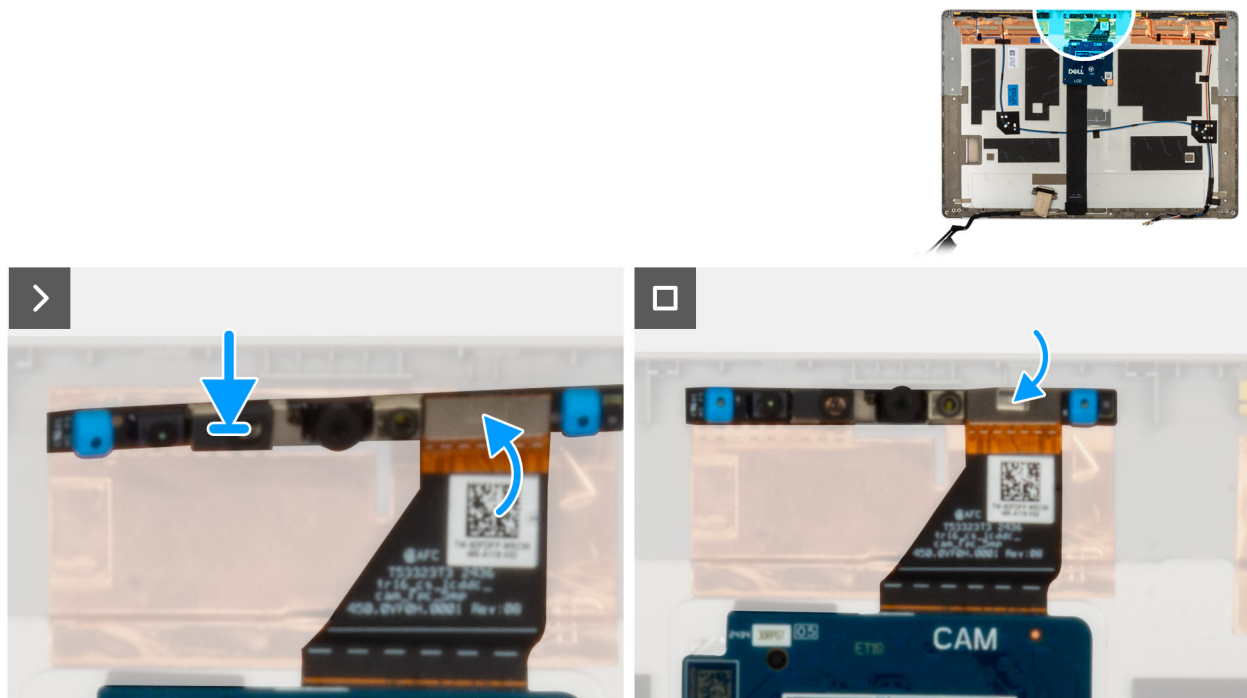


Figure 70. Installing the camera module

Steps

1. Connect the display cable one and the display cable two, if present.
2. Route the antenna cables and through the routing channels.
3. Align and place the camera module into the slot on the display back cover.
4. Connect the camera module cable to the connector on the camera module.
5. Adhere the tape that secure the camera cable to the camera.

Next steps

1. Install the [display panel](#).
2. Install the [display hinges](#).
3. Install the [display bezel](#).
4. Install the [display assembly](#).
5. Install the [5G WWAN card](#).
6. Install the [base cover](#).
7. Install the [SIM-card tray](#) (optional).
8. Follow the procedure in [After working inside your computer](#).

Display cable

Removing the display cable

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [5G WWAN card](#).

5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display hinges](#).
8. Remove the [display panel](#).

About this task

The following images indicate the location of the display cable and provide a visual representation of the removal procedure.

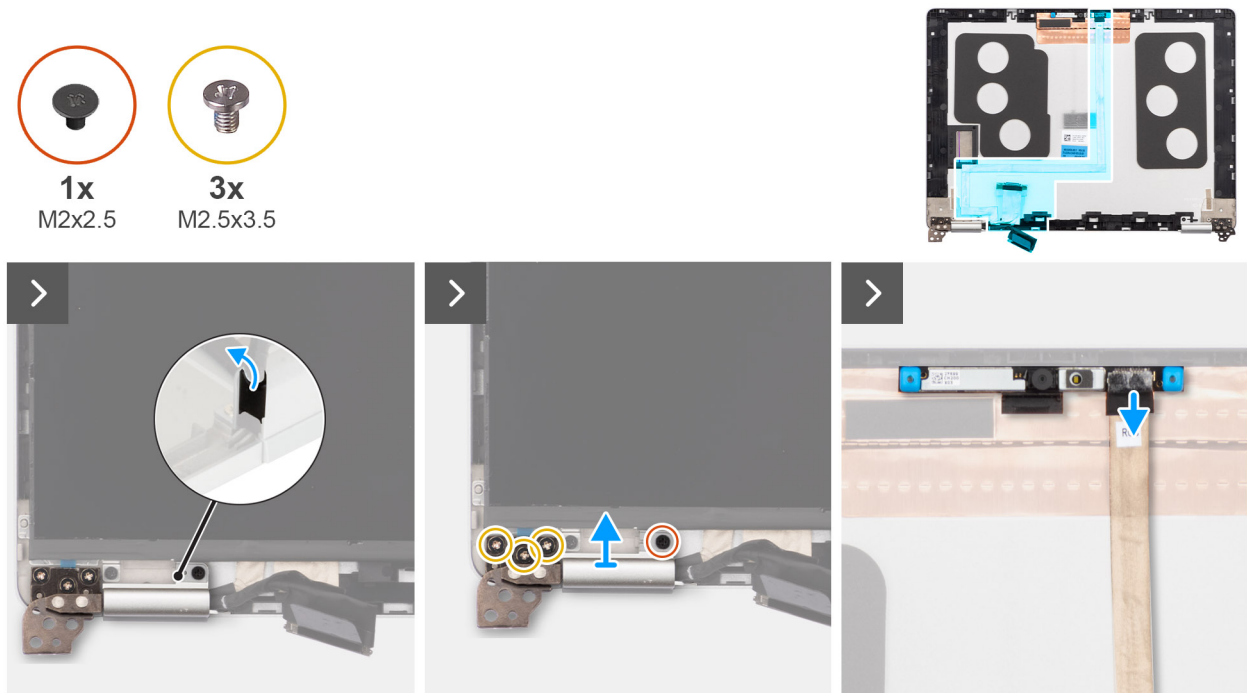


Figure 71. Removing the display cable

Steps

1. Peel the tape that secures the display cable to the camera module.
2. Disconnect the display cable from the camera module.
3. Peel the display cable to release it from adhesive and lift the display cable off the display back cover.

Installing the display cable

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the display cable and provide a visual representation of the installation procedure.



1x
M2x2.5



3x
M2.5x3.5

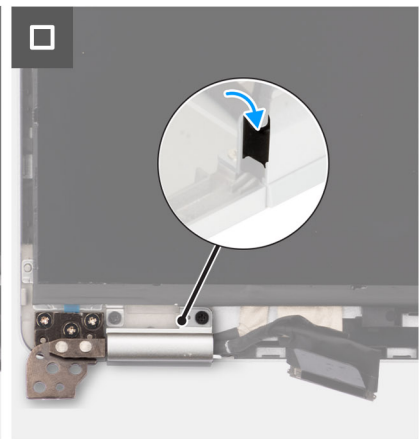
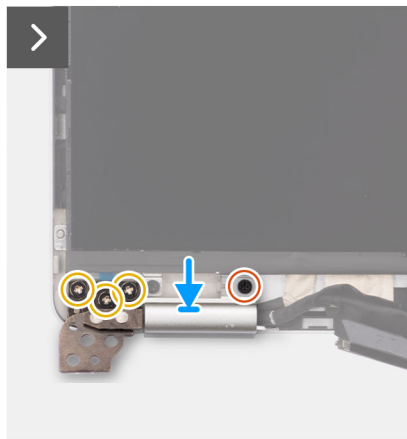
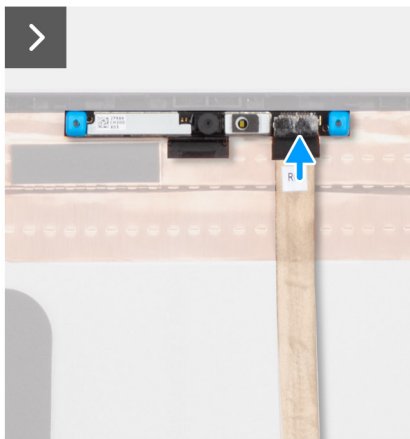
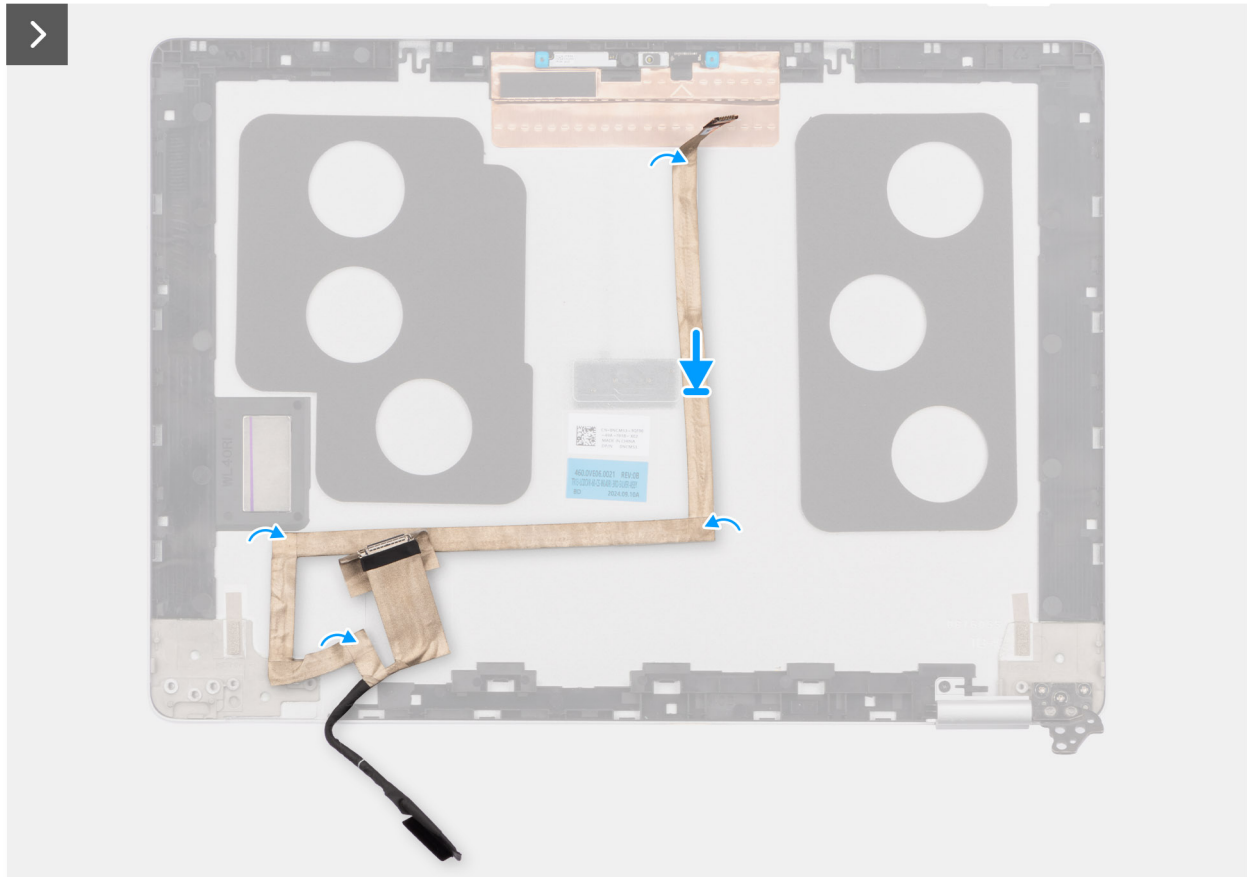
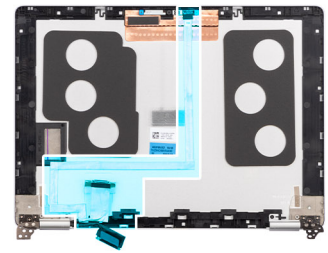


Figure 72. Installing the display cable

Steps

1. Connect the display cable to the connector on the camera module. .
2. Adhere the display cable to the camera module.
3. Adhere the tape that secures the display cable to the display back cover.

Next steps

1. Install the [display panel](#).
2. Install the [display hinges](#).
3. Install the [display bezel](#).
4. Install the [display assembly](#).
5. Install the [5G WWAN card](#).
6. Install the [base cover](#).
7. Install the [SIM-card tray](#) (optional).
8. Follow the procedure in [After working inside your computer](#).

Display back cover

Removing the display back cover

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [Before working inside your computer](#).
2. Remove the [SIM-card tray](#) (optional).
3. Remove the [base cover](#).
4. Remove the [5G WWAN card](#).
5. Remove the [display assembly](#).
6. Remove the [display bezel](#).
7. Remove the [display hinges](#).
8. Remove the [display panel](#).
9. Remove the [camera](#).
10. Remove the [display cable](#).

About this task

The following images show the display back cover and provide a visual representation of the removal procedure.

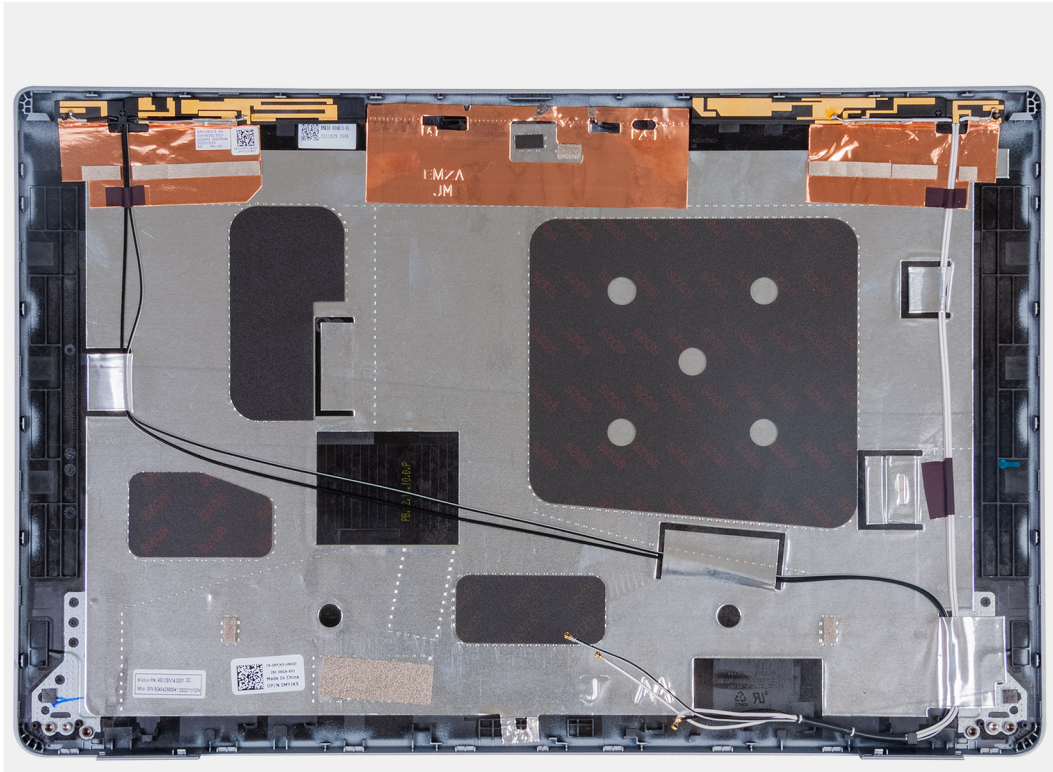


Figure 73. Removing the display back cover

Steps

After performing all the steps in prerequisites, you're left with display back cover.

Installing the display back cover

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation process.

About this task

The following images indicate the location of the display back cover and provide a visual representation of the installation procedure.

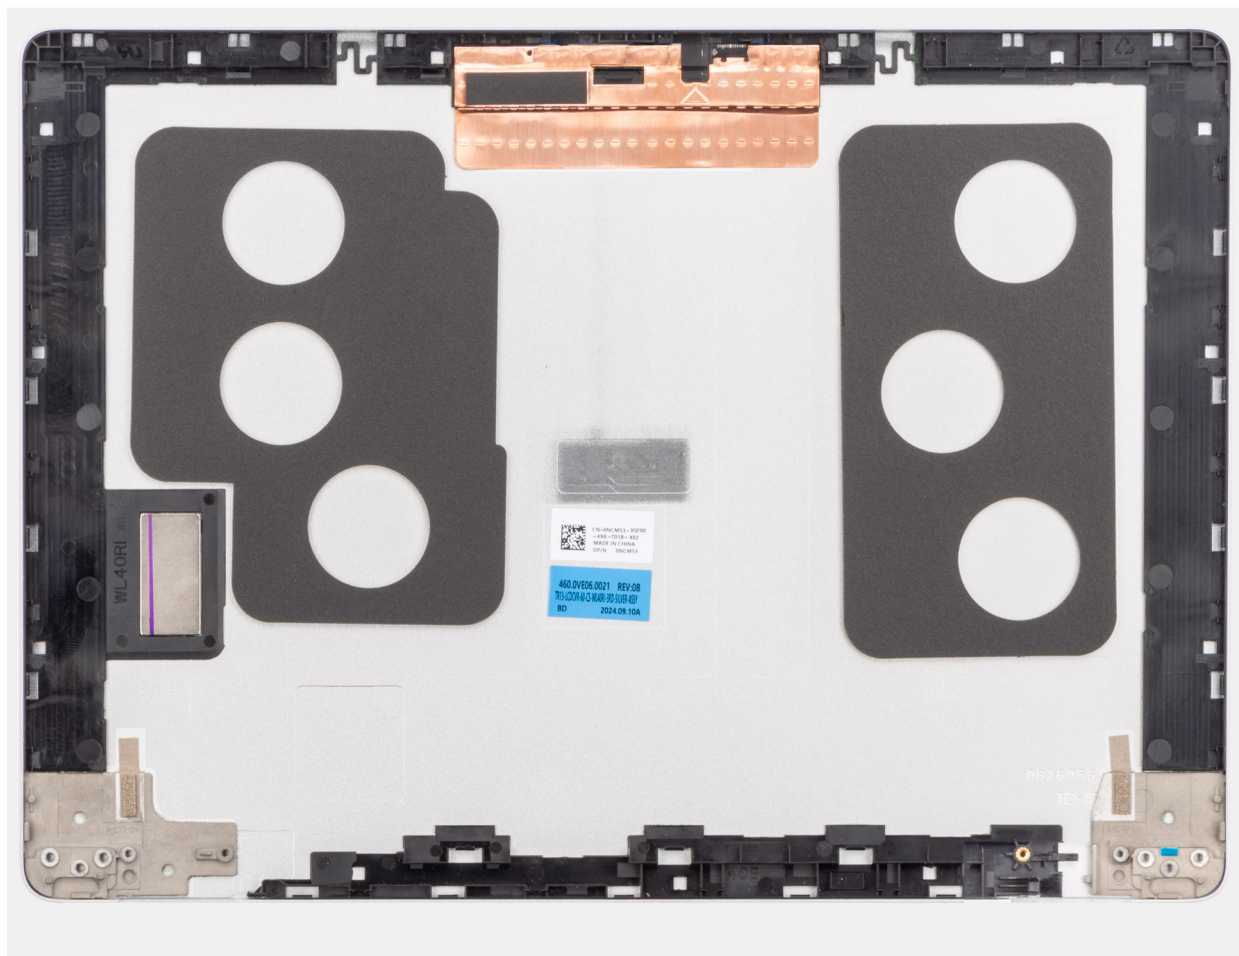


Figure 74. Installing the display back cover

Steps

Place the display back cover on a clean and flat surface.

Next steps

1. Install the [display cable](#).
2. Install the [camera](#).
3. Install the [display panel](#)
4. Install the [display hinges](#).
5. Install the [display bezel](#).
6. Install the [display assembly](#).
7. Install the [5G WWAN card](#).
8. Install the [base cover](#).
9. Install the [SIM card](#) (optional).
10. Follow the procedure in [After working inside your computer](#).


Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

Operating system

Your Dell Pro 13 Plus supports the following operating systems:


- Windows 11 Professional
- Windows 11 Home
- Ubuntu Linux 24.04

 **NOTE:** If you downgrade your computer from Windows 11 to Windows 10 22H2, Dell Technologies support will follow the Microsoft Windows 10 End of Support plan.

Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the Dell Knowledge Base article Drivers and Downloads FAQs [000123347](#).

BIOS Setup

 **CAUTION:** Certain changes can make your computer work incorrectly. Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

 **NOTE:** Depending on the computer and the installed devices, the options that are listed in this section may differ.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the capacity of the storage device.
- Change the system configuration information.
- Set or change user-selectable options such as the user password, enabling or disabling base devices, and configuring hard drive settings.

Entering BIOS Setup program

About this task

Turn on (or restart) your computer and press F2 immediately.

Navigation keys



 **NOTE:** For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

Table 32. Navigation keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follows the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer.

F12 One Time Boot menu


To enter the One Time Boot menu, turn on or restart your computer, and then press F12 immediately.

 **NOTE:** If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)

- STXXXX Drive (if available)

 **NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

View Advanced Setup options

About this task

Some BIOS Setup options are only visible by enabling **Advanced Setup** mode, which is disabled by default.

 **NOTE:** BIOS Setup options, including **Advanced Setup** options, are described in [System setup options](#).

To enable Advanced Setup


Steps

1. Enter BIOS Setup.
The Overview menu appears.
2. Click the **Advanced Setup** option to move it to the **ON** mode.
Advanced BIOS Setup options are visible.

View Service options

About this task

Service options are hidden by default and only visible by entering a hotkey command.

 **NOTE:** Service options are described in the **System setup options** section.

To view Service options:

Steps

1. Enter BIOS Setup.
The Overview menu appears.
2. Enter the hotkey combination **Ctrl +Alt + s** to view the **Service** options.
Service options are visible.

BIOS Setup options


 **NOTE:** Depending on your computer and its installed devices, the items that are listed in this section may or may not be displayed.

Table 33. BIOS Setup options—Overview menu

Overview	
Dell Pro 13 Plus	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.

Table 33. BIOS Setup options—Overview menu (continued)

Overview	
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the Express Service Code of the computer.
Ownership Tag	Displays the Ownership Tag of the computer.
Signed Firmware Update	Displays whether the Signed Firmware Update is enabled on your computer. By default, the Signed Firmware Update option is enabled.
Battery Information	
Primary	Displays the primary battery of the computer.
Battery Level	Displays the battery level of the computer.
Battery State	Displays the battery state of the computer.
Health	Displays the battery health of the computer.
AC Adapter	Displays whether an AC adapter is connected. If connected, displays the type of AC adapter that is connected.
Battery Life Type	Displays the battery life type.
Processor Information	
Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed.
Minimum Clock Speed	Displays the minimum processor clock speed.
Current Clock Speed	Displays the current processor clock speed.
Core Count	Displays the number of cores on the processor.
Processor ID	Displays the processor identification code.
Microcode Version	Displays the microcode version.
Intel Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable.
Intel vPro Technology	Displays the Intel vPro Technology.
Processor L2 Cache	Displays the L2 Cache.
Processor L3 Cache	Displays the L3 Cache.
Memory Information	
Memory Installed	Displays the total memory that is installed on the computer.
Memory Available	Displays the total memory available on the computer.
Memory Speed	Displays the memory speed.
Memory Channel Mode	Displays single or dual channel mode.
Memory Technology	Displays the technology that is used for the memory.
Devices Information	
Panel Type	Displays the type of display panel available on the computer.
Panel Revision	Displays the panel revision of the computer.
Video Controller	Displays the type of video controller available on the computer.
Video Memory	Displays the video memory information of the computer.
Wi-Fi Device	Displays the wireless device information of the computer.

Table 33. BIOS Setup options—Overview menu (continued)

Overview	
Native Resolution	Displays the native resolution of the computer.
Video BIOS Version	Displays the video BIOS version of the computer.
Audio Controller	Displays the audio controller information of the computer.
Bluetooth Device	Displays the Bluetooth device information of the computer.
Pass Through MAC Address	Displays the MAC address of the video pass-through.
Cellular Device	Displays the Cellular device information of the computer.

Table 34. BIOS Setup options—Boot Configuration menu




Boot Configuration	
Boot Sequence	
Boot Mode: UEFI only	Displays the boot mode of the computer.
Boot Sequence	Displays the boot sequence.
Secure Boot	Secure Boot is a method of guaranteeing the integrity of the boot path by performing additional validation of the operating system and PCI add-in cards. The computer stops booting to the operating system when a component is not authenticated during the boot process. Secure Boot can be enabled in BIOS setup or using management interfaces like Dell Command Configure, but can only be disabled from BIOS setup.
Enable Secure Boot	<p>Enables the computer to boot using only validated boot software.</p> <p>By default, the Enable Secure Boot option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Secure Boot option enabled to ensure that the UEFI firmware validates the operating system during the boot process.</p> <p> NOTE: For Secure Boot to be enabled, the computer is required to be in UEFI boot mode and the Enable Legacy Option ROMs option is required to be turned off.</p>
Secure Boot Mode	<p>Enables or disables the Secure Boot operation mode.</p> <p>By default, the Deployed Mode is selected.</p> <p> NOTE: Deployed Mode should be selected for normal operation of Secure Boot.</p>
Enable Microsoft UEFI CA	<p>When disabled, the UEFI CA is removed from the BIOS UEFI Secure Boot database.</p> <p> CAUTION: When disabled, the Microsoft UEFI CA can cause your system to not boot, computer graphics may not function, some devices may not function properly, and the computer could become unrecoverable.</p> <p>By default, the Enable Microsoft UEFI CA option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Enable Microsoft UEFI CA option enabled to ensure the broadest compatibility with devices and operating systems.</p>
Expert Key Management	
Enable Custom Mode	<p>Enables or disables the ability to modify the keys in the PK, KEK, db, and dbx security key databases to be modified.</p> <p>By default, the Enable Custom Mode option is disabled.</p>
Custom Mode Key Management	Selects the custom values for expert key management.

Table 34. BIOS Setup options—Boot Configuration menu (continued)

Boot Configuration	
By default, the PK option is selected.	

Table 35. BIOS Setup options—Integrated Devices menu



Integrated Devices	
Date/Time	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date format take effect immediately.
Time	Sets the computer time in HH/MM/SS 24-hour format. You can switch between a 12-hour and 24-hour clock. Changes to the time format take effect immediately.
Camera	
Enable Camera	<p>Enables the camera.</p> <p>By default, the Enable Camera option is enabled.</p> <p> NOTE: Depending on the configuration ordered, the camera setup option may not be available.</p>
Audio	
Enable Audio	<p>Enables all integrated audio controller.</p> <p>By default, all the options are enabled.</p>
Enable Microphone	<p>Enables the microphone.</p> <p>By default, the Enable Microphone option is enabled.</p> <p> NOTE: Depending on the configuration ordered, the microphone setup option may not be available.</p>
Enable Internal Speaker	<p>Enables the internal speaker.</p> <p>By default, the Enable Internal Speaker option is enabled.</p>
USB/Thunderbolt Configuration	
Enable USB Boot Support	<p>Enables booting from USB mass storage devices that are connected to external USB ports.</p> <p>By default, the Enable USB Boot Support option is enabled.</p>
Enable External USB Ports	<p>Enables the external USB ports.</p> <p>By default, the Enable External USB Ports option is enabled.</p>
Enable Thunderbolt Technology Support	
Enable Thunderbolt Technology Support	<p>Enables the associated ports and adapters for Thunderbolt Technology support.</p> <p>By default, the Enable Thunderbolt Technology Support option is enabled.</p>
Enable Thunderbolt Boot Support	
Enable Thunderbolt Boot Support	<p>Enables the Thunderbolt adapter-peripheral device and USB devices that are connected to the Thunderbolt adapter to be used during BIOS Preboot.</p> <p>By default, the Enable Thunderbolt Boot Support option is disabled.</p>
Enable Thunderbolt (and PCIe behind TBT) pre-boot modules	<p>Enables the PCIe devices that are connected through a Thunderbolt adapter to run the PCIe devices UEFI Option ROM (if present) during preboot.</p> <p>By default, the Enable Thunderbolt (and PCIe behind TBT) pre-boot modules option is disabled.</p>

Table 35. BIOS Setup options—Integrated Devices menu (continued)

Integrated Devices	
Disable USB4 PCIE Tunneling	Disables the USB4 PCIE Tunneling option. By default, the Disable USB4 PCIE Tunneling option is disabled.
Video/Power only on Type-C Ports	Enables or disables the Type-C port functionality to video or only power. By default, the Video/Power only on Type-C Ports option is disabled.
Type-C Dock	
Type-C Dock Override	Enables or disables to use connected Type-C Dell Dock to provide data stream with external USB ports disabled. When Type-C Dock override is enabled, the Video/Audio/LAN submenu is activated. By default, the Type-C Dock Override option is enabled.
Type-C Dock Audio	Enables or disables the usage of audio inputs and outputs from the connected Type-C Dell docking station. By default, the Type-C Dock Audio option is enabled.
Type-C Dock LAN	Enables or disables the usage of LAN on the external ports of the connected Type-C Dell docking station. By default, the Type-C Dock LAN option is enabled.
Miscellaneous Devices	
Enable Fingerprint Reader Device	Enables the Fingerprint Reader Device option. By default, the Enable Fingerprint Reader Device option is enabled.
Unobtrusive mode	Enables or disables the unobtrusive mode. When enabled, all system LEDs, LCD panel backlight and audio devices of the computer are turned off. By default, the Unobtrusive Mode option is disabled. <div> <i>i</i> NOTE: On computers with collaboration touchpad, the Collaboration Touchpad is disabled when the Unobtrusive Mode option is enabled. </div> <div> <i>i</i> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options. </div>

Table 36. BIOS Setup options—Storage menu

Storage	
SATA/NVMe Operation	
SATA/NVMe Operation	Sets the operating mode of the integrated SATA hard drive controller. By default, the AHCI/NVMe option is selected. The storage device is configured for AHCI/NVMe mode.
Storage Interface	
Port Enablement	Enables or disables the M.2 PCIe SSD option. By default, the M.2 PCIe SSD option is enabled.
Smart Reporting	Enables or disables the Smart reporting option. By default, the Smart Reporting option is disabled. <div> <i>i</i> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options. </div>
Drive Information	Displays the information of onboard drives.

Table 37. BIOS Setup options—Display menu

Display	
Display Brightness	
Brightness on battery power	<p>Enables to set the screen brightness when the computer is running on battery power.</p> <p>By default, the screen brightness is set to 50 when the computer is running on battery power.</p>
Brightness on AC power	<p>Enables to set the screen brightness when the computer is running on AC power.</p> <p>By default, the screen brightness is set to 100 when the computer is running on AC power.</p>
Touchscreen	<p>Enables or disables the touch screen option.</p> <p>By default, the Touchscreen option is enabled.</p>
Full Screen Logo	<p>Enables or disables the computer to display a full-screen logo, if the image matches screen resolution.</p> <p>By default, the Full Screen Logo option is disabled.</p>

Table 38. BIOS Setup options—Connection menu



Connection	
Wireless Device Enable	
WLAN	<p>Enables or disables the internal WLAN device.</p> <p>By default, the WLAN option enabled.</p>
WWAN/GPS	<p>Enables or disables the internal WWAN device. By default, the WWAN/GPS option is enabled.</p>
Bluetooth	<p>Enables or disables the internal Bluetooth device.</p> <p>By default, the Bluetooth option enabled.</p>
Contactless Smartcard/NFC	<p>Enables or disables the smartcard device.</p> <p>By default, the Contactless Smartcard/NFC option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>
Enable UEFI Network Stack	<p>Enables or disables the UEFI Network Stack and controls the onboard LAN Controller.</p> <p>By default, the Enable UEFI Network Stack option is enabled.</p>
Wireless Radio Control	
Control WLAN Radio	<p>Enables to sense the connection of the computer to a wired network and then disables the selected wireless radios (WLAN and/or WWAN). Upon disconnection from the wired network, the selected wireless radios are reenabled.</p> <p>By default, the Control WLAN Radio option is disabled.</p>
Control WWAN Radio	<p>Enables to sense the connection of the computer to a wired network and then disables the selected WWAN radios.</p> <p>By default, the Control WWAN Radio option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>
WWAN Bus Mode	

Table 38. BIOS Setup options—Connection menu (continued)




Connection	
Enable UEFI Bluetooth Stack	<p>Enables or disables the UEFI Bluetooth Stack and controls the onboard LAN Controller.</p> <p>By default, the Enable UEFI Bluetooth Stack option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>
HTTP(s) Boot Feature	
HTTP(s) Boot	<p>When enabled, supports HTTP(s) boot on the client BIOS, which offers wired or wireless and HTTP/HTTPS connection options.</p> <p> NOTE: To view this option, enable HTTP(s) Boot as described in View Advance Set up options.</p>
HTTP(s) Boot Modes	<p>In Auto Mode, the boot URL is obtained from the DHCP response; the boot URL specifies the HTTP Boot Server and location of the Network Boot Program (NBP) file. In Manual mode, the user enters the URL in the text box, which must start with <code>http://</code> or <code>https://</code> and end with the NBP file name.</p> <p>By default, the Control WWAN Radio option is disabled.</p> <p>By default, Auto Mode is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>

Table 39. BIOS Setup options—Power menu

Power	
Battery Configuration	<p>Enables or disables the computer to run on battery during peak power usage hours. Use the table Custom Charge Start and Custom Charge Stop, to prevent AC power usage between certain times of each day.</p> <p>By default, the Adaptive option is selected. Battery settings are adaptively optimized based on your typical battery usage pattern.</p>
Advanced Configuration	
Enable Advanced Battery Charge Configuration	<p>Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. When enabled, Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day.</p> <p>By default, the Enable Advanced Battery Charge Configuration option is disabled.</p>
Peak Shift	
Enable Peak Shift	<p>Enables the computer to run on battery during peak power usage hours.</p> <p>By default, the Enable Peak Shift option is disabled.</p>
Type-C Connector Power	
USB PowerShare	<p>Enables or disables the USB PowerShare on the computer.</p> <p>By default, the USB Powershare option is disabled.</p>
Thermal Management	<p>Enables or disables cooling of fan and manages processor heat to adjust the computer performance, noise, and temperature.</p> <p>By default, the Optimized option is selected. Standard setting for balanced performance, noise, and temperature.</p>
USB Wake Support	
Wake on Dell USB Type-C Dock	<p>When enabled, connecting a Dell USB Type-C Dock wakes the computer from Standby, Hibernate, and Power Off.</p>

Table 39. BIOS Setup options—Power menu (continued)


Power	
	By default, the Wake on Dell USB Type-C Dock option is enabled.
Block Sleep	<p>Enables or disables the computer from entering Sleep (S3) mode in the operating system.</p> <p>By default, the Block Sleep option is disabled.</p> <p> NOTE: When enabled, the computer does not go to Sleep, Intel Rapid Start is disabled automatically, and the operating system power option is blank if it was set to Sleep.</p>
Lid Switch	
Enable Lid Switch	<p>Enables or disables the Lid Switch.</p> <p>By default, the Enable Lid Switch option is enabled.</p>
Intel Speed Shift Technology	<p>Enables or disables the Intel Speed Shift Technology support. When enabled, the operating system selects the appropriate processor performance automatically.</p> <p>By default, the Intel Speed Shift Technology option is enabled.</p>

Table 40. BIOS Setup options—Security menu


Security	
Trusted Platform Module (TPM)	<p>The Trusted Platform Module (TPM) provides various cryptographic services which serve as the cornerstone for many platform security technologies. Trusted Platform Module (TPM) is a security device that stores computer-generated keys for encryption and features such as BitLocker, Virtual Secure Mode, remote Attestation.</p> <p>By default, the Trusted Platform Module (TPM) option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping Trusted Platform Module (TPM) enabled to allow these security technologies to fully function.</p> <p> NOTE: The options that are listed apply to computers with a discrete Trusted Platform Module (TPM) chip.</p>
TPM On	<p>Allows you to enable or disable TPM.</p> <p>By default, the TPM On option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping TPM On enabled to allow these security technologies to fully function.</p>
Physical Presence Interface (PPI) Bypass for Enable Commands	<p>The Physical Presence Interface (PPI) Bypass options can be used to allow the operating system to manage certain aspects of the TPM. If these options are enabled, you are not prompted to confirm certain changes to the TPM configuration.</p> <p>By default, the PPI Bypass for Enable Commands option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the PPI Bypass for Enable Commands option enabled.</p>
Physical Presence Interface (PPI) Bypass for Disable Commands	<p>By default, the PPI Bypass for Disable Commands option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the PPI Bypass for Disable Commands option disabled.</p>
Physical Presence Interface (PPI) Bypass for Clear Commands	<p>By default, the PPI Bypass for Clear Commands option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the PPI Bypass for Clear Commands option disabled.</p>

Table 40. BIOS Setup options—Security menu (continued)

Security	
Attestation Enable	<p>The Attestation Enable option controls the endorsement hierarchy of TPM. Disabling the Attestation Enable option prevents TPM from being used to digitally sign certificates.</p> <p>By default, the Attestation Enable option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Attestation Enable option enabled.</p> <p>NOTE: When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p>
Key Storage Enable	<p>The Key Storage Enable option controls the storage hierarchy of TPM, which is used to store digital keys. Disabling the Key Storage Enable option restricts the ability of TPM to store owner's data.</p> <p>By default, the Key Storage Enable option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Key Storage Enable option enabled.</p> <p>NOTE: When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p>
Clear	<p>When enabled, the Clear option clears information that is stored in the TPM after exiting the computer's BIOS. This option returns to the disabled state when the computer restarts.</p> <p>By default, the Clear option is disabled.</p> <p>Dell Technologies recommends enabling the Clear option only when TPM data is required to be cleared.</p>
Intel Total Memory Encryption	<p>Enables or disables the processor's memory encryption feature.</p> <p>By default, the Intel Total Memory Encryption option is disabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>
Chassis intrusion	
Chassis Intrusion	<p>The chassis intrusion detection enables a physical switch that triggers an event when the computer cover is opened.</p> <p>When set to Enabled, a notification is displayed on the next boot and the event is logged in the BIOS Events log.</p> <p>When set to On-Silent, the event is logged in the BIOS Events log, but no notification is displayed.</p> <p>When set to Disabled, no notification is displayed and no event is logged in the BIOS Events log.</p> <p>By default, the Chassis Intrusion Detection option is On-Silent.</p> <p>For additional security, Dell Technologies recommends keeping the Chassis Intrusion Detection option Enabled.</p>
Block Boot Until Cleared	<p>Enables or disables the Block Boot Until Cleared option.</p> <p>By default, the Block Boot Until Cleared option is Disabled.</p> <p>NOTE: When enabled, the computer does not boot until the chassis intrusion is cleared. If the administrator password is set, Setup has to be unlocked before the warning can be cleared.</p>
SMM Security Mitigation	<p>Enables or disables additional UEFI SMM Security Mitigation protections. This option uses the Windows SMM Security Mitigations Table (WSMT) to confirm to</p>

Table 40. BIOS Setup options—Security menu (continued)




Security	
	<p>the operating system that security best practices have been implemented by the UEFI firmware.</p> <p>By default, the SMM Security Mitigation option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the SMM Security Mitigation option enabled unless you have a specific application which is not compatible.</p> <p> NOTE: This feature may cause compatibility issues or loss of functionality with some legacy tools and applications.</p>
Data Wipe on Next Boot	
Start Data Wipe	<p>Data Wipe is a secure wipe operation that deletes information from a storage device.</p> <p> CAUTION: The secure Data Wipe operation deletes information in a way that it cannot be reconstructed.</p> <p>Commands such as delete and format in the operating system may remove files from showing up in the file system. However, they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and the data can no longer be recovered.</p> <p>When enabled, the data wipe option provides prompts to wipe any storage devices that are connected to the computer on the next boot.</p> <p>By default, the Start Data Wipe option is disabled.</p>
Absolute	<p>Absolute Software provides various cyber security solutions, some requiring software preloaded on Dell computers and integrated into the BIOS. To use these features, you must enable the Absolute BIOS setting and contact Absolute for configuration and activation.</p> <p>By default, the Absolute option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Absolute option enabled.</p> <p> NOTE: When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS setup screen.</p>
UEFI Boot Path Security	<p>Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>By default, the Always Except Internal HDD option is enabled.</p>
Authenticated BIOS Interface	
Enable Authenticated BIOS Interface	<p>Allows the administrator to control access to BIOS configuration through an authenticated interface. When enabled, this option ensures that BIOS configuration changes are secured by authentication.</p> <p>By default, the Enable Authenticated BIOS Interface option is disabled.</p>
Clear Certificate Store	<p>Allows the administrator to delete all certificates stored in the Key Management System (KMS). When enabled, this option will remove all certificates, which may be necessary for security purposes or if the certificates have expired or are no longer valid.</p> <p>By default, the Clear Certificate Store option is disabled.</p>
Legacy Manageability Interface Access	<p>Allows the administrator to control the access to BIOS configuration through the Legacy Manageability Interface option. When enabled, this prevents the BIOS Administrator password-based manageability tools from running, prevents some</p>

Table 40. BIOS Setup options—Security menu (continued)


Security	
	<p>Dell software applications from reading configuration settings, and/or prevents changes to the BIOS configuration settings.</p> <p>When enabled, this option only supports the Authenticated BIOS Manageability Interface (ABI) for managing the BIOS configuration changes. To support this feature, ABI must be enabled and provisioned.</p> <p>When set to Enabled, the Legacy Manageability Interface can be used to read and change BIOS configuration settings.</p> <p>When set to Read-Only, BIOS configuration settings can be read, but cannot be changed through the Legacy Manageability Interface.</p> <p>When set to Disabled, the Legacy Manageability Interface is disabled. BIOS configuration reads and writes are blocked.</p>
Firmware Device Tamper Detection	<p>Allows you to control the firmware device tamper detection feature. This feature notifies the user when the firmware device is tampered. When enabled, a screen warning messages are displayed on the computer and a tamper detection event is logged in the BIOS Events log. The computer fails to reboot until the event is cleared.</p> <p>By default, the Firmware Device Tamper Detection option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Firmware Device Tamper Detection option enabled.</p>
Clear Firmware Device Tamper Detection	<p>Allows you to clear the events that are logged when tampering of firmware device is detected.</p> <p>By default, the Clear Firmware Device Tamper Detection option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>
Pluton Security Processor	<p>Pluton Security Processor is used by the operating system to provide security services such as Key Storage Provider functionality. When enabled, the Pluton Security Processor services are available to the operating system. Disabling the Pluton Security Processor might limit some operating system security services and impact functionality.</p> <p>By default, the Pluton Security Processor option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Pluton Security Processor option enabled.</p>

Table 41. BIOS Setup options—Passwords menu

Passwords	
Administrator Password	<p>The Administrator Password prevents unauthorized access to the BIOS Setup options. Once the administrator password is set, the BIOS setup options can only be modified after providing the correct password.</p> <p>The following rules and dependencies apply to the Administrator Password -</p> <ul style="list-style-type: none"> • The administrator password cannot be set if computer and/or internal storage passwords are previously set. • The administrator password can be used in place of the computer and/or internal storage passwords. • When set, the administrator password must be provided during a firmware update. • Clearing the administrator password also clears the computer password (if set). <p>Dell Technologies recommends using an administrator password to prevent unauthorized changes to BIOS setup options.</p>

Table 41. BIOS Setup options—Passwords menu (continued)


Passwords	
System Password	<p>The System Password prevents the computer from booting to an operating system without entering the correct password.</p> <p>The following rules and dependencies apply when the System Password is used -</p> <ul style="list-style-type: none"> • The computer shuts down when idle for approximately 10 minutes at the computer password prompt. • The computer shuts down after three incorrect attempts to enter the computer password. • The computer shuts down when the Esc key is pressed at the System Password prompt. • The computer password is not prompted when the computer resumes from standby mode. <p>Dell Technologies recommends using the computer password in situations where it is likely that a computer may be lost or stolen.</p>
M.2 PCIe SSD-0	<p>The hard drive password can be set to prevent unauthorized access of the data stored on the solid-state drive. The computer prompts for the hard drive password during boot in order to unlock the drive. A password-secured hard drive stays locked even when removed from the computer or placed into another computer. It prevents an attacker from accessing data on the drive without authorization.</p> <p>The following rules and dependencies apply when the Hard Drive Password or M.2 PCIe SSD-0 Password option is used.</p> <ul style="list-style-type: none"> • The hard drive password option cannot be accessed when the hard drive is disabled in the BIOS Setup. • The computer shuts down when idle for approximately 10 minutes at the hard drive password prompt. • The computer shuts down after three incorrect attempts to enter the hard drive password and treats the hard drive as not available. • The hard drive does not accept password unlock attempts after five incorrect attempts to enter the hard drive password from the BIOS Setup. The hard drive password must be reset for the new password unlock attempts. • The computer treats the hard drive as not available when the Esc key is pressed at the hard drive password prompt. • The hard drive password is not prompted when the computer resumes from standby mode. When the hard drive is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode. • If the system and hard drive passwords are set to the same value, the hard drive unlocks after the correct system password is entered. <p>Dell Technologies recommends using a hard drive password to protect unauthorized data access.</p>
Password Configuration	<p>The Password configuration page includes several options for changing the requirements of BIOS passwords. You can modify the minimum and maximum length of the passwords and require passwords to contain certain character classes (upper case, lower case, digit, special character).</p> <p>Dell Technologies recommends setting the minimum password length to at least eight characters.</p>
Password Bypass	<p>The Password Bypass option allows the computer to reboot from the operating system without entering the computer or hard drive password. If the computer has already booted to the operating system, it is presumed that the user has already entered the correct computer or hard drive password.</p> <p> NOTE: This option does not remove the requirement to enter the password after shutting down.</p> <p>By default, the Password Bypass option is disabled.</p>

Table 41. BIOS Setup options—Passwords menu (continued)

Passwords	
	For additional security, Dell Technologies recommends keeping the Password Bypass option enabled.
Password Changes	
Admin Setup Lockout	<p>The Admin Setup Lockout option prevents an end user from even viewing the BIOS setup configuration without first entering the administrator password (if set).</p> <p>By default, the Admin Setup Lockout option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Admin Setup Lockout option disabled.</p>
Master Password Lockout	
Enable Master Password Lockout	<p>The Master Password Lockout setting allows you to disable the Recovery Password feature. If the computer, administrator, or hard drive password is forgotten, the computer becomes unusable.</p> <p>NOTE: When the owner password is set, the Master Password Lockout option is not available.</p> <p>NOTE: When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed.</p> <p>By default, the Enable Master Password Lockout option is disabled.</p> <p>Dell does not recommend enabling the Master Password Lockout unless you have implemented your own password recovery computer.</p>
Allow Non-Admin PSID Revert	<p>The Allow Non-Admin PSID Revert option allows a user to clear the hard drive password without entering the BIOS Admin Password. When an Admin Password is set, the ability to enter the PSID is protected by requiring authentication with the Admin Password. If this option is enabled, any user can clear the drive without entering the Admin Password.</p> <p>By default, the Enable Allow Non-Admin PSID Revert option is disabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>

Table 42. BIOS Setup options—Update, Recovery menu

Update, Recovery	
UEFI Capsule Firmware Updates	
Enable UEFI Capsule Firmware Updates	<p>Enables or disables BIOS updates through UEFI capsule update packages.</p> <p>NOTE: Disabling this option blocks the BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS).</p> <p>By default, the Enable UEFI Capsule Firmware Updates option is enabled.</p>
BIOS Recovery from Hard Drive	
	<p>Enables or disables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.</p> <p>By default, the BIOS Recovery from Hard Drive option is enabled.</p> <p>NOTE: BIOS Recovery from Hard Drive is not available for self-encrypting drives (SED).</p> <p>NOTE: BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p>
BIOS Downgrade	

Table 42. BIOS Setup options—Update, Recovery menu (continued)

Update, Recovery	
Allow BIOS Downgrade	Controls flashing of the computer firmware to previous revisions. By default, the Allow BIOS Downgrade option is enabled.
SupportAssist OS Recovery	Enables or disables the boot flow for SupportAssist OS Recovery tool in the event of certain computer errors. By default, the SupportAssist OS Recovery option is enabled.
BIOSConnect	Enables or disables cloud Service operating system recovery if the main operating system fails to boot with the number of failures equal to or greater than the value specified by the Auto OS Recovery Threshold setup option and local Service operating system does not boot or is not installed. By default, the BIOSConnect option is enabled.
Dell Auto OS Recovery Threshold	Allows you to control the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery Tool. By default, the Dell Auto OS Recovery Threshold value is set to 2.

Table 43. BIOS Setup options—System Management menu





System Management	
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Creates a computer Asset Tag that can be used by an IT administrator to uniquely identify a particular computer.  NOTE: Once set in BIOS, the Asset Tag cannot be changed.
AC Behavior	
Wake on AC	Enables or disables the computer to turn on and go to boot when AC power is supplied to the computer. By default, the Wake on AC option is disabled.
Wake on LAN	Enables or disables the computer to turn on by a special LAN signal. By default, the Wake on LAN option is disabled.
Auto On Time	Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days. By default, the Auto On Time option is disabled.
Intel AMT Capability	Configure Intel Active Management Technology (AMT) options, which can be enabled, disabled, or restricted.  NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options .
First Power On Date	
Diagnostics	Enable or disable the option for applications running in the operating system to run with preboot diagnostics on subsequent boots.  NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options .
Power-on-Self-Test Automatic Recovery	Enable or disable the automatic recovery of the computer from no power or no-POST failure by applying mitigation steps. By default, the Power-On-Self-Test Automatic Recovery option is enabled.  NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options .

Table 44. BIOS Setup options—Keyboard menu

Keyboard	
Fn Lock Options	<p>Enables or disables the Fn Lock option.</p> <p>By default, the Fn Lock option is enabled.</p>
Lock Mode	<p>By default, the Lock Mode Secondary option is enabled. With this option, the F1-F12 keys scan the code for their secondary functions.</p>
Keyboard Illumination	<p>Configures the operating mode of the keyboard illumination feature.</p> <p>By default, the Dim option is selected. Enables the keyboard illumination feature at 100% brightness level.</p>
Keyboard Backlight Timeout on AC	<p>Sets the timeout value for the keyboard backlight when an AC adapter is connected to the computer.</p> <p>By default, the 10 seconds option is selected.</p>
Keyboard Backlight Timeout on Battery	<p>Sets the timeout value for the keyboard backlight when the computer is running only on the battery power. The keyboard backlight timeout value is only effective when the backlight is enabled.</p> <p>By default, the 10 seconds option is selected.</p>
Device Configuration HotKey Access	<p>Allows you to control whether you can access device configuration screens through hotkeys during computer startup.</p> <p>By default, the Device Configuration HotKey Access option is enabled.</p> <p>NOTE: This setting controls only the Intel RAID (CTRL+I), MEBX (CTRL+P), and LSI RAID (CTRL+C) Option ROMs. Other preboot Option ROMs, which support entry using a key sequence, are not affected by this setting.</p>

Table 45. BIOS Setup options—Pre-boot Behavior menu

Preboot Behavior	
Adapter Warnings	
Enable Dock Warning Messages	<p>Enables the warning messages during boot when the adapters with less power capacity are detected.</p> <p>By default, the Enable Dock Warning Messages option is enabled.</p>
Warnings and Errors	<p>Enables or disables the action to be taken when a warning or error is encountered.</p> <p>By default, the Prompt on Warnings and Errors option is selected.</p> <p>NOTE: Errors deemed critical to the operation of the computer hardware stop the functioning of the computer.</p>
Extend BIOS POST Time	<p>Sets the BIOS POST (Power-On Self-Test) load time.</p> <p>By default, the 0 seconds option is selected.</p>
MAC Address Pass-Through	<p>Replaces the external NIC MAC address (in a supported dock or dongle) with the selected MAC address from the computer.</p> <p>By default, the System Unique MAC Address option is selected.</p>
Sign of Life	
Ownership tag with Logo	<p>Display Ownership tag with Logo.</p> <p>By default, the Ownership tag with Logo option is enabled.</p>
Early Keyboard Backlight	<p>Keyboard Backlight Sign of Life.</p> <p>By default, the Early Keyboard Backlight option is enabled.</p>

Table 46. BIOS Setup options—Virtualization menu






Virtualization Support	
Intel Virtualization Technology	
Enable Intel Virtualization Technology (VT)	<p>When enabled, the computer can run a Virtual Machine Monitor (VMM).</p> <p>By default, the Enable Intel Virtualization Technology (VT) option is enabled.</p>
VT for Direct I/O	
Enable Intel VT for Direct I/O	<p>When enabled, the computer can perform Virtualization Technology for Direct I/O (VT-d). VT-d is an Intel method that provides virtualization for memory map I/O.</p> <p>By default, the Enable Intel VT for Direct I/O option is enabled.</p>
Intel Trusted Execution Technology (TXT)	<p>Intel Trusted Execution Technology (TXT) is a set of hardware extensions to Intel processors and chipsets. It provides a hardware-based root of trust to ensure that a platform boots with a known good configuration of firmware, BIOS, virtual machine monitor, and operating system. The following must be enabled in order to enable Intel TXT -</p> <ul style="list-style-type: none"> • Intel Virtualization Technology - X • Intel Virtualization Technology - Direct <p>By default, the Intel Trusted Execution Technology (TXT) option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Intel Trusted Execution Technology (TXT) option enabled.</p>
DMA Protection	
Enable Pre-Boot DMA Support	<p>Allows you to control the Pre-Boot DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system.</p> <p> NOTE: This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the Enable Pre-Boot DMA Support option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Enable Pre-Boot DMA Support option enabled.</p> <p> NOTE: This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p>
Enable OS Kernel DMA Support	<p>Allows you to control the Kernel DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. For operating systems that support DMA protection, this setting indicates to the operating system that the BIOS supports the feature.</p> <p> NOTE: This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the Enable OS Kernel DMA Support option is enabled.</p> <p> NOTE: This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p>
Internal Port DMA Compatibility Mode	<p>Allows you to control the Internal Port DMA Compatibility for both internal and external ports.</p> <p>By default, the Internal Port DMA Compatibility Mode option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>

Table 47. BIOS Setup options—Performance menu

Performance	
Multi-Core Support	
Active Multiple Performance Cores (P-Cores) Select	<p>Allows to change the number of Atom cores available to the operating system. The default value is set to the maximum number of cores.</p> <p>By default, the All Cores option is selected.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>
Intel SpeedStep	
Enable Intel SpeedStep Technology	<p>Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production.</p> <p>By default, the Enable Intel SpeedStep Technology option is enabled.</p> <p>NOTE: To view this option, enable Service options as described in View Advance Set up options.</p>
C-State Control	
Enable C-State Control	<p>Enables or disables the ability of the CPU to enter and exit low-power state. When disabled, it disables all C-states. When enabled, it enables all C-states that the chipset or platform allows.</p> <p>By default, the Enable C-State Control option is enabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>
Intel Turbo Boost Technology	
Enable Intel Turbo Boost Technology	<p>Enables or disables the Intel TurboBoost mode of the processor. When enabled, the Intel TurboBoost driver increases the performance of the CPU or graphics processor.</p> <p>By default, the Enable Intel Turbo Boost Technology option is enabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advance Set up options.</p>


Table 48. BIOS Setup options—System Logs menu

System Logs	
BIOS Event Log	
Clear BIOS Event Log	<p>Allows you to select option to keep or clear BIOS events logs.</p> <p>By default, the Keep Log option is selected.</p>
Thermal Event Log	
Clear Thermal Event Log	<p>Allows you to select option to keep or clear thermal events logs.</p> <p>By default, the Keep Log option is selected.</p>
Power Event Log	
Clear Power Event Log	<p>Allows you to select option to keep or clear power events logs.</p> <p>By default, the Keep Log option is selected.</p>


Updating the BIOS

Updating the BIOS in Windows

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, see the Knowledge Base Resource [updating the BIOS on Dell systems with BitLocker enabled](#).

Steps


1. Go to [Dell Support Site](#).
2. Go to **Identify your product or search support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.
 **NOTE:** If you do not have the Service Tag, use the SupportAssist to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.
For more information, search in the Knowledge Base Resource at [Dell Support Site](#).

Updating the BIOS in Linux and Ubuntu


To update the system BIOS on a computer that is installed with Linux or Ubuntu, see the knowledge base article [000131486](#) at [Dell Support Site](#).

Updating the BIOS using the USB drive in Windows

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the BitLocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to proceed, and the computer displays a prompt for the recovery key on each reboot. Failure to provide the recovery key can result in data loss or an operating system reinstall. For more information, see the Knowledge Base Resource [updating the BIOS on Dell systems with BitLocker enabled](#).

Steps


1. Go to [Dell Support Site](#).
2. Go to **Identify your product or search support**. In the box, enter the product identifier, model, service request or describe what you are looking for, and then click **Search**.
 **NOTE:** If you do not have the Service Tag, use the SupportAssist to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.

6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. Create a bootable USB drive. For more information, search in the Knowledge Base Resource at [Dell Support Site](#).
8. Copy the BIOS setup program file to the bootable USB drive.
9. Connect the bootable USB drive to the computer that needs the BIOS update.
10. Restart the computer and press **F12**.
11. Select the USB drive from the **One Time Boot Menu**.
12. Type the BIOS setup program filename and press **Enter**.
The **BIOS Update Utility** appears.
13. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS from the One-Time boot menu

You can run the BIOS flash update file from Windows using a bootable USB drive or you can also update the BIOS from the One-Time boot menu on the computer. To update your computers BIOS, copy the BIOS XXXX.exe file onto a USB drive formatted with the FAT32 file system. Then, restart your computer and boot from the USB drive using the One-Time Boot Menu.

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [Dell Support Site](#).

BIOS Update

To confirm if the BIOS Flash Update is listed as a boot option, you can boot your computer to the **One Time Boot** Menu. If the option is listed, then the BIOS can be updated using this method.

To update your BIOS from the One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (the drive does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter must be connected to the computer
- A functional computer battery to flash the BIOS

Perform the following steps to update the BIOS from the One-Time boot menu:

 **CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

Steps

1. Turn off the computer, insert the USB drive that contains the BIOS flash update file.
2. Turn on the computer and press **F12** to access the **One Time Boot** Menu. Select **BIOS Update** using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select the external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS flash update is completed.

System and setup password

 **CAUTION:** The password features provide a basic level of security for the data on your computer.



 **CAUTION:** Ensure that your computer is locked when it is not in use. Anyone can access the data that is stored on your computer, when left unattended.

Table 49. System and setup password

Password type	Description
System password	Password that you must enter to boot to your operating system.
Setup password	Password that you must enter to access and change the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **NOTE:** The System and setup password feature is disabled by default.

Assigning a System Setup password

Prerequisites

You can assign a new System or Admin Password only when the status is set to **Not Set**. To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

Steps


1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to create the system password:
 - Password can be up to 32 characters.
 - Password must contain at least one special character: "(! " # \$ % & ' * + , - . / : ; < = > ? @ [\] ^ _ ` { | })"
 - The password can contain numbers from 0 to 9.
 - The password can contain alphabets A to Z and a to z.
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
4. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system password or setup password

Prerequisites

Ensure that the **Password Status** is Unlocked in the System Setup before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked. To enter the System Setup, press F2 immediately after a power-on or reboot.

Steps


1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that the **Password Status** is Unlocked.
3. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.
 **NOTE:** If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.
5. Press Esc. A message prompts you to save the changes.

6. Press Y to save the changes and exit from **System Setup**.
The computer restarts.

Clearing system and setup passwords

About this task

To clear the system or setup passwords, contact Dell technical support as described at [Contact Support](#).

 **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

Troubleshooting

Handling swollen rechargeable Li-ion batteries

Like most laptops, Dell laptops use Lithium-ion batteries. One type of Lithium-ion battery is the rechargeable Li-ion battery. Rechargeable Li-ion batteries have increased in popularity in recent years and have become a standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to rechargeable Li-ion battery technology is the potential for swelling of the battery cells.

A swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and must be replaced and disposed of properly. We recommend contacting Dell Support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing rechargeable Li-ion batteries are as follows:

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery before removing it from the laptop. To discharge the battery, unplug the AC adapter from the computer and operate the computer only on battery power. The battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell Support at [Dell Support Site](#) for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from [Dell Site](#) or otherwise directly from Dell.

Rechargeable Li-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information about how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, search Dell laptop battery in the Knowledge Base Resource at [Dell Support Site](#).

Locating the Service Tag or Express Service Code of your Dell computer

Your Dell computer is uniquely identified with a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, we recommend entering the Service Tag or Express Service Code at [Dell Support Site](#).


For more information about how to find the Service Tag for your computer, see [Instructions on how to find your Service Tag or Serial Number](#).

Dell SupportAssist Pre-boot System Performance Check diagnostics

About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded within the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to add more options and obtain details about any failed devices.
- View status messages that inform you when the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

 **NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer when the diagnostic tests are performed.

For more information, see the knowledge base article [000181163](#).

Running the SupportAssist Pre-Boot System Performance Check

Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key.
3. On the boot menu screen, select **Diagnostics**.
The diagnostic quick test begins.


 **NOTE:** For more information about running the SupportAssist Pre-Boot System Performance Check on a specific device, see [Dell Support Site](#).

4. If there are any issues, error codes are displayed.
Note the error code and validation number and contact Dell.


Built-in self-test (BIST)

Motherboard Built-In Self-Test (M-BIST)

M-BIST is the system board onboard self-test diagnostics tool that improves the diagnostics accuracy of system board Embedded Controller (EC) failures.

 **NOTE:** M-BIST can be manually initiated before Power On Self-Test (POST).

How to run M-BIST

 **NOTE:** Before initiating M-BIST, ensure that the computer is in a power-off state.

1. Press and hold both the **M** key and the power button to initiate M-BIST.
2. The battery indicator LED may exhibit two states:
 - Off: No fault was detected.
 - Amber and White: Indicates a problem with the system board.
3. If there is a failure with the system board, the battery status LED flashes one of the following error codes for 30 seconds:

Table 50. LED error codes

Blinking Pattern		Possible Problem
Amber	White	
2	1	CPU Failure
2	8	LCD Power Rail Failure
1	1	TPM Detection Failure
2	4	Memory/RAM failure

- If there is no failure with the system board, the LCD cycles through the solid color screens (that are described in the LCD-BIST) for 30 seconds and then turn off.

Logic Built-in Self-test (L-BIST)

L-BIST is an enhancement to the single LED error code diagnostics and is automatically initiated during POST. L-BIST will check the LCD power rail. If there is no power being supplied to the LCD (that is if the L-BIST circuit fails), the battery status LED flashes either an error code [2,8] or an error code [2,7].

NOTE: If L-BIST fails, LCD-BIST cannot function as no power will be supplied to the LCD.

How to invoke the L-BIST

- Turn on your computer.
- If the computer does not start up normally, look at the battery status LED:
 - If the battery status LED flashes an error code [2,7], the display cable may not be connected properly.
 - If the battery status LED flashes an error code [2,8], there is a failure on the LCD power rail of the system board, hence there is no power that is supplied to the LCD.
- For cases, when a [2,7] error code is shown, check to see if the display cable is properly connected.
- For cases when a [2,8] error code is shown, replace the system board.

LCD Built-in Self-Test (LCD-BIST)

Dell laptops have a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with the LCD (screen) of the Dell laptop or with the video card (GPU) and computer settings.

When you notice screen abnormalities like flickering, distortion, clarity issues, fuzzy or blurry image, horizontal or vertical lines, color fade, it is always a good practice to isolate the LCD (screen) by running the LCD-BIST.

How to invoke the LCD-BIST

- Turn off your computer.
- Disconnect any peripherals that are connected to the computer. Connect only the AC adapter (charger) to the computer.
- Ensure that the LCD (screen) is clean (no dust particles on the surface of the screen).
- Press and hold the **D** key and press the power button to enter LCD-BIST mode. Continue to hold the **D** key until the computer boots up.
- The screen displays solid colors and changes colors on the entire screen to white, black, red, green, and blue twice.
- Then it displays the colors white, black, and red.
- Carefully inspect the screen for abnormalities (any lines, fuzzy color, or distortion on the screen).
- At the end of the last solid color (red), the computer shuts down.

NOTE: Dell SupportAssist Preboot diagnostics upon launch initiates an LCD-BIST first, expecting a user intervention to confirm functionality of the LCD.

System-diagnostic lights

This section lists the system-diagnostic lights of your Dell Pro 13 Plus.

Table 51. System-diagnostic lights

Blinking pattern		Problem description	Suggested resolution
Amber	White		
1	1	TPM detection failure	Replace the system board.
1	2	Unrecoverable SPI Flash Failure	Replace the system board.
1	5	EC unable to program i-Fuse	Replace the system board.
1	6	Generic catch-all for ungraceful EC code flow errors	Disconnect all power source (AC, battery, coin cell) and drain flea power by pressing and holding down the power button for 3~5 seconds.
2	1	CPU failure	<ul style="list-style-type: none"> Run the Dell SupportAssist or Dell Diagnostics tool. If the problem persists, replace the system board.
2	2	System board failure (included BIOS corruption or ROM error)	<ul style="list-style-type: none"> Flash latest BIOS version If the problem persists, replace the system board.
2	3	No memory or RAM detected	<ul style="list-style-type: none"> Confirm that the memory module is installed properly. If the problem persists, replace the memory module.
2	4	Memory or RAM failure	<ul style="list-style-type: none"> Reset and swap memory modules among the slots. If the problem persists, replace the memory module.
2	5	Invalid memory installed	<ul style="list-style-type: none"> Reset and swap memory modules among the slots. If the problem persists, replace the memory module.
2	6	System board or Chipset Error	Replace the system board.
2	7	LCD failure (SBIOS message)	Replace the LCD module.
2	8	Display power-rail failure on the system board	Replace the system board.
3	1	CMOS battery failure	<ul style="list-style-type: none"> Reset the main battery connection. If the problem persists, replace the main battery.
3	2	PCI or Video card or chip failure	Replace the system board.

Table 51. System-diagnostic lights (continued)

Blinking pattern		Problem description	Suggested resolution
Amber	White		
3	3	BIOS Recovery image not found	<ul style="list-style-type: none"> Flash latest BIOS version If the problem persists, replace the system board.
3	4	BIOS Recovery image found but invalid	<ul style="list-style-type: none"> Flash latest BIOS version If the problem persists, replace the system board.
3	5	Power rail failure	Replace the system board.
3	6	Flash corruption is detected by SBIOS.	<ul style="list-style-type: none"> Press the power button for over 25 seconds to do RTC reset. If the problem persists, replace the system board. Disconnect all power source (AC, battery, coin cell) and drain flea power by pressing and holding down the power button 3~5 seconds to ensure all power are drained. Run "BIOS recovery from USB", and the instructions are in the website Dell support. If the problem persists, replace the system board.
3	7	Timeout waiting on ME to reply to HECI message.	Replace the system board.

NOTE: Blinking 3-3-3 LEDs on Lock LED (Caps-Lock or Num-Lock), Power button LED (without Fingerprint reader), and Diagnostic LED indicates failure to provide input during LCD panel test on Dell SupportAssist Pre-boot System Performance Check diagnostics.

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a stand-alone tool that is preinstalled in Dell computers running the Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, and restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into the primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at [Serviceability Tools at the Dell Support Site](#). Click **SupportAssist** and then click **SupportAssist OS Recovery**.

NOTE: Windows 11 IoT Enterprise LTSC 2024 and Dell ThinOS 10 do not support Dell SupportAssist. For more information about recovering ThinOS 10, see [Recovery mode using R-Key](#).

Real-Time Clock (RTC Reset)

The Real-Time Clock (RTC) reset function enables you or the service technician to recover Dell computers from No POST/No Power/No Boot situations.

Start the RTC reset with the computer powered off and connected to AC power. Press and hold the power button for twenty-five seconds. The computer RTC Reset occurs after you release the power button.

Backup media and recovery options


It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell provides multiple options for recovering the Windows operating system on your Dell computer. For more information, see [Dell Windows Backup Media and Recovery Options](#).

Network power cycle

About this task

If your computer is unable to access the Internet due to network connectivity issues, reset your network devices by performing the following steps:

Steps

1. Turn off the computer.
2. Turn off the modem.
 **NOTE:** Some Internet service providers (ISPs) provide a modem and router combo device.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on the computer.

Drain flea power (perform hard reset)

About this task


Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.

For your safety, and to protect the sensitive electronic components in your computer, you must drain residual flea power before removing or replacing any components in your computer.


Draining flea power, also known as performing a "hard reset," is also a common troubleshooting step if your computer does not turn on or boot into the operating system.

Perform the following steps to drain the flea power:

Steps

1. Turn off the computer.
2. Disconnect the power adapter from the computer.
3. Remove the base cover.
4. Remove the battery.
 **CAUTION:** The battery is a Field Replaceable Unit (FRU) and the removal and installation procedures are intended for authorized service technicians only.
5. Press and hold the power button for 20 seconds to drain the flea power.

6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to the computer.
9. Turn on the computer.


 **NOTE:** For more information about performing a hard reset, go to [Dell Support Site](#). On the menu bar at the top of the Support page, select Support > Support Library. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 52. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	Dell Site
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	Windows Support Site Linux Support Site
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents.	Your Dell computer is uniquely identified using a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at Dell Support Site . For more information about how to find the Service Tag for your computer, see Locate the Service Tag on your computer .
Dell knowledge base articles	<ol style="list-style-type: none"> 1. Go to Dell Support Site. 2. On the menu bar at the top of the Support page, select Support > Support Library. 3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Dell Support Site](#).

 **NOTE:** Availability of the services may vary depending on the country or region, and product.

 **NOTE:** If you do not have an active Internet connection, you can find contact information in your purchase invoice, packing slip, bill, or Dell product catalog.