



Predator P05-615s **User's Guide**

© 2020. All Rights Reserved.

Desktop Computer Covers:

Tower models

This revision: JUN. 2020 V1.00



Important

This manual contains proprietary information that is protected by copyright laws. The information contained in this manual is subject to change without notice. Images provided herein are for reference only and may contain information or features that do not apply to your computer. Acer Group shall not be liable for technical or editorial errors or omissions contained in this manual.

Table of Contents

1. UPGRADING YOUR COMPUTER	5	M.2 SSD module	26
Installation precautions	5	Removing the M.2 SSD module for	
ESD precautions	5	M2_2	26
Required tools.....	5	Installing the M.2 SSD module for	
Pre-installation instructions	6	M2_2	27
Post-installation instructions	6	Removing the M.2 SSD module for	
System Upgrade	7	M2_3	28
Removing the left side system cover....	7	Installing the M.2 SSD module for	
Installing the left side system cover.....	8	M2_3	29
Removing the right side system cover .	9	ODD drives	30
Installing the right side system cover .	10	Open ODD door.	30
System Layout	11	Easy swap HDD	31
Hard drives	12	Glass Side cover	33
Removing the 3.5-inch hard drives	12	Dust filter	35
Installing the 3.5-inch hard drives	16	ME Features	37
Memory	19	2 PREDATORSENSE	39
Memory configuration guidelines	19	PredatorSense features	39
Removing a memory module.....	20		
Installing a memory module.....	21		
Graphic board	22		
Removing the Graphic board	22		
Installing the Graphic board	24		

Upgrading your Computer

In this section, you will find:

- Instructions on how to replace a hardware component

1. UPGRADING YOUR COMPUTER

Installation precautions

Before you install any computer component, we recommend that you read the following sections. These sections contain important ESD precautions along with pre-installation and post-installation instructions.

ESD precautions

Electrostatic discharge (ESD) can damage your processor, disk drives, expansion boards, and other components.

Always observe the following precautions before you install a computer component:

1. Do not remove a component from its protective packaging until you are ready to install it.
2. Wear a wrist grounding strap and attach it to a metal part of the computer before handling components. If a wrist strap is not available, maintain contact with the computer throughout any procedure requiring ESD protection.

Required tools

In performing the component replacement process, you will need the following tools:

- Philips screwdriver
- Hex screwdriver
- Flat screwdriver
- Scissors



Note

The screws for the different components vary in size. During the disassembly process, group the screws with their corresponding components to avoid mismatches when putting back the components.

Pre-installation instructions

Always observe the following before you install any component:

1. Make sure that the ODD and card reader slot is empty.
2. Turn off the power to the computer and all peripherals.
3. Unplug the power cord from the computer.
4. Unplug the network cable and all connected peripheral devices from the computer.
5. Place the computer on a flat, steady surface.
6. Open your computer according to the instructions on removing the left side system cover on page 7 and removing the right side system cover on page 9.
7. See the following sections for specific instructions on the component you wish to install.



Warning

Not turning off the computer properly before you start installing the components may cause serious damage. Do not attempt the procedures described in the following sections unless you are a qualified service technician.

Post-installation instructions

Observe the following after installing a computer component:

1. See to it that the components are installed according to the step-by-step instructions in their respective sections.
2. Replace any expansion boards or peripherals that you removed earlier.
3. Replace the system covers. See Installing the left side system cover on page 8 and installing the right side system cover on page 10.
4. Connect the necessary cables.
5. Turn on your computer.

System Upgrade

Removing the left side system cover

1. Before you proceed, make sure that you have turned off your computer and all peripherals connected to it. Read the Pre- installation instructions on page 6.
2. Remove the two screws that secure the system cover to the computer.
3. Slide the cover toward the back of the computer and pull away from the side of the computer.



4. Set the cover aside for re-installation later.

Installing the left side system cover

1. Align the cover to the sides of the computer and slide the cover toward the front of the computer.
2. Secure the cover with two screws.



3. Observe the Post-installation instructions on page 6.

Removing the right side system cover


1. Before you proceed, make sure that you have turned off your computer and all peripherals connected to it. Read the Pre- installation instructions on page 6.
2. Remove the two screws that secure the system cover to the computer.
3. Slide the cover toward the back of the computer and pull away from the side of the computer.



4. Set the cover aside for re-installation later.


Installing the right side system cover

1. Align the cover to the sides of the computer and slide the cover toward the front of the computer.
2. Secure the cover with two screws.

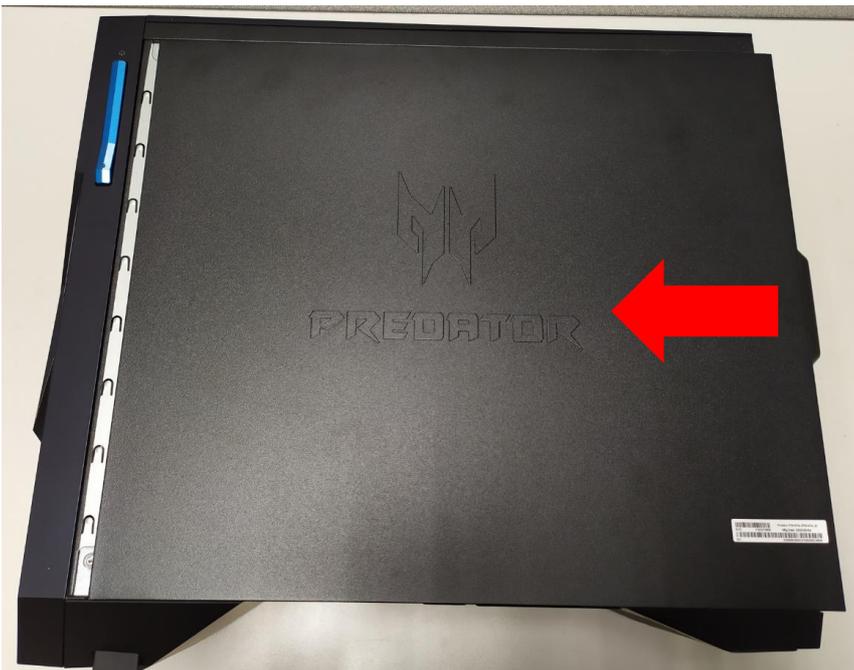

3. Observe the Post-installation instructions on page 6.

System Layout

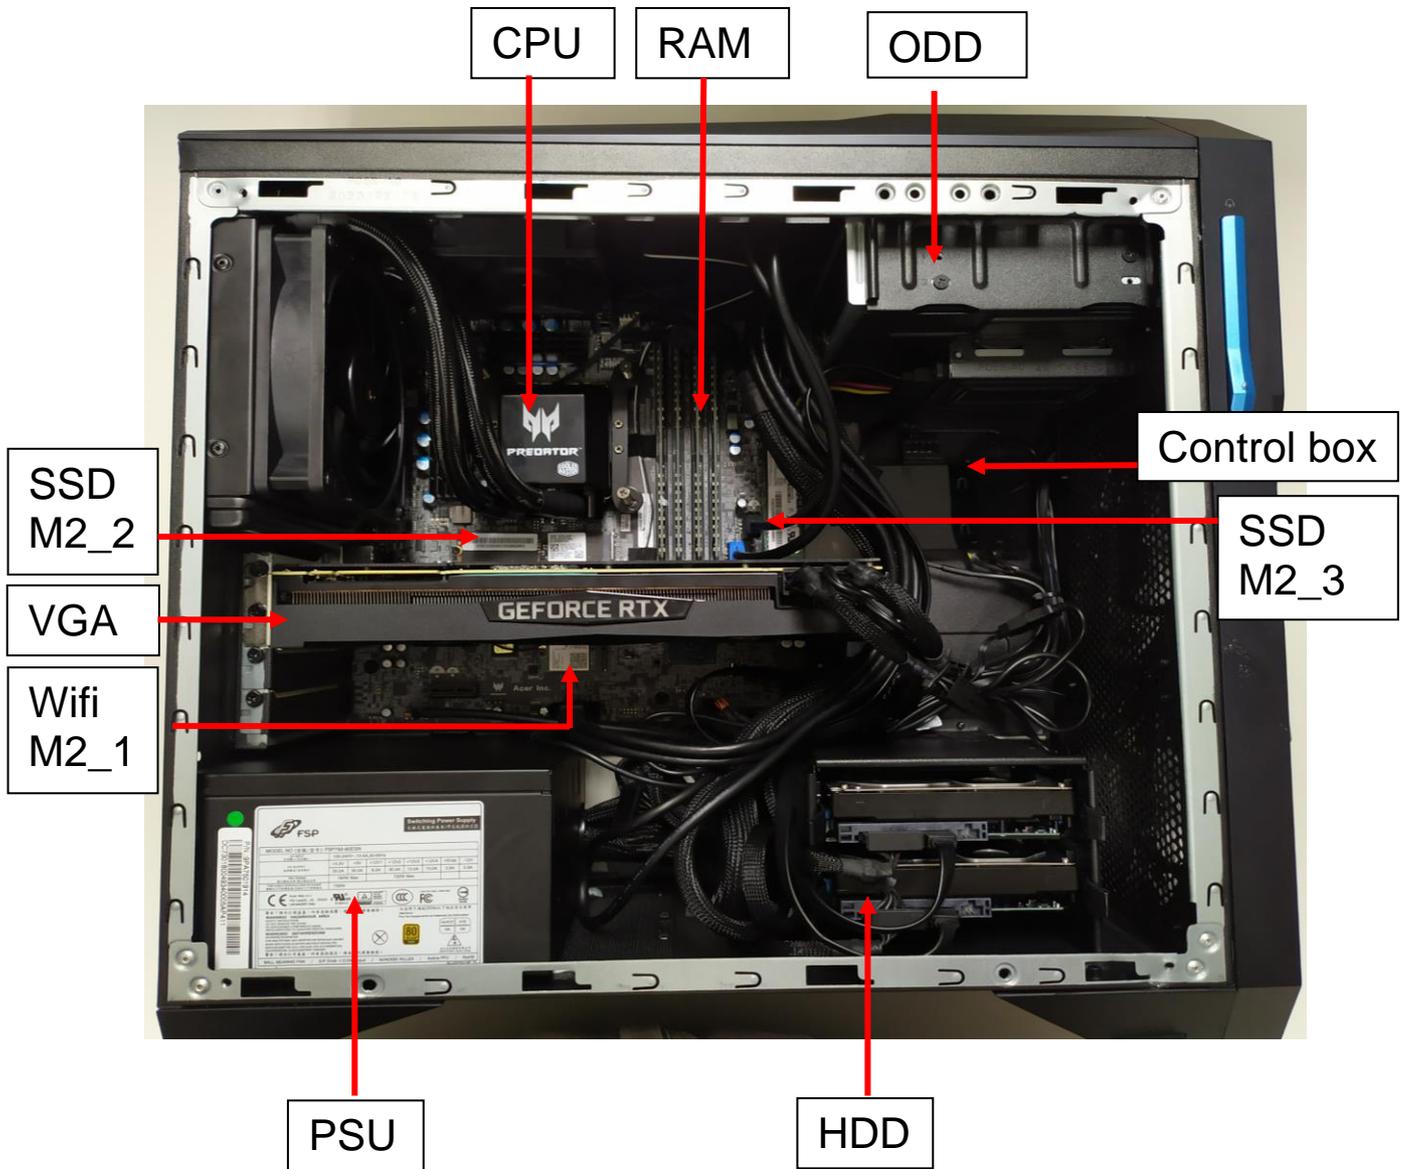


Hard drives


The computer supports installation of one 3.5-inch SATA hard drives in the internal HDD cage.

Removing the 3.5-inch hard drives

1. Perform Pre-installation instructions on page 6.
2. Remove the two screws that the Mask cover.

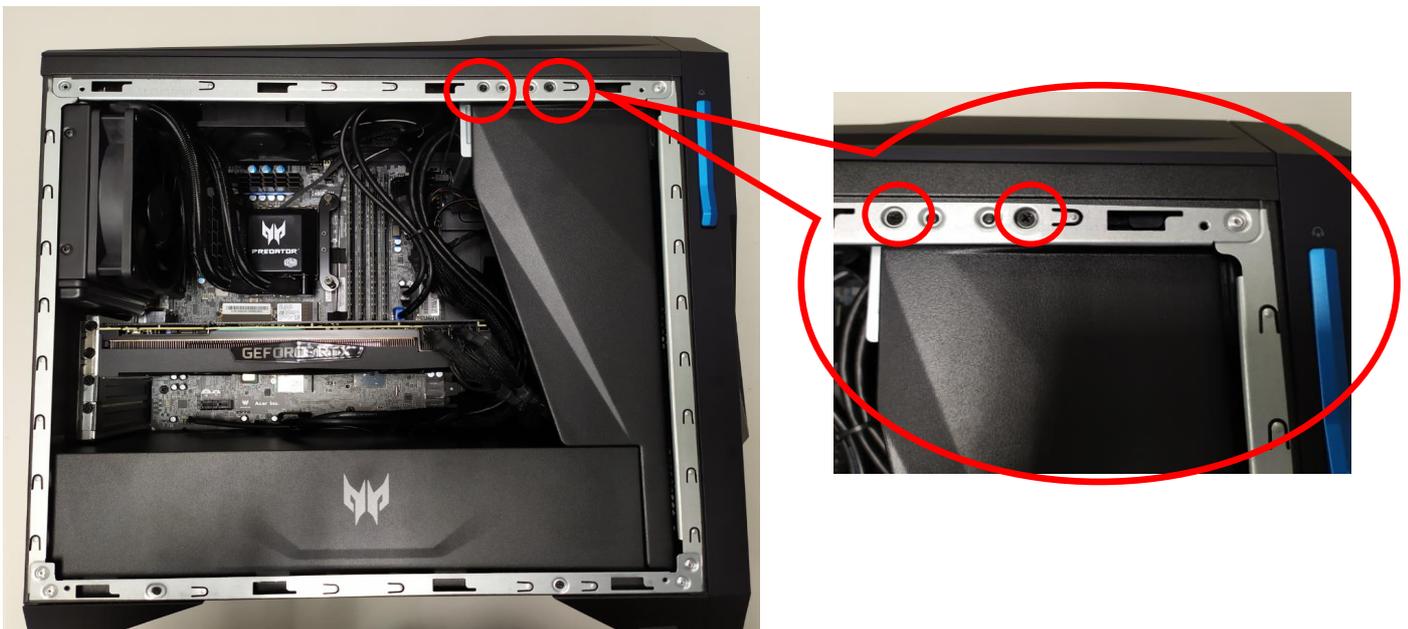


3. Take off the Mask Cover.

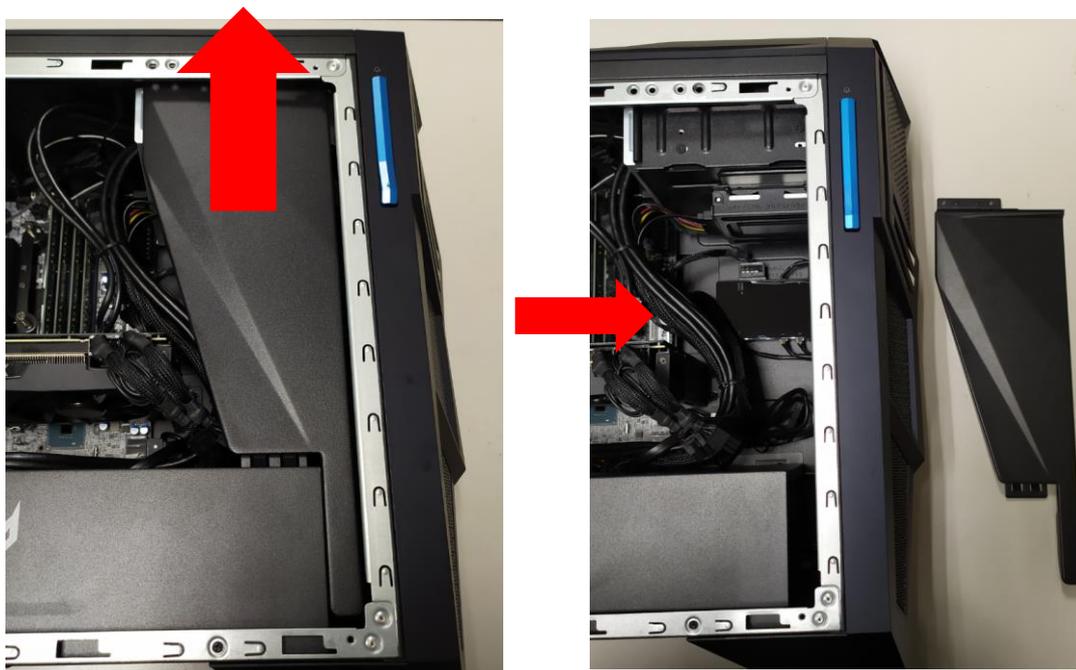


4. Remove the four screws that the Power Cover.




5. Take off the Power Cover.

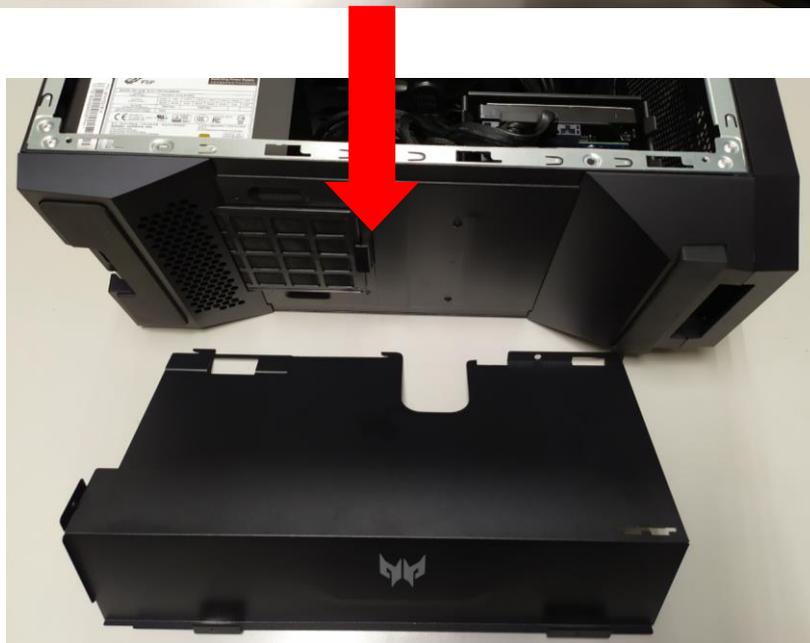


6. Disconnect the power and data cables from the hard drives.

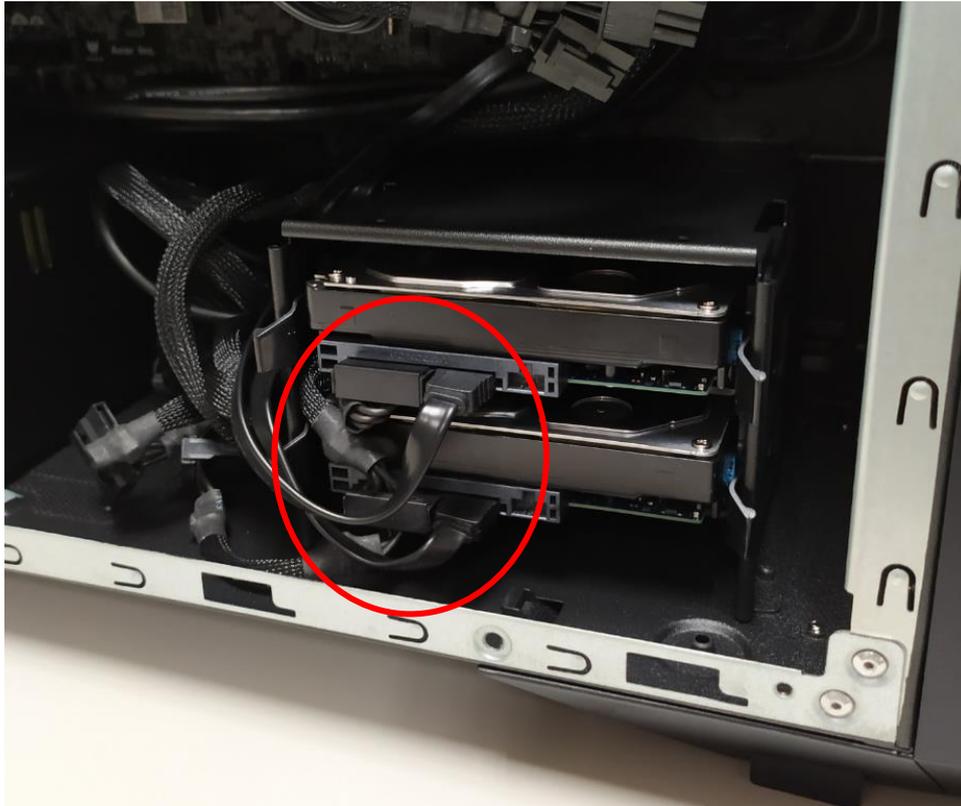

7. Pull black rack out from HDD cage and take it off.

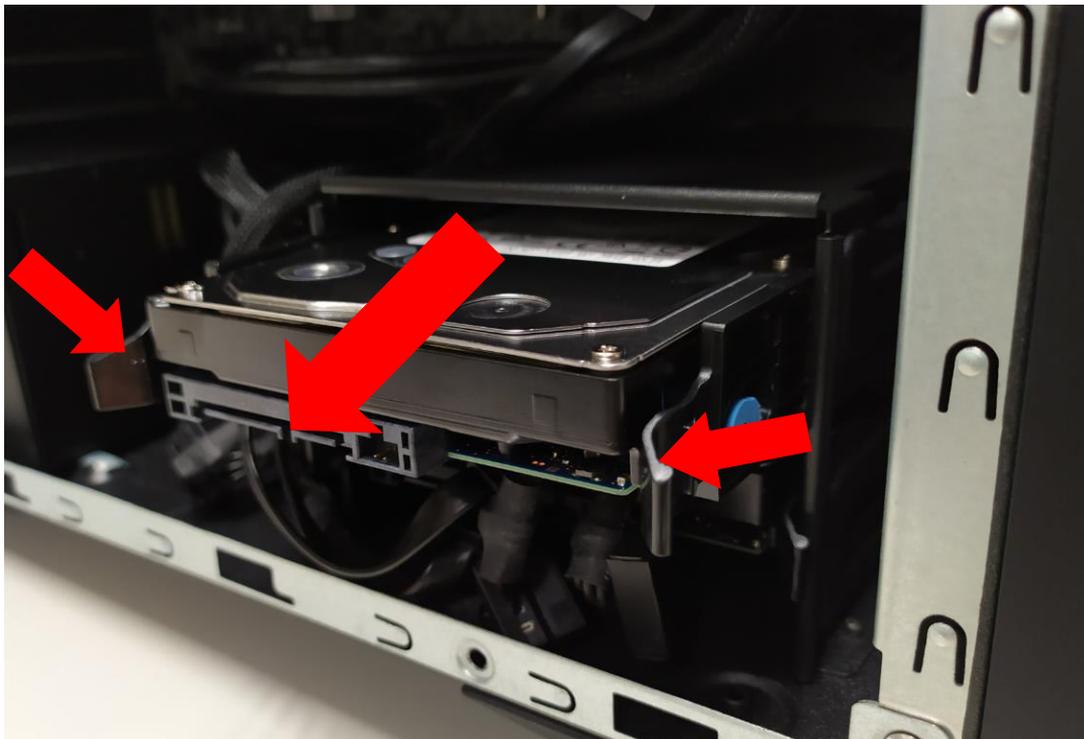

8. Remove HDD from black rack.

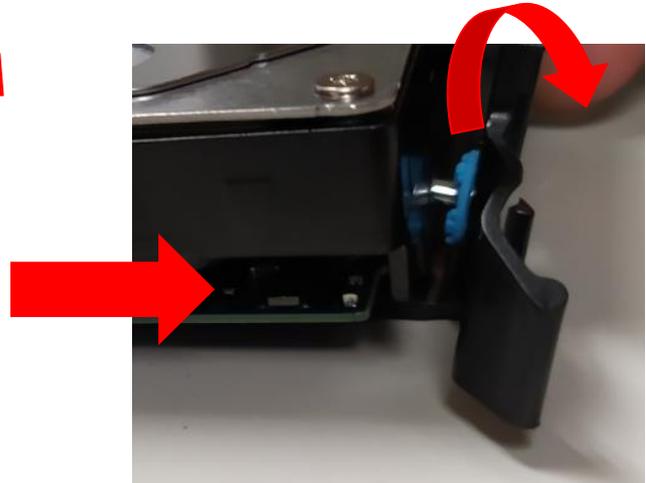

Installing the 3.5-inch hard drives


1. Remove the new hard drive from their packaging.
2. Insert the new hard drive into the black rack.




3. Insert black rack into HDD cage.





4. Connect the power and data cables to the hard drive.

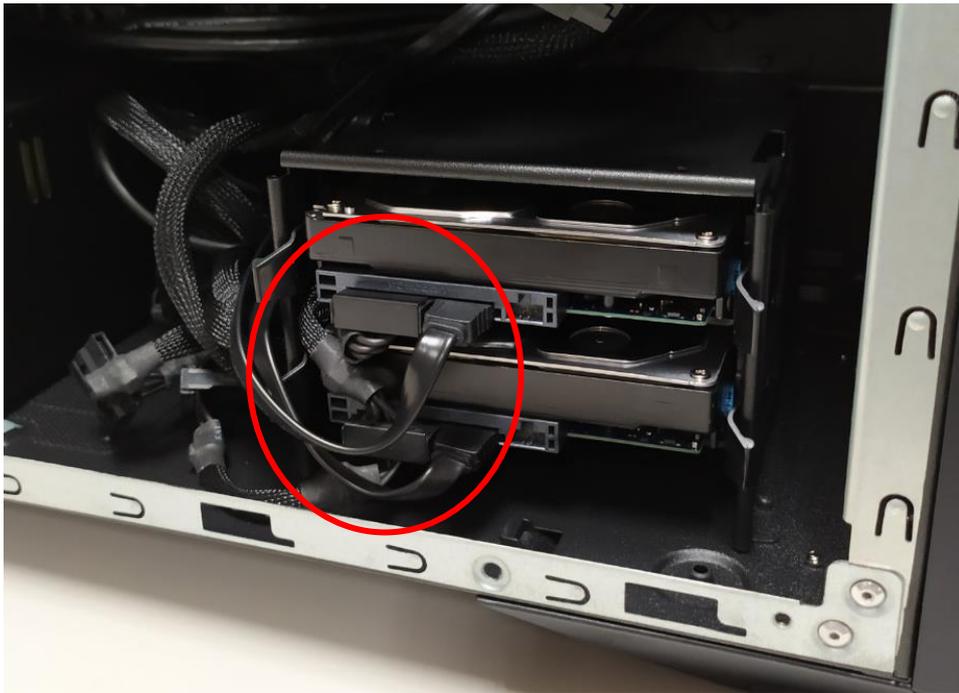

5. Insert the Power Cover and fix it.

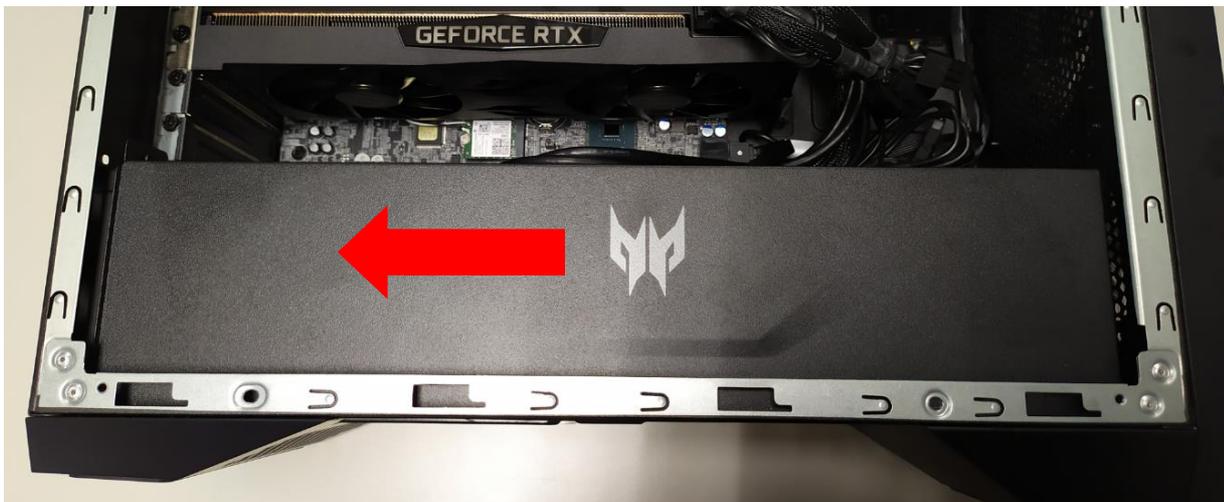

6. Insert the Mask Cover and fix it.

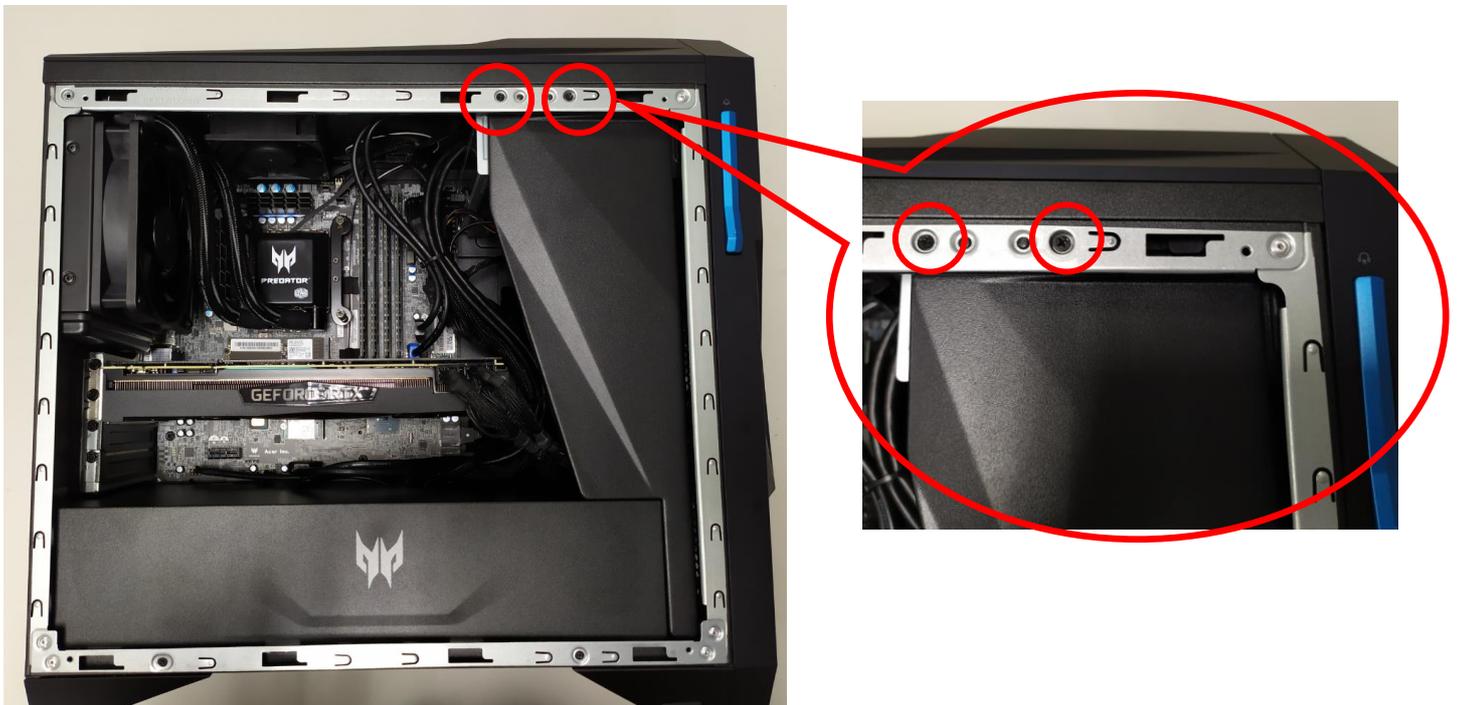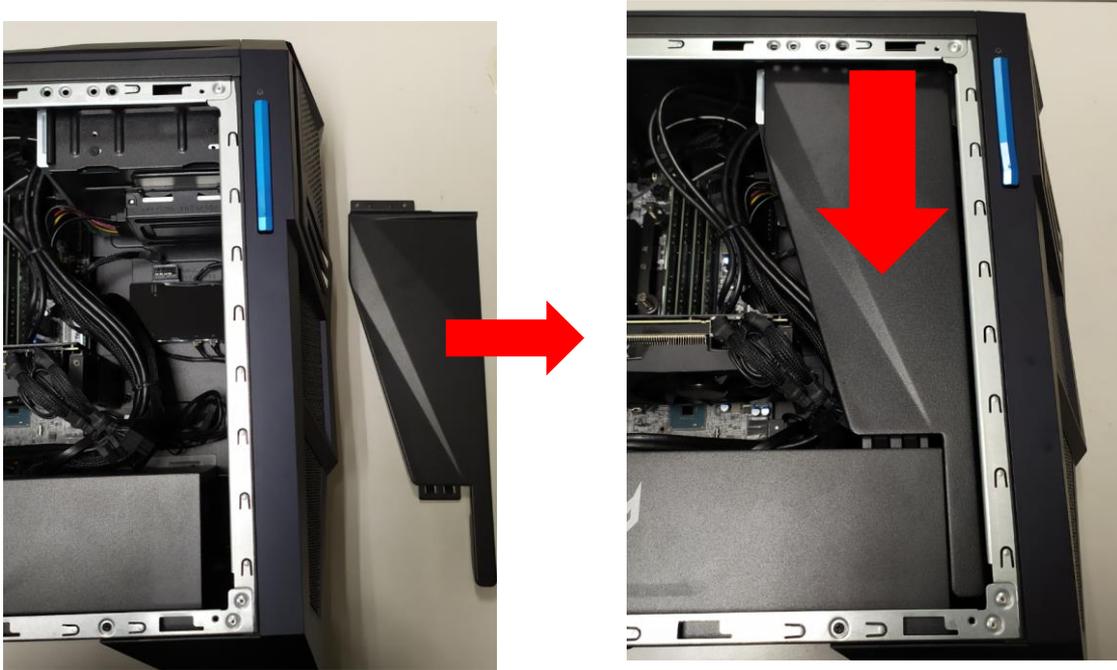


7. Observe the Post-installation instructions on page 6

Memory

The computer has four DDR4 U-DIMM slots that support up to 64 GB maximum system memory.

Memory configuration guidelines

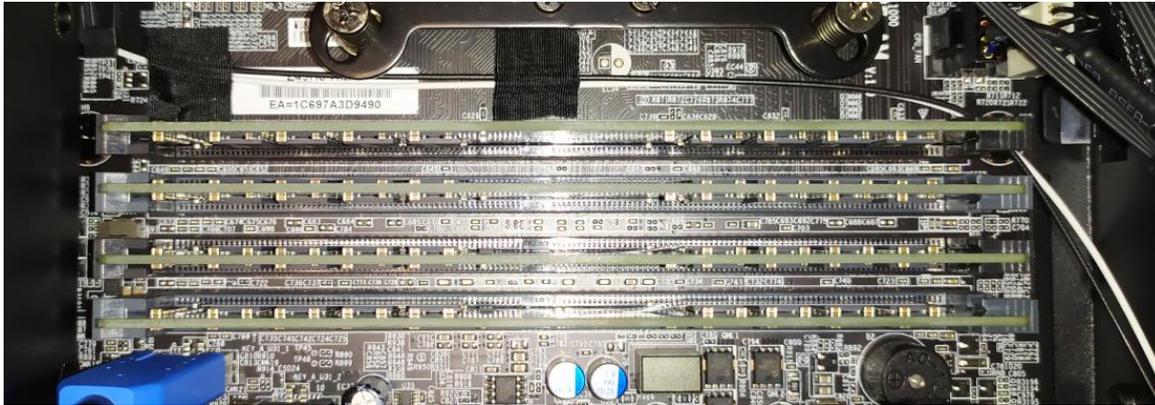



DIMM4
DIMM2
DIMM3
DIMM1

- To ensure data integrity, use only Acer-approved DDR4 2666 MHz or DDR4 3200 MHz type memory modules.
- Memory modules must be installed starting with DIMM1 slot.
- Always handle memory modules by its edges.
- When installing memory modules, populate the DIMM slots according to the table below.

Size	DIMM1	DIMM2	DIMM3	DIMM4
4GB	4GB	N/A	N/A	N/A
8GB	4GB	4GB	N/A	N/A
12GB	4GB	4GB	4GB	N/A
16GB	4GB	4GB	4GB	4GB
8GB	8GB	N/A	N/A	N/A
16GB	8GB	8GB	N/A	N/A
24GB	8GB	8GB	8GB	N/A
32GB	8GB	8GB	8GB	8GB
16GB	16GB	N/A	N/A	N/A
32GB	16GB	16GB	N/A	N/A
48GB	16GB	16GB	16GB	N/A
64GB	16GB	16GB	16GB	16GB

Removing a memory module

1. Perform Pre-installation instructions on page 6.
2. Disconnect the thermal fan cable from the mainboard.
3. Press outward the holding clips on both sides of the DIMM slot outward to release the memory module (1).
4. Gently pull the memory module upward to remove it from the DIMM slot (2).
5. Repeat steps 3~4 to remove the other memory modules.

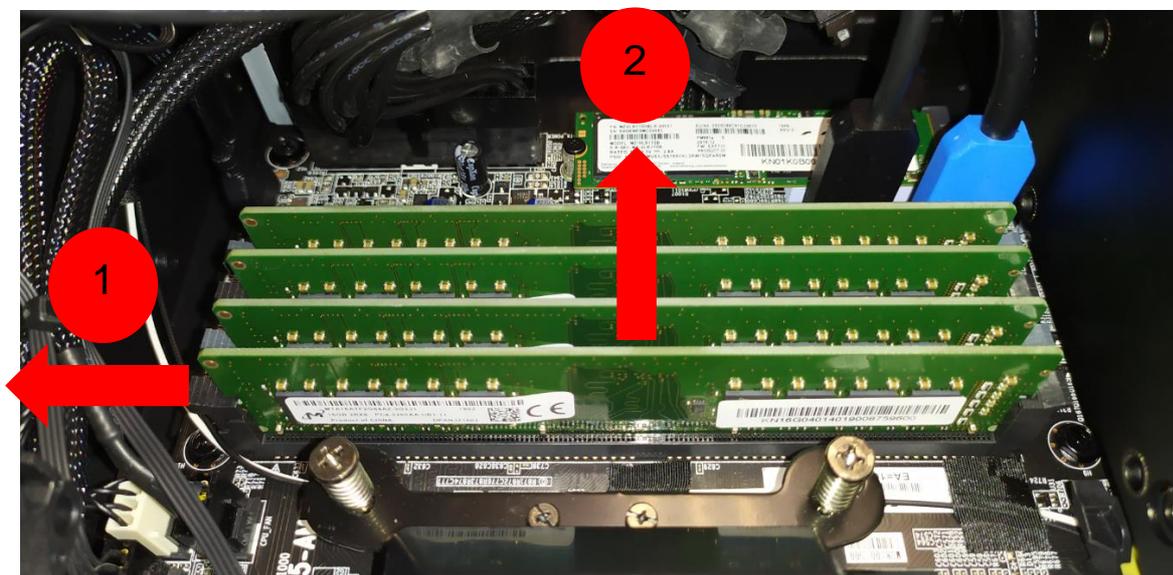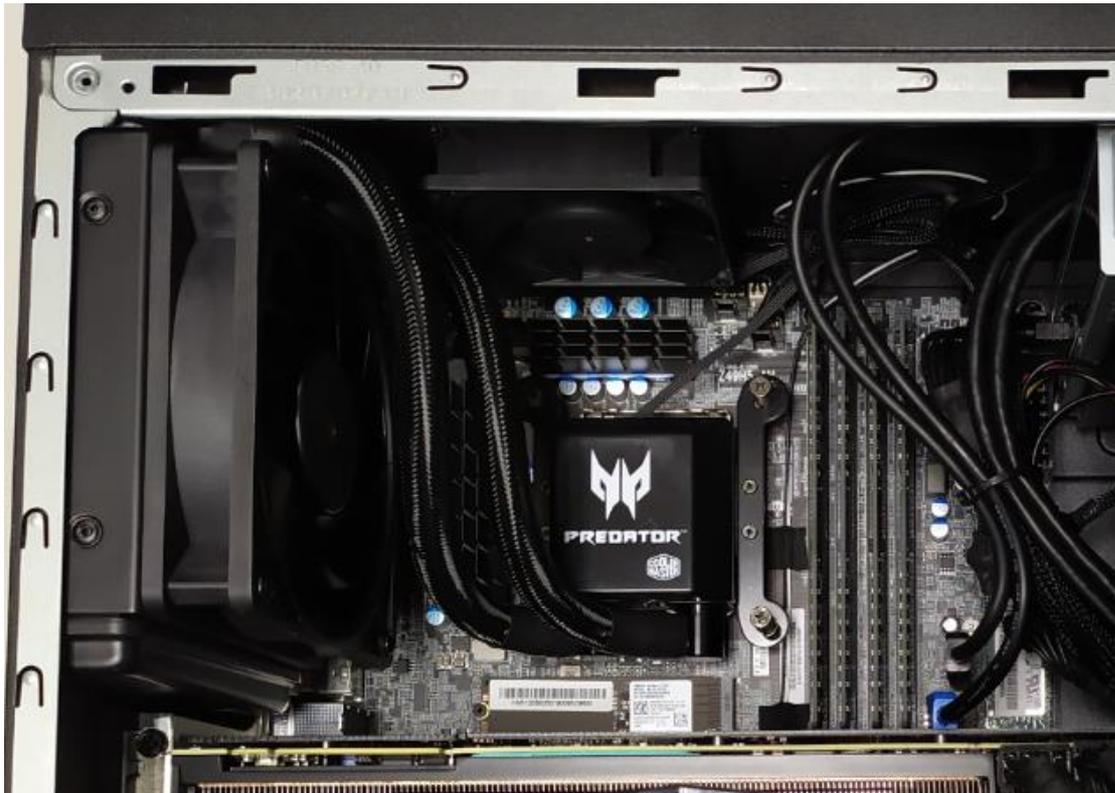

Installing a memory module




Note

DIMM slots on the mainboard must be installed only in certain configurations. Numbers next to DIMM slots correspond to installation sequence. Be sure to install the memory module in DIMM1 slot followed by DIMM2 slot.

1. Select an empty DIMM slot.
2. Remove the new memory module from its packaging, handling it by the edges.
3. Align then insert the memory module into the DIMM slot (1).
4. Insert the memory to the slot until the retaining clips snap inward (2).

The module is keyed so it can only be inserted in one direction. If the module does not fit, make sure that the notch in the module lines up with the tab in the memory slot.

5. Repeat steps 1~4 to install the other memory modules.

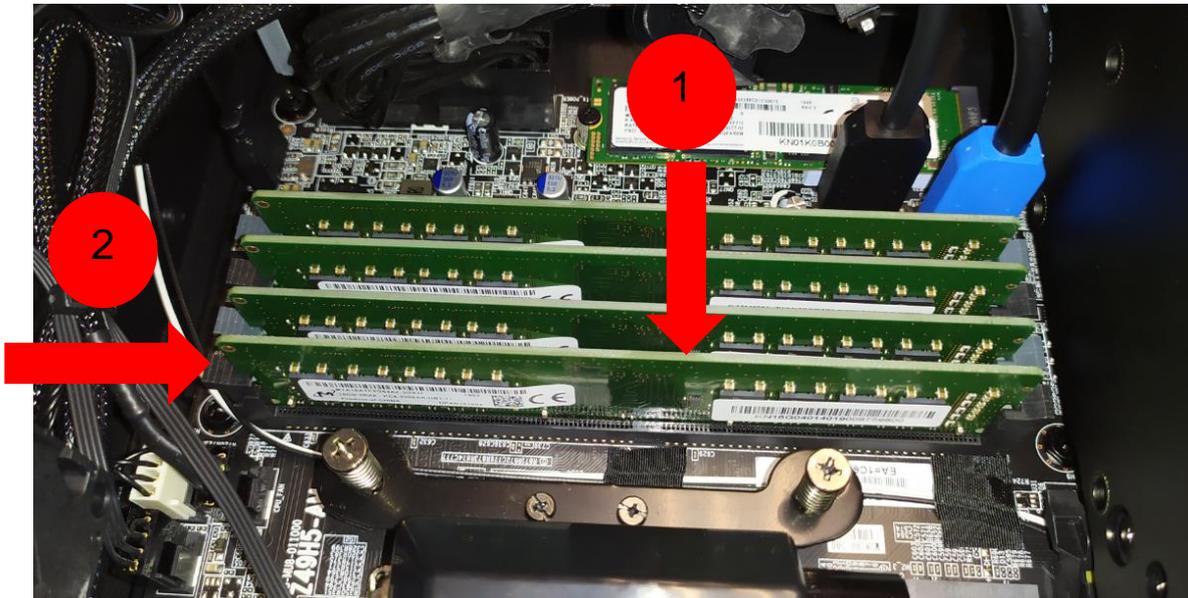

6. Observe the Post-installation instructions on page 6.

Graphic board



The computer contains one or two Graphic boards installed in the PCIe x16 slots. The detail configuration will be differed by different models.

Removing the Graphic board


1. Perform Pre-installation instructions on page 6.
2. Disconnect the power cables from the Graphic board.



3. Remove the screw that secure the Graphic boards to the chassis.

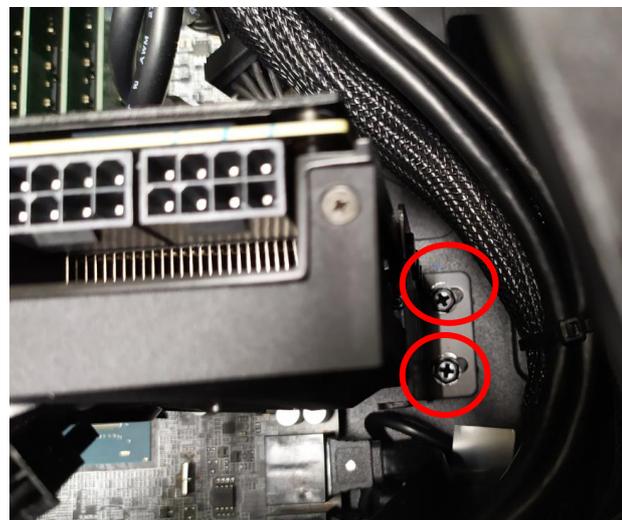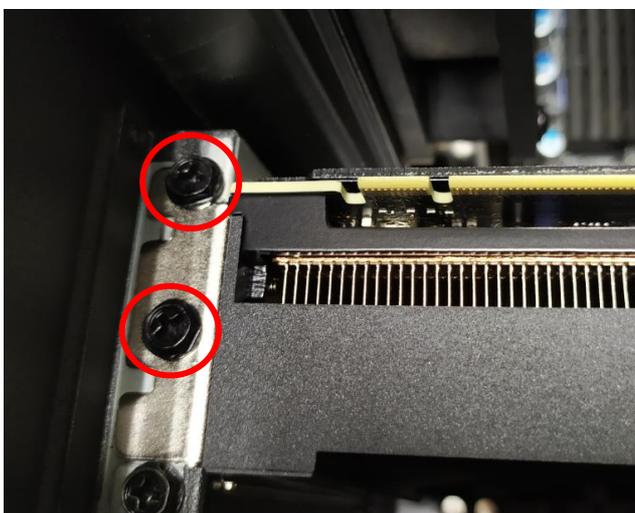

4. Release the latch that secures the graphic board to the mainboard.

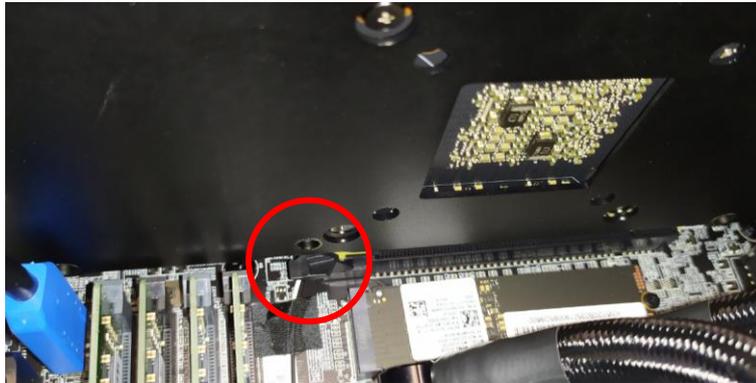

5. Detach the Graphic board from the PCIe x16 slot.




6. Remove the screw that secure the Graphic boards to the VGA Holder Bracket.




Installing the Graphic board

1. Remove the new graphic board from its packaging.
2. Fix Graphic boards on VGA Holder Bracket with three screw


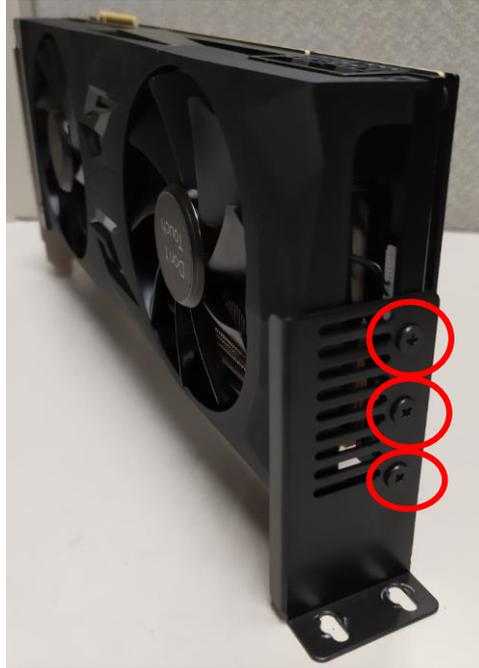


3. Insert the Graphic boards into the PCIe x16 slot and press it down until it latches into place.

[Note] For replace/upgrade graphic board, please check the specification of graphic board & power supply first in order to make sure the graphic board and power supply could work.

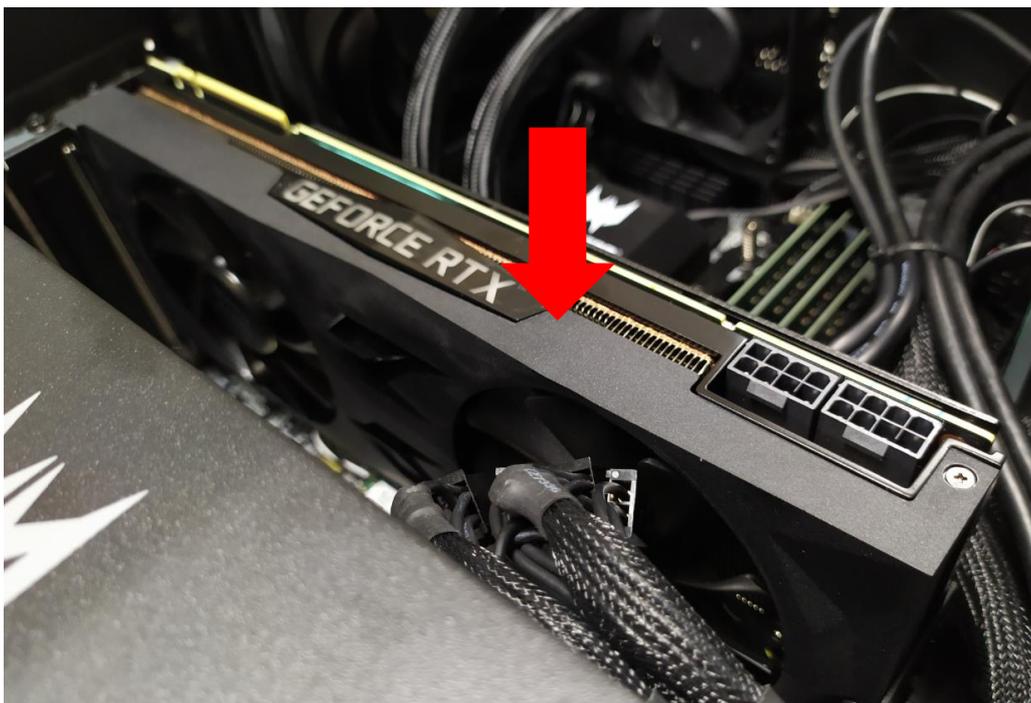

4. Secure the Graphic board with screws.

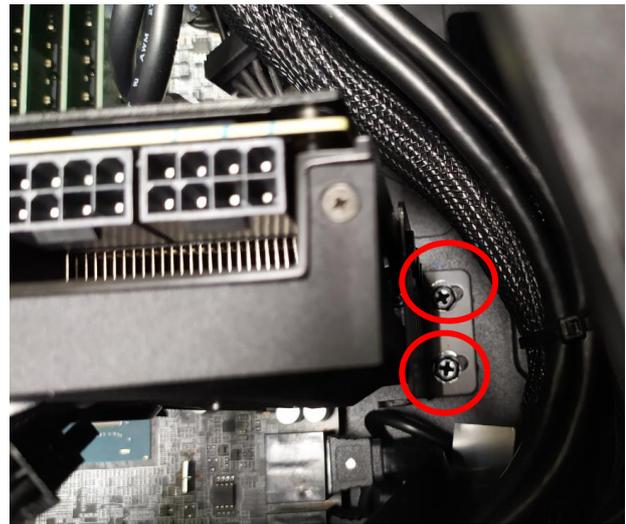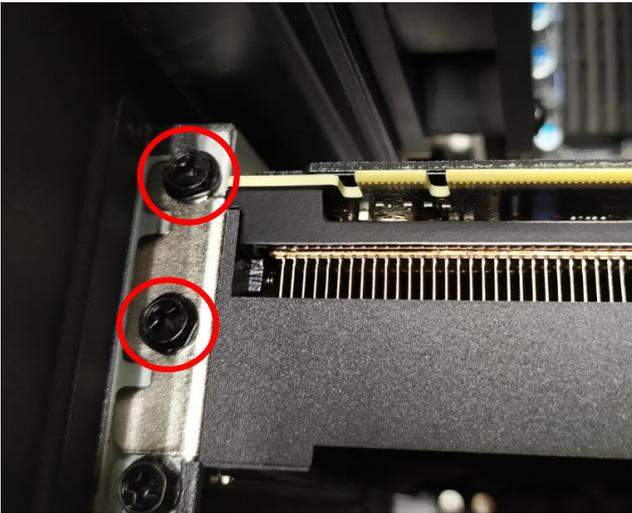

5. Connect the power cables to the Graphic boards.



6. Observe the Post-installation instructions on page 6

M.2 SSD module


The computer contains one M.2 SSD module installed in the M.2 PCIe slot.

Removing the M.2 SSD module for M2_2

1. Perform Pre-installation instructions on page 6.
2. Remove the Graphic board. See Removing the Graphic board.
3. Remove the screws that secures the M.2 SSD module from the mainboard.




4. Detach the M.2 SSD module from the mainboard.

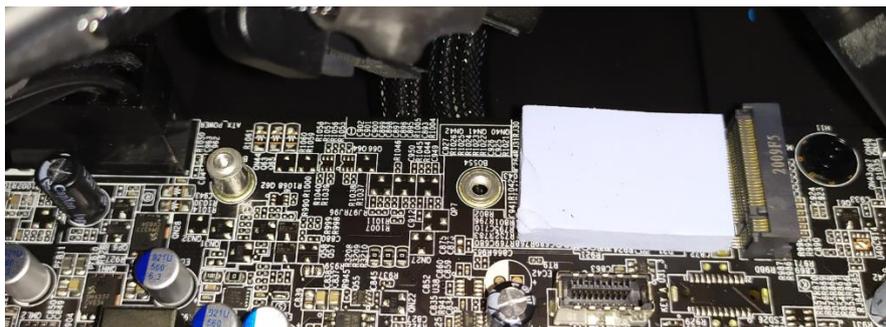


Installing the M.2 SSD module for M2_2

1. Remove the new M.2 SSD module from its packaging.
2. Insert the M.2 SSD module into its slot in the mainboard.

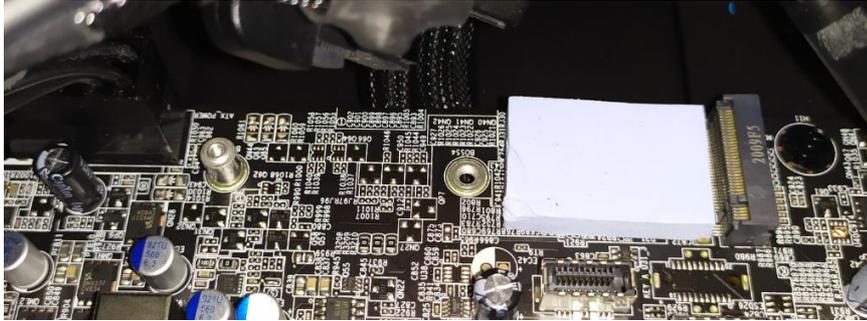

3. Secure the M.2 SSD module and mainboard with screws.

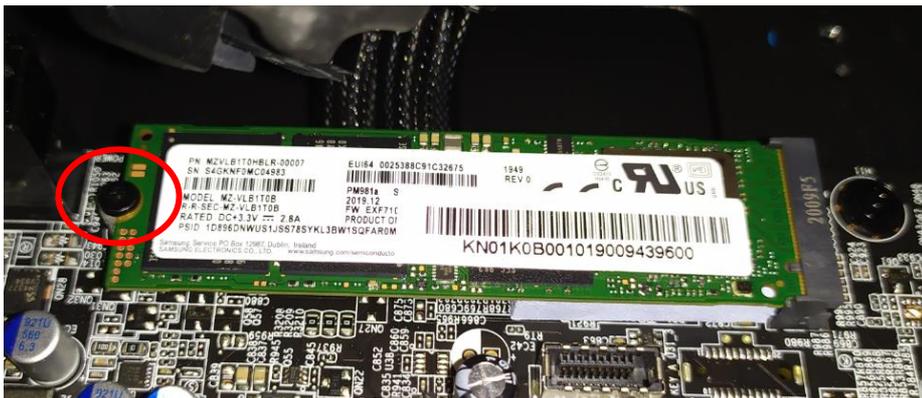


4. Replace the Graphic board. See Installing the Graphic board.
5. Observe the Post-installation instructions on page 6.

Removing the M.2 SSD module for M2_3

1. Perform Pre-installation instructions on page 6.
2. Remove the Graphic board. See Removing the Graphic board.
3. Remove the screws that secures the M.2 SSD module from the mainboard.




4. Detach the M.2 SSD module from the mainboard.

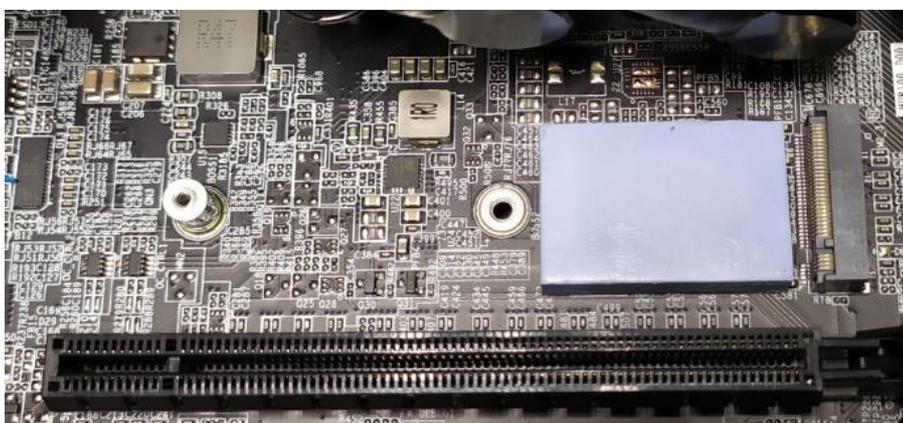

Installing the M.2 SSD module for M2_3

1. Remove the new M.2 SSD module from its packaging.
2. Insert the M.2 SSD module into its slot in the mainboard.

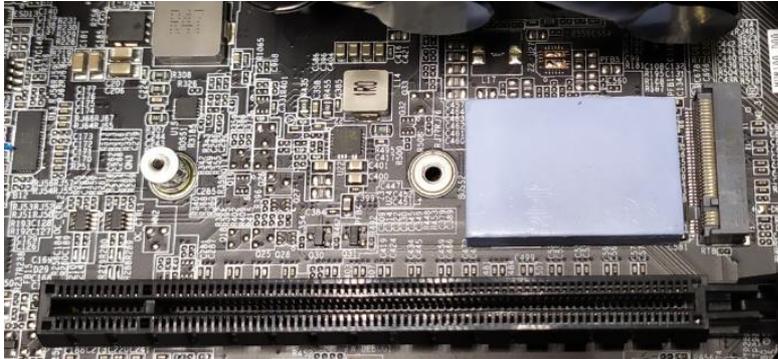

3. Secure the M.2 SSD module and mainboard with screws.




4. Replace the Graphic board. See Installing the Graphic board.
5. Observe the Post-installation instructions on page 6.

ODD drives

The computer supports installation of one ODD drives.

Open ODD door.

1. Perform Pre-installation instructions on page 6.
2. Push triangle icon for opening.

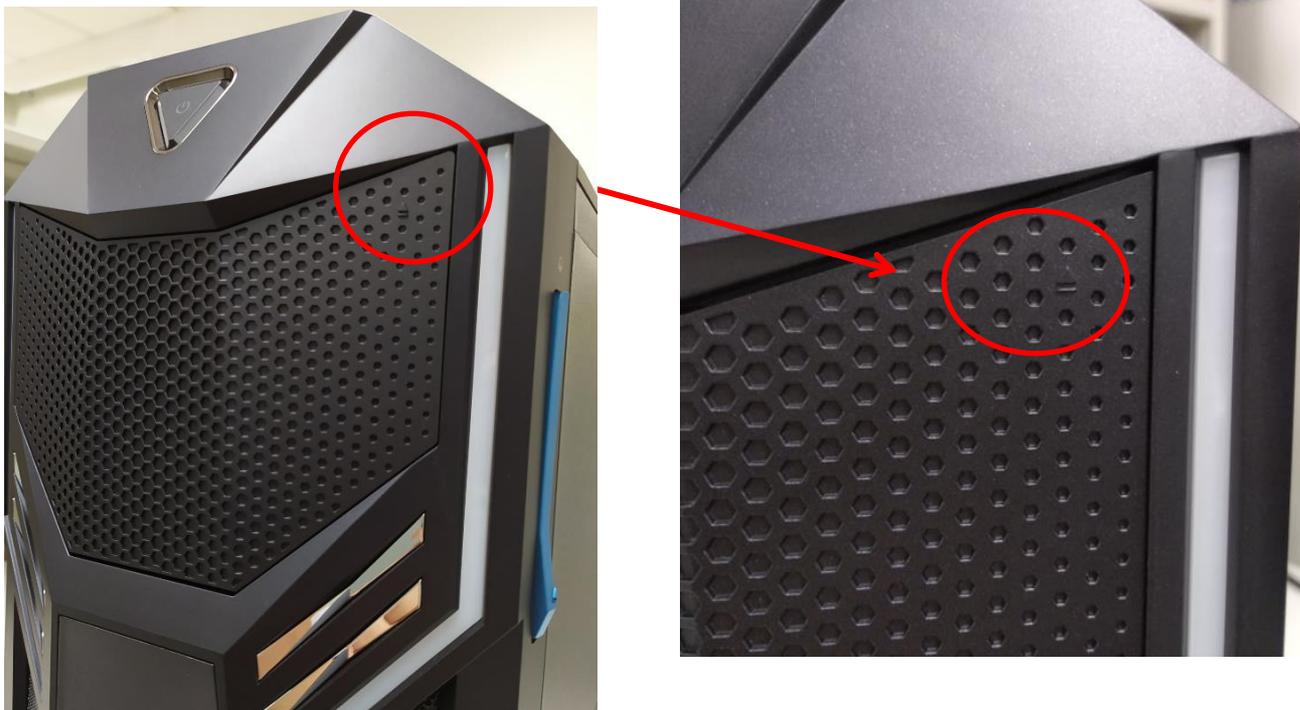

3. Press ODD eject-Button.



Easy swap HDD

The computer supports installation of one 2.5-inch SATA hard drives in the easy swap HDD cage.

1. Perform Pre-installation instructions on page 6.
2. Push triangle icon for opening.



3. Release the latch and take it off.



4. Insert the new 2.5-inch SATA hard drive into the easy swap cage.



5. Insert easy swap into HDD cage.



Glass Side cover

1. Before you proceed, make sure that you have turned off your computer and all peripherals connected to it. Read the Pre-installation instructions on page 6.
2. Remove the two screws that secure the system cover and take it off.



3. Tack out the glass cover from their packaging.



4. Secure the glass cover with screws.




5. Observe the Post-installation instructions on page 6

Dust filter

1. Before you proceed, make sure that you have turned off your computer and all peripherals connected to it. Read the Pre- installation instructions on page 6.



2. Pull latch from Dust filter and take it off.

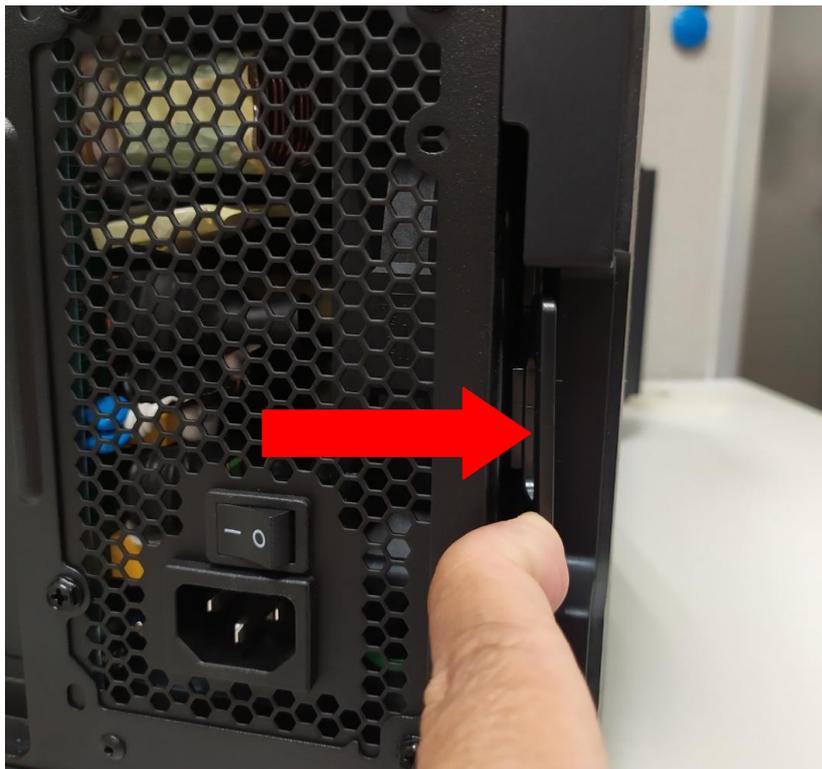



ME Features

Handle

Headphone hook



PredatorSense

In this section, you will find:

- Introduction to the PredatorSense utility
- How to use PredatorSense

2 PREDATORSense

PredatorSense (DT) is an Acer proprietary utility to enhance the user experience of Gaming products on Microsoft Windows 10.


The central idea of this utility is to provide a user interface to easily control fan speed , OverClocking and also display system information.

PredatorSense features

- Home
- Lighting
- Overclocking
- Fan Control
- Monitoring


To set up the PredatorSense application (Windows 10):

1. From the *Start menu*, select **All apps**.
2. Select **Acer**.
3. Select **PredatorSense**.

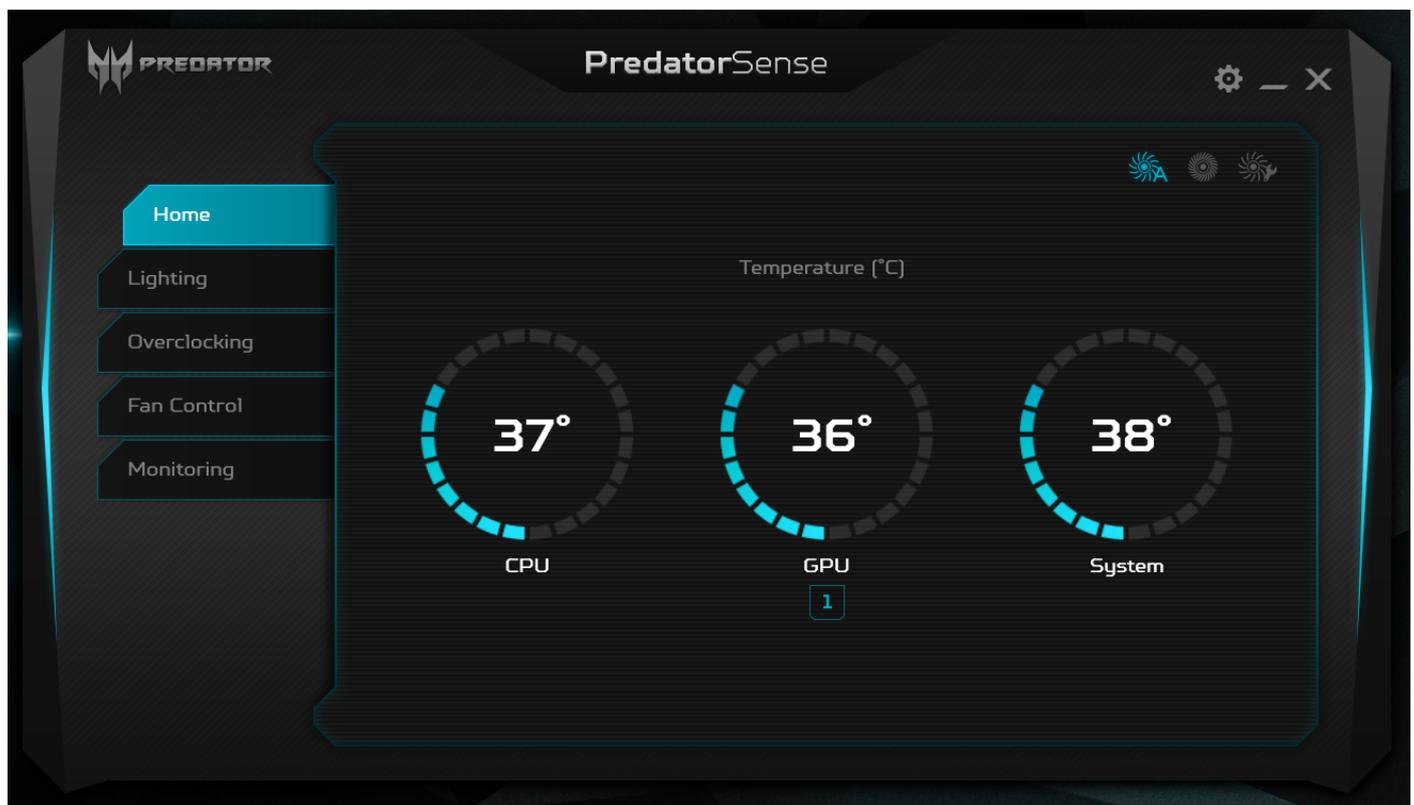


Alternatively, you can double-click the PredatorSense desktop shortcut to run the application.

- **Lighting**
Water Cooler

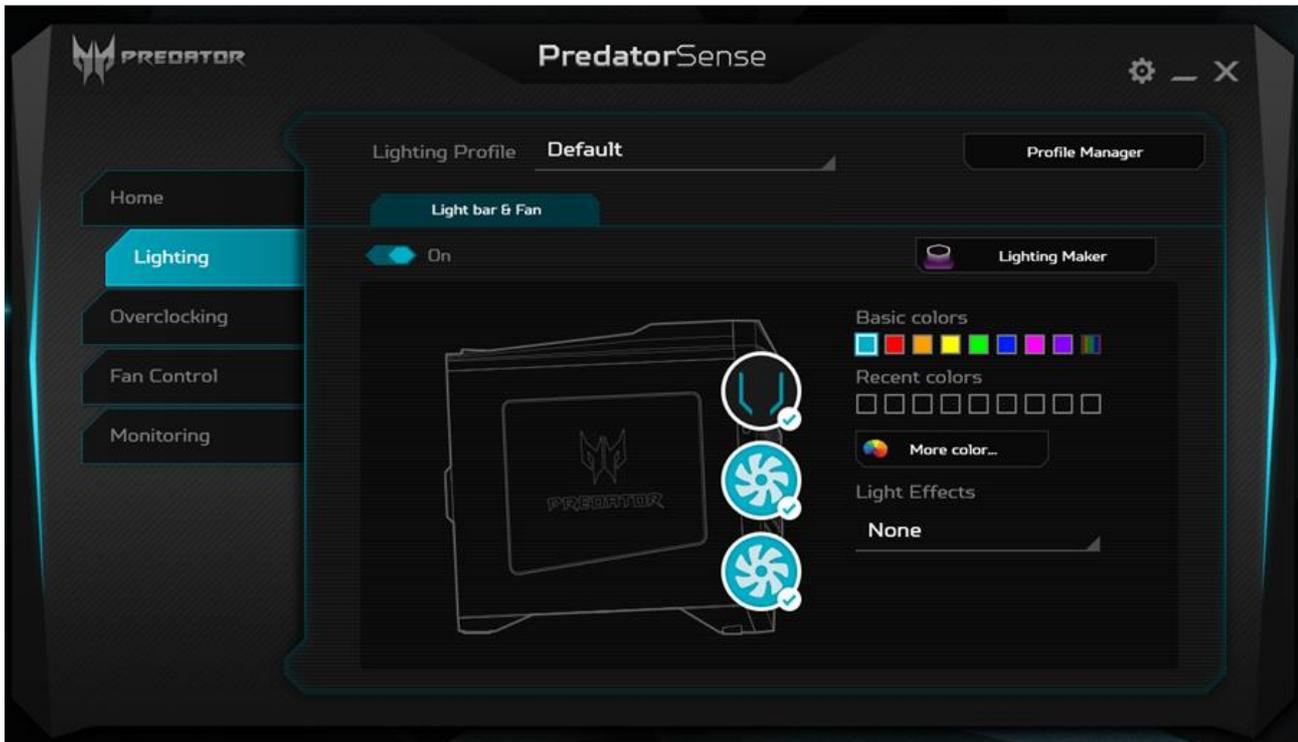

- **Air Cooler**

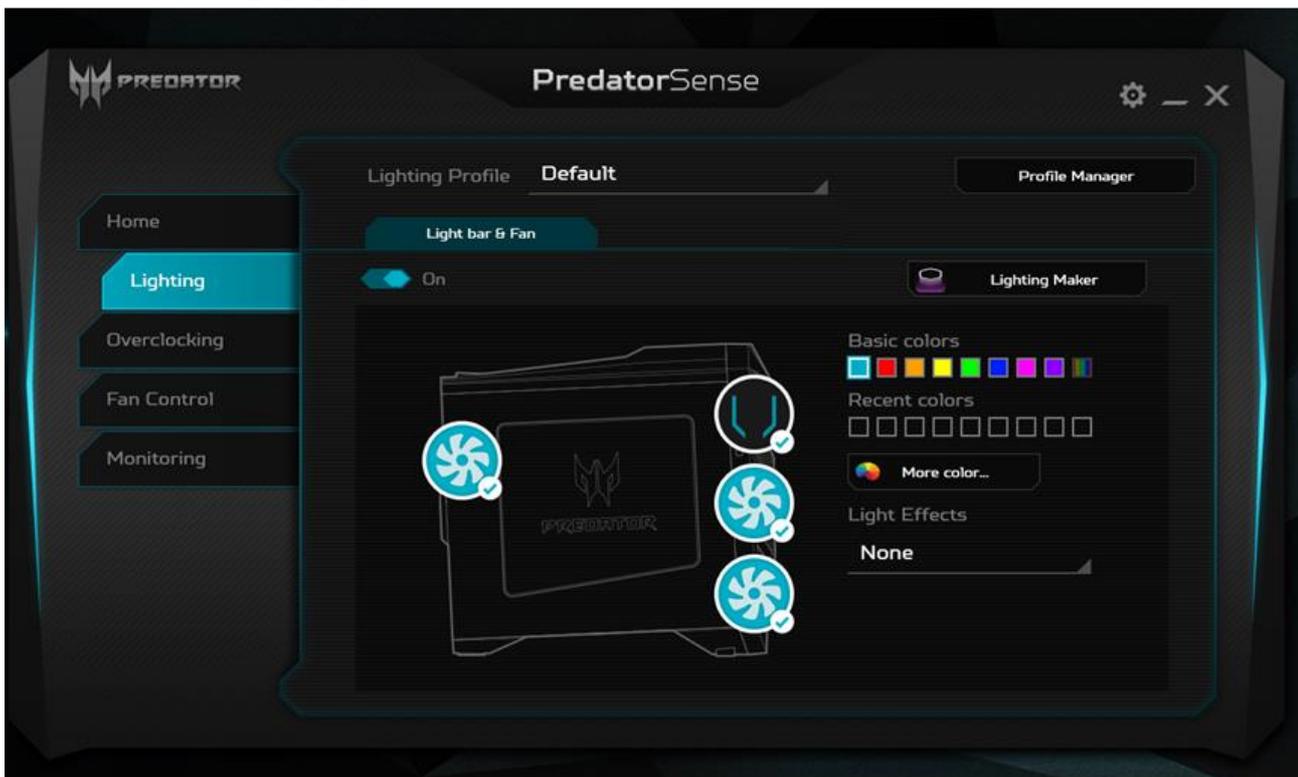

Category	Description
Home	<p>Provide overview of all features with quick adjustment</p> <ul style="list-style-type: none"> • CPU/GPU/System health information • Fan speed control (Auto, Gaming and Custom)
Lighting	<p>Provide control and adjustment for the LEDs on Front Face, Left Side Face and Motherboard.</p> <ul style="list-style-type: none"> • On/Off • Color: 9 basic colors (last one is rainbow color), 9 recent • Colors which user creates the color via More Color(palette) button. <p>Fan Lighting Effects: None, Breathing, Star, Wave, Marquee, Color cycle.</p> <p>Lighting Maker: user can play or audit music which connects Front LED/ Fan lighting.</p> <ul style="list-style-type: none"> • Lighting profile
Overclocking	<p>Provide CPU Overclocking. adjustment the Normal & Faster & Turbo mode for CPU Display regarding CPU max frequency and Loading status information.</p> <ul style="list-style-type: none"> • Normal The setting is the same as BIOS setting • Faster The setting is the same as BIOS setting • Turbo The setting is the same as BIOS setting
Fan control	<p>Provide Fan speed control in Auto, Gaming and Custom mode for fans including, Front fan and Back fan. And show the fan speed for fans. On the Custom fan speed, user can adjust the fan speed in percentage.</p> <ul style="list-style-type: none"> • Custom fan speed only can control by 60 ~ 100% percentage.

Monitoring

Provide 3 tabs for CPU/System and GPU.

- Temperature in C
 - Loading in %
 - Frequency in MHz
 - Voltage in V
 - Download/Upload in bytes/s of WIFI/Ethernet
 - Usage in GB of RAM
-