

**Canon**

*MF3010*

<a href="#">Important Safety Instructions</a>	5
<a href="#">Important Safety Instructions</a>	6
<a href="#">Installation</a>	7
<a href="#">Power Supply</a>	9
<a href="#">Handling</a>	10
<a href="#">Maintenance and Inspections</a>	12
<a href="#">Consumables</a>	14
<a href="#">Others</a>	15
<a href="#">Installation and Handling</a>	16
<a href="#">Basic Operation</a>	19
<a href="#">Parts and Their Functions</a>	20
<a href="#">Front Side</a>	21
<a href="#">Back Side</a>	22
<a href="#">Interior</a>	23
<a href="#">Paper Cassette</a>	24
<a href="#">Operation Panel and Display</a>	25
<a href="#">Using the Quick Reference Guide</a>	27
<a href="#">Energy Saving Functions (Sleep Mode)</a>	29
<a href="#">How to Operate Menus</a>	30
<a href="#">Setting List</a>	32
<a href="#">Toner Cartridges</a>	37
<a href="#">About the Supplied Toner Cartridge</a>	38
<a href="#">About Replacement Toner Cartridges</a>	39
<a href="#">Handling Toner Cartridges</a>	40
<a href="#">Storing Toner Cartridges</a>	42
<a href="#">Purchasing Consumables</a>	43
<a href="#">Placing Documents</a>	44
<a href="#">Attention (Placing Documents)</a>	46
<a href="#">Loading Paper</a>	47
<a href="#">In the Paper Cassette</a>	48
<a href="#">Attention (Loading Paper)</a>	51
<a href="#">Paper Loading Capacity</a>	52
<a href="#">Paper Loading Orientation</a>	53
<a href="#">Setting a Paper Type</a>	55
<a href="#">Setting the Auto Shutdown Time</a>	57
<a href="#">Initializing Menus</a>	59
<a href="#">Printing the User Data List</a>	60
<a href="#">Upgrading Firmware</a>	62
<a href="#">Locating the Serial Number</a>	63
<a href="#">Specifications</a>	64
<a href="#">Machine Specifications</a>	65
<a href="#">Copy Specifications</a>	66
<a href="#">Printer Specification</a>	67
<a href="#">Scanner Specifications</a>	68
<a href="#">Document Type</a>	69
<a href="#">Supported Document Types</a>	70
<a href="#">Scan Area</a>	71
<a href="#">Paper</a>	72
<a href="#">Supported Paper Types</a>	73

<a href="#">Printable Area</a>	76
<a href="#">Copy</a>	77
<a href="#">Basic Copy Operations</a>	78
<a href="#">Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)</a>	80
<a href="#">Adjusting the Density</a>	81
<a href="#">Enlarging/Reducing Copy</a>	83
<a href="#">Copying Both Sides of Cards onto One Side (ID Card Copy)</a>	85
<a href="#">Copying Two Documents onto One Sheet (2 on 1 Copy)</a>	88
<a href="#">Selecting Copy Type (Speed Priority/Resolution Priority)</a>	91
<a href="#">Emphasizing the Outline of an Image (Sharpness)</a>	93
<a href="#">Print</a>	95
<a href="#">Preparing to Print from Your Computer</a>	96
<a href="#">Setting Up Printer Sharing</a>	97
<a href="#">Printing Fundamentals</a>	99
<a href="#">Printing</a>	100
<a href="#">Configuring the Default Print Settings</a>	102
<a href="#">Viewing the Online Help</a>	104
<a href="#">Printing on Custom Paper Size</a>	105
<a href="#">Registering a Custom Paper Size</a>	106
<a href="#">Canceling Print</a>	107
<a href="#">Selecting and Canceling Jobs</a>	108
<a href="#">Scan</a>	109
<a href="#">Preparing to Use the Scan Functions</a>	110
<a href="#">System Requirements (Scan)</a>	111
<a href="#">Basic Scan Flow</a>	112
<a href="#">Scanning Using the MF Toolbox</a>	113
<a href="#">Scanning an Image Using an Application</a>	116
<a href="#">Scanning Using the WIA Driver (Windows XP/Windows Vista/Windows 7 Only)</a>	117
<a href="#">Attention (WIA Driver)</a>	124
<a href="#">[New Scan] Dialog Box</a>	125
<a href="#">Using the MF Toolbox</a>	126
<a href="#">Combining Multiple Documents into One PDF File</a>	131
<a href="#">Using the ScanGear MF</a>	133
<a href="#">Using Simple Mode</a>	134
<a href="#">Using Advanced Mode</a>	137
<a href="#">Defining a Scan Area (Cropping Frame)</a>	147
<a href="#">Setting Resolution</a>	149
<a href="#">Troubleshooting</a>	150
<a href="#">Clearing Jams</a>	151
<a href="#">Removing Jammed Paper</a>	153
<a href="#">Troubleshooting</a>	158
<a href="#">Paper Feeding Problems</a>	160
<a href="#">Cannot Print, or the Images on Printouts are Spotted or Distorted</a>	161
<a href="#">Copying Problems</a>	162
<a href="#">The Copy Output is Hardly Readable and Copied Poorly</a>	163
<a href="#">Printing Problems</a>	165
<a href="#">Cannot Print Documents from a Computer</a>	166
<a href="#">Scanning Problems</a>	167
<a href="#">Cannot Scan a Document</a>	169

<a href="#">Installation and Uninstallation Problems</a>	171
<a href="#">Miscellaneous Problems</a>	172
<a href="#">Printing Results are Not Good</a>	173
<a href="#">Paper Curls</a>	174
<a href="#">Paper Creases</a>	175
<a href="#">Printing is Uneven</a>	176
<a href="#">White Specks or Spots Appear on the Printout</a>	177
<a href="#">The Toner does Not Flow Well into the Paper</a>	178
<a href="#">Vertical Streaks Appear on the Output</a>	179
<a href="#">Toner Smudges and Spatters Appear around Text and Images</a>	180
<a href="#">The Printout is Too Dark</a>	181
<a href="#">Printed Bar Codes Cannot be Scanned</a>	182
<a href="#">Images may be partially cut off on the output</a>	183
<a href="#">Uninstalling the Software</a>	184
<a href="#">When a Service Error Has Occurred</a>	186
<a href="#">When a Problem cannot be Resolved</a>	187
<a href="#">Maintenance</a>	188
<a href="#">Cleaning the Machine</a>	189
<a href="#">Cleaning the Exterior</a>	190
<a href="#">Cleaning the Inside of the Machine</a>	191
<a href="#">Cleaning the Fixing Unit</a>	194
<a href="#">Cleaning the Platen Glass</a>	195
<a href="#">Attention (Cleaning the Machine)</a>	197
<a href="#">Replacing Toner Cartridges</a>	199
<a href="#">Before Replacing the Toner Cartridge</a>	200
<a href="#">Replacing the Toner Cartridge</a>	203
<a href="#">Attention (Replacing the Toner Cartridge)</a>	207
<a href="#">Special Mode</a>	210
<a href="#">Relocating the Machine</a>	213
<a href="#">Attention (Relocating the Machine)</a>	216
<a href="#">Appendix</a>	217
<a href="#">Basic Windows Operations</a>	218
<a href="#">Disclaimers</a>	220
<a href="#">Copyright</a>	221
<a href="#">Trademarks</a>	222
<a href="#">Contact Us</a>	223
<a href="#">Using the e-Manual</a>	224
<a href="#">How to Use the e-Manual</a>	225
<a href="#">System Requirements</a>	226
<a href="#">Installing the e-Manual</a>	227
<a href="#">Uninstalling the e-Manual</a>	229
<a href="#">Screen Layout of the e-Manual</a>	230
<a href="#">Top Page</a>	231
<a href="#">Topic Page</a>	232
<a href="#">Contents Page</a>	233
<a href="#">Search Method</a>	234
<a href="#">Viewing the e-Manual</a>	235

## Important Safety Instructions

---

030E-000

Please read these "Important Safety Instructions" thoroughly before using the machine.

These instructions are intended to prevent injuries to you and other persons as well as equipment damage. Failure to follow these instructions could result in serious personal injury, product damage, or improper operation.

Please follow the instructions in this manual.

---

## Important Safety Instructions

---

030E-001

Please read the following safety warnings and precautions before using the machine.


- ❖ "Installation"
  - ❖ "Power Supply"
  - ❖ "Handling"
  - ❖ "Maintenance and Inspections"
  - ❖ "Consumables"
  - ❖ "Others"
-

## **WARNING**

- Do not install the machine in a location near alcohol, paint thinner, or other flammable substances. If flammable substances come into contact with electrical parts inside the machine, this may result in a fire or electrical shock.
- Do not place the following items on the machine.
  - Necklaces and other metal objects
  - Cups, vases, flowerpots, and other containers filled with water or liquids

If these items come into contact with a high-voltage area inside the machine, this may result in a fire or electrical shock.

If these items are dropped or spilled inside the machine, immediately turn off the power switches of the machine and computer (1) and disconnect the interface cable if it is connected (2). Then, unplug the power plug from the AC power outlet (3) and contact your local authorized Canon dealer.

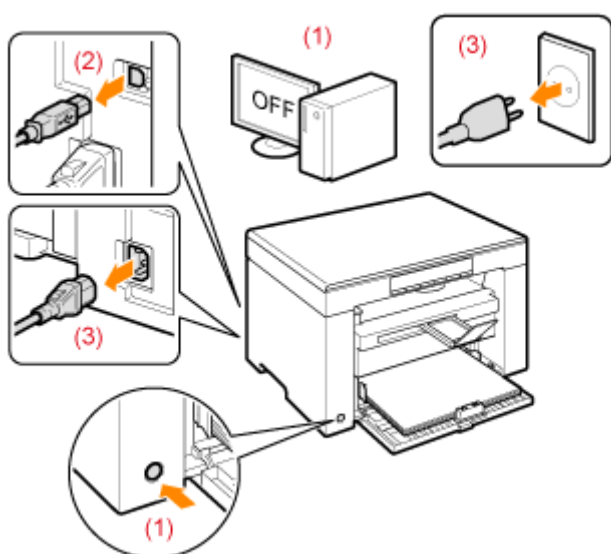

## **CAUTION**

- Do not install the machine in unstable locations, such as on unsteady platforms or inclined floors, or in locations subject to excessive vibrations, as this may cause the machine to fall or tip over, resulting in personal injury.
- The ventilation slots are provided for proper ventilation of working parts inside the machine. Never place the machine on a soft surface, such as a bed, sofa, or rug. Blocking the slots can cause the machine to overheat, resulting in a fire.
- Do not install the machine in the following locations, as this may result in a fire or electrical shock.
  - A damp or dusty location
  - A location exposed to smoke and steam, such as near a cookery or humidifier
  - A location exposed to rain or snow
  - A location near a water faucet or water
  - A location exposed to direct sunlight
  - A location subject to high temperatures
  - A location near open flames
- When installing the machine, gently lower the machine to the installation site so as not to catch your hands between the machine and the floor or between the machine and other equipment, as this may result in personal injury.
- When connecting the interface cable, connect it properly by following the instructions in this manual. If not connected properly, this may result in malfunction or electrical shock.
- When moving the machine, follow the instructions in this manual to hold it correctly. Failure to do so may cause you

to drop the machine, resulting in personal injury.  
➤ ["Relocating the Machine"](#)

---



### **WARNING**

- Do not damage or modify the power cord. Also, do not place heavy objects on the power cord or pull on or excessively bend it. This can cause electrical damage, resulting in fire or electrical shock.
- Keep the power cord away from all heat sources. Failure to do so can cause the power cord insulation to melt, resulting in a fire or electrical shock.
- The power cord should not be taut, as this may lead to a loose connection and cause overheating, which could result in a fire.
- The power cord may become damaged if it is stepped on, fixed with staples, or if heavy objects are placed on it. Continued use of a damaged power cord can lead to an accident, such as a fire or electrical shock.
- Do not plug or unplug the power plug with wet hands, as this can result in electrical shock.
- Do not plug the power cord into a multiplug power strip, as this can result in a fire or electrical shock.
- Do not bundle up or tie up the power cord in a knot, as this can result in a fire or electrical shock.
- Insert the power plug completely into the AC power outlet. Failure to do so can result in a fire or electrical shock.
- If excessive stress is applied to the connection part of the power cord, it may damage the power cord or the wires inside the machine may be disconnected. This could result in a fire. Avoid the following situations:
  - Connecting and disconnecting the power cord frequently.
  - Tripping over the power cord.
  - The power cord is bent near the connection part, and continuous stress is being applied to the power outlet or the connection part.
  - Applying a shock to the power connector.
- Do not use power cords other than the one provided, as this can result in a fire or electrical shock.
- As a general rule, do not use extension cords. Using an extension cord may result in a fire or electrical shock.
- Remove the power plug from the AC power outlet and refrain from using the machine during a thunder storm. Lightning can result in a fire, electrical shock or malfunction.

### **CAUTION**

- Do not use a power supply voltage other than that listed herein, as this may result in a fire or electrical shock.
- Always grasp the power plug when unplugging the power plug. Do not pull on the power cord, as this may expose the core wire of the power cord or damage the cord insulation, causing electricity to leak, resulting in a fire or electrical shock.
- Leave sufficient space around the power plug so that it can be unplugged easily. If objects are placed around the power plug, you may be unable to unplug it in an emergency.

### **WARNING**


- Do not disassemble or modify the machine. There are high-temperature and high-voltage components inside the machine which may result in a fire or electrical shock.
- Electrical equipment can be hazardous if not used properly. Do not allow children to touch the power cord, cables, internal gears, or electrical parts.
- If the machine makes an unusual noise or emits smoke, heat, or an unusual smell, immediately turn off the power switches of the machine and computer and disconnect the interface cable if it is connected. Then, unplug the power plug from the AC power outlet and contact your local authorized Canon dealer. Continued use can result in a fire or electrical shock.
- Do not use flammable sprays near the machine. If flammable substances come into contact with electrical parts inside the machine, this may result in a fire or electrical shock.
- Always turn off the power switches of the machine and computer, and then unplug the power plug and interface cables before moving the machine. Failure to do so can damage the cables or cords, resulting in a fire or electrical shock.
- Confirm that the power plug or power connector is inserted completely after moving the machine. Failure to do so can result in an overheating and fire.
- Do not drop paper clips, staples, or other metal objects inside the machine. Also, do not spill water, liquids, or other flammable substances (alcohol, benzene, paint thinner, etc.) inside the machine. If these items come into contact with a high-voltage area inside the machine, this may result in a fire or electrical shock. If these items are dropped or spilled inside the machine, immediately turn off the power switches of the machine and computer and disconnect the interface cable if it is connected. Then, unplug the power plug from the AC power outlet and contact your local authorized Canon dealer.
- When plugging or unplugging a USB cable when the power plug is plugged into an AC power outlet, do not touch the metal part of the connector, as this can result in electrical shock.

### **CAUTION**

- Do not place heavy objects on the machine. The object or the machine may fall, resulting in personal injury.
- Turn off the power switch when the machine will not be used for a long period of time, such as overnight. Turn off the machine and unplug the power plug if the machine will not be used for an extended period of time, such as for several days.
- Open or close covers and install or remove cassettes gently and carefully. Be careful not to hurt your fingers.
- Keep your hands and clothing away from the roller in the output area. Even if the machine is not printing, the roller may suddenly rotate and catch your hands or clothing, resulting in personal injury.
- The output slot is hot during and immediately after printing. Do not touch the area surrounding the output slot, as this may result in burns.
- Printed paper may be hot immediately after being output. Be careful when removing the paper and aligning the removed paper, especially after continuous printing. Failure to do so may result in burns.
- When performing copy with a thick book placed on the platen glass, do not press the platen glass forcefully. This may damage the platen glass and cause personal injury.
- Be careful not to drop a heavy object, such as a dictionary, on the platen glass. This may damage the platen glass and cause personal injury.
- Close the platen glass gently so as not to catch your hand. This may result in personal injury.
- The laser beam can be harmful to the human body. The laser beam is confined in the laser scanner unit by a cover, so there is no danger of the laser beam escaping during normal machine operation. Read the following

remarks and instructions for safety.

- Never open covers other than those indicated in this manual.
- Do not remove the caution label attached to the cover of the laser scanner unit.

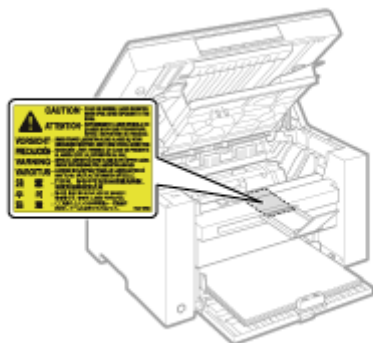


- If the laser beam should escape and enter your eyes, exposure may cause damage to your eyes.

### **WARNING**

- When cleaning the machine, turn off the machine and computer, and unplug the interface cables and power plug. Failure to do so can result in a fire or electrical shock.
- Unplug the power plug from the AC power outlet periodically and clean the area around the base of the power plug's metal pins and the AC power outlet with a dry cloth to remove all dust and grime. In damp, dusty, or smoky locations, dust can build up around the power plug and become damp, which can cause a short circuit, resulting in a fire.
- Clean the machine with a well wrung out cloth dampened with water or mild detergent diluted with water. Do not use alcohol, benzene, paint thinner, or other flammable substances. If flammable substances come into contact with electrical parts inside the machine, this may result in a fire or electrical shock.
- Some areas inside the machine are subject to high voltage. When removing jammed paper or when inspecting inside of the machine, be careful not to allow necklaces, bracelets, or other metal objects to touch the inside of the machine, as this can result in burns or electrical shock.
- Do not dispose of used toner cartridges in open flames. This may cause the toner remaining inside the cartridges to ignite, resulting in burns or fire.
- If you accidentally spill or scatter toner, carefully gather the toner particles together or wipe them up with a soft, damp cloth in a way that prevents inhalation. Never use a vacuum cleaner that does not have safeguards against dust explosions to clean up spilled toner. Doing so may cause a malfunction in the vacuum cleaner, or result in a dust explosion due to static discharge.
- Confirm that the power plug or power connector is inserted completely after cleaning the machine. Failure to do so can result in an overheating and fire.
- Check the power cord and plug regularly. The following conditions may result in fire, so please contact your local authorized Canon dealer or the Canon help line.
  - There are burn marks on the power plug.
  - The blade on the power plug is deformed or broken.
  - The power is turned OFF or ON when bending the power cord.
  - The coating of the power cord is damaged, cracked, or dented.
  - A part of the power cord becomes hot.
- Check regularly that the power cord and plug are not handled in the following manner. Failure to do so can result in a fire or electrical shock.
  - The power connector is loosened.
  - Stress is being applied to the power cord by a heavy object or by fixing it with staples.
  - The power plug is loosened.
  - The power cord is tied in a bundle.
  - A part of the power cord is put in an aisle.
  - The power cord is put in front of the heating appliance.

### **CAUTION**

- The fixing unit and its surroundings inside the machine become hot during use. When removing jammed paper or when inspecting the inside of the machine, do not touch the fixing unit and its surroundings, as this may result in burns.

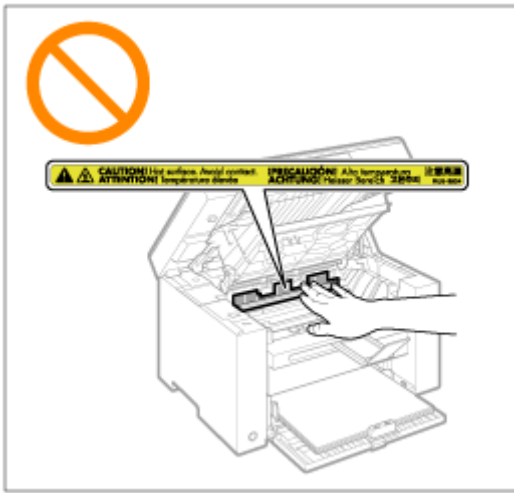

- When removing jammed paper or when inspecting the inside of the machine, do not expose yourself to the heat emitted from the fixing unit and its surroundings for a prolonged period of time. Doing so may result in low temperature burns, even though you did not touch the fixing unit and its surroundings directly, as this may result in burns.
- If paper is jammed, remove the jammed paper so that any pieces of paper do not remain inside the machine. Also, do not put your hand in an area other than indicated areas, as this may result in personal injuries or burns.
- When removing jammed paper or replacing a toner cartridge, be careful not to get any toner on your hands or clothing, as this will dirty your hands or clothing. If toner gets on your hands or clothing, wash them immediately with cold water. Washing with warm water sets the toner, making it impossible to remove the toner stains.
- When removing jammed paper, be careful not to allow the toner on the paper to scatter. The toner may get into your eyes or mouth. If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.
- When loading paper or removing jammed paper, be careful not to cut your hands with the edges of the paper.
- When removing a toner cartridge, remove the toner cartridge carefully so as to prevent the toner from scattering and getting into your eyes or mouth. If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.
- Do not attempt to disassemble the toner cartridge. The toner may scatter and get into your eyes or mouth. If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.
- If toner leaks from the toner cartridge, be careful not to inhale the toner or allow it to come into direct contact with your skin. If the toner comes into contact with your skin, wash with soap. If the skin becomes irritated or you inhale the toner, consult a physician immediately.

### **WARNING**

- Do not dispose of used toner cartridges in open flames. This may cause the toner to ignite, resulting in burns or fire.
- Do not store toner cartridges or paper in a location exposed to open flames. This may cause the toner or paper to ignite, resulting in burns or fire.
- When disposing of a toner cartridge, place the toner cartridge into a bag to prevent the toner from scattering, and then dispose of the toner cartridge according to local regulations.
- If you accidentally spill or scatter toner, carefully gather the toner particles together or wipe them up with a soft, damp cloth in a way that prevents inhalation.  
Never use a vacuum cleaner that does not have safeguards against dust explosions to clean up spilled toner. Doing so may cause a malfunction in the vacuum cleaner, or result in a dust explosion due to static discharge.

### **CAUTION**

- Keep the toner cartridges and other consumables out of the reach of small children. If the toner or other parts are ingested, consult a physician immediately.
- Do not attempt to disassemble the toner cartridge. The toner may scatter and get into your eyes or mouth. If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.
- If toner leaks from the toner cartridge, be careful not to inhale the toner or allow it to come into direct contact with your skin. If the toner comes into contact with your skin, wash with soap. If the skin becomes irritated or you inhale the toner, consult a physician immediately.
- Do not pull out the sealing tape forcefully or stop at midpoint, as this may cause toner to spill out. If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.

 **WARNING**

**If you are using a cardiac pacemaker**

This machine generates a low level magnetic field. If you use a cardiac pacemaker and feel abnormalities, please move away from this machine and consult your physician immediately.

---

# Installation and Handling

030E-008

To make sure safe and trouble-free operation, the following installation requirements must be observed.

Read the instructions carefully before installing the machine.

- [Temperature and Humidity Conditions](#)
- [Power Supply Requirements](#)
- [Installation Requirements](#)
- [Installation Space](#)
- [Maintenance and Inspections](#)
- [Customer Support](#)

## **IMPORTANT**

### **Important Safety Instructions**

Be sure to read "Important Safety Instructions" before installing the machine.

## Temperature and Humidity Conditions

- Temperature range: 10 to 30°C
- Humidity range: 20 to 80 % RH (no condensation)

## **IMPORTANT**

### **Protecting the machine from condensation**

- Allow the machine to adjust to the installation environment (room temperature and humidity) for at least two hours before using, to prevent condensation from forming inside the machine when:
  - the installation location is warmed up too rapidly.
  - the machine has been moved to a hot, humid location from a cool, dry location.
- If water droplets (condensation) form inside the machine, this may result in paper jams or poor print quality.

### **To use an ultrasonic humidifier**

We recommend that purified or impurity-free water be used when using an ultrasonic humidifier. The use of tap water or well water may result in contamination by impurities in the air, as well as print quality degradation due to water trapped inside the machine.

## Power Supply Requirements

220 to 240 V, 50/60 Hz

## **IMPORTANT**

### **Precautions when connecting the power cord**

- Do not connect the machine to an uninterruptible power source.
- Make sure to plug an AC power plug into the AC outlet. Do not use the other sockets of the AC outlet.
- Do not plug the power plug into the auxiliary outlet on a computer.  
Do not connect the machine and any of the following devices to the same AC outlet.
  - Copy machine
  - Air conditioner
  - Shredder
  - Equipment that consumes a large amount of electricity
  - Equipment that generates electrical noise
- Wait for at least five seconds to plug the power cord into the outlet again after the cord has been unplugged.



## Miscellaneous precautions

- The maximum power consumption of the machine is 960 W or less.
- Electrical noise or a dramatic voltage drop may result in improper operation and irretrievable data loss.

## Installation Requirements

- A location that has sufficient free space
- A location that has good ventilation
- A location that has a flat, even surface
- A location that can withstand the weight of the machine


### IMPORTANT

**Do not install the machine at the following locations, as this may result in product damage.**

- A location subject to dramatic temperature and humidity changes
- A location subject to condensation
- A poorly ventilated location  
(If you perform high-volume printing for an extended period of time using the machine placed in a poorly ventilated room, you may be exposed to ozone and odors generated by the machine, as well as chemical particles released during printing.  
It is highly important that proper ventilation be assured at the installation location.)
- A location near equipment that generates magnetic or electromagnetic waves
- A laboratory or location where chemical reactions occur
- A location exposed to salt air, corrosive gases, or toxic gases
- A location where the floor is covered with a carpet or floor mat, to cause the machine to slide easily over or sink into the carpet or mat from its weight

## Installation Space

Required installation space

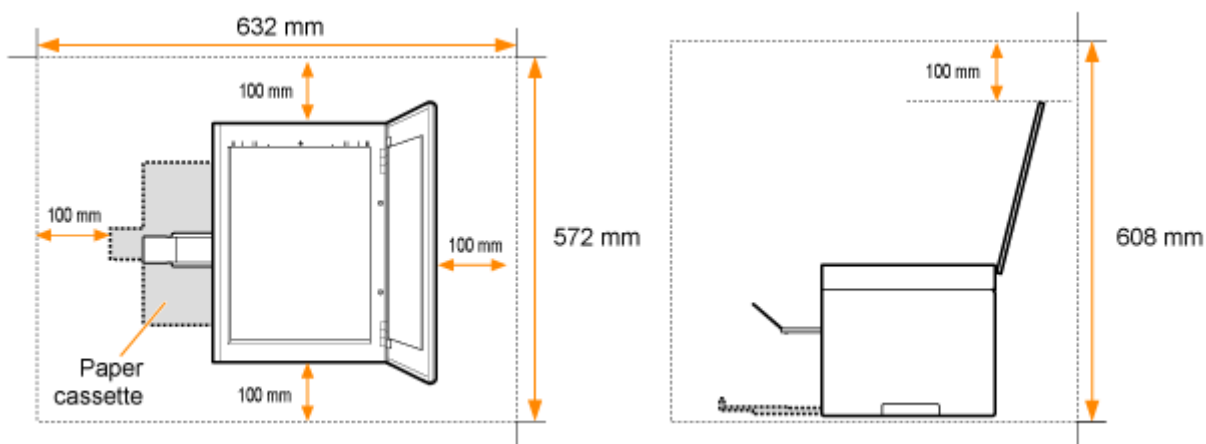

## Maintenance and Inspections

### IMPORTANT

- Follow the instructions written on the caution label attached to this machine.
- Avoid shaking or applying a shock to the machine.
-

- To prevent a paper jam, do not turn the power ON/OFF, open/close the operation panel or rear cover, and load/unload paper in the middle of printing operation.
- Be sure to remove the toner cartridges from the machine when moving the machine.
- To avoid exposing the toner cartridge to light, place it in the protective bag that comes with the machine or wrap it in a thick cloth.
- Clean the machine regularly. If the machine becomes dusty, it may lead to improper operation.
- The repair parts and toner cartridge for use with the machine will be available for at least seven (7) years after this machine model has been discontinued.

## **Customer Support**

The machine is designed to make sure safe use and be maintenance-free. If a problem occurs during operation, see "[Troubleshooting](#)." When the problem cannot be resolved after referring to the appropriate trouble shooting section, contact your local authorized Canon dealer or the Canon help line.

---

This chapter describes the features and useful functions of the machine.

The following sections give a brief overview of the machine and instructions on how to use the machine efficiently. Read these sections thoroughly before using the machine.

Learning about parts of the machine	See " <a href="#">Parts and Their Functions.</a> "
Learning about energy saving functions (sleep functions)	See " <a href="#">Energy Saving Functions (Sleep Mode).</a> "
Navigating the Menu	See " <a href="#">How to Operate Menus.</a> "
Checking the details of the toner cartridges	See " <a href="#">Toner Cartridges.</a> "
Placing documents	See " <a href="#">Placing Documents.</a> "
Loading paper	See " <a href="#">Loading Paper.</a> "
Setting the paper type	See " <a href="#">Setting a Paper Type.</a> "
Setting the auto shutdown time	See " <a href="#">Setting the Auto Shutdown Time.</a> "
Restoring the setup menus to the default value	See " <a href="#">Initializing Menus.</a> "
To check menu settings	See " <a href="#">Printing the User Data List.</a> "
Checking the counter	
Learning about firmware upgrades	See " <a href="#">Upgrading Firmware.</a> "
Locating the serial number	See " <a href="#">Locating the Serial Number.</a> "


## Parts and Their Functions

---

030E-00A

This section describes the parts of the machine and their functions.

- ❖ "Front Side"
  - ❖ "Back Side"
  - ❖ "Interior"
  - ❖ "Paper Cassette"
  - ❖ "Operation Panel and Display"
-

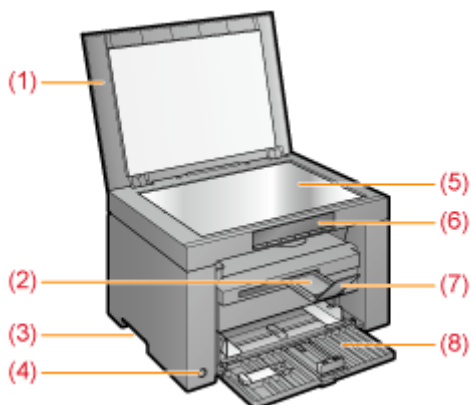

**(1) Platen Glass Cover**

Protects the platen glass.

**(2) Output Tray Extension**

Extend this tray to load large size documents.

**(3) Lift Handles**

Hold this handles to lift or transport the machine.

**(4) Power Switch**

Used to switch the machine ON or OFF.

**(5) Platen Glass**

Load paper.

**(6) Operation Panel**

Used to control the machine.

➤ ["Operation Panel and Display"](#)


**(7) Paper Stopper**

Prevents paper from falling from the output tray.

**(8) Paper Cassette**

Load the paper.

➤ ["Paper Cassette"](#)

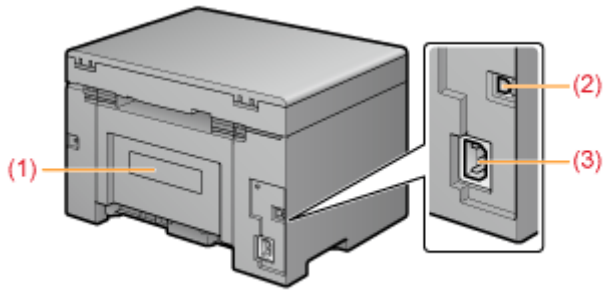

**(1) Rating Label**

The current value indicated in this rating label shows the average power current consumption.


**(2) USB Port**

Connect the USB cable.

**(3) Power Socket**

Connect the power cord.

---

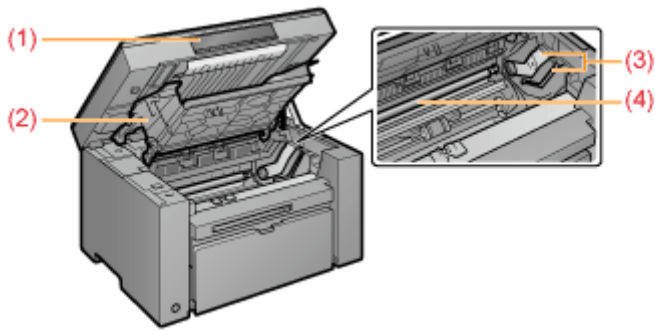

**(1) Scanning Platform**

Open this cover to replace the toner cartridge or clear paper jams.

**(2) Toner Cover**

Open this cover to replace the toner cartridge or clear paper jams.

**(3) Toner Guides**


Used to insert the toner cartridge so that the protrusion on the side of the toner cartridge fits into these guides.

**(4) Transfer Roller**

Used to transfer toner onto paper.

## Paper Cassette

030E-00H

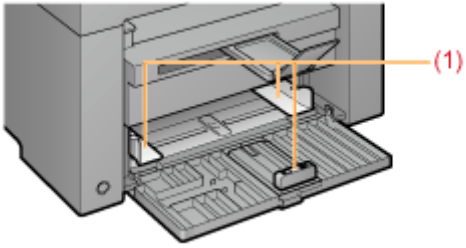

### (1) Paper Guides

Adjust these guides to fit the document.


---



# Operation Panel and Display

- Operation Panel
- Viewing the Display

## Operation Panel

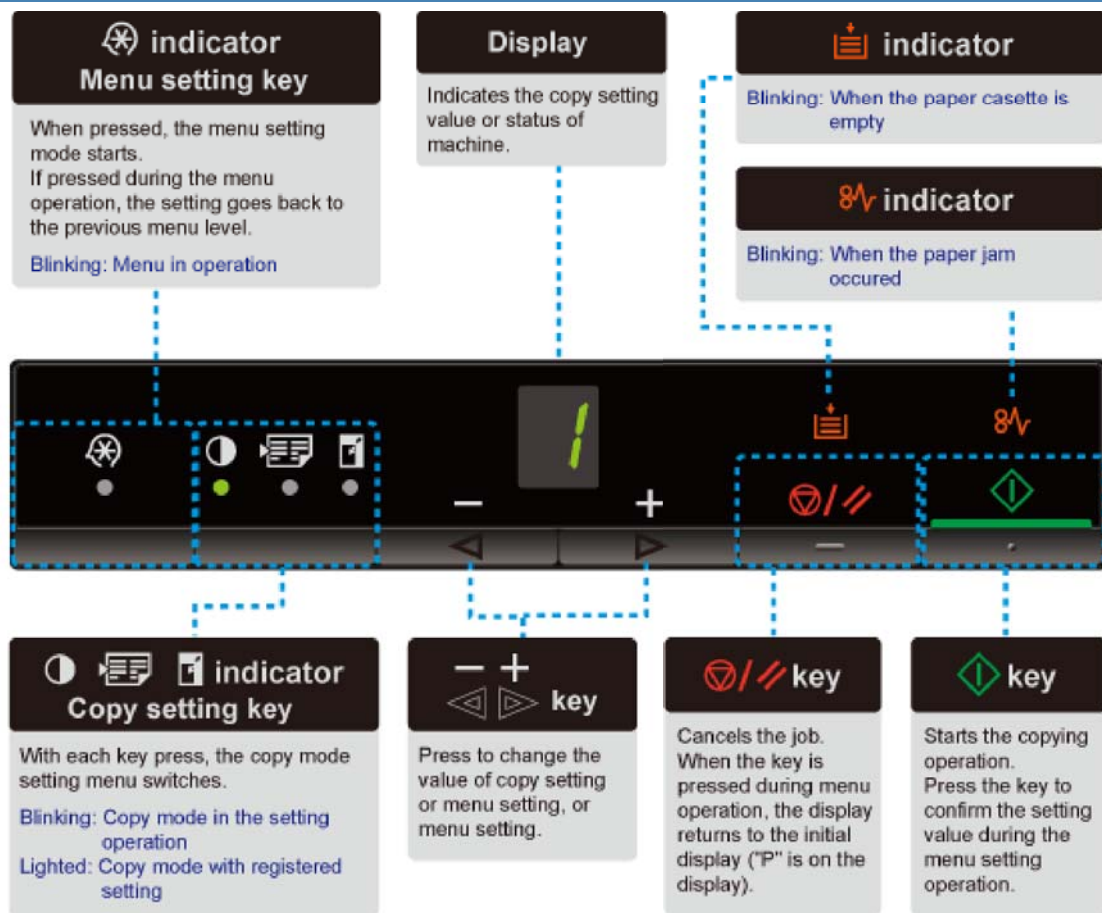

### NOTE

**When [ E ], [ Paper Cassette ], and [ 8V ] are on at a time**

A service error is occurring.

- "When a Service Error Has Occurred"



## Viewing the Display

Copy settings, menu setting items, or setting values are displayed.

- "Setting List"

Also, they are displayed according to the printer status as follows.

Display	Status
	<ul style="list-style-type: none"> <li>• Printing</li> <li>• Printing the User Data List</li> <li>• Cleaning</li> <li>• Updating the firmware</li> <li>• Scanning</li> </ul>


	<p>Cancellation is processing after the [  ] key was pressed.</p>
	<p>Sleep state  <a href="#">➤ "Energy Saving Functions (Sleep Mode)"</a></p>
	<p>The toner cover is open.</p>
	<p>A service error has occurred.  <a href="#">➤ "When a Service Error Has Occurred"</a></p>
	<ul style="list-style-type: none"> <li>▪ Resetting the settings</li> <li>▪ Setting value limit display</li> </ul> <p>(For each copy setting, the display turns off when an attempt is made to exceed the upper or lower setting limits by pressing the [ + ] or [ - ] keys.)</p>

# Using the Quick Reference Guide

030E-06H

Place this guide near the printer for effective usage.

## Front side (operating instruction page)

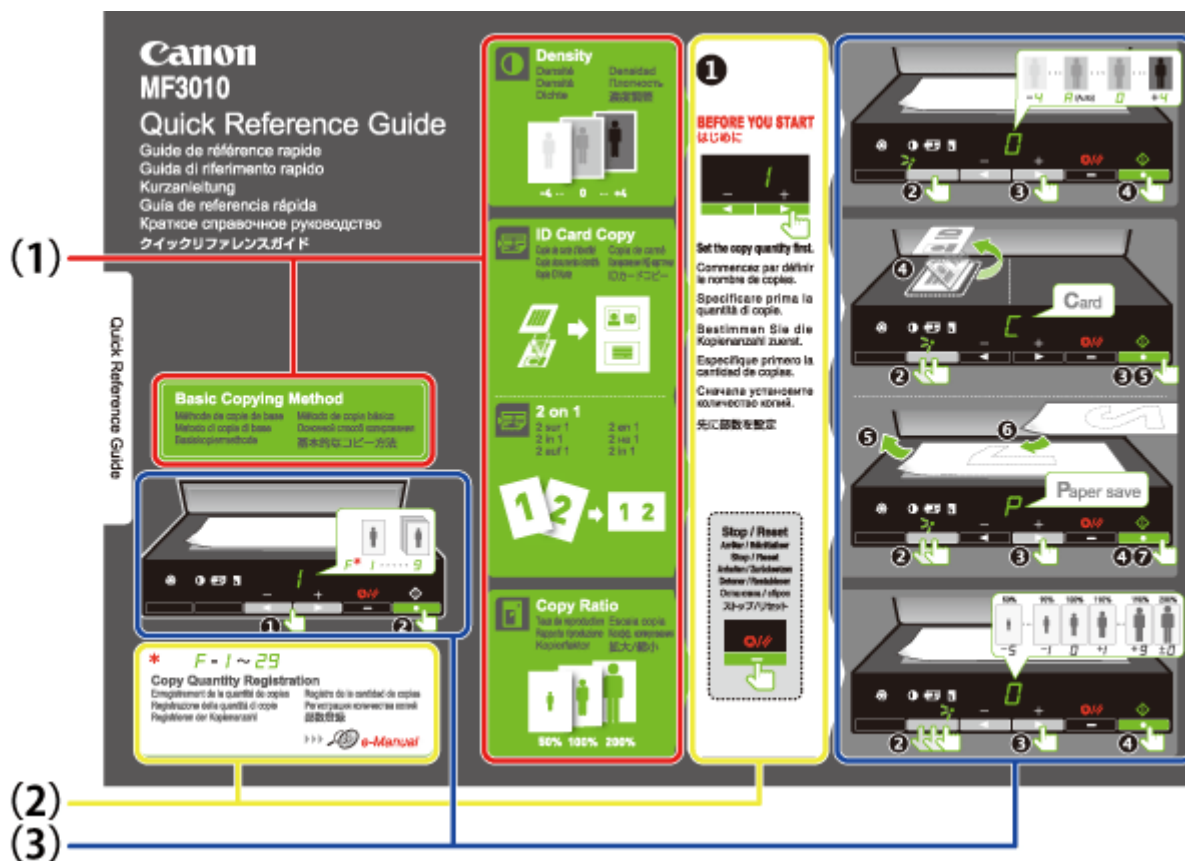

### (1) Description of Various Copy

- ❖ "Basic Copy Operations"
- ❖ "Adjusting the Density"
- ❖ "Enlarging/Reducing Copy"
- ❖ "Copying Both Sides of Cards onto One Side (ID Card Copy)"
- ❖ "Copying Two Documents onto One Sheet (2 on 1 Copy)"

### (2) Quantity Settings


If you frequently copy with the fixed quantity, see "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)."

### (3) Operating Procedures

Follow the procedure in numerical order.

For details on the setting values for each setting, see "Setting List."

## Reverse side (paper jams and troubleshooting page)

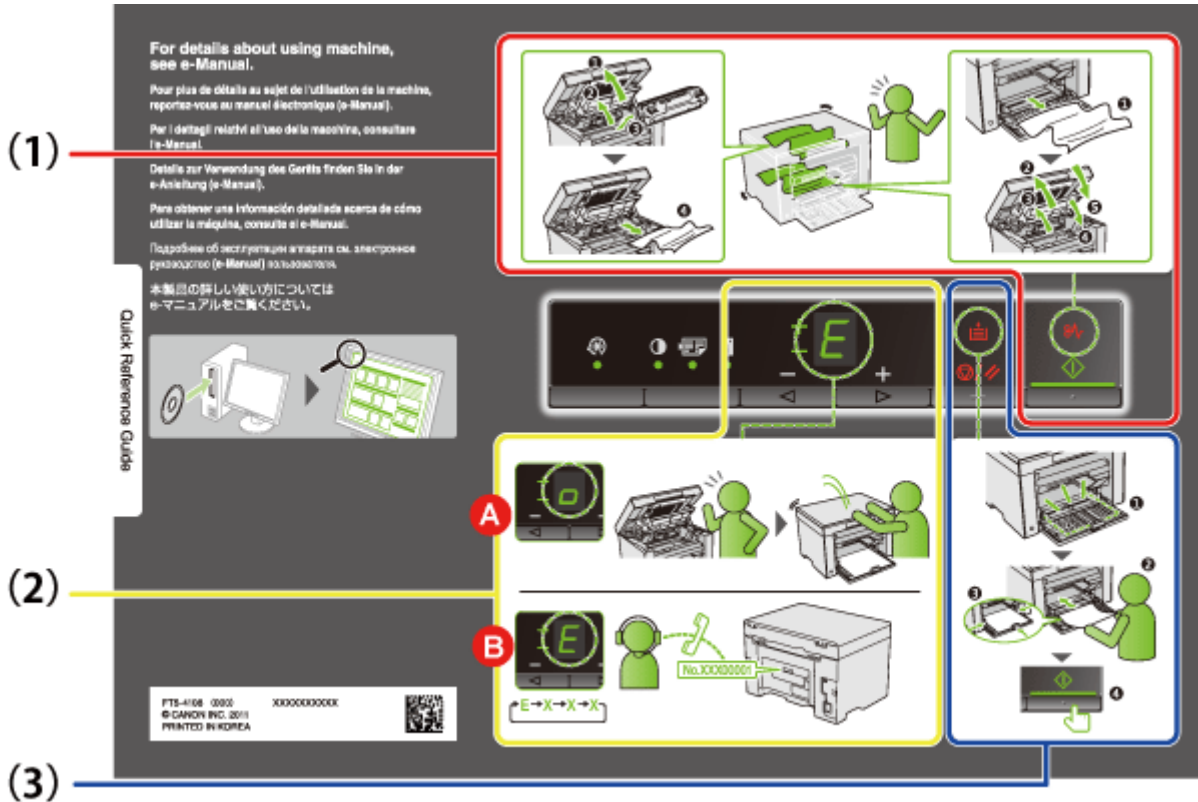

- (1) If a Paper Jam Has Occurred
  - "Removing Jammed Paper"
- (2) A : Cover Open
  - "How to Operate Menus"
 B : Service Error
  - "When a Service Error Has Occurred"
- (3) No Paper
  - "Loading Paper"

## Energy Saving Functions (Sleep Mode)

030E-00K

A function is provided that transitions the printer into an energy saving mode with low power consumption (sleep function) when it is not used for a set period of time. After 5 minutes\* has elapsed during which time data is not received from the computer and there are no changes to the printer, it transitions into the sleep mode.

\* You cannot change the transition time.

### **IMPORTANT**

#### **Power consumption when the printer is turned OFF**

Even when the printer is turned OFF a tiny amount of power is still being consumed while the printer is plugged into an AC power outlet. In order to eliminate power consumption completely, unplug the power cord from the AC power outlet.

#### **When entering the sleep mode**

All indicators turn off and the display shows " - ".

#### **Situations where the machine does not enter the sleep mode**

- When the machine is in operation
- When data remains in the memory
- When an error, such as open cover, occurs in the printer
- When the machine is operating such as adjusting and cleaning
- When a paper jam occurs in the machine
- When it updates the firmware

#### **The machine resumes from the sleep mode**

- When any key on the printer's operation panel is pressed
- When a print job is sent from a computer, and printing starts
- When USB cables are connected

# How to Operate Menus

030E-00L

This section describes how to operate or set up the menu.

## To cancel operations

Press [  ], and then press [  ] (Menu setting key).

It cancels operations without saving the settings and returns to a status where normal operation is possible.

	Operating results	Operating procedures
1		<p><b>Press [  ] (Menu setting key), and then start the menu operation.</b></p> <p>When the menu is operating, the menu indicator blinks.</p>
2		<p><b>Press [  ] or [  ], select the items which you want to set.</b></p> <p>Letters showing menu items are displayed on the display.</p> <ul style="list-style-type: none"><li>❖ "Setting List"</li></ul>
3		<p><b>Press [  ], set the menu to be able to change the settings.</b></p> <p>※ To return to the previous screen, press [  ].</p>
4		<p><b>Press [  ] or [  ], change the setting values.</b></p>
5		<p><b>Press [  ], confirm the setting.</b></p>

6



Press [  ] (Menu setting key), exit the menu operation.

The menu indicator turns off.




# Setting List












030E-064

- Copy Setting List
- Menu Setting List


## Copy Setting List

The following copy settings are available for the printer.

You can switch the copy settings by pressing [    ] (Copy setting key).

Indicator	Function name (Default value)	Setting value		Reference
		Display	Detail	
No blinking	Copy quantity setting (Default value: 1)	F	Custom copy quantity	➤ "Custom copy quantity"
		1	1 copy	➤ "Basic Copy Operations"
		2	2 copies	
		3	3 copies	
		4	4 copies	
		5	5 copies	
		6	6 copies	
		7	7 copies	
		8	8 copies	
		9	9 copies	
[  ] indicator	Copy density (Default value: 0)	-4		➤ "Adjusting the Density"
		-3		
		-2		
		-1		
		A	Auto	
		0		
		+1		
		+2		
		+3		
		+4		
[  ] indicator	2 on 1/ID card copy (Default value: C)	C	ID card copy	➤ "Copying Both Sides of Cards onto One Side (ID Card Copy)"
		P	2 on 1 copy	➤ "Copying Two Documents onto One Sheet (2 on 1 Copy)"
		-5	50%	
		-4	60%	



[  ] indicator	Enlarging/reducing copy (Default value: 0)	-3	70%	"Enlarging/Reducing Copy"
		-2	80%	
		-1	90%	
		0	100% (magnification)	
		+1	110%	
		+2	120%	
		+3	130%	
		+4	140%	
		+5	150%	
		+6	160%	
		+7	170%	
		+8	180%	
		+9	190%	
		±0	200%	

 **NOTE**

**Indicator display**

The display is changed for each of [  ], [  ], and [  ] indicators according to the status.

Blinking : The function indicator in the setting process blinks.

Lighted : After the setting is done, the corresponding indicator lights up.

**Custom copy quantity**

Function name (Default value)	Setting value		Reference
	Display	Detail	
	1	1 copy	
	2	2 copies	
	3	3 copies	
	4	4 copies	
	5	5 copies	
	6	6 copies	
	7	7 copies	
	8	8 copies	
	9	9 copies	
	+0	10 copies	
	+1	11	

Custom copy quantity (Default value: ±0)		copies
	+2	12 copies
	+3	13 copies
	+4	14 copies
	+5	15 copies
	+6	16 copies
	+7	17 copies
	+8	18 copies
	+9	19 copies
	±0	20 copies
	±1	21 copies
	±2	22 copies
	±3	23 copies
	±4	24 copies
	±5	25 copies
	±6	26 copies
	±7	27 copies
±8	28 copies	
±9	29 copies	








➤ "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"






## Menu Setting List

The following menu settings are available for the printer.

After pressing [  ] (Menu setting key), press [ ◀ ] or [ ▶ ] to switch the menu settings.

Indicator	Function name (Default value)	Setting value		Reference
		Display	Detail	
		1	Plain paper	
		+1	Plain Paper L	
			Heavy Paper	

	Paper type setting (Default value: 1)	2	1	❏ "Setting a Paper Type"
		+2	Heavy Paper 2	
		3	Rough Paper	
		4	Envelope	
		5	Transparency	
		6	Label	
	Copy type setting (Default value: 1)	1	Speed Priority	❏ "Selecting Copy Type (Speed Priority/Resolution Priority)"
		2	Resolution Priority	
	Sharpness setting (Default value: 0)	-3	—	❏ "Emphasizing the Outline of an Image (Sharpness)"
		-2	—	
		-1	—	
		0	—	
		+1	—	
		+2	—	
		+3	—	
	Auto shutdown time setting (Default value: 4)	0	Off	❏ "Setting the Auto Shutdown Time"
		1	1 hour	
		2	2 hours	
		3	3 hours	
		4	4 hours	
		5	5 hours	
		6	6 hours	
		7	7 hours	
		8	8 hours	
	Special Mode b (Default value: 1)	0	Off	❏ "Special Mode"
		1	Mode 1	
		2	Mode 2	
		3	Mode 3	
		4	Mode 4	
	Special Mode c (Default value: 0)	0	Off	❏ "Special Mode"
		1	Mode 1	
		2	Mode 2	
		3	Mode 3	
	Special Mode d (Default value: 0)	0	Off	❏ "Special Mode"
		1	Mode 1	
		2	Mode 2	

	Special Mode h (Default value: 0)	0	Off	➤ "Special Mode"
		1	On	
	Cleaning the Fixing Unit	—	—	➤ "Cleaning the Fixing Unit"
	Printing the User Data List	—	—	➤ "Printing the User Data List"
	Upgrading Firmware	—	—	➤ "Upgrading Firmware"
	Initializing Menus	—	—	➤ "Initializing Menus"

# Toner Cartridges

---

030E-00R

For more information on the toner cartridges, see the following sections.

- ❖ "About the Supplied Toner Cartridge"
  - ❖ "About Replacement Toner Cartridges"
  - ❖ "Handling Toner Cartridges"
  - ❖ "Storing Toner Cartridges"
  - ❖ "Purchasing Consumables"
-

## About the Supplied Toner Cartridge

---

030E-00S

The average yield of the toner cartridge that comes with the machine is as follows.

Canon Cartridge 725 Starter	Average yield*1 : 700 sheets
--------------------------------	------------------------------

\*1 The average yield is on the basis of "ISO/IEC 19752"\*2 under the condition that A4 size paper is used for printing with the default print density setting.

\*2 "ISO/IEC 19752" is an ISO standard method for "the determination toner cartridge yield for monochrome electrophotographic printers and multi-function devices that contain printer components." The term ISO stands for International Organization for Standardization.

The average yield of the replacement toner cartridge varies from that of the supplied toner cartridge.

---

# About Replacement Toner Cartridges

030E-00U

Purchase replacement toner cartridges from your local authorized Canon dealer.

Follow the instructions provided in the following sections to replace the toner cartridge. Note that you may need to replace the toner cartridge earlier than the suggested replacement interval, depending on where the machine is installed, what kinds of paper used for printing, and what types of documents that you are printing.

<b>Canon genuine toner cartridge</b>	<b>Replacement Intervals</b>
Canon Cartridge 725	Average yield* <sup>1</sup> : 1600 sheets

\*<sup>1</sup> The average yield is on the basis of "ISO/IEC 19752"\*<sup>2</sup> under the condition that A4 size paper is used for printing with the default print density setting.

\*<sup>2</sup> "ISO/IEC 19752" is an ISO standard method for "the determination toner cartridge yield for monochrome electrophotographic printers and multi-function devices that contain printer components."

## **IMPORTANT**

### **About replacement toner cartridges**

For optimum print quality, replace the toner cartridge with the Genuine Canon Toner.

Model name	Supported Canon genuine toner cartridge
MF3010	Canon Cartridge 725

## Handling Toner Cartridges

030E-00W

Note the following when handling the toner cartridge.

### **WARNING**

#### **Do not place the toner cartridge in fire.**

This may cause toner remaining inside the cartridge to ignite and result in burns.

#### **When cleaning up spilled or scattered toner:**

If you accidentally spill or scatter toner, carefully gather the toner particles together or wipe them up with a soft, damp cloth in a way that prevents inhalation.

Never use a vacuum cleaner that does not have safeguards against dust explosions to clean up spilled toner. Doing so may cause a malfunction in the vacuum cleaner, or result in a dust explosion due to static discharge.

### **CAUTION**

#### **If toner leaks from the toner cartridge**

Be careful not to inhale the toner or allow it to come into direct contact with your skin. If the toner comes into contact with your skin, wash with soap. If the skin becomes irritated or you inhale the toner, consult a physician immediately.

#### **When removing a toner cartridge**

Make sure to remove it carefully. If not removed with care, the toner powder may scatter and come in contact with your eyes and mouth. If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.

#### **Keep the toner cartridge away from small children.**

If the toner or other parts are ingested, consult a physician immediately.

#### **Do not disassemble the toner cartridge.**

The toner may scatter and get into your eyes or mouth. If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.

### **IMPORTANT**

#### **Handling toner cartridges**

- Keep the toner cartridge away from computer screens, disk drives, and floppy disks. They may be damaged by magnet which is in inside of the toner cartridge.
- Avoid locations subject to high temperature, high humidity, or rapid changes in temperature.
- Do not expose the toner cartridge to direct sunlight or bright light for more than five minutes.
- Store the toner cartridge in its protective bag. Do not open the bag until you are ready to install the toner cartridge in the machine.
- Keep the protective bag for the toner cartridge. They are required when transporting the machine such as during relocation.
- Do not store the toner cartridge in a salty atmosphere or where there are corrosive gases such as from aerosol sprays.
- Do not remove the toner cartridge from the machine unnecessarily.
- Print quality may deteriorate if the drum surface is exposed to light or is damaged.
- Always hold the toner cartridge by its handle to avoid touching the drum.
- Do not place the toner cartridge in an upright or an upside down position. If the toner is kept upright or upside down, the toner will solidify and may not return to its original condition even if it is shaken.
- When disposing of a used toner cartridge, place the toner container into its protective bag to prevent the toner from scattering, and then dispose of the toner cartridge according to local regulations.

#### **Be careful of counterfeit toner cartridges.**

Please be aware that there are counterfeit Canon toner cartridges in the marketplace.

Use of counterfeit toner cartridge may result in poor print quality or machine performance.



Canon is not responsible for any malfunction, accident or damage caused by the use of counterfeit toner cartridge.  
For more information, see <http://www.canon.com/counterfeit>.

---

# Storing Toner Cartridges

030E-00X

Be aware of the following points when storing a new toner cartridge or handling the toner cartridge that was taken out of the machine for maintenance or relocating the machine somewhere.

## IMPORTANT

### Precautions when storing toner cartridges

To use toner cartridges in a safe and trouble-free manner, store them in a place that fulfills the following conditions.

- Do not store toner cartridges in a location exposed to direct sunlight.
- Do not store toner cartridges in a location subject to high temperature or humidity or in a location with dramatic changes in temperature or humidity.
  - Storage temperature range: 0 to 35°C
  - Storage humidity range: 35 to 85% RH (no condensation)
- Do not store toner cartridges in a place where corrosive gases, such as ammonia, are generated, or where a considerable amount of salt is contained in the air, or where there is a lot of dust.
- Keep toner cartridges out of the reach of small children.
- Keep toner cartridges away from products that may be damaged by magnetism, such as a floppy disk or disk drive.

### Store toner cartridges in the same orientation as when they are installed in the machine.

Do not store toner cartridges vertically or upside-down.

### When removing the toner cartridge which is being used from the machine

Immediately place the removed toner cartridge into the original protective bag or wrap it with a thick cloth.

### About a new toner cartridge

Do not take a new toner cartridge out of the protective bag until it is ready to be used.

## NOTE

### About condensation

Even within the storable humidity range, water droplets may develop both inside and outside toner cartridges due to the difference in temperature. The formation of water droplets is called condensation.

Condensation will adversely affect the quality of toner cartridges.

## **Purchasing Consumables**

---

030E-00Y

To purchase replacement toner cartridges, contact your local authorized Canon dealer.  
To find a dealer near, contact the Canon help line.

---

# Placing Documents


030E-010

This section describes how to place documents on the platen glass.

Before placing the documents on the platen glass, see "Attention (Placing Documents)."

**1**

**Open the platen glass.**

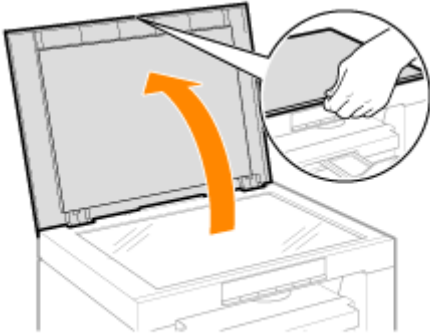

**2**


**Place your document face down.**



**3**

**Align the document with the appropriate paper size marks.**

If the document does not match any of the paper size marks, align the center of your document with the arrow mark.

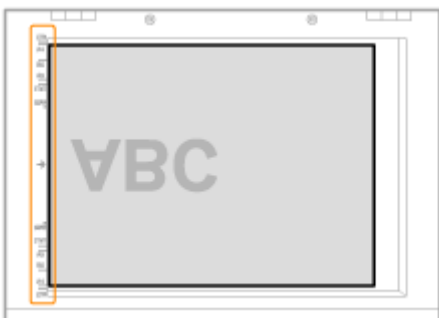

# 4

## **Close the platen glass gently.**

The machine is ready to scan or copy the document.

When scanning or copying is complete, remove the document from the platen glass.

---

## Attention (Placing Documents)

---

030E-011

### **CAUTION**

#### **Precautions when closing the platen glass**

- Be careful not to get your fingers caught. This may cause personal injury.
- Do not press down the feeder forcefully. This may damage the platen glass and cause personal injury.

# Loading Paper

---

030E-012

This section describes how to load paper in the paper cassette.

 **NOTE**

**To set your choice of paper type**

By default, the paper type is set to <Plain (16 lb Bond-24 lb Bond)>. To use a different paper type, you need to change the default settings.

 ["Setting a Paper Type"](#)

 ["In the Paper Cassette"](#)

---


## In the Paper Cassette

030E-013

Before loading paper in the paper cassette, see "Attention (Loading Paper)."

# 1

**Spread the paper guides a little wider than the paper size.**

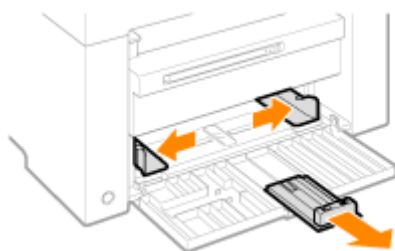


# 2

**Gently load the paper stack into the paper cassette with the print side face up, until the edge of the paper stack meets the back of the paper cassette.**


- "Paper Loading Capacity"
- "Paper Loading Orientation"

Make sure that the paper stack does not exceed the load limit guides (A).

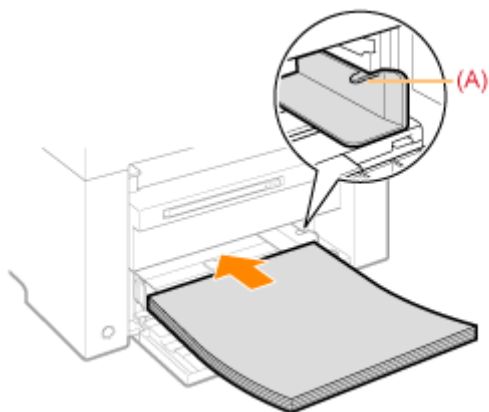

### When loading envelopes

- (1) Fold the envelope flap.

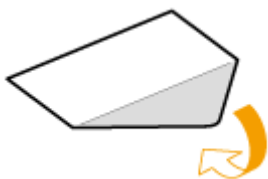

- (2) Place the stack of envelopes on a flat surface, flatten them to release any remaining air, and make sure that the edges are pressed tightly.






(3) Loosen any stiff corners of the envelopes and flatten curls as shown in the figure.




(4) Align the edges of the envelopes on a flat surface.

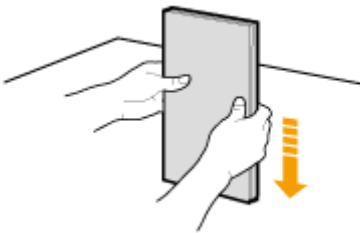

(5) Gently load the envelopes into the paper cassette with the print side face up, until the edge of the envelope stack meets the back of the paper cassette.

### 3

**Adjust the paper guides to the paper width without space.**

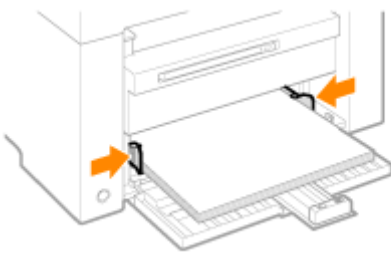

#### **IMPORTANT**


**Adjust the paper guides to the paper width without space.**

If the paper guides are too loose or too tight, this may result in misfeeds or paper jams.




## 4

**Adjust the rear paper guide to the paper length without space.**

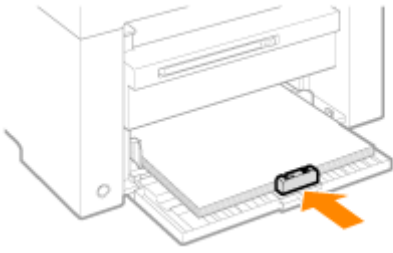

## 5

**Pull out the output tray extension and lift the paper stopper.**

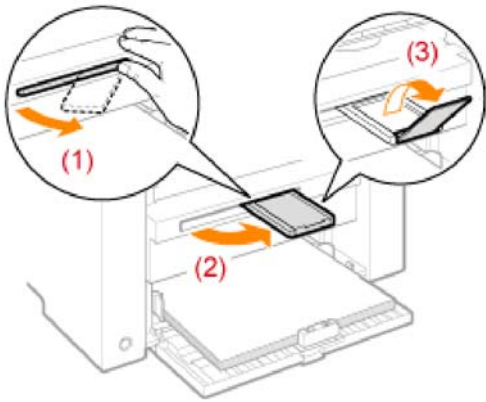

## 6

**Set the paper type loaded in the tray.**

➤ ["Setting a Paper Type"](#)

### CAUTION

#### **Adjust the paper guides to the paper width without space.**

Handle paper carefully not to cut your hands with the edges of the paper.

### IMPORTANT

#### **Be sure to align the paper guides with the width of the paper.**

- If the paper guides are too loose or too tight, this may result in misfeeds or paper jams.
- Printouts may be askew depending on the printing environment. Properly load paper to avoid this.

#### **Be sure to adjust paper sizes to the documents.**

Adjust the size of the paper loaded in the paper cassette to the documents.

When the paper which is loaded in the paper cassette is smaller than the documents, the output may be dirty with the toner that is placed outside of the paper.

#### **When using paper that has been poorly cut**

If you use paper that has been poorly cut, multiple sheets of paper may be fed at once. In this case, fan the paper thoroughly, and then align the edges of the stack properly on a hard, flat surface.

#### **Do not exceed the load limit mark when loading paper.**

Make sure that the paper stack does not exceed the line of the load limit mark. If the paper stack exceeds the load limit mark lines, this may result in misfeeds.

#### **When printing on envelopes**

Load envelopes with the front side (non-glued side) facing up. You cannot print on the reverse side of envelopes. Also, be sure to close the flap before loading envelopes.

### NOTE

#### **For more information on supported paper types**


➤ ["Supported Paper Types"](#)

#### **Abbreviations on the paper guides inside the paper cassette**

Paper size	Paper guide
Legal	LGL
Letter	LTR
Executive	EXEC

## Paper Loading Capacity

030E-015

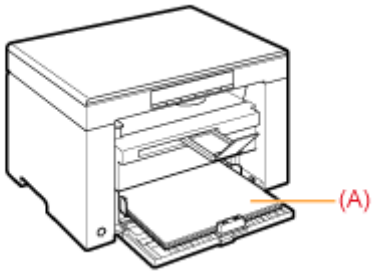

Paper type	Paper cassette
Plain paper (Ex. 80 g/m <sup>2</sup> )	Approx. 150 sheets
Heavy paper (Ex. 91 g/m <sup>2</sup> )	Approx. 100 sheets
Heavy paper (Ex. 128 g/m <sup>2</sup> )	Approx. 60 sheets
Transparency	Approx. 100 sheets
Label	Approx. 50 sheets
Envelope	Approx. 10 envelopes


# Paper Loading Orientation

030E-016

## When printing on paper that has a preprinted letterhead or logo

Load paper as shown below.

(→: Feeding direction)

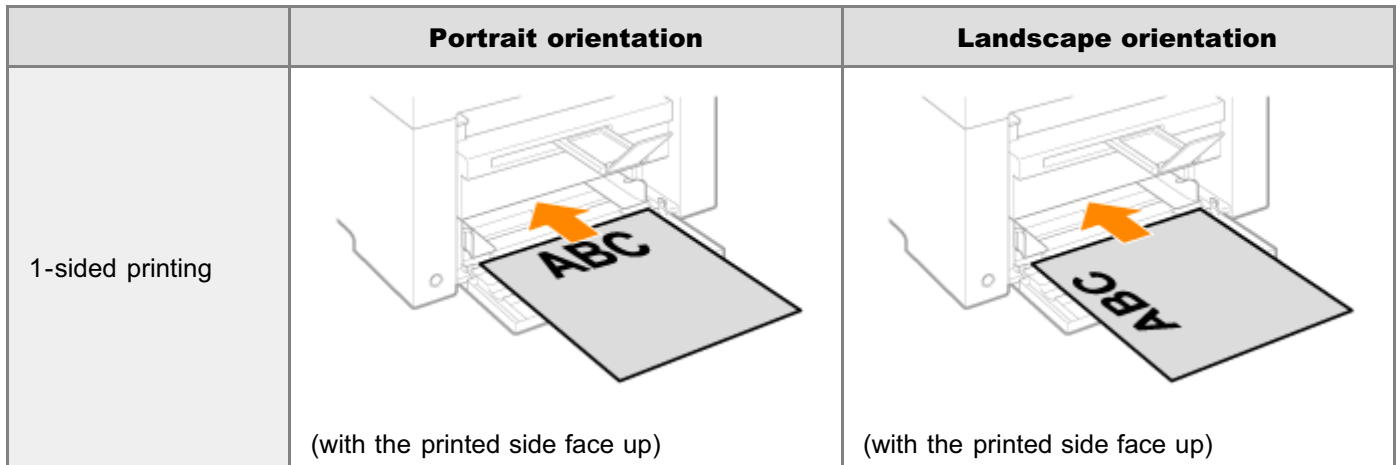


## Printing on envelopes

Load envelopes with the front side (non-glued side) face up as shown below.

(→: Feeding direction)


### Envelope No.10, DL, ISO-C5

Load the envelopes with the flap toward the left side of the paper cassette when viewed from the front.

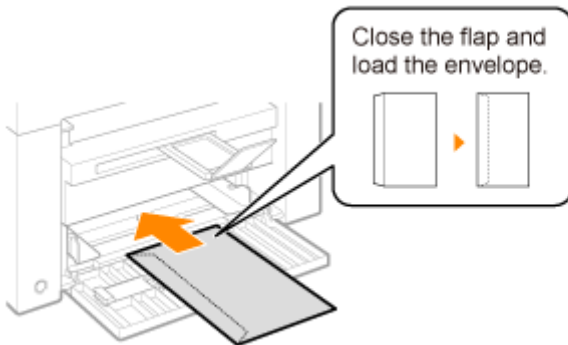

### Envelope ISO-B5



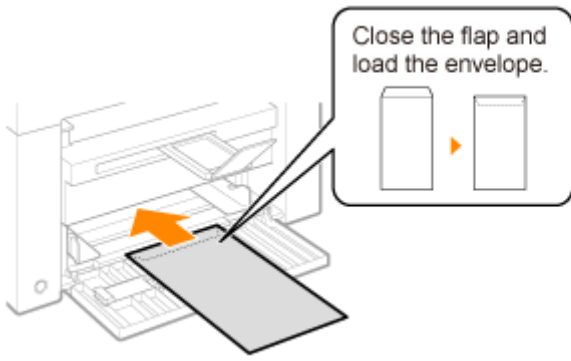








Load the envelopes with the flap toward the back of the paper cassette when viewed from the front.



# Setting a Paper Type

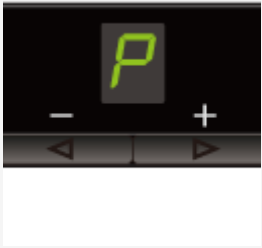030E-017

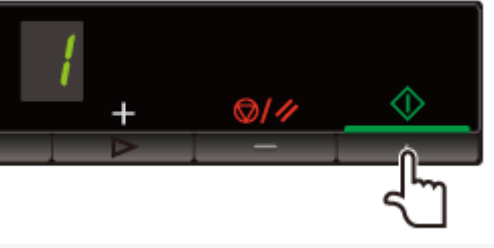After loading paper in the cassette, change the menu settings according to the paper type.

	Operating results	Operating procedures																		
1		<p>Press [  ] (Menu setting key), and then start the menu operation.</p> <p>When the menu is operating, the menu indicator blinks.</p>																		
2		<p>Press [  ] or [  ] until "P" is displayed.</p>																		
3		<p>Press [  ], and set the menu to be able to change the settings.</p>																		
4		<p>Press [  ] or [  ] to change the setting values.</p> <p>The display and the paper types are matched as follows.</p> <table border="1" data-bbox="810 1442 1321 1912"> <thead> <tr> <th>Display</th> <th>Paper type</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Plain paper</td> </tr> <tr> <td>+1</td> <td>Plain paper L</td> </tr> <tr> <td>2</td> <td>Heavy paper 1</td> </tr> <tr> <td>+2</td> <td>Heavy paper 2</td> </tr> <tr> <td>3</td> <td>Rough paper</td> </tr> <tr> <td>4</td> <td>Envelopes</td> </tr> <tr> <td>5</td> <td>Transparencies</td> </tr> <tr> <td>6</td> <td>Labels</td> </tr> </tbody> </table> <p> "Supported Paper Types"</p>	Display	Paper type	1	Plain paper	+1	Plain paper L	2	Heavy paper 1	+2	Heavy paper 2	3	Rough paper	4	Envelopes	5	Transparencies	6	Labels
Display	Paper type																			
1	Plain paper																			
+1	Plain paper L																			
2	Heavy paper 1																			
+2	Heavy paper 2																			
3	Rough paper																			
4	Envelopes																			
5	Transparencies																			
6	Labels																			

5



Press [  ] to confirm the setting.

6



Press [  ] (Menu setting key) to exit the menu operation.













The menu indicator turns off.

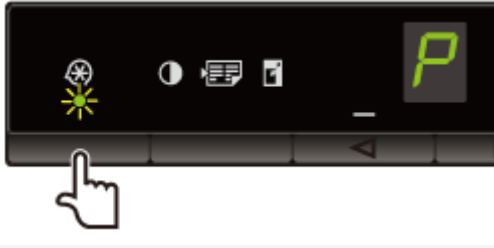

## Setting the Auto Shutdown Time

030E-06K

By enabling this setting, you can set the machine to automatically shut down. The machine automatically turns OFF the main power switch after the specified period of idle time has elapsed since entering the sleep mode.

	Operating results	Operating procedures						
1		<p><b>Press [  ] (Menu setting key), and then start the menu operation.</b></p> <p>When the menu is operating, the menu indicator blinks.</p>						
2		<p><b>Press [  ] or [  ] until "A" is displayed.</b></p>						
3		<p><b>Press [  ], and set the menu to be able to change the settings.</b></p>						
4		<p><b>Press [  ] or [  ] to change the setting values.</b></p> <p>The display and the auto shutdown time are matched as follows.</p> <table border="1" data-bbox="810 1469 1353 1637"> <thead> <tr> <th>Display</th> <th>Auto shutdown time</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Off</td> </tr> <tr> <td>1 to 8</td> <td>1 to 8 hours</td> </tr> </tbody> </table> <p>※ You can set the auto shutdown time in one hour interval within 0 to 8 hours (The default is 4 hours.) .</p> <p>※ The machine does not automatically shut down if you set the timer to 0.</p>	Display	Auto shutdown time	0	Off	1 to 8	1 to 8 hours
Display	Auto shutdown time							
0	Off							
1 to 8	1 to 8 hours							
5		<p><b>Press [  ] to confirm the setting.</b></p>						

6



Press [  ] (Menu setting key) to exit the menu operation.










The menu indicator turns off.

# Initializing Menu

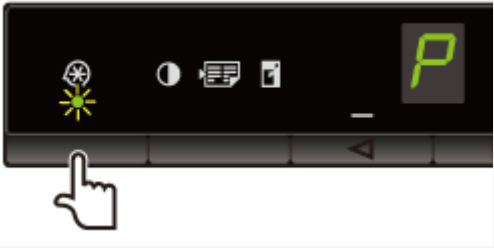030E-018

You can reset the following settings to the default value.

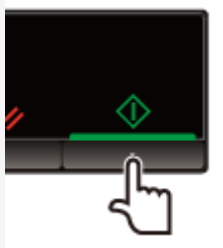- Paper type settings
- Registering the quantity
- Setting copy type
- Setting sharpness
- Setting special mode
- The quantity registered in "F"

	Operating results	Operating procedures
1	 The control panel shows a menu indicator (a gear with a star) that is blinking. A hand icon points to the menu setting key.	<p><b>Press [  ] (Menu setting key), and then start the menu operation.</b></p> <p>When the menu is operating, the menu indicator blinks.</p>
2	 The control panel shows a green exclamation mark (!) on the display. A hand icon points to the left and right arrow keys.	<p><b>Press [  ] or [  ] until "!" is displayed.</b></p>
3	 The control panel shows a green diamond-shaped key on the display. A hand icon points to the key.	<p><b>Press [  ] to perform initialization.</b></p>
4	 The control panel shows the menu indicator (a gear with a star) that is no longer blinking. A hand icon points to the menu setting key.	<p><b>Press [  ] (Menu setting key) to exit the menu operation.</b></p> <p>The menu indicator turns off.</p>







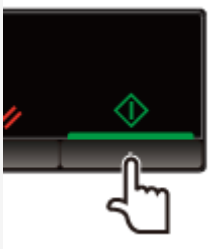


# Printing the User Data List

030E-019

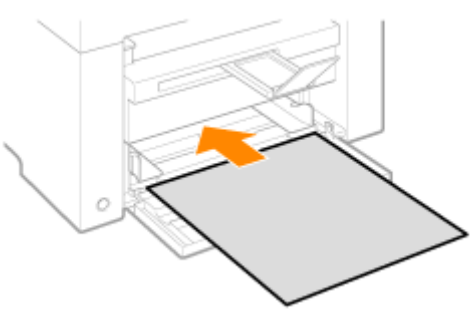Print the user data list.

The following items are printed.

- Controller ROM version
- Country/region code
- No. of printed pages/No. of scanned pages
- Registering the quantity
- Paper type settings
- Setting copy type
- Setting sharpness
- Setting special mode

	Operating results	Operating procedures
1		<b>Load A4 or Letter size paper.</b> ❖ "In the Paper Cassette"
2		<b>Press [  ] (Menu setting key), and then start the menu operation.</b> When the menu is operating, the menu indicator blinks.
3		<b>Press [  ] or [  ] until "U" is displayed.</b>
4		<b>Press [  ] to print the user data list.</b> 

5



Press [  ] (Menu setting key) to exit the menu operation.

The menu indicator turns off.

# Upgrading Firmware

030E-01C









This section describes the procedure to upgrade the printer firmware.

For details on the procedure for upgrading the firmware, see the manual supplied with the firmware.
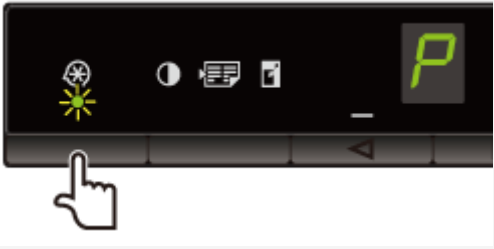
## IMPORTANT

### Performing only when it is necessary

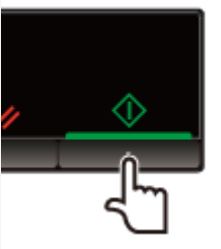
Upgrade the printer firmware only when it is necessary.

	Operating results	Operating procedures
1		<p>Press [  ] (Menu setting key), and then start the menu operation.</p> <p>When the menu is operating, the menu indicator blinks.</p>
2		<p>Press [  ] or [  ] until "F" is displayed.</p>
3		<p>When [  ] is pressed, the update mode for the firmware is displayed as shown below.</p> 

## Locating the Serial Number

030E-01A

The serial number (a character string of three letters and a 5-digit number) is written on the rating label on the rear side of the machine.

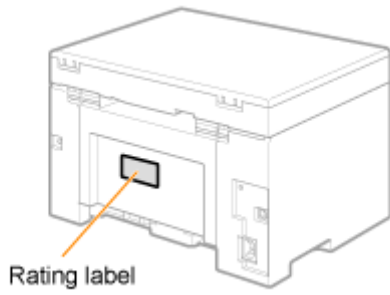

## Specifications

---

030E-01F

Note that specifications are subject to change without notice.

---



## Machine Specifications

030E-01H

Machine Specifications	
Type	Personal Desktop
Power Supply	220 to 240 V, 50/60 Hz (Power requirements can vary by country. They depend on where you purchased the product.)
Power Consumption	Maximum: 960 W or less Average consumption during standby mode: Approx. 2.5 W Average consumption during sleep mode: Approx. 1.4 W
Warm-up Time	10 second or less* (Temperature: 20 °C, humidity: 65% RH ; from when the printer is turned ON to when "1" is displayed)  * Warm-up time may vary depending on the conditions of the installation environment.
Weight	Main unit (the toner cartridge included): Approx. 8.2 kg
Dimensions (W x L x H)	<ul style="list-style-type: none"> <li>• With the paper cassette closed 372 mm x 276 mm x 254 mm</li> <li>• With the paper cassette open 372 mm x 371 mm x 254 mm</li> </ul>
Installation Space (W x L x H)	572 mm x 632 mm x 608 mm
Environmental Conditions	Temperature: 10 to 30°C Humidity: 20% to 80% RH (no condensation)
Acceptable Documents	➤ <a href="#">"Supported Document Types"</a>
Acceptable Paper Stock	➤ <a href="#">"Supported Paper Types"</a>
Printable Area	➤ <a href="#">"Printable Area"</a>
Scan Area	➤ <a href="#">"Scan Area"</a>

## Copy Specifications


030E-01J

Copy Specifications	
Scan Resolution	<ul style="list-style-type: none"><li>▪ Speed priority: 600 dpi x 400 dpi</li><li>▪ Resolution priority: 600 dpi x 600 dpi</li></ul>
Output Resolution	<ul style="list-style-type: none"><li>▪ Speed priority: 600 dpi x 400 dpi</li><li>▪ Resolution priority: 600 dpi x 600 dpi</li></ul>
Copy Ratio	<ul style="list-style-type: none"><li>▪ Direct 1:1 ± 1.0 %</li><li>▪ Zoom 0.50 to 2.00, 10 % increments</li></ul>
Copy Speed (A4 Plain Direct)*	18 cpm
Continuous Copying Capacity	Maximum 29 copies
First Copy Time (A4)	12.0 seconds or less

\* The copy speed on A4 size plain paper is measured during continuous copying. Copy speeds vary depending on the output resolution, the paper type and size, as well as the paper feeding direction. Copy speeds on smaller paper sizes may be slower. Plus, the machine may experience downtime or decrease the copy speed in the middle of a continuous copy run to adjust the temperature inside the machine or maintain the optimal print quality.

## Printer Specification

030E-01K

Printer Specification	
Printing Method	Indirect electrostatic system (On-demand fixing)
Paper Capacity	Approx. 150 sheets (60 to 80 g/m <sup>2</sup> )
Output Tray Capacity (a fresh stack of A4 size paper)	Approx. 100 sheets (60 to 80 g/m <sup>2</sup> )* <sup>1</sup>
Print Speed (A4 Plain Direct)* <sup>2</sup>	18 ppm
Output Resolution	<ul style="list-style-type: none"><li>▪ Speed priority: 600 dpi x 400 dpi</li><li>▪ Resolution priority: 1200 dpi equivalent x 600 dpi</li></ul>
Gradation	256 gradations
Toner Cartridges	 <a href="#">"Toner Cartridges"</a>
First Print Time (A4)	7.8 seconds or less * <sup>3</sup>

\*<sup>1</sup> The actual paper capacity varies depending on the installation environment and paper type used.

\*<sup>2</sup> The print speed on A4 size plain paper is measured during continuous printing. Print speeds vary depending on the output resolution, the paper type and size, as well as the paper feeding direction. Print speeds on smaller paper sizes may be slower. Plus, the machine may experience downtime or decrease the print speed in the middle of a continuous print run to adjust the temperature inside the machine or maintain the optimal print quality.

\*<sup>3</sup> May vary depending on the output environment.

## Scanner Specifications

030E-065

Scanner Specifications	
Type	Color scanner
Maximum Scan Size	up to 216 mm x 297.0 mm
Scan Resolution	<ul style="list-style-type: none"><li>• Optical resolution up to 600 x 600 dpi</li><li>• Software interpolation resolution 9600 dpi x 9600 dpi</li></ul>
Scan Speed (A4, 300 x 300 dpi)*	Color: 8 seconds/sheet Grayscale: 3 seconds/sheet
Host Interface	<ul style="list-style-type: none"><li>• Hi-Speed USB</li><li>• USB</li></ul>
Operating System	Windows 2000/XP/Vista/7
Driver	<ul style="list-style-type: none"><li>• TWAIN</li><li>• WIA 1.0 (Windows XP)</li><li>• WIA 2.0 (Windows Vista/7)</li></ul>

\* Scan speeds were only measured.

## Document Type

---

030E-01R

- ❏ "Supported Document Types"
  - ❏ "Scan Area"
-

## Supported Document Types

030E-01S

Type	<ul style="list-style-type: none"><li>▪ Plain paper</li><li>▪ Heavy paper</li><li>▪ Photograph</li><li>▪ Small documents (for example, index cards)</li><li>▪ Special types of paper (for example, tracing paper, transparencies, etc.)*<sup>1</sup></li><li>▪ Booklet (thickness not specified)</li></ul>
Size (W x L)	Maximum 216 mm x 297 mm
Weight	Maximum 2 kg
Paper Capacity	1 sheet

\*<sup>1</sup> To copy transparent documents (for example, tracing paper or transparencies), make sure to place the documents face down on the platen glass and cover them with plain white paper.

### **IMPORTANT**

#### **To place your document**

Make sure any glue, ink, or correction fluid on the document is completely dry before placing it on the platen glass or into the feeder.


## Scan Area

030E-01U

Make sure that your scan area fits within the shaded area, as shown in the illustrations on the following page.

- ※ Note that the margins indicated in the illustrations are for your reference. Actual margins can vary.
- ※ Place the document face down.

### Copy

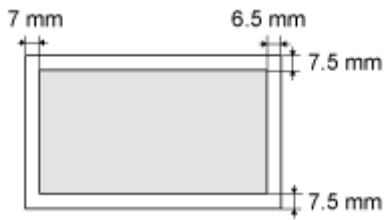

### Scan



\* A4 size paper only

# Paper

---

030E-01W

- "Supported Paper Types"
  - "Printable Area"
-



# Supported Paper Types

030E-01X

## Paper Size

The following paper sizes are supported.

: Supported

Paper Size	Paper Source
	Paper cassette
A4 (210 mm x 297 mm)	<input type="radio"/>
B5 (182 mm x 257 mm)	<input type="radio"/>
A5 (148 mm x 210 mm)	<input type="radio"/>
Legal (216 mm x 356 mm)	<input type="radio"/>
Letter (216 mm x 279 mm)	<input type="radio"/>
Statement (140 mm x 216 mm)	<input type="radio"/>
Executive (184 mm x 267 mm)	<input type="radio"/>
Officio (216 mm x 318 mm)	<input type="radio"/>
B-officio (216 mm x 355 mm)	<input type="radio"/>
M-officio (216 mm x 341 mm)	<input type="radio"/>
Government - Letter (203 mm x 267 mm)	<input type="radio"/>
Government - Legal (203 mm x 330 mm)	<input type="radio"/>
Foolscap (216 mm x 330 mm)	<input type="radio"/>
A-foolscap (206 mm x 338 mm)	<input type="radio"/>
Envelope COM10 (104.7 mm x 241.3 mm) <sup>*1</sup>	<input type="radio"/>
Envelope Monarch (98.4 mm x 190.5 mm) <sup>*1</sup>	<input type="radio"/>
Envelope C5 (162 mm x 229 mm) <sup>*1</sup>	<input type="radio"/>
Envelope B5 (176	<input type="radio"/>

mm x 250 mm) <sup>*1</sup>	
Envelope DL (110 mm x 220 mm) <sup>*1</sup>	○
Custom Paper Size <sup>*2</sup>	○

<sup>\*1</sup> Make sure the flap is folded.

<sup>\*2</sup> You can set custom paper size of Width: 127 to 356 mm and Length: 76.2 to 216 mm.

Specify the paper size in portrait orientation (Height  $\geq$  Width) and within the range that can be defined.

## Type

The following paper types are supported.

Paper Type		Printer Driver Setting	Paper Capacity
Plain paper	60 to 80 g/m <sup>2</sup>	[Plain Paper]	150 sheets
	80 to 90 g/m <sup>2</sup>	[Plain Paper L]	120 sheets
Heavy paper	90 to 105 g/m <sup>2</sup>	[Heavy Paper 1]	100 sheets
	105 to 163 g/m <sup>2</sup>	[Heavy Paper 2] <sup>*1</sup>	60 sheets
Rough paper	60 to 163 g/m <sup>2</sup>	[Rough Paper]	100 sheets
Transparency <sup>*2</sup>		[Transparency]	100 sheets
Label		[Labels]	50 sheets
Index Card		[Index Card]	Not available
Envelope		[Envelope]	10 sheets

<sup>\*1</sup> If you want to improve the fixation when printed with [Heavy Paper 1] selected, select [Heavy Paper 2].

<sup>\*2</sup> Use only the types designed for laser printers.

### To prevent paper jams, do not use the following paper types.

- Wrinkled or creased paper
- Curled or rolled paper
- Torn paper
- Damp paper
- Very thin paper
- Paper printed by a thermal transfer printer (Do not copy on the reverse side.)

### The following paper types do not print well:

- Highly textured paper
- Very smooth paper
- Glossy paper

### Make sure that the paper is free of dust, lint, and oil stains.

### Make sure to test print before purchasing large quantities of copy paper.

**Keep the paper wrapped in its original package (unopened or opened) and stored in a cool, dry place until ready to use. Make sure to keep it on a flat surface.**

**Store paper stacks in a place where temperatures are somewhere between 18 to 24°C and humidity is somewhere between 40 % to 60 % RH.**



**To print on damp paper**

The following problems may occur.

- Steam is emitted from the machine's output area.
- Water droplets form on the back side of the operation panel and in the output area.

Moisture evaporates from damp paper due to the heat generated inside the fixing unit (it is most likely to occur at low room temperatures). This is not a malfunction, but you can prevent this by using a stack of new unopened paper. Should you smell something burning, immediately turn OFF the machine, unplug the power plug from the AC power outlet, and contact your local authorized Canon dealer or the Canon help line. Continued use may lead to a fire or electrical shock.


## Printable Area

---

030E-01Y

The shaded area in the illustration on the following page represents the printable area (A4 size paper). Note that the margins indicated in the illustration are for your reference. Actual margins can vary.

※ When an envelope is printed, the margin is 3/8" (10 mm) on top, bottom, right, and left.

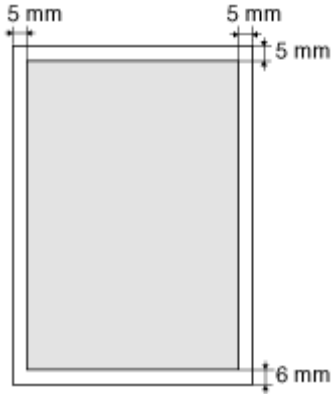

This chapter describes how to use the copy functions.

Using the copy functions for the first time	See " <a href="#">Basic Copy Operations</a> ."
Using various copy functions	See the following sections. <ul style="list-style-type: none"><li>• "<a href="#">Copying Both Sides of Cards onto One Side (ID Card Copy)</a>"</li><li>• "<a href="#">Copying Two Documents onto One Sheet (2 on 1 Copy)</a>"</li><li>• "<a href="#">Selecting Copy Type (Speed Priority/Resolution Priority)</a>"</li><li>• "<a href="#">Emphasizing the Outline of an Image (Sharpness)</a>"</li></ul>
Changing the default values for copy	See " <a href="#">Changing the Default Values</a> ."





# Basic Copy Operations

030E-021


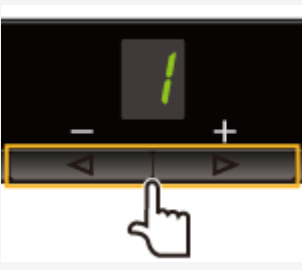












For details on each key function for the operation panel and the display, see the following items.

➤ "Operation Panel and Display"

**<Before copying>**



If the [    ] indicator is on or other than [1] is displayed, the previous copy settings are remained. In this case, press [  ] to reset the copy settings.



※ If a key is not pressed for 2 minutes, the copy settings will be automatically reset.

	Operating results	Operating procedures
<b>1</b>		<p><b>Place the document.</b></p> <ul style="list-style-type: none"> <li>➤ "Placing Documents"</li> <li>➤ "Supported Paper Types"</li> </ul>
<b>2</b>		<p><b>Press [  ] or [  ] to specify the copy quantity.</b> Specify the copy quantity first.</p> <p>You can set the copy quantity to "F" or "1" to "9."</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>You can register the custom copy quantity (user-defined number up to twenty-nine copies) to "F." The pre-defined settings comes useful if you copy a certain number of quantity, or want to copy more than 10 sets.</p> <ul style="list-style-type: none"> <li>➤ "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"</li> </ul> </div>
<b>3</b>		<p><b>Press [  ] (Menu setting key) to specify the following settings if necessary.</b></p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> <li>➤ "Selecting Copy Type (Speed Priority/Resolution Priority)"</li> <li>➤ "Emphasizing the Outline of an Image (Sharpness)"</li> </ul> </div>
		<p><b>Press [    ] (Copy setting key) to specify the following settings if necessary.</b></p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>The indicator is moved to [  ] → [  ] → [  ] each time you press the key.</p> <p>[  ] : ➤ "Adjusting the Density"</p> <p>[  ]</p> </div>


4



- [  ] :
  - "Copying Both Sides of Cards onto One Side (ID Card Copy)"
  - "Copying Two Documents onto One Sheet (2 on 1 Copy)"
- [  ] :
  - "Enlarging/Reducing Copy"

※ You cannot set [  ] (2 on 1/ID card cop) and [  ] (enlarge/reduce copies) at a time.  
➤ "Operation Panel and Display"

5

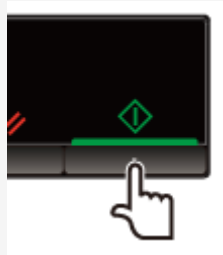

**Press [  ] to start copying.**

**<Canceling copy jobs>**

Press [  ].

**IMPORTANT**

**When copying a document without margins**

Images may be partially cut off on the output.

- "Scan Area"

# Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)

030E-026

You can call a registered quantity using one-touch button to copy by registering a copy quantity. You can register the copy quantity up to twenty-nine copies.

➤ "Basic Copy Operations"

## <Before registering the copy quantity>

Register the quantity after pressing [  ] to reset the settings.



**Press and hold [ ◀ ] more than 5 seconds.**

After this, "F" is on, and [    ] (Copy setting key) blinks.



**Press [ ◀ ] or [ ▶ ] to display the quantity that you want to register.**

The quantity that you want to register:	1 to 9	10 to 19	<b>20</b> to 29
Display:	1 to 9	+0 to +9	<b>±0</b> to ±9

➤ "Setting List"




**Press [    ] (Copy setting key) to confirm the setting.**

→ The specified quantity is displayed after "F."

Example) When the quantity is set to twenty-five copies



## Saving the registered quantity

The registered quantity is saved even if you press [  ] or turn the power OFF.

## To display "F"

When [ ◀ ] is pressed, "F" is displayed.





6



**Press [  ] to start copying.**






**<Canceling copy jobs>**

Press [  ].


# Enlarging/Reducing Copy

030E-028

You can specify a copy ratio (50 to 200%) in 10% increments.

	Operating results	Operating procedures
1		<p><b>Place the document.</b></p> <ul style="list-style-type: none"> <li>❖ "Placing Documents"</li> <li>❖ "Supported Paper Types"</li> </ul>
2		<p><b>Press [ ◀ ] or [ ▶ ] to specify the copy quantity.</b> Specify the copy quantity first.</p> <p>You can set the copy quantity to "F" or "1" to "9."</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>You can register the custom copy quantity (user-defined number up to twenty-nine copies) to "F." The pre-defined settings comes useful if you copy a certain number of quantity, or want to copy more than 10 sets.</p> <ul style="list-style-type: none"> <li>❖ "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"</li> </ul> </div>
3		<p><b>Specify the following settings if necessary by pressing [ ⚙ ] (Menu setting key).</b></p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <ul style="list-style-type: none"> <li>❖ "Selecting Copy Type (Speed Priority/Resolution Priority)"</li> <li>❖ "Emphasizing the Outline of an Image (Sharpness)"</li> </ul> </div>
4		<p><b>Press [ 📄★ ] (Copy setting key) to specify the density settings if necessary.</b></p> <ul style="list-style-type: none"> <li>❖ "Adjusting the Density"</li> </ul>
5		<p><b>Press [ 📄★ ] (Copy setting key) to blink the [ 📄 ] indicator.</b></p>

6

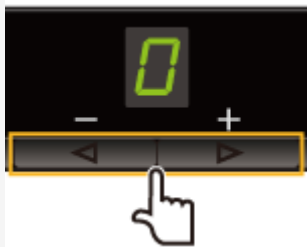


**Change the ratio.**

50% to 90%    **100%**    110% to 190% 200%

-5 to -1    **0**    +1 to +9    ±9

➤ "Setting List"

7

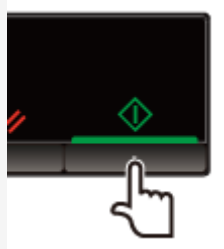

**Press [  ] to start copying.**

**<Canceling copy jobs>**

Press [  ].

※ You cannot perform the enlarged or reduced copy when combined with the following functions.





- "Copying Both Sides of Cards onto One Side (ID Card Copy)"
- "Copying Two Documents onto One Sheet (2 on 1 Copy)"

# Copying Both Sides of Cards onto One Side (ID Card Copy)

030E-02A

You can copy both sides of cards onto one side.

### <Before copying>

If the [    ] indicator is on or other than [1] is displayed, the previous copy settings are remained. In this case, press [  ] to reset the copy settings.

※ If a key is not pressed for 2 minutes, the copy settings will be automatically reset.

### NOTE

#### You can copy with combined the functions.


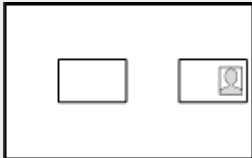
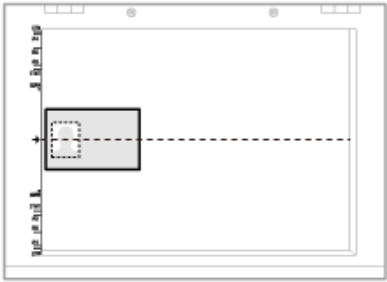
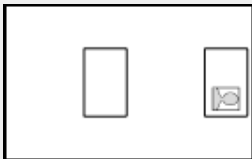
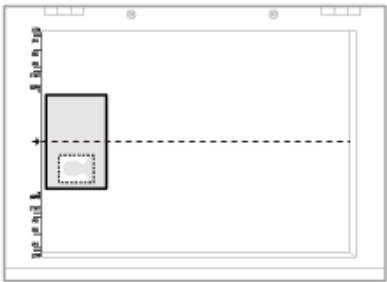
- ❖ "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"
- ❖ "Adjusting the Density"
- ❖ "Selecting Copy Type (Speed Priority/Resolution Priority)"
- ❖ "Emphasizing the Outline of an Image (Sharpness)"

#### Changing the copy ratio

The output size is the same as the documents (100%).

#### Paper size requirements

A size larger than A4 or Letter.

	Operating results	Operating procedures
1		<p><b>Place the card on the platen glass, and then close it.</b> Place the card to align the center of the card with the arrow mark.</p> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid gray; padding: 5px; width: 45%;"> <p><b>If you want to arrange the cards horizontally</b></p>  </div> <div style="border: 1px solid gray; padding: 5px; width: 45%;">  </div> </div> <div style="display: flex; justify-content: space-around; margin-top: 10px;"> <div style="border: 1px solid gray; padding: 5px; width: 45%;"> <p><b>If you want to arrange the cards vertically</b></p>  </div> <div style="border: 1px solid gray; padding: 5px; width: 45%;">  </div> </div> <ul style="list-style-type: none"> <li>※ Place the card with a 5 mm space created from the left edge of the platen glass.</li> <li>※ Place the card to fit in the left half of the platen glass.</li> </ul>
2		<p><b>Press [ ◀ ] or [ ▶ ] to specify the copy quantity.</b> Specify the copy quantity first.</p> <p>You can set the copy quantity to "F" or "1" to "9."</p> <div style="border: 1px solid gray; padding: 5px; margin-top: 10px;"> <p>You can register the custom copy quantity (user-defined number up to twenty-nine copies) to "F." The pre-defined settings comes useful if you copy a certain number of quantity, or want to copy more than 10 sets.</p> <ul style="list-style-type: none"> <li>❖ "Registering the Quantity that You Frequently Copy (Up to Twenty-</li> </ul> </div>



nine Copies)"

3



Press [ ] (Copy setting key) to specify the density settings if necessary.


➤ "Adjusting the Density"

4




Press [ ] (Copy setting key) to to blink the [ ] indicator.

5

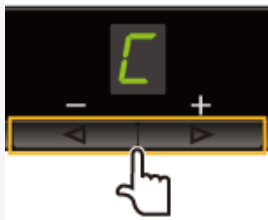

Press [ ] or [ ] to display "C".

6

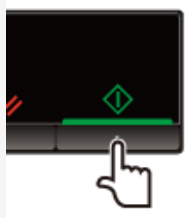

Press [ ]. One side of the card (the side toward the platen glass) is scanned.

After scanning, "C" blinks.





7




**Turn and place the card.**


Place the card to align the center of the card with the arrow mark.

**If you want to arrange the cards horizontally**

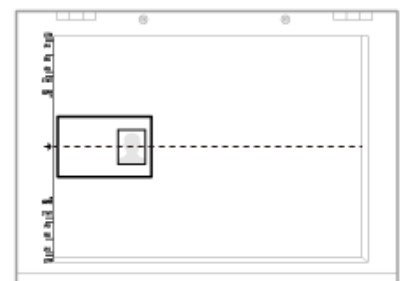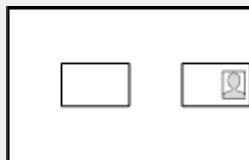

**If you want to arrange the cards vertically**

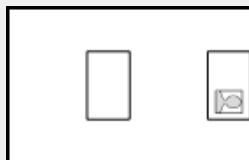

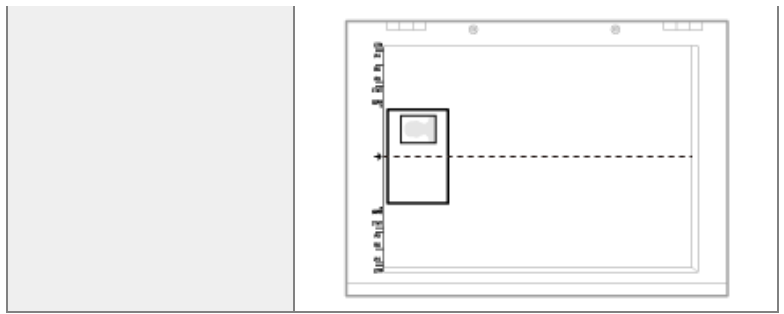

- ※ Place the card with a 5 mm space created from the left edge of the platen glass.
- ※ Place the card to fit in the left half of the platen glass.

8



**Press [  ]. The reverse side of the card is scanned.**

After scanning, printing starts.



# Copying Two Documents onto One Sheet (2 on 1 Copy)

030E-029

You can copy the two documents onto one sheet by reducing the size.



## <Before copying>

If the [  ] indicator is on or other than [1] is displayed, the previous copy settings are remained. In this case, Press [  ] and reset the settings.

※ If a key is not pressed for 2 minutes, the copy settings will be automatically reset.


## NOTE

**You can copy with the combined functions.**


- "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"
- "Adjusting the Density"
- "Selecting Copy Type (Speed Priority/Resolution Priority)"
- "Emphasizing the Outline of an Image (Sharpness)"

## **Paper size requirements**

A size larger than A4 or Letter.

	Operating results	Operating procedures
<b>1</b>		<p><b>Place the document.</b></p> <ul style="list-style-type: none"> <li>➤ "Placing Documents"</li> <li>➤ "Supported Paper Types"</li> </ul>
<b>2</b>		<p><b>Press [ ◀ ] or [ ▶ ] to specify the copy quantity.</b> Specify the copy quantity first.</p> <p>You can set the copy quantity to "F" or "1" to "9."</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>You can register the custom copy quantity (user-defined number up to twenty-nine copies) to "F." The pre-defined settings comes useful if you copy a certain</p> </div>



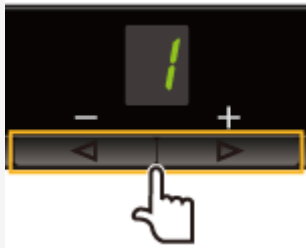

number of quantity, or want to copy more than 10 sets.  
❖ "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"

3



Press [    ] (Copy setting key) to specify the density settings if necessary.

❖ "Adjusting the Density"

4




Press [    ] (Copy setting key) to blink the [  ] indicator.

5



Press [  ] or [  ] to display "P."

6

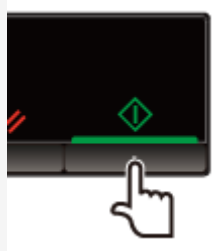


Press [  ] to scan the first document.

After scanning, "P" blinks.




7

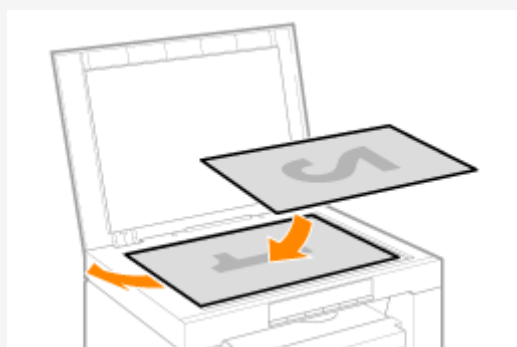

Place the second document.

8

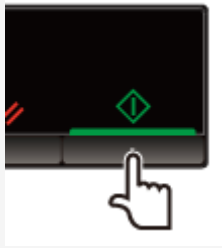






**Press [  ] to scan the second document.**

After scanning, printing starts.


## Selecting Copy Type (Speed Priority/Resolution Priority)

030E-02C

Select whether to set priority on copy speed or resolution to copy.

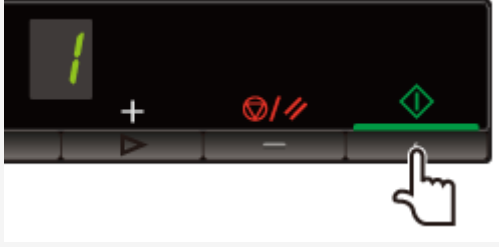	Operating results	Operating procedures
1		<p><b>Place the document.</b></p> <ul style="list-style-type: none"> <li>❖ "Placing Documents"</li> <li>❖ "Supported Paper Types"</li> </ul>
2		<p><b>Press [ ◀ ] or [ ▶ ] to specify the copy quantity.</b> Specify the copy quantity first. You can set the copy quantity to "F" or "1" to "9."</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>You can register the custom copy quantity (user-defined number up to twenty-nine copies) to "F." The pre-defined settings comes useful if you copy a certain number of quantity, or want to copy more than 10 sets.</p> <ul style="list-style-type: none"> <li>❖ "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"</li> </ul> </div>
3		<p><b>Press [ ⚙ ] (Menu setting key), and then start the menu operation.</b> When the menu is operating, the menu indicator blinks.</p>
4		<p><b>Press [ ◀ ] or [ ▶ ] until "E" is displayed.</b></p>
5		<p><b>Press [ ⬠ ] to set the menu to be able to change the settings.</b></p>

6

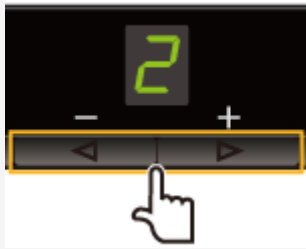

**Press [ ◀ ] or [ ▶ ] to change the setting values.**

The display and the copy type are matched as follows.

Display	Copy type
1	Speed priority
2	Resolution priority

➤ "Supported Paper Types"

7



**Press [ ◊ ] to confirm the setting.**

8



**Press [ ⚙ ] (Menu setting key) to exit the menu operation.**


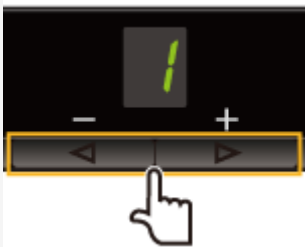


The menu indicator turns off.

## Emphasizing the Outline of an Image (Sharpness)

030E-02E

You can emphasize the outline of the image in the documents or decrease the contrast.



	Operating results	Operating procedures
1		<p><b>Place the document.</b></p> <ul style="list-style-type: none"> <li>▣ "Placing Documents"</li> <li>▣ "Supported Paper Types"</li> </ul>
2		<p><b>Press [ ◀ ] or [ ▶ ] to specify the copy quantity.</b> Specify the copy quantity first. You can set the copy quantity to "F" or "1" to "9."</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>You can register the custom copy quantity (user-defined number up to twenty-nine copies) to "F." The pre-defined settings comes useful if you copy a certain number of quantity, or want to copy more than 10 sets.</p> <ul style="list-style-type: none"> <li>▣ "Registering the Quantity that You Frequently Copy (Up to Twenty-nine Copies)"</li> </ul> </div>
3		<p><b>Press [ ⚙ ] (Menu setting key), and then start the menu operation.</b> When the menu is operating, the menu indicator blinks.</p>
4		<p><b>Press [ ▶ ] until "S" is displayed.</b></p>

<p><b>5</b></p>		<p>Press [  ] to set the menu to be able to change the settings.</p>
<p><b>6</b></p>		<p>Press [  ] or [  ] to change the setting values.</p> <p><b>&lt;Pressing [  ] to decrease the values&gt;</b> It is appropriate when you want to copy documents clearly such as photos.</p> <p><b>&lt;Pressing [  ] to increase the values&gt;</b> It is appropriate when you want to copy text and lines clearly.</p>
<p><b>7</b></p>		<p>Press [  ] to confirm the setting.</p>
<p><b>8</b></p>		<p>Press [  ] (Menu setting key) to exit the menu operation.</p> <p>The menu indicator turns off.</p>

This chapter describes how to print from your computer to the machine.

Once you have the printer driver installed on your computer, you can print your document files to the machine efficiently. In addition, the printer driver offers various finishing options, such as scaling and gutters.

## Preparing for printing

Preparing to use the print functions	See " <a href="#">Preparing to Print from Your Computer.</a> "
Setting up printer sharing	See " <a href="#">Setting Up Printer Sharing.</a> "

## Printing

Learn about ways to print from your computer	See " <a href="#">Printing Fundamentals.</a> "
Learning about print options	See the online help to find what you can configure in each sheet.
Using various print options	See the online help. " <a href="#">Viewing the Online Help</a> "

## Checking jobs or changing settings using the operation panel

Checking or deleting print jobs	See " <a href="#">Canceling Print.</a> "
---------------------------------	--

## Preparing to Print from Your Computer

030E-066

In order to print, install the printer driver in the printer.

➤ [See the Starter Guide.](#)

### NOTE

#### **About the printer driver**

The printer driver is software required for printing from an application. The printer driver will convert application software's print data to print data for the printer.

The printer driver for this machine has the following features.

- The printer driver for this machine enables you to output print data at an optimum speed by dividing the workload using a computer and the printer.
- As well as providing faster and more stable printing than conventional models, the printer driver for this machine uses less memory to operate.
- In addition to the conversion of print data, the printer driver for this machine is equipped with the functions capable of spooling print data and configuring the print condition, and various types of print finishing can be set such as scaling or gutter adjustment.



# Setting Up Printer Sharing

030E-02J

Once you have set up a print server on your network, you can efficiently manage print jobs through the print server. Additionally, you can install the alternate printer driver for the machine on your computer from the network by adding it to the print server.

## IMPORTANT

### Restrictions for setting up a computer running a 64-bit operating system as the print server

To set up a computer running a 64-bit operating system as the print server, the alternate printer driver cannot be downloaded from the network onto computers using the following 32-bit operating systems.

- Windows 2000
- Windows XP (without service packs or SP1 installed)

Note that installation may fail if you try to download the driver onto a computer using any of these operating systems. If the download is successfully completed, you may not be able to open the printing preferences dialog box.

### Restrictions for setting up a computer running a 32-bit operating system as the print server

To set up a computer running one of the following 32-bit operating systems as the print server, the alternate printer driver cannot be downloaded from the network onto computers using 64-bit operating systems.

- Windows 2000
- Windows XP (on which no service pack or SP1 is installed)

## 1

**Open the printer folder.**

 "Basic Windows Operations"

## 2

**Display the [Sharing] tab.**

### For Windows 2000/XP/Vista:

Right-click the icon for the machine and select [Sharing] from the pop-up menu.

### For Windows 7:

1. Right-click the icon for the machine and select [Printer properties] from the pop-up menu.
2. Display the [Sharing] tab.

## 3

**Select [Share this printer] or [Shared as] and enter the share name of the machine.**

### When [Change sharing options] appears

Click [Change sharing options].

When the [User Account Control] dialog box appears, click [Continue].

 Continue with the steps in the procedure below and install the alternate printer driver on your computer.

- ※ When one of the following 32-bit operating systems is running on the print server, proceed to Step 6.
  - Windows 2000
  - Windows XP (on which no service pack or SP1 is installed)

## 4

**Insert the User Software CD-ROM into the slot on your computer and click [Additional Drivers].**

## 5

**Install the alternate printer driver.**

The installation dialog box appears when the alternate printer driver is selected and [OK] is clicked. Browse to the folder where the printer driver files are stored and follow onscreen instructions.

## 6

**Click [OK].**

The procedure is complete.

### NOTE

#### **To install the printer driver on another computer**

1. From the [Start] menu, select [Programs] or [All Programs] -> [Accessories] -> [Windows Explorer].
2. Select the print server from [My Network Places] or [Network].
3. Double-click the shared printer or drag and drop it into the printer folder.
4. Follow the onscreen instructions to install the printer driver.

# Printing Fundamentals

---

030E-02K

This section explains the basic printing method using the printer driver, how to set the printer options, and how to display the online help.

 **NOTE**

To use the printer, you need an appropriate printer driver.  
Refer to the Starter Guide and install the printer driver.

- ["Printing"](#)
  - ["Configuring the Default Print Settings"](#)
  - ["Viewing the Online Help"](#)
-

This section explains the basic printing method using the printer driver.

## NOTE


- Printing methods may differ depending on the application you are using. For details, see the instruction manuals provided with the application.
- The display may differ according to the operating system, as well as the type and version of the printer driver.
- The machine may not be able to print data such as color photos if the data size of a single page is too large. If such is the case, reduce the data size by lowering the resolution or by changing the file format.
- If a printer icon is displayed in the task tray at the bottom right of your computer monitor, you can stop printing from your computer. Double-click the printer icon → click the name of the file you want to stop printing → click [Document] → [Cancel].

## 1.

**Open the document you want to print from the application.**


## 2.

**Select [Print] from the [File] menu.**

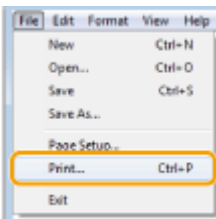

## 3.


**Select your printer from [Name] -> click [Preferences] (or [Properties]).**

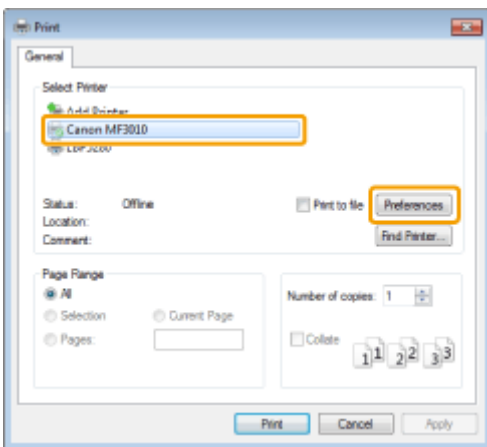

## 4.

**Specify the desired settings in the printer driver screen -> click [OK].**

Click the tabs for the [Page Setup], [Finishing], and [Quality] sheets, and then specify the desired items.

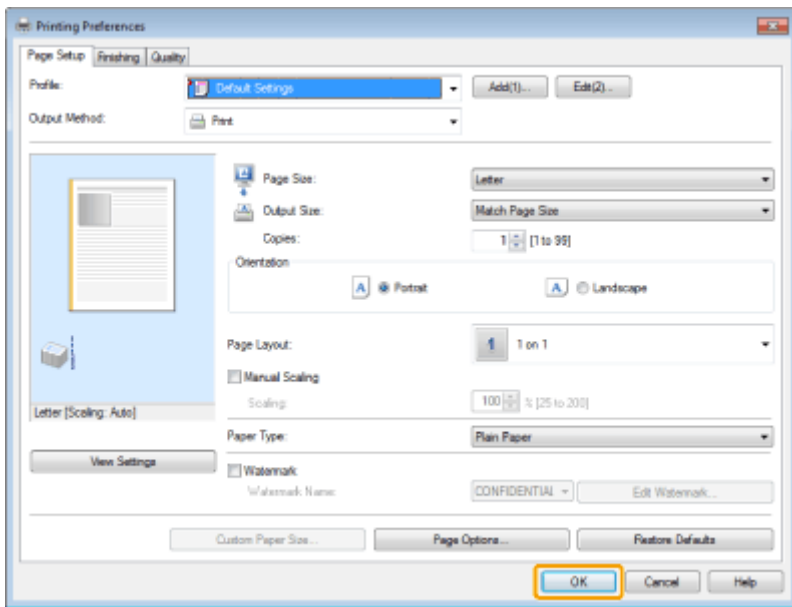


## NOTE

For information on available printing functions, view the online help to find what you can configure in each sheet. (See "[Viewing the Online Help.](#)")

## 5.

Click **[Print]** (or **[OK]**).

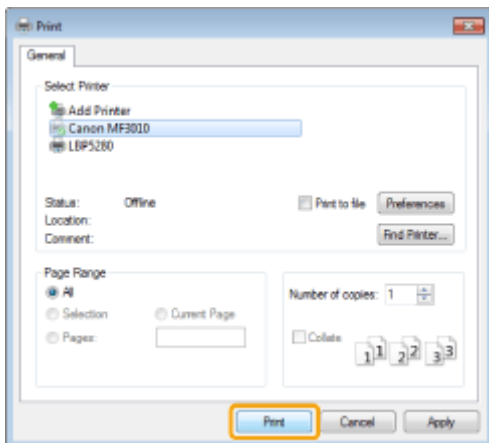

Printing begins.

# Configuring the Default Print Settings

030E-02R

This section describes how to access the printer setup screen from [Control Panel] and how to specify printing functions beforehand.

The printer whose settings you have specified will print with the same settings every time.

When printing, you can change the settings specified beforehand whenever required. To change the settings, configure them in the [Print] dialog box from the application (see "Printing").

## IMPORTANT


To change the default print settings, you must log on to your computer as a member of the Administrators or Power Users group.

## NOTE


The display may differ according to the operating system, as well as the type and version of the printer driver.

## 1.

Click  (Start) -> [Devices and Printers].

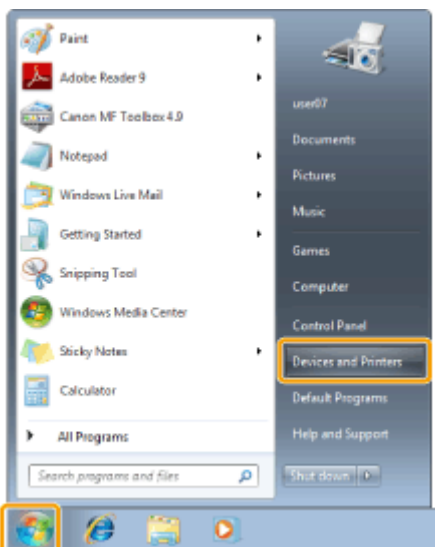


## NOTE

- For Windows Vista, click  (Start) -> [Control Panel] -> [Printers].
- For Windows XP Professional, click [Start] -> [Printers and Faxes].
- For Windows XP Home Edition, click [Start] -> [Control Panel] -> [Printers and Other Hardware] -> [Printers and Faxes].
- For Windows 2000, click [Start] -> [Settings] -> [Printers].

## 2.


Right-click the icon of the printer whose settings you want to specify -> click [Printing preferences].

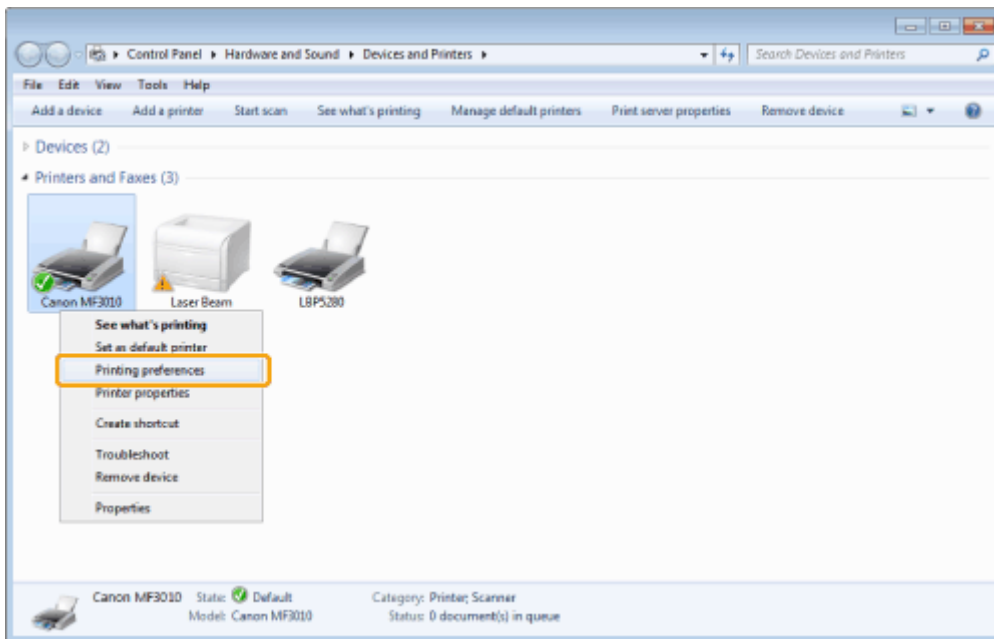

### 3.

**Specify the desired settings in the printer driver screen -> click [OK].**

Click the tabs for the [Page Setup], [Finishing], and [Quality] sheets, and then specify the desired items.

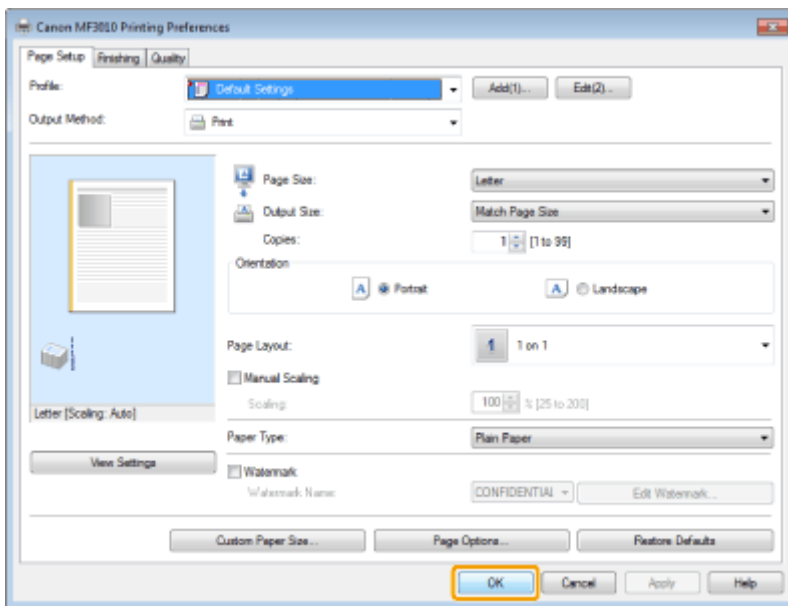

#### Note

For information on available printing functions, view the online help to find what you can configure in each sheet. (See "[Viewing the Online Help.](#)")

# Viewing the Online Help

030E-02S

You can display the online help by clicking [Help] on the printer driver screen.


The online help includes additional information about each printing option. If the e-Manual does not provide the information you need, see the online help.

## NOTE


The display may differ according to the operating system, as well as the type and version of the printer driver.

# 1.

## Click [Help].

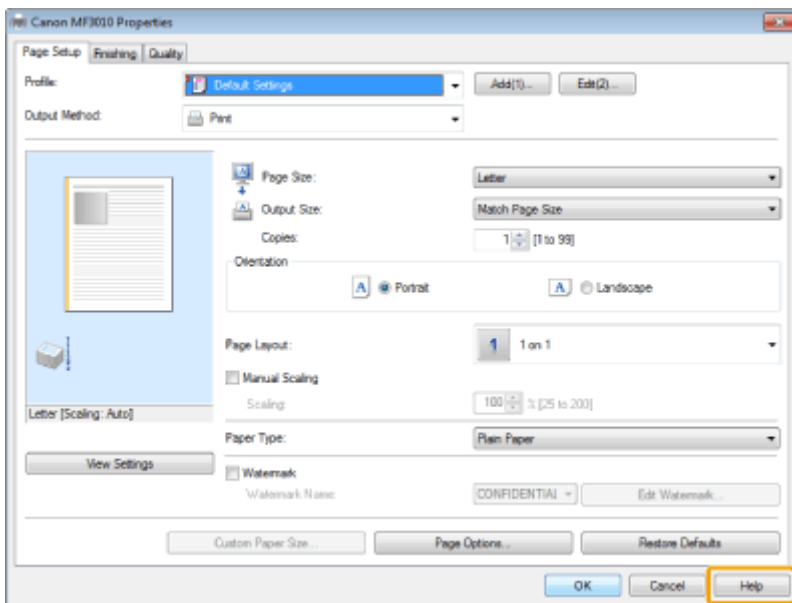

The online help is displayed.

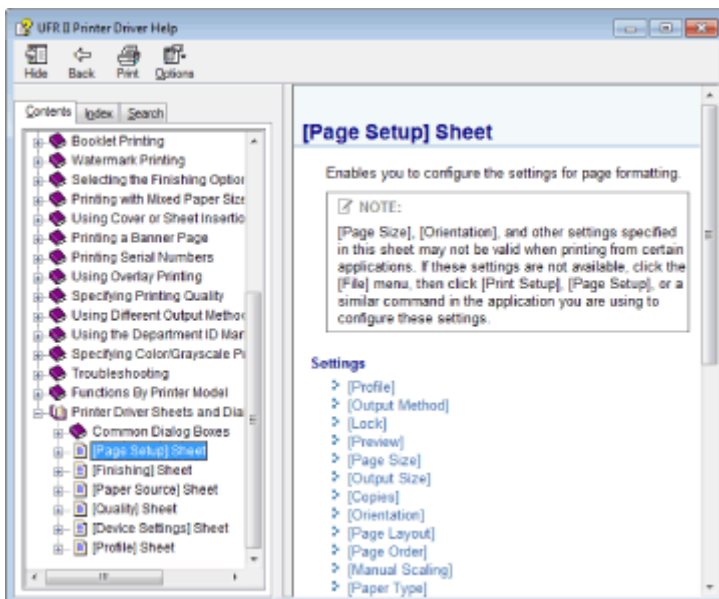



# Printing on Custom Paper Size

---

030E-030

## Checking available custom paper size

---

Custom paper sizes with width of 76.2 to 216.0 mm and height of 127.0 to 356.0 mm can be used with this printer.

## Loading custom paper size

---

Load paper in the paper cassette.

➤ ["In the Paper Cassette"](#)

## Registering custom paper size

---

When printing on custom paper size, you need to register the custom paper size in the printer driver beforehand.

➤ ["Registering a Custom Paper Size"](#)

## Printing from application software

---

Perform printing after loading custom paper size.

➤ ["Print"](#)

Printing on heavy paper, rough paper, or labels slows down the print speed.

---

# Registering a Custom Paper Size

030E-02X

Combinations of printer driver settings corresponding to a variety of printing purposes are provided with the printer driver as "profiles". This enables you to print documents according to a desired objective by simply selecting a profile from the [Profile] list.

## 1

**Display the printer folder.**

❏ "Basic Windows Operations"

## 2

**Right-click the icon for this printer, and select [Printing Preferences] from the popup menu.**

## 3

**Display the [Custom Paper Size Settings] dialog box.**

- (1) Display the [Page Setup] sheet.
- (2) Click [Custom Paper Size].

## 4

**Set a custom paper size.**

[Name of Custom Paper Size]	Enter the register name of the custom paper size. You can enter up to thirty one characters.
[Unit]	Select the units to use when setting the custom paper size.
[Paper Size]	Set height and width ([Height] [Width]) of custom paper. Specify the paper size in portrait orientation ([Height] [Width]) and within the range that can be defined.

## 5

**Register the custom paper size.**

- (1) Click [Register].  
The number of custom paper sizes that can be registered differs according to your system environment.
- (2) Check [Paper List] to make sure that the custom paper size you registered has been added.
- (3) Click [OK].

See "[Printing](#)" for basic printing procedures.

# Canceling Print

030E-02U

You can cancel the job that is currently printing.


If multiple jobs are printing, see the following to select and cancel the jobs using the print queue (Windows function).

➤ "Selecting and Canceling Jobs"

## NOTE

### Displaying Job Processing



	Operating results	Operating procedures
1		<p><b>Press [  ] (Job cancel key) to cancel the job.</b></p> <div data-bbox="635 824 1517 1014" style="border: 1px solid black; padding: 5px;"><p><b>? If you cannot cancel the job</b></p><p>You cannot cancel pages that have already started printing. Jobs cannot be canceled if they are switched (the job when you press the key differs from the job when you release the key) while you are pressing the job cancel key.</p></div>


# Selecting and Canceling Jobs

030E-02Y

## 1


### Display the print queue.

1. Display the printer folder.
  - "Basic Windows Operations"
2. Double-click the icon for this printer.

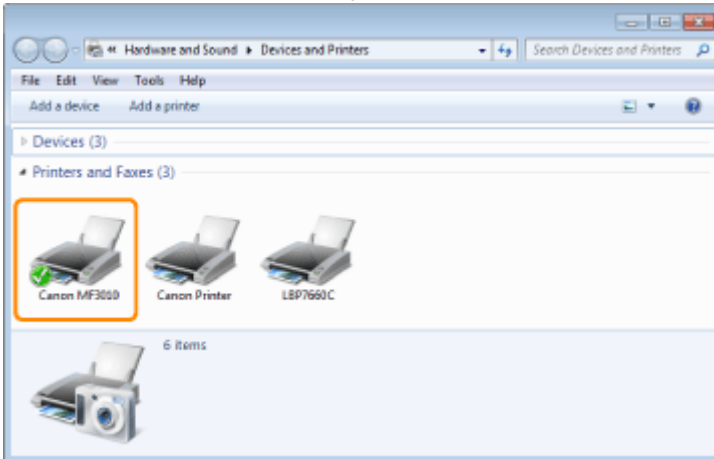

## 2

### Right-click the job you want to cancel, and select [Cancel] from the popup menu.

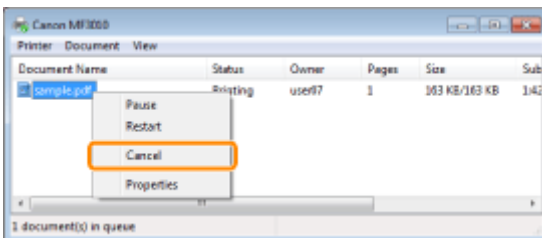

#### If the job is not displayed

Other user's jobs are not displayed. (In a print server environment, all jobs are displayed on the print server.)

#### NOTE

#### For details on the print queue

See Windows Help.

## 3


### Clicking [Yes] cancels the print job.

#### If you cannot cancel printing

You cannot cancel pages that have already started printing.

This chapter describes how to save scanned data to your computer.

You can easily save the documents that were scanned by computer operation.

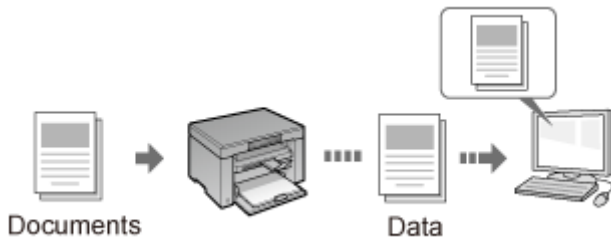

The machine provides a wide variety of scan settings for you to choose from. You can save a scanned document in the "Searchable PDF" file format, which converts scanned images to searchable text data, without having to specify advanced scan settings.

Plus, you can scan documents using the MF Toolbox available for the machine, or the WIA driver. There are many ways to convert your paper documents into electronic files. All you need to do is to select one based on your scan needs.

## Preparing to scan your document

Preparing to use the scan functions	See " <a href="#">Preparing to Use the Scan Functions.</a> "
-------------------------------------	--

## Performing a scan

Learn about ways to perform a scan	See " <a href="#">Basic Scan Flow.</a> "
Scanning using the machine's scanning software	See " <a href="#">Scanning Using the MF Toolbox.</a> "
Scanning using an application	See " <a href="#">Scanning an Image Using an Application.</a> "
Scanning using the WIA driver	See " <a href="#">Scanning Using the WIA Driver (Windows XP/Windows Vista/Windows 7 Only).</a> "

## Making best use of the scan functions

Learn how to use the MF Toolbox	See " <a href="#">Using the MF Toolbox.</a> "
Learn how to combine multiple documents into one PDF file	See " <a href="#">Combining Multiple Documents into One PDF File.</a> "
Learn how to use the ScanGear MF	See " <a href="#">Using the ScanGear MF.</a> "

## Preparing to Use the Scan Functions

030E-067

To scan documents, perform the following steps.

<b>Step 1</b>	Check your operating environment.	➤ "System Requirements (Scan)"
<b>Step 2</b>	Install the scanner driver.	➤ See the Starter Guide.

# System Requirements (Scan)

030E-033

## Hardware requirements

- IBM or IBM-compatible PC
- A computer having a USB port with the USB class driver installed

## Supported Operating Systems

- Windows 2000 Professional
- Windows XP Professional/Home Edition
- Windows XP Professional x64 Edition
- Windows Vista (32-bit/64-bit)
- Windows 7 (32-bit/64-bit)

### NOTE

#### **The following server operating systems are not supported.**

- Windows Server 2003
- Windows Server 2008

#### **To use a Hi-Speed USB**

Make sure that your computer meets the following system requirements.

- CPU
  - Intel Pentium II or more
- RAM
  - 128 MB or more
- Operating system
  - Windows 2000 Service Pack 4
  - Windows XP Service Pack 1, or later
  - Windows Vista
  - Windows 7
- Driver
  - The Hi-Speed USB driver needs to be installed on the computer.

The following three scanning methods are available:

- ❖ ["Scanning Using the MF Toolbox"](#)

Scanning can be performed using the machine's available scanning software. You can fine-tune the scan settings based on your scan needs.

- ❖ ["Scanning an Image Using an Application"](#)

Scanning can be performed using your application. You can import scanned images directly into the application.

- ❖ ["Scanning Using the WIA Driver \(Windows XP/Windows Vista/Windows 7 Only\)"](#)

Scanning can be performed using Windows OS drivers.

---



# Scanning Using the MF Toolbox

030E-035

## 1

**Place your document.**

- "Placing Documents"
- "Supported Document Types"

### NOTE

#### **To scan from the platen glass**


You can scan a multiple-page document only when

- [Save as Type] is set to [PDF (Multiple Pages)].
  - "Combining Multiple Documents into One PDF File"
- [Paper Size] in Step 6 is set to "fit the image."

## 2


**Double-click the [Canon MF Toolbox 4.9] icon on the desktop.**

The MF Toolbox starts.

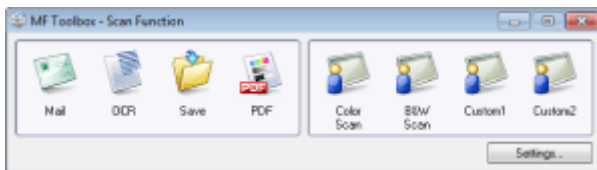

## 3

**Click one of the MF Toolbox command buttons based on your purpose of the scan.**

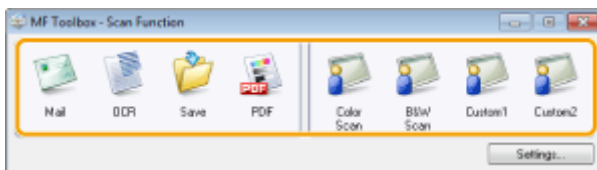

[Mail]	The document is scanned and sent as an e-mail attachment from your e-mail application.
[OCR]	The document is scanned and read by Optical Character Recognition (OCR) software.
[Save]	The document is scanned and saved.
[PDF]	The document is scanned and saved as a PDF file.
[Color Scan] [B&W Scan] [Custom 1] [Custom 2]	The document is scanned and displayed in the registered application. A dialog box appears for each of the buttons.

### NOTE

#### **Applications that can be registered as the MF Toolbox command buttons:**

The following applications can be registered as the MF Toolbox command buttons once they are installed on your

computer. (The following applications may not be registered as the MF Toolbox command buttons after installation, if the MF Toolbox is installed beforehand.)

- [OCR]: Presto! PageManager
- [PDF]: Presto! PageManager


\* These applications are supported on Windows XP 64-bit Edition.

## 4

### Specify the scanner settings as needed.

Click [Apply] to save the settings.

See "[Using the MF Toolbox](#)" for more information.

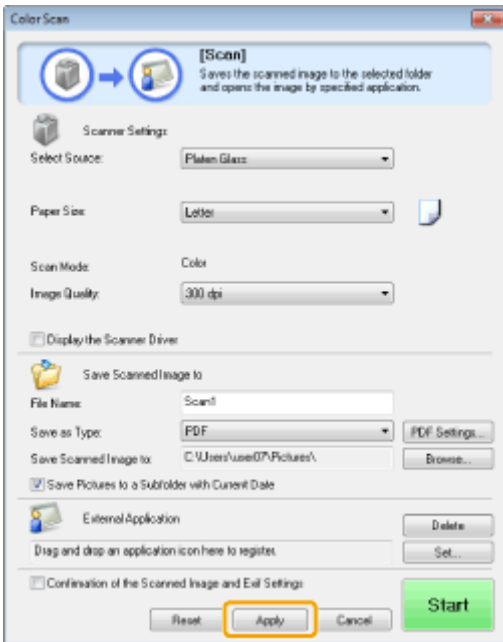


## 5

### Click [Start].

Scanning starts.

**When the [Display the Scanner Driver] check box is selected in Step 4:**

The [ScanGear MF] dialog box appears.

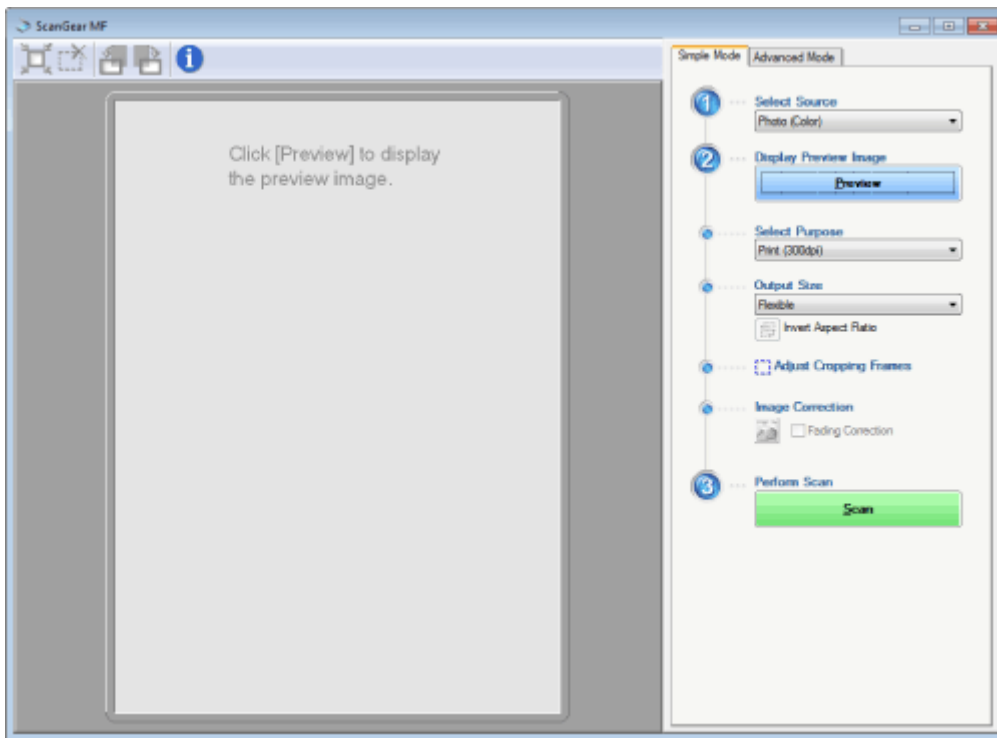

- (1) Specify the settings as needed.  
See "[Using the ScanGear MF](#)" for more information.
  - (2) Click [Scan].  
Scanning starts.
-

# Scanning an Image Using an Application

030E-036

You can scan an image from a TWAIN- or WIA- (Windows XP/Windows Vista/Windows 7 only) compliant application and use the image in that application. The procedure varies depending on the application. This section shows an example.

## 1

**Place your document.**

- ["Placing Documents"](#)
- ["Supported Document Types"](#)

### NOTE

#### **When scanning from the platen glass**

Scanning multiple pages is not available when scanning from the platen glass.

## 2

**Start the application to be used.**

## 3

**Select a scan command.**

## 4

**Select a scanner driver.**

The ScanGear MF or WIA driver can be used on Windows XP/Windows Vista/Windows 7.

## 5

**Specify the scanner settings as needed and click [Scan].**

Scanning starts.

See the following sections for more information.

- ["Using the ScanGear MF"](#)
- ["Scanning Using the WIA Driver \(Windows XP/Windows Vista/Windows 7 Only\)"](#)

# Scanning Using the WIA Driver (Windows XP/Windows Vista/Windows 7 Only)

030E-037

Before scanning with the WIA driver, see "Attention (WIA Driver)."

This section describes how to scan documents using the WIA driver.

- ❖ Scanning from the [Scanner and Camera Wizard] dialog box (Windows XP only)
- ❖ Scanning from the [Windows Fax and Scan] dialog box (Windows Vista/Windows 7 only)
- ❖ Scanning Using Windows Live Photo Gallery (Windows Photo Gallery) (Windows XP/Windows Vista/Windows 7 only)
- ❖ Scanning using an application (Windows XP/Windows Vista/Windows 7 only)

You can fine tune settings for each scan.

- ❖ "[New Scan] Dialog Box"

## Scanning from the [Scanner and Camera Wizard] dialog box (Windows XP only)

### 1

#### Place your document.

- ❖ "Placing Documents"
- ❖ "Supported Document Types"

#### NOTE

##### **To scan from the platen glass**

You cannot scan more than one document at a time.

### 2

#### Open the [Scanners and Cameras] folder.

- ❖ "Basic Windows Operations"

### 3

#### Double-click the WIA driver icon.

### 4

#### Click [Next].


### 5

#### Select the picture type.

- [Color picture]
- [Grayscale picture]
- [Black and white picture or text]
-

[Custom]

Click [Custom settings] to specify advanced settings in the [Properties] dialog box.

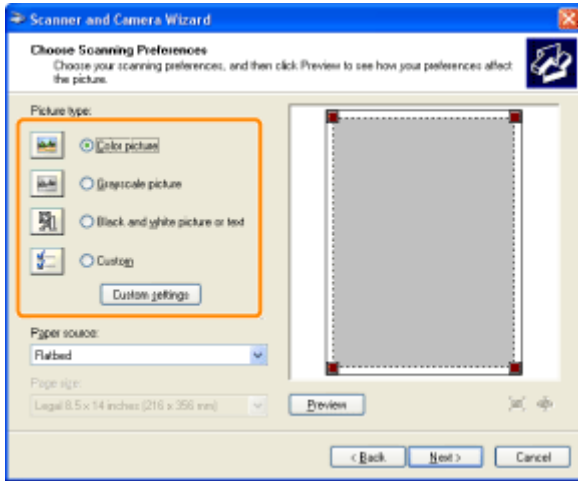

6

Click [Preview] and drag [ ] to specify the scanning area.

7


Click [Next].

8

Specify the name, file format, and location where the group of pictures is saved.

Select one of the following file formats.


- [BMP (Bitmap Image)]
- [JPG (JPEG Image)]
- [TIF (TIF Image)]
- [PNG (PNG Image)]

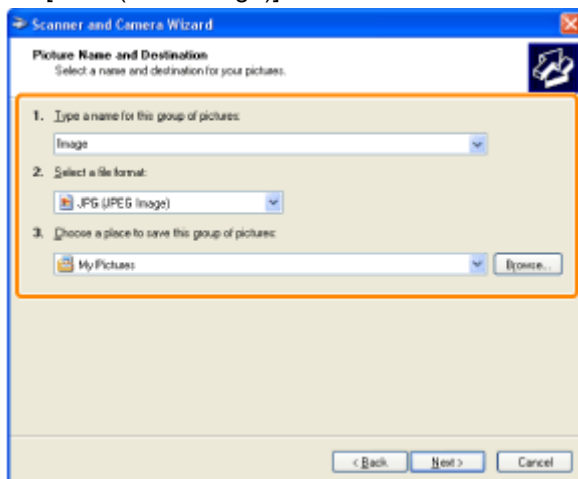

9


Click [Next].

Scanning starts.

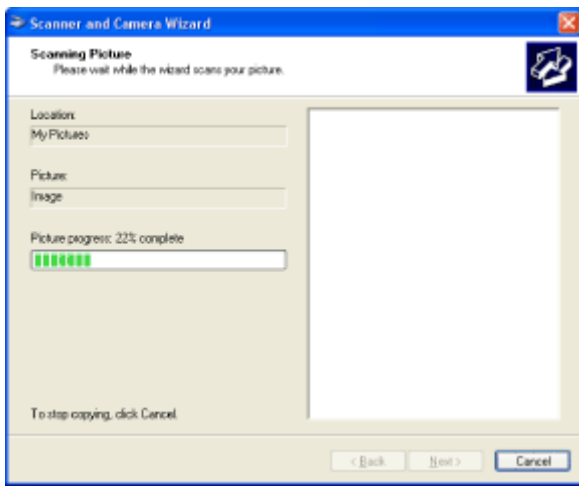

## 10

**Make your selection and click [Next].**

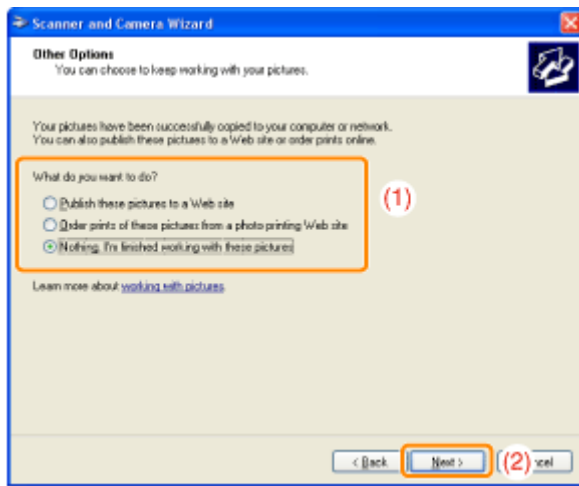

## 11

**Click [Finish].**

### **Scanning from the [Windows Fax and Scan] dialog box (Windows Vista/Windows 7 only)**

You may not be able to access the dialog box, depending on your current edition of Windows Vista/Windows 7.

## 1

**Place your document.**

- "Placing Documents"
- "Supported Document Types"

#### **NOTE**

#### **To scan from the platen glass**

You cannot scan more than one document at a time.

## 2

Open the [Windows Fax and Scan] dialog box.


❏ "Basic Windows Operations"

## 3

Click [New Scan] on the toolbar.

## 4

Double-click the scanner icon when the following screen appears.

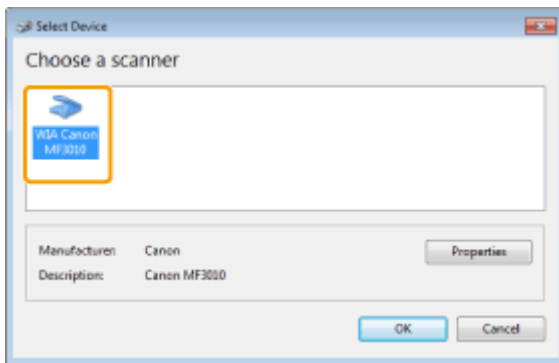

## 5

Specify the scan settings.

See "[New Scan] Dialog Box" for more information.

## 6

Click [Scan].

### Scanning Using Windows Live Photo Gallery (Windows Photo Gallery) (Windows XP/Windows Vista/Windows 7 only)

## 1

Place your document.

- ❏ "Placing Documents"
- ❏ "Supported Document Types"

#### NOTE

#### **To scan from the platen glass**

You cannot scan more than one document at a time.

## 2



## Start [Windows Live Photo Gallery] (or [Windows Photo Gallery]).

### For [Windows Live Photo Gallery]

From the [Start] menu, select [All Programs] -> [Windows Live] -> [Windows Live Photo Gallery].

### For [Windows Photo Gallery]

From the [Start] menu, select [All Programs] -> [Windows Photo Gallery].

## 3

### Open the [Import Pictures and Videos] dialog box.

From the [File] menu, select [Import from camera or scanner].

## 4

### Double-click the scanner icon.

The procedure from Step 7 onwards varies, depending on the operating system that you are using on your computer. Follow the instructions below.

#### For Windows XP:

Follow the [Scanner and Camera Wizard] instructions.

For more information, see Step 6 through 14 in "[Scanning from the \[Scanner and Camera Wizard\] dialog box \(Windows XP only\)](#)."

#### For Windows Vista/Windows 7:

Proceed to Step 7.

## 5

### Specify the scan settings.

See "[\[New Scan\] Dialog Box](#)" for more information.


## 6

### Click [Scan].

## 7

### Click [Import].

- [Tag these pictures (optional)]  
You can classify the scanned image by typing a tag.

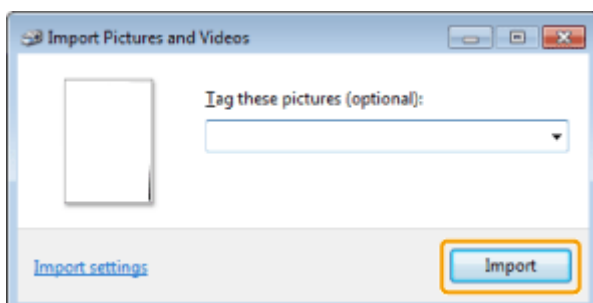

## Scanning using an application (Windows XP/Windows Vista/Windows 7 only)

When the WIA driver is displayed, use the following steps. For the instructions on how to display the WIA driver, see "Scanning an Image Using an Application".

### 1

#### Place your document.

- ❏ "Placing Documents"
- ❏ "Supported Document Types"

#### NOTE

#### To scan from the platen glass

You cannot scan more than one document at a time.

### 2

#### Select a picture type.

Select one of the following types.

- [Color picture]
- [Grayscale picture]
- [Black and white picture or text]
- [Custom settings]


### 3

#### Click [Adjust the quality of the scanned picture] as needed.

The [Advanced Properties] dialog box appears.

### 4

#### Adjust the image quality and click [OK].

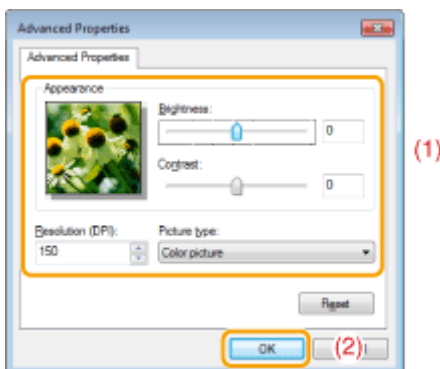

[Appearance]	A sample image is displayed.
[Brightness]	Specify the brightness (-127 to 127).
[Contrast]	Specify the contrast (-127 to 127) (only for color or grayscale scans).
[Resolution (DPI)]	Supported resolutions vary, depending on the operating system or the selected [Paper source] setting.

[Picture type]	Specify the color type.
[Reset]	Restore all the settings to the defaults.

 **NOTE**

**The options that are displayed in the [Advanced Properties] tab and their default values.**

These vary across the selected image type.

## 5

Click [Preview] and drag  to specify the scanning area.

## 6

Click [Scan].

### Scanning from the [Scanner and Camera Wizard] dialog box (Windows XP only)

#### NOTE

##### **To save more than one picture in the same location**

Sequential numbers are automatically added to the end of the file names.

### Scanning from the [Windows Fax and Scan] dialog box (Windows Vista/Windows 7 only)

#### NOTE

##### **When scanning is complete**

The scanned images are displayed within the [Windows Fax and Scan] folder.

##### **File name and location where the scanned images are saved**

Sequential numbers are automatically added to the end of the file names, and the files are saved in the [Scanned Documents] folder within the [Document] folder. You can change the file name later.

### Scanning from Windows Live Photo Gallery (Windows Photo Gallery) (Windows Vista/Windows 7 only)

#### NOTE

##### **To save the scanned image without a tag**

The scanned image is saved in a new folder bearing the scanning date within the [Pictures] folder.

##### **File name**

Sequential numbers are automatically added. You can change the file name later.

### Scanning from an application (Windows XP/Windows Vista/Windows 7 only)

#### IMPORTANT

##### **When scanning using the WIA 1.0 driver started from within "Paint"**

An error may occur when you do the following on a Windows Vista or Windows 7 computer:

1. Select [Flatbed] from [Paper source]
2. Click [Adjust the quality of the scanned picture]
3. Set [Resolution] to 600 dpi and click [OK]
4. Select [Document Feeder] from [Paper source]
5. Click [Scan] or click [Adjust the quality of the scanned picture] to change the resolution.

If this happens, select a setting other than [Custom Settings] before performing a scan or changing the scan resolution.


#### NOTE

##### **About the displayed screen**

The displayed screen varies across the operating system, as well as the type and version of the scanner driver.

## [New Scan] Dialog Box

030E-039

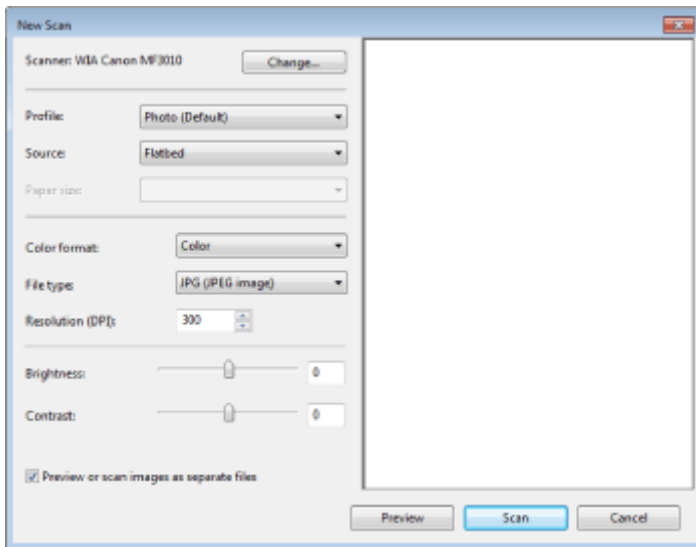

[Scanner]	Display a list of available scanners. Click [Change] and select the scanner.
[Profile]	<p>Select one of the following document types.</p> <ul style="list-style-type: none"> <li>• [Add profile]</li> <li>• [Documents]</li> <li>• [Last used settings]</li> <li>• [Photo (Default)]</li> </ul> <div style="border: 1px solid black; padding: 5px;"> <p><b>NOTE</b></p> <p><b>When [Add profile] is selected</b></p> <p>Add new profiles in the [Add New Profile] dialog box. Once these profiles have been added, you can delete or edit these profiles using [Scan Profiles] in the [Scanners and Cameras] folder.</p> <p>See the Windows documentation for more information.</p> </div>
[Source]	Select the location where documents are set. Click [Preview], and the drag <input type="checkbox"/> to specify the scanning area.
[Color format]	Select one of the following color types. <ul style="list-style-type: none"> <li>• [Color]</li> <li>• [Grayscale]</li> <li>• [Black and white]</li> </ul>
[File type]	Select one of the following file formats. <ul style="list-style-type: none"> <li>• [BMP (Bitmap image)]</li> <li>• [JPG (JPEG image)]</li> <li>• [PNG (PNG image)]</li> <li>• [TIF (TIFF image)]</li> </ul>
[Resolution (DPI)]	Specify the scanning resolution in dpi (50 to 600 dpi).
[Brightness]	Specify the brightness (-100 to 100).
[Contrast]	Specify the contrast (-100 to 100) (only for color or grayscale scans).
[Preview or scan images as separate files]	The images scanned from [Flatbed] (the platen glass) are automatically cropped and saved as separate files.


# Using the MF Toolbox

The following can be specified in the MF Toolbox:

- ❖ Specifying scan settings
- ❖ Saving scanned images
- ❖ Configuring an application (an e-mail client application)
- ❖ Previewing the scanned image and entering Exif information (Viewing the scanned image)

## Specifying scan settings

You can specify the scan mode, resolution, original document size, and file size of the scanned images.

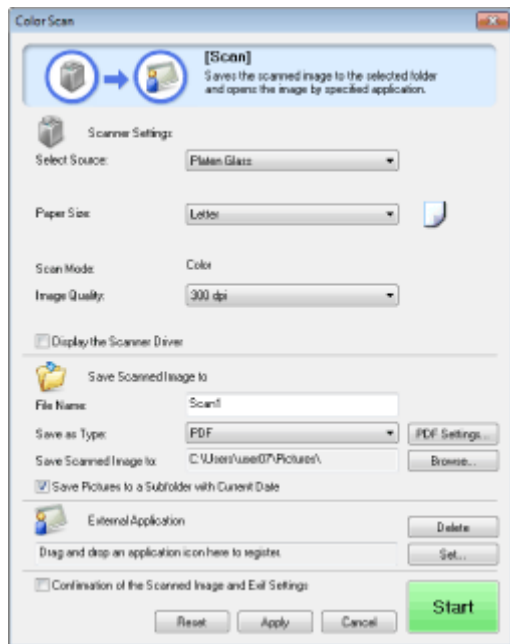


[Paper Size]	<p>Specifies the original document size.</p> <p>When [Custom] is selected, the [Paper Size Settings] dialog box appears for you to specify a custom size.</p>				
[Scan Mode]	<p>Select the scan mode. The modes selectable vary depending on the MF Toolbox command button clicked.</p> <ul style="list-style-type: none"> <li>▪ [Black and White] Scan a document as a black-and-white image.</li> <li>▪ [Black and White (OCR)] Scan a document as a black-and-white image which can be read by OCR software.</li> <li>▪ [Grayscale] Scan a document as a grayscale image (equivalent to a monochrome printed image). This mode is best suited for scanning photos.</li> <li>▪ [Color] Scan a document as a color image.</li> <li>▪ [Color (Magazine)] Scan a document in color using the descreening function. This mode helps reduce uneven gradation and striped patterns (moiré patterns) generated when scanning printed images. Scanning takes longer than usual.</li> </ul>				
	<p>Select the scan resolution.</p> <p>Available resolution varies depending on the [Select Source] or [Save as Type] settings.</p> <table border="1" data-bbox="432 2011 1019 2136"> <thead> <tr> <th>File Type</th> <th>Settable Resolution</th> </tr> </thead> <tbody> <tr> <td>BMP</td> <td></td> </tr> </tbody> </table>	File Type	Settable Resolution	BMP	
File Type	Settable Resolution				
BMP					

[Image Quality]	JPEG/EXIF TIFF	75 to 600 dpi
	PDF PDF (1 page) PDF (multiple pages) PDF (additional pages)	75 to 400 dpi
※ When [Mail] is selected, supported resolutions vary, depending on the [Upper Limit of Attached File] setting specified.		
[Display the Scanner Driver]	When this check box is checked, the settings for [Scanner Settings] are unselectable. When [Start] is clicked, the [ScanGear MF] dialog box appears for you to specify advanced scan settings. This option is inaccessible when scanning using the [OCR] command button.	

## Saving scanned images

You can specify the file name, file format, and location where the scanned images are saved.

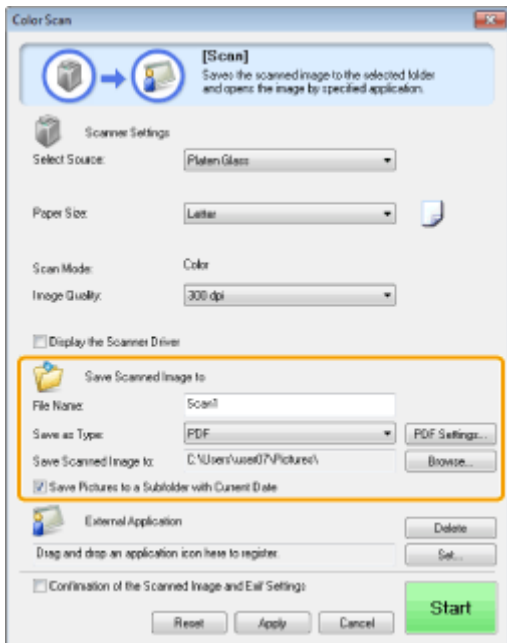

[File Name]	Enter the file name of the scanned image. If there has already been a file saved under the same name, a four-digit number is automatically added to the end of the file name. The number starts with [0001].
	Specify the file type to save the scanned image in. <ul style="list-style-type: none"> <li>• [BMP] Bitmap format</li> <li>• [JPEG/Exif] JPEG/Exif format (This option is selectable only when [Grayscale], [Color] or [Color (Magazine)] is selected for [Scan Mode].)</li> <li>• [TIFF] TIFF format</li> <li>• [PDF] PDF format (multiple pages or single page)</li> <li>• [PDF (Single Page)] Create a single-page PDF file.</li> <li>• [PDF (Multiple Pages)] Combine multiple documents into one PDF file.</li> <li>• <a href="#">"Combining Multiple Documents into One PDF File"</a></li> </ul>

- [PDF (Add Page)]  
Add the scanned image to the last page of a PDF file created by the MF Toolbox.

 **NOTE**


**File formats supported by command buttons**

	BMP	JPEG/ Exif *	TIFF	PDF	PDF (Single Page)	PDF (Multiple Pages)	PDF (Add Page)
[Mail]	.	●	.	.	●	●	●
[OCR]	●	●	●	.	.	.	.
[Save]	●	●	●	.	●	●	●
[PDF]	.	.	.	.	●	●	●
[Color Scan]	●	●	●	●	.	.	.
[B&W Scan]	●	.	●	●	.	.	.
[Custom 1]	●	●	●	●	.	.	.
[Custom 2]	●	●	●	●	.	.	.

\* You can select the option when [Scan Mode] is set to [Grayscale], [Color], or [Color (Magazine)].

**When [PDF], [PDF (Single Page)], [PDF (Multiple Pages)] or [PDF (Add Page)] is selected**


The error message <Image size is too large to create File.> may appear. If this happens, specify a smaller size for [Paper Size] and a lower quality level for [Image Quality] to reduce the data size of the scanned image.

[Save as Type]	<ul style="list-style-type: none"> <li>▪ [PDF (Add Page)] Add the scanned image to the last page of a PDF file created by the MF Toolbox.</li> </ul> <p> <b>NOTE</b></p> <p><b>File formats supported by command buttons</b></p> <table border="1"> <thead> <tr> <th></th> <th>BMP</th> <th>JPEG/ Exif *</th> <th>TIFF</th> <th>PDF</th> <th>PDF (Single Page)</th> <th>PDF (Multiple Pages)</th> <th>PDF (Add Page)</th> </tr> </thead> <tbody> <tr> <td>[Mail]</td> <td>.</td> <td>●</td> <td>.</td> <td>.</td> <td>●</td> <td>●</td> <td>●</td> </tr> <tr> <td>[OCR]</td> <td>●</td> <td>●</td> <td>●</td> <td>.</td> <td>.</td> <td>.</td> <td>.</td> </tr> <tr> <td>[Save]</td> <td>●</td> <td>●</td> <td>●</td> <td>.</td> <td>●</td> <td>●</td> <td>●</td> </tr> <tr> <td>[PDF]</td> <td>.</td> <td>.</td> <td>.</td> <td>.</td> <td>●</td> <td>●</td> <td>●</td> </tr> <tr> <td>[Color Scan]</td> <td>●</td> <td>●</td> <td>●</td> <td>●</td> <td>.</td> <td>.</td> <td>.</td> </tr> <tr> <td>[B&amp;W Scan]</td> <td>●</td> <td>.</td> <td>●</td> <td>●</td> <td>.</td> <td>.</td> <td>.</td> </tr> <tr> <td>[Custom 1]</td> <td>●</td> <td>●</td> <td>●</td> <td>●</td> <td>.</td> <td>.</td> <td>.</td> </tr> <tr> <td>[Custom 2]</td> <td>●</td> <td>●</td> <td>●</td> <td>●</td> <td>.</td> <td>.</td> <td>.</td> </tr> </tbody> </table> <p>* You can select the option when [Scan Mode] is set to [Grayscale], [Color], or [Color (Magazine)].</p> <p><b>When [PDF], [PDF (Single Page)], [PDF (Multiple Pages)] or [PDF (Add Page)] is selected</b></p> <p>The error message &lt;Image size is too large to create File.&gt; may appear. If this happens, specify a smaller size for [Paper Size] and a lower quality level for [Image Quality] to reduce the data size of the scanned image.</p>		BMP	JPEG/ Exif *	TIFF	PDF	PDF (Single Page)	PDF (Multiple Pages)	PDF (Add Page)	[Mail]	.	●	.	.	●	●	●	[OCR]	●	●	●	.	.	.	.	[Save]	●	●	●	.	●	●	●	[PDF]	.	.	.	.	●	●	●	[Color Scan]	●	●	●	●	.	.	.	[B&W Scan]	●	.	●	●	.	.	.	[Custom 1]	●	●	●	●	.	.	.	[Custom 2]	●	●	●	●	.	.	.
	BMP	JPEG/ Exif *	TIFF	PDF	PDF (Single Page)	PDF (Multiple Pages)	PDF (Add Page)																																																																		
[Mail]	.	●	.	.	●	●	●																																																																		
[OCR]	●	●	●	.	.	.	.																																																																		
[Save]	●	●	●	.	●	●	●																																																																		
[PDF]	.	.	.	.	●	●	●																																																																		
[Color Scan]	●	●	●	●	.	.	.																																																																		
[B&W Scan]	●	.	●	●	.	.	.																																																																		
[Custom 1]	●	●	●	●	.	.	.																																																																		
[Custom 2]	●	●	●	●	.	.	.																																																																		
[PDF Settings]	When [PDF], [PDF (Single Page)], [PDF (Multiple Pages)] or [PDF (Add Page)] is selected for [Save as Type], you can specify advanced file settings.																																																																								
[Save Scanned Image to]	Display the location where the scanned image is saved when a setting other than [PDF (Add Page)] is selected for [Save as Type]. To save the image in a different location, click [Browse], select a folder, and click [OK].																																																																								
[Add Scanned Image to]	This item appears instead of [Save Scanned Image to] when [PDF (Add Page)] is selected in [Save as Type]. You can select a PDF file to which the scanned image is added. However, you may only add scanned images to PDF files that have been created using MF Toolbox. You may not add scanned images to PDF files that have been created using other applications.																																																																								
[Save Pictures to a Subfolder with Current Date]	Create a folder bearing the current date in the specified location to save the scanned image in this folder.																																																																								

**Configuring an application (an e-mail client application)**

You can specify a host application to view the scanned image.



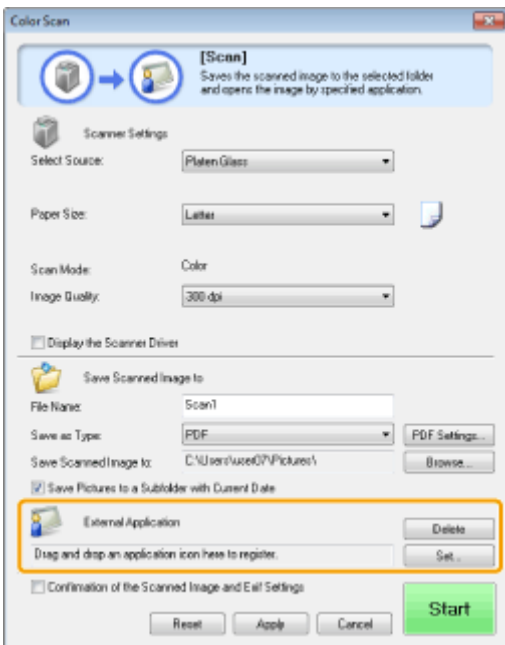

Click [Set], select the e-mail application, and click [OK]. (To specify an application other than e-mail client software, you can drag and drop its icon directly to the dialog box.)

#### NOTE

#### **When scanning using the [Mail] command button**


The MF Toolbox supports the following e-mail applications.

- Microsoft Outlook Express
- Microsoft Outlook
- Microsoft Exchange
- EUDORA
- Netscape Messenger
- Windows Mail

### **Previewing the scanned image and entering Exif information (Viewing the scanned image)**

Follow the steps in the procedure below to display a thumbnail preview of the scanned image before specifying the file format and location where the scanned image is saved.

- (1) Select the [Confirmation of the Scanned Image and Exif Settings] ([Confirm the Scanned Image] for the [PDF] button) check box.

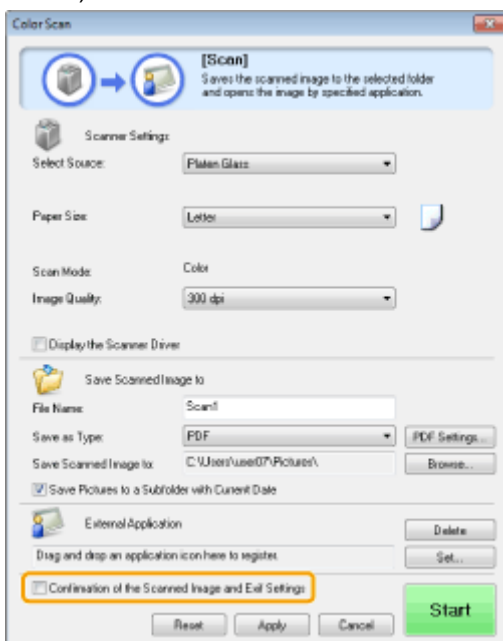

(2) Press [Start].

The scanned image is displayed in the [Scanned Image] dialog box. See the following instructions to specify the file format and location where the image is saved.

 **NOTE**

**When scanning using the [OCR] command button**

This check box is unselectable.

**When scanning using the [PDF] command button**

You can only preview the scanned image and specify the location where the image is saved.

[Save as Type]	Specify the file format to save the scanned image in.
[Exif Settings]	<p>When [JPEG/EXIF] is selected for [Save as Type], display the [Exif Settings] dialog box for you to enter the Exif information. You can add such information as comments and the scanning date to the JPEG file. Choose a file from the drop-down list and add information.</p> <ul style="list-style-type: none"> <li>• [Basic Information] Display the information acquired automatically when the image was scanned.</li> <li>• [Advanced Information] Display the newly added information.</li> <li>• [Apply the Same Setting of Input Items Automatically] When the check box is checked, the last specified scan settings are applied.</li> </ul>
[PDF Settings]	When [PDF], [PDF (Single Page)], [PDF (Multiple Pages)] or [PDF (Add Page)] is selected for [Save as Type], you can specify advanced file settings.
[Save Scanned Image to]	Specify the location where the scanned image is saved.
[Add Scanned Image to]	This option appears instead of [Save Scanned Image to] when [PDF (Add Page)] is selected for [Save as Type]. Select a PDF file to which the scanned image is added. Note that you may not be able to add scanned images to PDF files, if the images are scanned using different applications.
[Save Pictures to a Subfolder with Current Date]	<p>Create a folder bearing the current date in the specified location to save the scanned image in this folder.</p> <p>This option is unselectable when [Save as Type] is set to [PDF (Add Page)].</p>
[Save]	Save the scanned image in the specified location.
[Forward]	This button appears instead of [Save] when an application is selected for [Mail Program] or the [External Application]. You can forward the scanned image to the application.
[Cancel]	Undo any changes made within the dialog box and return to the previous screen. All scanned images are deleted.

# Combining Multiple Documents into One PDF File

030E-03C

You can combine multiple documents into one PDF file.

## 1

**Place your documents on.**

- ❖ "Placing Documents"
- ❖ "Supported Document Types"

## 2

**Double-click the [Canon MF Toolbox 4.9] icon on the desktop.**

The MF Toolbox starts.

## 3

**Click [PDF].**


## 4

**Select [PDF (Multiple Pages)] for [Save as Type].**

## 5

**Specify the required settings as needed and click [PDF Settings].**

The [PDF Settings] dialog box appears.

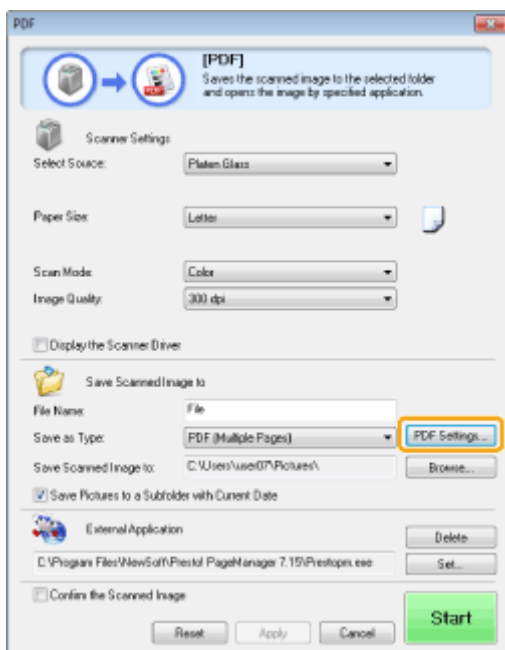

## 6

**Specify the required settings as needed and click [OK].**

[Create Searchable PDF]	Convert character data within the document to text data to create a searchable PDF file.
[Text Language]	Select the document language. When you select [English] from the drop-down list and set [Image Quality] to [300 dpi] or a higher dpi for [Scanner Settings], character data can be more accurately scanned.
[PDF Compression]	Select [High] to compress photos and illustrations to reduce the file size.

## 7

**Click [Start].**

## 8

**Place the next page and click [Next].**

## 9

**When scanning is complete, click [Finish].**


## Using the ScanGear MF

---

030E-03E

Using the ScanGear MF, you can display previews of images and specify advanced scan settings before performing scans.

- ❖ "Using Simple Mode"
  - ❖ "Using Advanced Mode"
  - ❖ "Defining a Scan Area (Cropping Frame)"
  - ❖ "Setting Resolution"
-

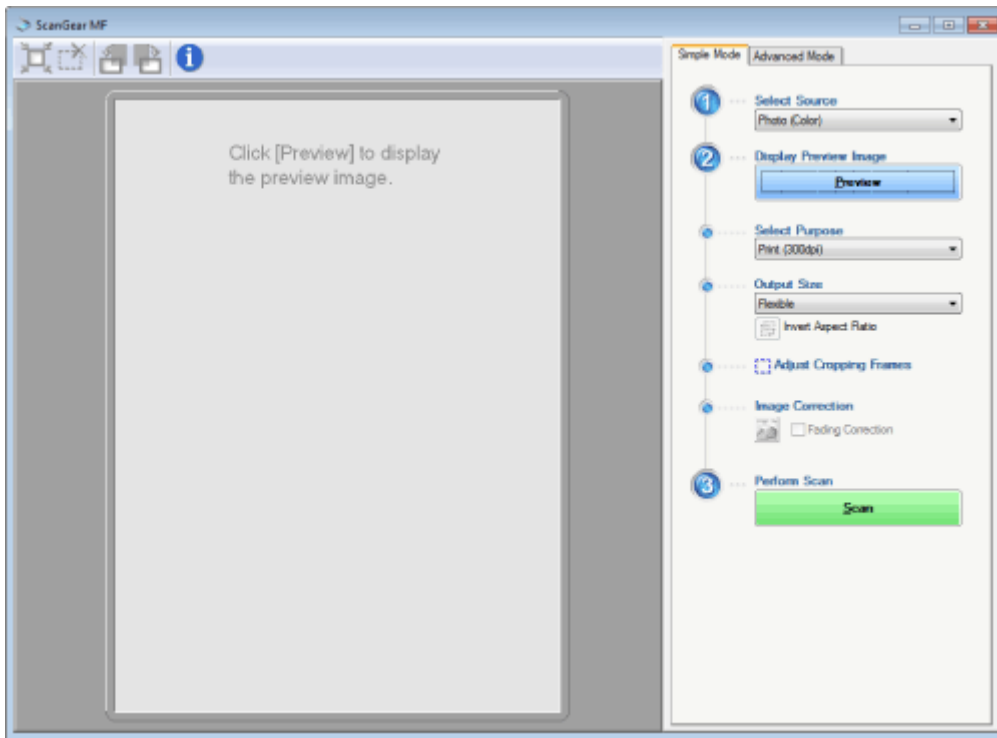

- Scanning in simple mode
- Simple mode toolbar
- Adding/Deleting the output size

## Scanning in simple mode

### 1

#### Display the ScanGear MF.

Start the ScanGear MF using either of the following methods.

- Selecting [Display the Scanner Driver] in the MF Toolbox
- Starting from an application

### 2

#### Select a document type for [Select Source].

When selecting a document type other than [Newspaper (B&W)], the automatic color adjustment function is activated. See "[Using Advanced Mode](#)" for the instructions on how to cancel this function.

[Photo (Color)]	Select when scanning color photos.
[Magazine (Color)]	Select when scanning color magazines (the Descreening function supported).
[Newspaper (B&W)]	Select when scanning text and line drawings.
[Document (Grayscale)]	Select when scanning color photos or documents in monochrome. This option is best suited for scanning high-resolution monochrome images.

### 3

Click **[Preview]**.

The preview of the image is displayed.

### 4


Select the purpose of the scan for **[Select Purpose]**.

- [Print (300dpi)]
- [Image Display (150dpi)]
- [OCR (300dpi)]
- ["Setting Resolution"](#)

### 5

Select the output size of the scanned image.

The options displayed in the window vary depending on the purpose of the scan specified in Step 4.

Click  to choose the orientation of the output size between landscape and portrait.

### 6

Adjust the cropping frames as needed.

- ["Defining a Scan Area \(Cropping Frame\)"](#)

### 7

Select **[Fading Correction]** as needed.






- It can only be selected when color documents are scanned.
- It cannot be specified when the image is not displayed in the preview area.

### 8

Click **[Scan]**.

#### Simple mode toolbar



 (Auto Crop)	Specify scan areas (cropping frames) automatically. See <a href="#">"Defining a Scan Area (Cropping Frame)"</a> for more information.
 (Remove Cropping Frame)	Delete the selected cropping frames.
 (Left Rotate)	Rotate the image 90 degrees to the left.
 (Right Rotate)	Rotate the image 90 degrees to the right.
 (Information)	



Display the information of the scanned image.


## Adding/Deleting the output size

The [Add/Delete the Output Size] dialog box appears when [Add/Delete] for [Output Size] is selected. You can add or delete output sizes within this dialog box.



[Output Size List]	Display the registered output size name.
[Output Size Name]	Enter the output size name you want to register.
[Width]	Specify the width of the output size.
[Height]	Specify the height of the output size.
[Unit]	Select the unit of measurement for the output size.
[Add]	Add the specified output size to [Output Size List].
[Delete]	Delete the selected output size from [Output Size List].
[Save]	Save the settings specified within the dialog box.



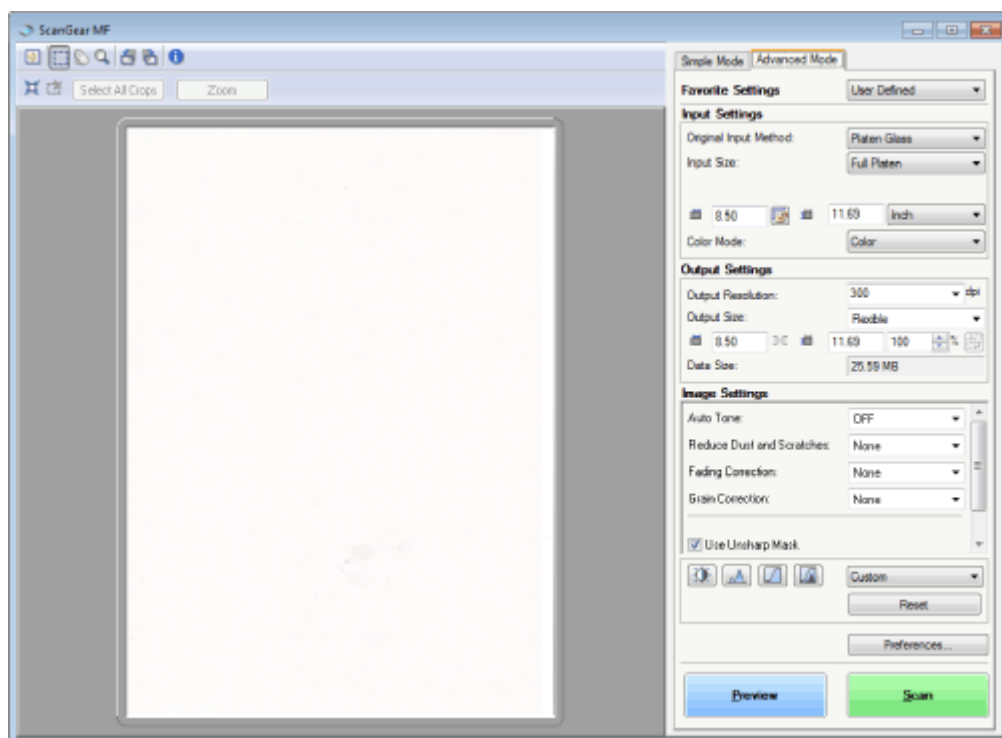

- Scanning in advanced mode
- Advanced mode toolbar
- Advanced mode settings

## Scanning in advanced mode

### 1

#### Display the ScanGear MF.

Start the ScanGear MF using either of the following methods.

- Selecting [Display the Scanner Driver] in the MF Toolbox
- Starting from an application

### 2

#### Click [Advanced Mode].

### 3

#### Specify the settings.

- Favorite Settings
- Input Settings
- Output Settings
- Image Settings
- Color Settings
- Preferences

## 4

Click [Preview].

The preview of the image is displayed.

## 5


Specify scan areas if you want to scan specific areas within the document.

➤ ["Defining a Scan Area \(Cropping Frame\)"](#)










## 6

Click [Scan].

### Advanced mode toolbar



※ To perform all tasks using commands available on the toolbar, you need to display the image in the preview area.

[  ] (Clear)	Delete the preview image. The settings specified using the toolbar commands as well as color settings are all cleared.
[  ] (Crop)	Specify the scan area.
[  ] (Move)	Move the enlarged image.
[  ] (Zoom)	Enlarge or reduces the preview image. <ul style="list-style-type: none"><li>▪ Left-clicking Enlarges the image.</li><li>▪ Right-clicking Reduces the image.</li></ul>
[  ] (Left Rotate)	Rotate the image 90 degrees to the left.
[  ] (Right Rotate)	Rotate the image 90 degrees to the right.
[  ] (Information)	Display the information of the scanned image.
[  ] (Auto Crop)	Select the scan area within the image automatically. ➤ <a href="#">"Defining a Scan Area (Cropping Frame)"</a>
[  ] (Remove Cropping Frame)	Delete the selected cropping frames.
[Select All Crops]	The settings specified within the [Advanced Mode] tab are applied to all cropping frames.
[Zoom]	Enlarge and scan the scan area specified within the preview image. When this button is clicked, it changes to [Undo].


### Advanced mode settings

## Favorite Settings

You can register frequently used input settings, output settings, image settings, color settings, and preferences as favorite settings. Once these settings have been registered as favorite settings, you can apply them to the entire image or specific scan areas of the image displayed in the preview area.




### IMPORTANT

#### The following cannot be registered as favorite settings:

- Width and height values set for [Input Settings] and [Output Settings]
- The  button's enabled state (to allow maintaining height-width proportions) for [Input Settings]
- [%] values (Scale) set for [Output Settings]


[User Defined]	Enter and specify each setting.
[Default]	Restore all current settings to default settings. The image in the preview area is deleted accordingly.
[Add/Delete]	Display the [Add/Delete Favorite Settings] dialog box. You can register the current settings set for the image in the preview area under a specified name. This option is not displayed when no image is displayed in the preview area.

## Input Settings



[Original Input Method]	[Platen Glass] is selected.
[Input Size]	<p>Select the document size.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p> <b>NOTE</b></p> <p><b>If you modified the setting after previewing the image</b></p> <p>The image is deleted from the preview area.</p> </div> <ul style="list-style-type: none"> <li>• Width: Specify the width of the input size.</li> <li>• Height: Specify the height of the input size.</li> </ul> <div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p> <b>NOTE</b></p> <p><b>To change the unit of measurement</b></p> <p>Select [Pixel], [Inch], or [Millimeter] from the drop-down list on the right.</p> <p><b>The data size limit</b></p> <p>Some applications have the data size limit for scanning images. If the size exceeds 21,000 x 30,000 pixels, the image cannot be scanned.</p> <p><b>The smallest data size</b></p> <p>The smallest data size is 4 by 4 pixels size. (It can be specified when [Output Resolution] is set to 25 dpi.)</p> <p><b>To maintain the current height-width proportions</b></p> <p>Click .</p> </div>
	<p>Select the document type and scan mode.</p> <ul style="list-style-type: none"> <li>• [Black and White] Select to output documents in black and white. The image is expressed in black and white based on the threshold value specified. See "<a href="#">Color Settings</a>" for the instruction on how to specify a threshold value.</li> <li>• [Grayscale]</li> </ul>





[Color Mode]	<p>Select to scan black and white printed photos or scan printed photos in black and white. The image is expressed in 256 shades, from 0 up to 255.</p> <ul style="list-style-type: none"> <li>▪ [Color] Select to scan color printed photos. The image is expressed in 256 colors (8 bits) for each R(ed), G(reen) and B(lue) color channel.</li> <li>▪ [Color (Documents)] Select when scanning documents that contain text or tables. The image is expressed in 256 levels (8-bit) of R(ed), G(reen), and B(lue).</li> <li>▪ [Text Enhanced] Select to capture text clearly. This mode is suited for reading text using OCR software. The image is expressed in black and white.</li> </ul>
--------------	--

## Output Settings

[Output Resolution]	<p>Select the scan resolution from the drop-down list or manually enter a value from 25 up to 9600 dpi.</p> <p>➤ "Setting Resolution"</p>
[Output Size]	<p>Select the output size of the scanned image.</p> <ul style="list-style-type: none"> <li>▪ When [Add/Delete] is selected The [Add/Delete the Output Size] dialog box appears. You can add or delete output sizes within this dialog box.</li> </ul> <p>➤ "Using Simple Mode"</p> <ul style="list-style-type: none"> <li>▪ When [Flexible] is selected Enter width, height , or [%] (Scale) values. The ratio of width and height is proportional to the width and height set for [Input Settings]. The scan resolution switches based on the [%] (Scale) value specified. Values can be from 25 up to 38,400. Note that the upper value limit varies depending on the value set for [Output Resolution].</li> </ul> <p>Click [] to change the orientation of the output size between landscape and portrait. This button is inaccessible when [Flexible] is selected.</p>
[Data Size]	<p>Display the data size of the image scanned using the specified settings.</p>

## Image Settings

[Auto Tone]	<p>When [On] is selected, the colors of the image are automatically adjusted. This setting has no effect when no image is displayed in the preview area.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> <b>NOTE</b></p> <p><b>Condition to specify the settings</b></p> <p>This setting is available when [Color], [Color (Documents)], or [Grayscale] is selected in [Color Mode].</p> </div>
[Reduce Dust and Scratches]	<p>Minimize dust and scratches of the photo.</p> <ul style="list-style-type: none"> <li>▪ [None] No dust and scratches are minimized.</li> <li>▪ [Low] Remove only a small amount of dust and scratches.</li> <li>▪ [Medium] This setting is best recommended in most cases.</li> <li>▪ [High] Remove large dust spots and scratches of the photo. Note that this setting may remove subtle details of the image.</li> </ul> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> <b>NOTE</b></p> <p><b>Condition to specify the settings</b></p> <p>This setting can be enabled when:</p> </div>

	<p>[Color], [Color (Documents)], or [Grayscale] is selected for [Color Mode].</p>
[Fading Correction]	<p>Correct the fading of the image, as well as increase saturation to enhance obscure, tinted images. This setting is unselectable when no image is displayed in the preview area.</p> <ul style="list-style-type: none"> <li>▪ [None] No fading correction is made.</li> <li>▪ [Low] Make low-level fading correction.</li> <li>▪ [Medium] This setting is best recommended in most cases.</li> <li>▪ [High] Make extensive fading correction. Note that this setting may change the tone of the image.</li> </ul> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> <b>NOTE</b></p> <p><b>Condition to specify the settings</b></p> <p>This setting can be enabled when: [Color] or [Color (Documents)] is selected for [Color Mode], and [Recommended] or [Color Matching] is selected for [Color Correction] within the [Preferences] dialog box.</p> <p><a href="#">Preferences</a></p> </div>
[Grain Correction]	<p>Smooth the film grain of the image shot on fast film, to make sure excellent image quality and smooth gradation.</p> <ul style="list-style-type: none"> <li>▪ [None] No film grain correction is made.</li> <li>▪ [Low] This setting is best recommended for images showing little noticeable banding.</li> <li>▪ [Medium] This setting is best recommended in most cases.</li> <li>▪ [High] Smooth the film grain extensively. Note that this setting may deteriorate image sharpness and quality.</li> </ul> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> <b>NOTE</b></p> <p><b>Condition to specify the settings</b></p> <p>This setting can be enabled when: [Color], [Color (Documents)], or [Grayscale] is selected for [Color Mode].</p> <p><b>In the preview area</b></p> <p>This setting is not reflected to the image displayed in the preview area.</p> </div>
[Use Unsharp Mask]	<p>If this option is selected, outline of the image is emphasized, making it sharp. It is effective for scanning photos etc., which have a soft focus.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> <b>NOTE</b></p> <p><b>Condition to specify the settings</b></p> <p>This setting can be enabled when: [Color], [Color (Documents)], or [Grayscale] is selected for [Color Mode].</p> </div>
[Use Descreen]	<p>Select to reduce the distorted pattern (moire) when scanning printed photographs and pictures.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p> <b>NOTE</b></p> <p><b>Condition to specify the settings</b></p> <p>This setting can be enabled when: [Color], [Color (Documents)], or [Grayscale] is selected for [Color Mode].</p> </div>

### When [Use Unsharp Mask] is set to [ON]

Some moiré patterns may be generated if [Use Descreen] is set to [ON]. If this happens, set [Use Unsharp Mask] to [OFF].

### To reflect the changes

Scan the document again.


## Color Settings

Using Color Settings command buttons, you can adjust the brightness and contrast of the entire image, specify highlights and shadows, and adjust the contrast and color balance of the image.

The displayed command buttons vary depending on the setting selected for [Color Mode]. When [Text Enhanced] is selected, no command button is displayed.

When the tone curve/threshold drop-down list is clicked, the dialog box appears to specify the corresponding option. When [Reset] is clicked, all current settings are restored to default settings.

- When [Color], [Color (Documents)], or [Grayscale] is selected for [Color Mode]:




- When [Black and White] is selected for [Color Mode]:






When you select [Add/Delete] from the drop-down menu, you can register a set of color settings. See "[Tone curve/threshold drop-down list](#)" for more information.

## Brightness/Contrast

You can adjust the brightness and contrast level in this dialog box.

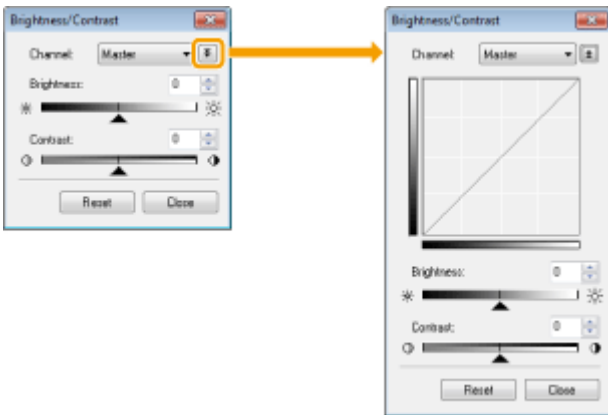
Click [] to adjust the brightness and contrast using the curve on the graph.



[Channel]	Select [Red], [Green], or [Blue] to adjust each color, or select [Master] to adjust all three colors when [Color] or [Color (Documents)] is selected for [Color Mode]. Adjust gray when [Grayscale] is selected for [Color Mode].
[Brightness]	Adjust the brightness by moving [  ] on the slider or manually entering values from -127 up to 127.
[Contrast]	Adjust the contrast by moving [  ] on the slider or manually entering values from -127 up to 127.
[Reset]	Restore all current settings to default settings.

## Histogram


You can visually confirm which parts of the image are darker or lighter. You can eliminate the darkest and lightest parts to increase the halftone tonal range.

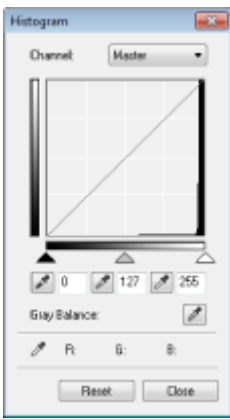

[Channel]	Select [Red], [Green], or [Blue] to adjust each color, or select [Master] to adjust all three colors when [Color] or [Color (Documents)] is selected for [Color Mode]. Adjust gray when [Grayscale] is selected for [Color Mode].
(Black-point eyedropper tool)	Click to move the tool to the part of the image (or the selected scan area) in the preview area that you want to be the darkest part. You can also manually enter a value from 0 up to 245 or move  on the slider.
(Mid-point eyedropper tool)	Click to move the tool to the part of the image (or the selected scan area) in the preview area that you want to be halftone. You can also manually enter a value from 5 up to 250 or move  on the slider.
(White-point eyedropper tool)	Click to move the tool to the part of the image (or the selected scan area) in the preview area that you want to be the lightest part. You can also manually enter a value from 10 up to 255 or move  on the slider.
(Gray Balance eyedropper tool)	For color images, click to move the tool to the part of the image (or the selected scan area) in the preview area that you want to adjust gray balance. Grays in the scanned image become halftone, while other original colors are faithfully reproduced.
[Reset]	Restore all current settings to default settings.

## Tone Curve Settings


You can adjust the brightness of a specific part of the image by selecting your choice of tone curve in this dialog box.

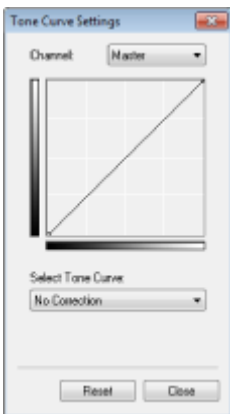

[Channel]	Select [Red], [Green], or [Blue] to adjust each color, or select [Master] to adjust all three colors when [Color] or [Color (Documents)] is selected for [Color Mode]. Adjust gray when [Grayscale] is selected for [Color Mode].
[Select Tone Curve]	Select the tone curve type from [No Correction], [Over Exposure], [Under Exposure], [High Contrast], and [Invert the Negative/Positive Image].
[Reset]	Restore all current settings to default settings.

## Final Review

You can confirm all the specified color settings in this dialog box.

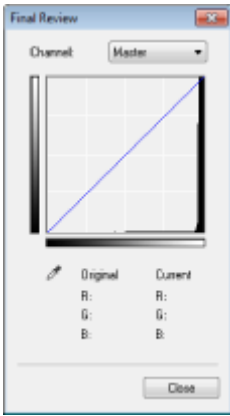


## Threshold


You can adjust the threshold setting. By adjusting the threshold, you can sharpen text within the document and reduce print-through that often happens to newspapers.

### NOTE

#### Threshold

The brightness of color and gray images can be specified as a value from 0 up to 255, while the brightness of black and white images is expressed in black and white including all shades between black and white. A threshold is the boundary to define whether images are black or white.

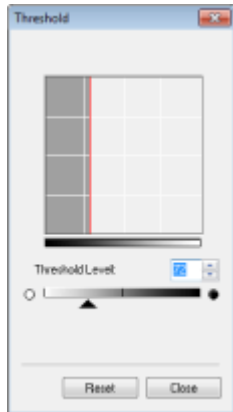

[Threshold Level]	Adjust the threshold level by moving [ 
[Reset]	Restore all current settings to default settings.

## Tone curve/threshold drop-down list

You can save the color settings specified for scan areas. If there are no specific scan areas, the settings specified for the entire image displayed in the preview area are saved. You can also recall the saved settings to apply to the selected scan area.


[Custom]	You can custom-define each setting. The settings can be modified after these settings were applied to the image.
[Add/Delete]	Display the [Add/Delete Threshold Settings] dialog box when [Black and White] is selected for [Color Mode] in the [Add/Delete Tone Curve Settings] dialog box. You can register the current settings set for the image in the preview area under a specified name.

## Preferences

The [Preferences] dialog box appears when [Preferences] is clicked in the [Advanced Mode] tab. You can change the scan and preview settings within this dialog box.




## [Preview] tab

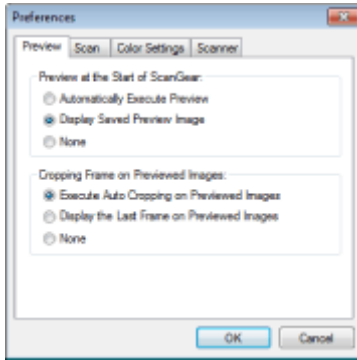


[Preview at the Start of ScanGear]	Select the preview mode when you start the ScanGear MF. <ul style="list-style-type: none"><li>• [Automatically Execute Preview] The preview starts automatically when the ScanGear MF is started.</li><li>• [Display Saved Preview Image] Display the last previewed image.</li><li>• [None] No preview image is displayed.</li></ul>
[Cropping Frame on Previewed Images]	Specify how you want the scan area displayed within the image displayed in the preview area. <ul style="list-style-type: none"><li>• [Execute Auto Cropping on Previewed Images] The scan area is automatically selected and scaled to fit to the document size.</li><li>• [Display the Last Frame on Previewed Images] Display the scan area last defined.</li><li>• [None] No frame is displayed.</li></ul>

## [Scan] tab

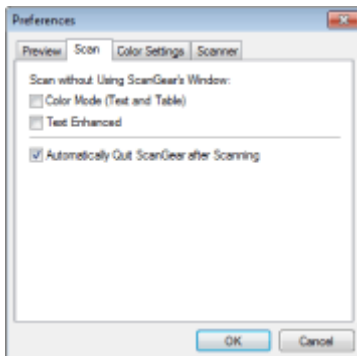


[Scan without Using ScanGear's Window]	Documents are scanned using application-defined settings when scanning using applications such as OCR software that performs scans without opening the ScanGear MF main window. To perform a scan in a specific color mode instead of using the application-defined settings, specify this option. <ul style="list-style-type: none"><li>• [Color Mode (Text and Table)] The document is scanned in [Color (Documents)] mode. Application-defined settings are disregarded.</li><li>• [Text Enhanced] The document is scanned in [Text Enhanced] mode. Application-defined settings are disregarded.</li></ul>
[Automatically Quit ScanGear after Scanning]	When this setting is selected, the [ScanGear MF] dialog box closes automatically when scanning is complete. Depending on the application in use, the ScanGear MF closes automatically when scanning is complete, irrespective of application-defined settings.

## [Color Settings] tab

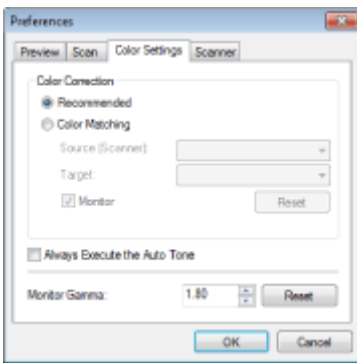

[Color Correction]	<p>Select the color correction type.</p> <ul style="list-style-type: none"> <li>• [Recommended] Reproduce vividly the colors of a document displayed on the screen.</li> <li>• [Color Matching] Automatically match the colors of the image to those of the scanner, monitor, and color printer. When this option is selected, the color command buttons in the [Advanced Mode] tab are disabled. This setting is selectable only when [Color] or [Color (Documents)] is selected for [Color Mode].</li> </ul>
[Always Execute the Auto Tone]	<p>Always correct the colors of the image automatically. This setting is selectable only when [Color], [Color (Documents)] or [Grayscale] is selected for [Color Mode].</p>
[Monitor Gamma]	<p>Adjust the gamma. You can specify the gamma value from 0.10 up to 10.00 for the monitor which displays the scanned image. This setting is not reflected to the scan result when [Black and White] is selected for [Color Mode].</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>NOTE</b></p> <p><b>When [Color Matching] is selected for [Color Correction]</b></p> <p>The value specified in the profile is applied to scanning results.</p> </div>

## [Scanner] tab

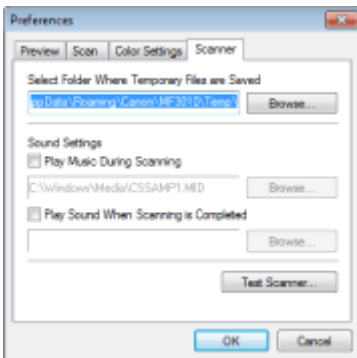

[Select Folder Where Temporary Files are Saved]	<p>Specify the folder where scanned images are temporarily saved. Click [Browse] to specify the folder.</p>
[Sound Settings]	<p>Set the scanner to play music during scanning or when scanning is complete.</p> <ul style="list-style-type: none"> <li>• [Play Music During Scanning] Music is played during scanning. Click [Browse] and specify the sound file.</li> <li>• [Play Sound When Scanning is Completed] Music is played when scanning is completed. Click [Browse] and specify the sound file.</li> </ul> <p>The following file formats are supported:</p> <ul style="list-style-type: none"> <li>• MIDI files (*.mid, *.rmi, *.midi)</li> <li>• Audio files (*.wav, *.aif, *.aiff)</li> <li>• MP3 file (*.mp3)</li> </ul>
[Test Scanner]	<p>You can check to see if the scanner is functioning properly. The [Scanner Diagnostics] dialog box appears when this button is clicked. Click [Start].</p>

## Defining a Scan Area (Cropping Frame)

030E-03J

You can select or deselect scan frames (cropping areas) for images displayed in the preview area.

- ✦ Selecting the cropping area automatically
- ✦ Defining a cropping frame
- ✦ Defining multiple cropping frames
- ✦ Deleting cropping frames

### Selecting the cropping area automatically

1

**Display the preview.**

2

**Click  (Auto Crop) on the toolbar.**

Every time this button is clicked, the selected cropping frame becomes smaller.

### Defining a cropping frame

1

**Display the image in the preview area.**

2

**Click  (Crop) on the toolbar.**


3

**Click on the preview image and drag around the contours/border of the area you want to select.**

- To adjust the selected area  
Drag around the contours/border of the area or manually enter the width and height for [Input Settings] in the [Advanced Mode] tab.
- To move the scan area  
Click the inside rim of the scan area and drag it.

#### NOTE

##### **To maintain height-width proportions of the original image**

Click  in [Input Settings].

##### **When scanning from the feeder**

The current cropping frame is deleted when new one is defined.

## Defining multiple cropping frames

You can define multiple cropping frames.

**1**

**Display the image in the preview area.**

**2**

**Click  (Crop) on the toolbar.**

**3**

**Click on the preview image and drag around the contours/border of the area you want to select.**

**4**

**Click the outer rim of the cropping frame already defined and drag the frame to add.**

### NOTE

#### **The number of cropping frames that can be specified**

Up to 10 cropping frames can be specified.


**5**

**Adjust the cropping frames as needed.**

Click to select the cropping frames you want to adjust.

## Deleting cropping frames


To delete a cropping frame, click the outer rim of the cropping frame already defined and drag the frame to add.

- Press [Delete] on the keyboard.
- Click  (Remove Cropping Frame) on the toolbar.
- Right-click on the cropping frame and select [Delete].
- Hold down [Ctrl] on the keyboard, right-click the outer rim of the cropping frame, and select [Delete].

# Setting Resolution

030E-03K

A scanned image is a group of dots which contain color and brightness information. The density of these dots is called the "resolution". The "dpi (dots per inch)" means the maximum dots a printer can print per inch. Set the resolution by specifying the following options.

 MF Toolbox -> [Image Quality]

 ScanGearMF -> the advanced mode tab -> [Output Resolution]

## To display the scanned image on a monitor

Images are scanned at a resolution of 75 dpi, which is a typical monitor resolution.

## To print from the printer

Scan the document at the printer's resolution.

### IMPORTANT

#### **To print the scanned image by scaling (enlarging/reducing)**

If you print the scanned image by doubling its current size, for example, the actual resolution decreases by half. To maintain sufficient print quality, you need to double the resolution, and vice versa.

#### **Resolution and data size**

If the resolution is doubled, the image size becomes four times larger. If the data size becomes too large, it may take considerably longer to process the image, consequently causing an insufficient memory error as well as other unexpected errors. To prevent this from happening, specify the minimum allowable resolution based on your purpose of the scan.

### NOTE

#### **When printing the scanned image from a color printer**

As a color printer uses several different color inks to reproduce colors, the resolution can be decreased by half.

#### **About the scanning resolution**

The maximum resolution is as following.

- Optical resolution: 600 dpi
- Software interpolated resolution: 9600 dpi

# Troubleshooting


030E-03L

This chapter describes how to handle paper jams and printout problems.

Clearing jams	See " <a href="#">Clearing Jams.</a> "
When a problem has occurred (Read this section before requesting service.)	See " <a href="#">Troubleshooting.</a> "
When print quality is not good	See " <a href="#">Printing Results are Not Good.</a> "
When you want to uninstall the software	See " <a href="#">Uninstalling the Software.</a> "
When the problem cannot be resolved after referring to the appropriate trouble shooting section	See " <a href="#">When a Problem cannot be Resolved.</a> "

## Clearing Jams

030E-03S

If the [  ] indicator is blinking, a paper jam occurs inside the printer. Follow the procedures in this section to remove the jammed paper.

➤ "Removing Jammed Paper"

### **WARNING**

#### **When removing the jammed paper**

Use caution to avoid cutting your hands.

#### **When removing jammed paper or when inspecting the inside of the machine**

Do not allow necklaces, bracelets, or other metal objects to touch the inside of the machine, as this may result in burns or electrical shock.

### **CAUTION**

#### **If loose toner comes into contact with your skin or clothing**


Wash with cold water only. Avoid warm water, as this will set the toner and cause it to stain your skin or clothing.

#### **When removing the jammed paper**

Remove the paper carefully so that no paper fragments remain inside the machine. Also, do not put your hands in areas other than those described in the procedure. Doing so may result in injury or burns.

#### **Do not touch the fixing unit (A).**

Touching the fixing unit (A) may cause burns as it becomes very hot during use.

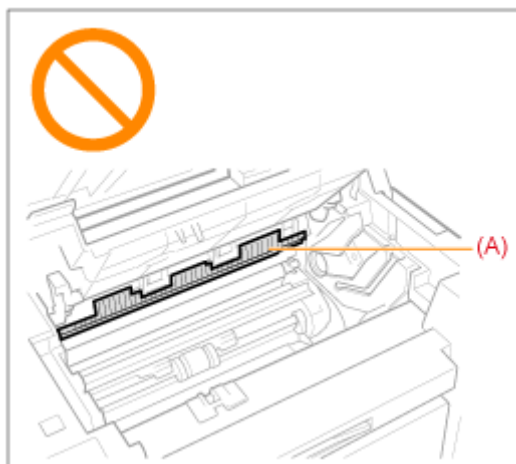

### **IMPORTANT**

#### **If the jammed paper is torn**

Remove all torn pieces of paper to avoid further jams.

#### **If paper jams occur repeatedly**

Check the following.


- Fan the paper stack and tap the edge on a flat surface to align the paper before loading it into the machine.
- Make sure that the paper you are using meets the requirements for use.

➤ "Supported Paper Types"

- Make sure that you have removed all scraps of paper from the inside of the machine.

#### **Do not touch the transfer roller (A).**

Touching the transfer roller (A) may damage the machine.

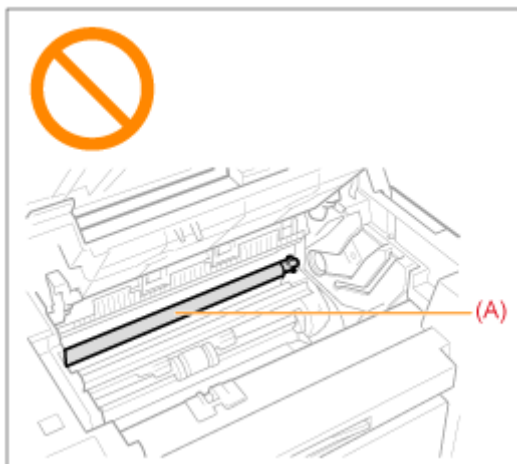

 **NOTE**

**Do not force the jammed paper out of the machine.**

Contact your local authorized Canon dealer or the Canon help line for assistance, if needed.



# Removing Jammed Paper


030E-03U

Follow onscreen instructions to remove jammed paper.

## Inside the printer


# 1

**Hold the operation panel.**

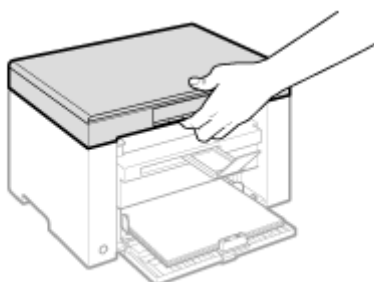

# 2

**Lift the scanning platform.**

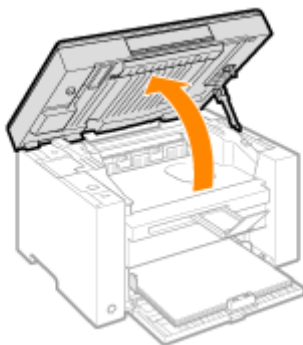

### **?** When you cannot lift the scanning platform


Make sure that the platen glass is completely closed.

Do not try to forcefully lift the scanning platform, as this may damage the machine.

- ※ The platen glass may not be completely closed when a thick document such as books is placed inside. In such case, remove it from the platen glass.


# 3

**Hold the grip on the left front side of the toner cover.**

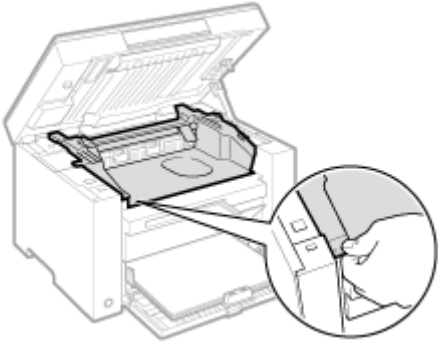


**4**

**Open the toner cover.**

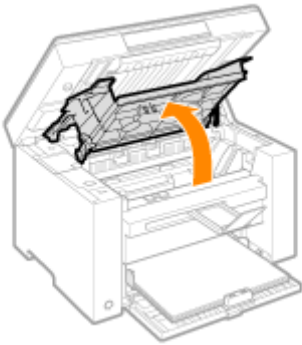


**5**

**Remove the toner cartridge.**

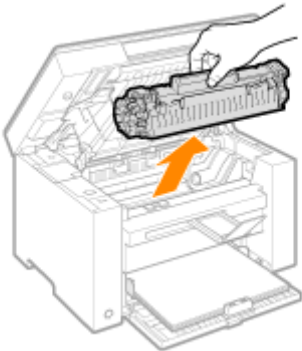

**6**

**Remove the jammed paper by pulling it out gently.**

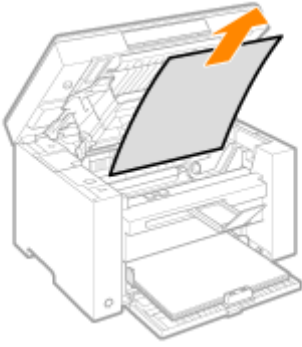


### When the leading edge of the jammed paper is not visible

Do not pull out the paper forcibly and proceed to Step 7.


## 7

### Remove the jammed paper by pulling it out gently.

- (1) Gently pull any jammed paper downward from the space between the fixing unit (A) and roller (B) until the leading edge emerges from the machine.

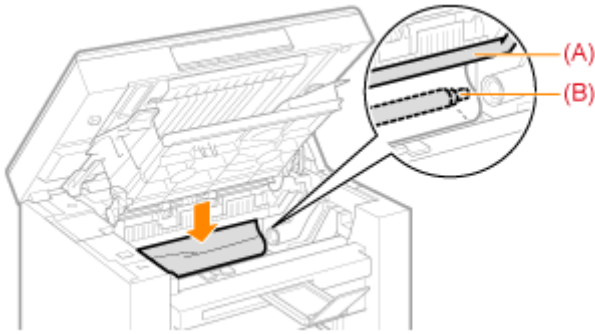

- (2) When the leading edge emerges, hold both sides of the jammed paper and carefully pull it out.

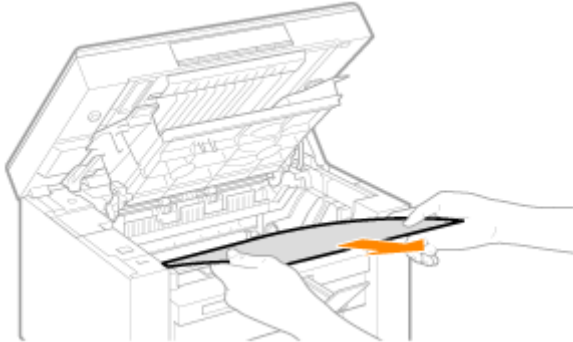


## 8

### Reload paper into the paper cassette.

## 9

### Insert the toner cartridge.

Fit the protrusions (A) on both sides of the toner cartridge into the guides located on both sides of the machine and slide the toner cartridge into the machine until the toner cartridge comes to rest and is held against the back of the machine.

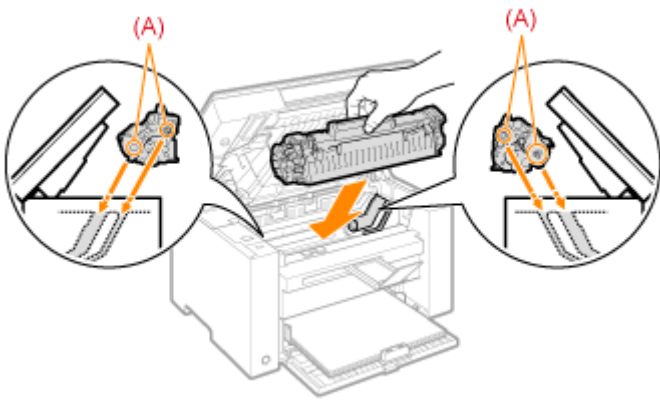

## 10

**Close the toner cover.**

### **When you cannot close the toner cover**

Make sure that the toner cartridge is properly set inside the machine.  
Do not try to forcefully close the toner cover, as this may damage the machine.

## 11


**Lower the scanning platform.**

The machine is ready to print.

### **Paper cassette**


## 1

**Remove the paper loaded in the paper cassette.**

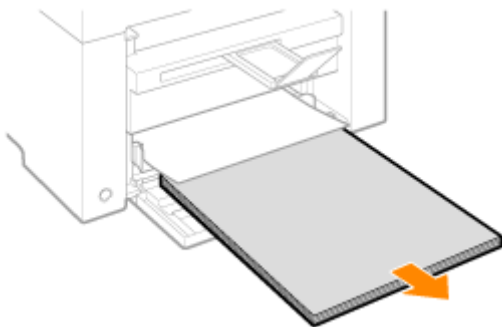


## 2

**Remove the jammed paper by pulling it out gently.**

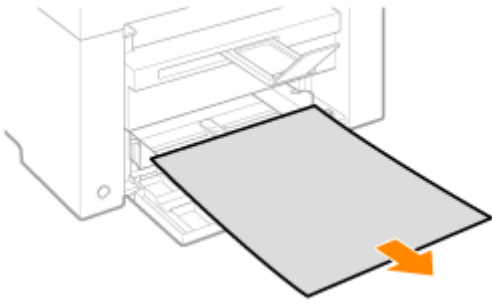

**3**

**Load paper in the paper cassette.**

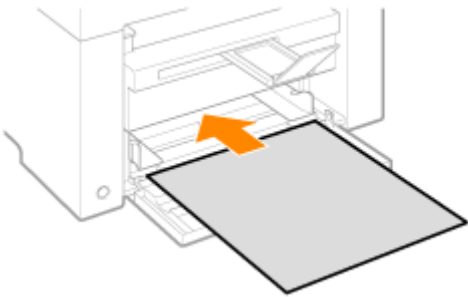

# Troubleshooting

030E-068

If a problem occurs while the machine is in use, try the actions suggested in this section before contacting technical support.

## Check the following first.

- ❏ Is the power switched ON?
- ❏ Has the power switch been just turned ON?
- ❏ Is the machine in the sleep mode?
- ❏ Are the [Paper Jam] or [Paper] Indicators blinking?
- ❏ Is anything other than "1" displayed?
- ❏ Do an "E" and a subsequent three-digit number repeatedly appear on the display?

### Is the power switched ON?

Make sure that the power cord is securely plugged into the machine and into the wall outlet.

- ❏ See the Starter Guide.

Make sure that electricity is supplied from the power cord.  
Use another power cord or check to see if the cord is broken using a voltmeter.

Turn OFF and ON the power switch.

- ❏ See the Starter Guide.

If this works, proceed to "Has the power switch been just turned ON?"

### Has the power switch been just turned ON?

Wait a few seconds until the machine starts and warms up.

If this works, proceed to "Is the machine in the sleep mode?"

### Is the machine in the sleep mode?

Press any key on the operation panel to return from the sleep mode.

If this works, proceed to "Are the [Paper Jam] or [Paper] Indicators blinking?"

### Are the [Paper Jam] or [Paper] Indicators blinking?

Make sure that paper is loaded properly in the paper cassette.

- ❏ "Loading Paper"

Check to see if there is a jam somewhere inside the machine.

- ❏ "Clearing Jams"

If this works, proceed to "Is anything other than "1" displayed?"

### Is anything other than "1" displayed?

See the following section and check the display contents and the actions.

➤ ["Operation Panel and Display"](#)

### **Do an "E" and a subsequent three-digit number repeatedly appear on the display?**

Some sort of error has occurred in the printer.

Turn OFF the power switch, wait at least 10 seconds, and then turn it ON again. If the problem is not solved, write down the three-digit number that is displayed, turn OFF the main power switch, disconnect the power cord, and contact the Canon help line.

---

If you continue to experience problems after trying the actions suggested in this section, see the following sections to solve the problems.

- ["Paper Feeding Problems"](#)
  - ["Copying Problems"](#)
  - ["Printing Problems"](#)
  - ["Scanning Problems"](#)
  - ["Installation and Uninstallation Problems"](#)
  - ["Miscellaneous Problems"](#)
-

## Paper Feeding Problems

030E-040

- ❏ Paper is not fed at all, or more than one sheet is fed simultaneously (multi-feeds).
- ❏ Paper jams occur repeatedly.

### **Paper is not fed at all, or more than one sheet is fed simultaneously (multi-feeds).**

Make sure that the paper is properly loaded.

- ❏ ["Loading Paper"](#)

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.

- ❏ ["Supported Paper Types"](#)

Make sure to load the same size and type of paper into the paper cassette.

### **Paper jams occur repeatedly.**

Make sure that the paper is properly loaded.

- ❏ ["Loading Paper"](#)

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.


- ❏ ["Supported Paper Types"](#)

Make sure that the scanning platform is fully closed.



## Cannot Print, or the Images on Printouts are Spotted or Distorted

030E-041

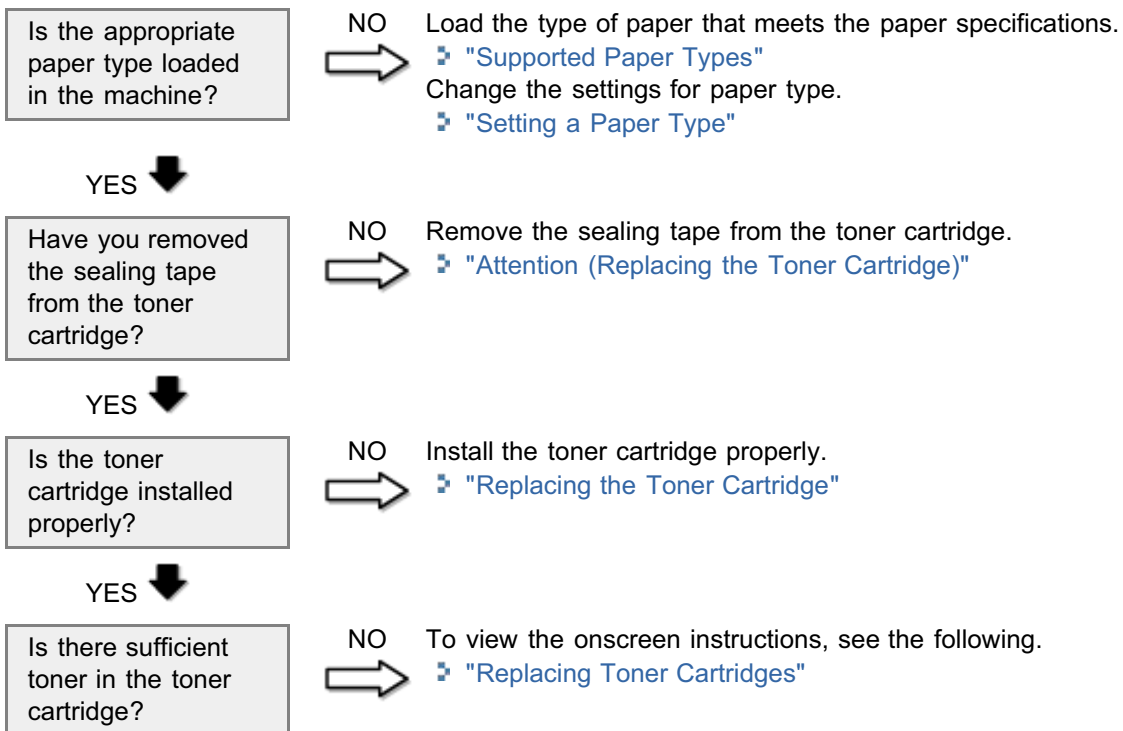

# Copying Problems

030E-042

## See the following sections.

- The copy output is hardly readable and copied poorly.
- The copy output is askew.

### The copy output is hardly readable and copied poorly.

- The copy output is too light or has uneven density.
- Vertical white streaks appear on the copy output.
- The copy output has spots and is dirty.
- The copy output is askew.
- Toner does not fix onto paper well.

See the following section.

- ["The Copy Output is Hardly Readable and Copied Poorly"](#)

### The copy output is askew.

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.

- ["Supported Paper Types"](#)


Adjust the paper guides to the paper width without space. If the problem persists, load paper with the other side face up, or in an opposite orientation.

- ["Loading Paper"](#)

Make sure that the output tray is not full.

# The Copy Output is Hardly Readable and Copied Poorly

030E-043

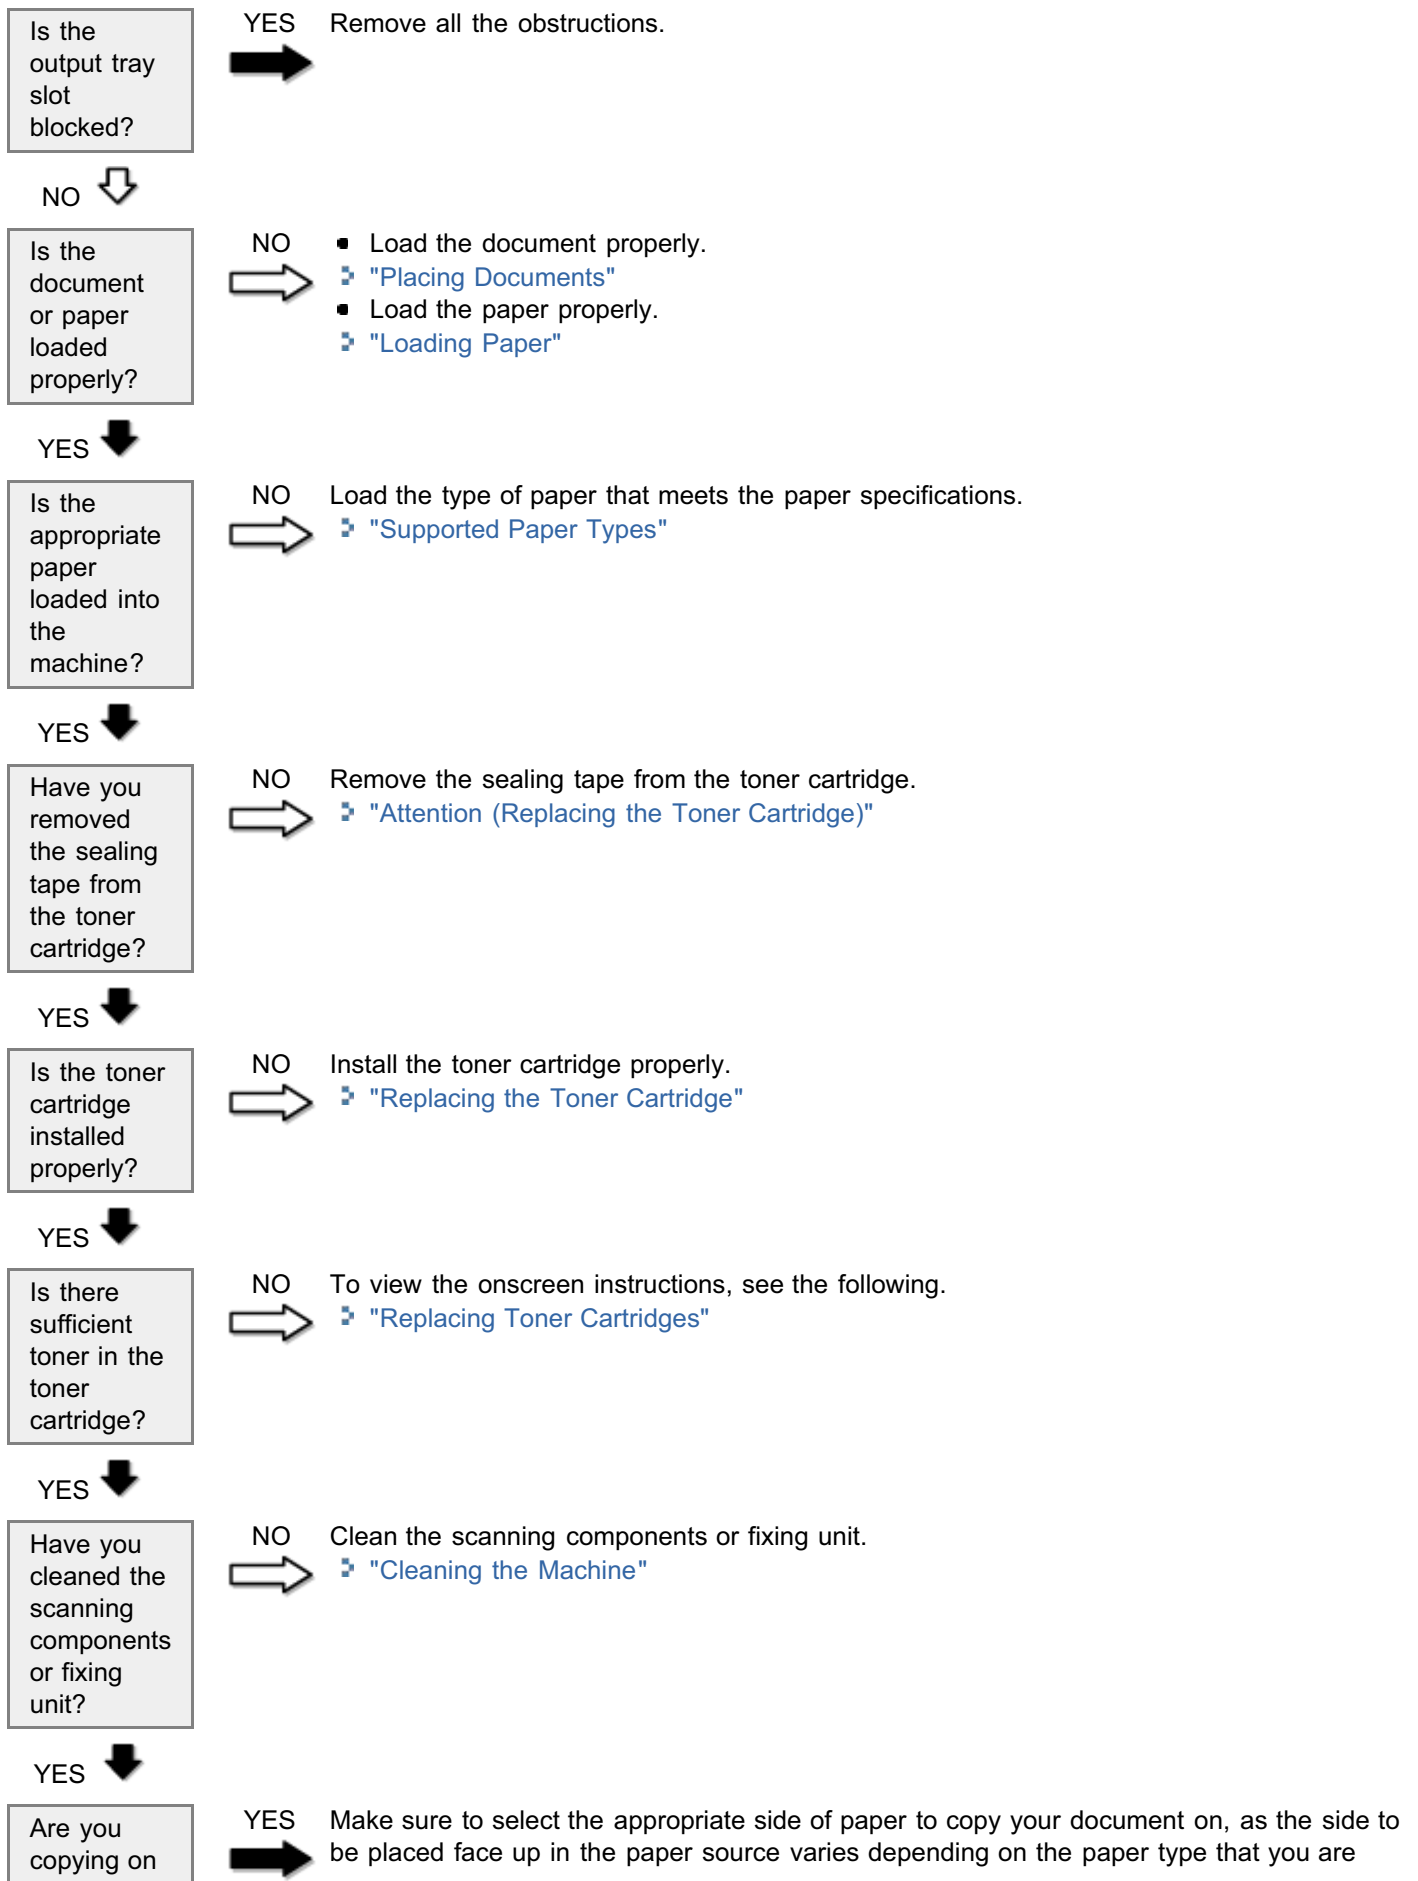

the correct?

using. If the copy result is not satisfactory, try to copy your document on the other side.

---

# Printing Problems

030E-044

## See the following sections.

- The printout is hardly readable and printed poorly.
- The printout is printed askew.
- Cannot print documents from a computer.

### The printout is hardly readable and printed poorly.

- The printout is too light or has uneven density.
- Vertical white streaks appear on the printout.
- The printout has spots and is dirty.
- The printout is askew.
- The toner does not flow well into the paper.

See the following section:

- "The Copy Output is Hardly Readable and Copied Poorly"

### The printout is printed askew.

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.

- [Supported Paper Types](#)

Adjust the paper guides to the paper width without space. If the problem persists, load paper with the other side face up, or in an opposite orientation.

- [Loading Paper](#)

Make sure that the output tray is not full.


### Cannot print documents from a computer.

See the following section:

- "Cannot Print Documents from a Computer"

# Cannot Print Documents from a Computer

030E-045

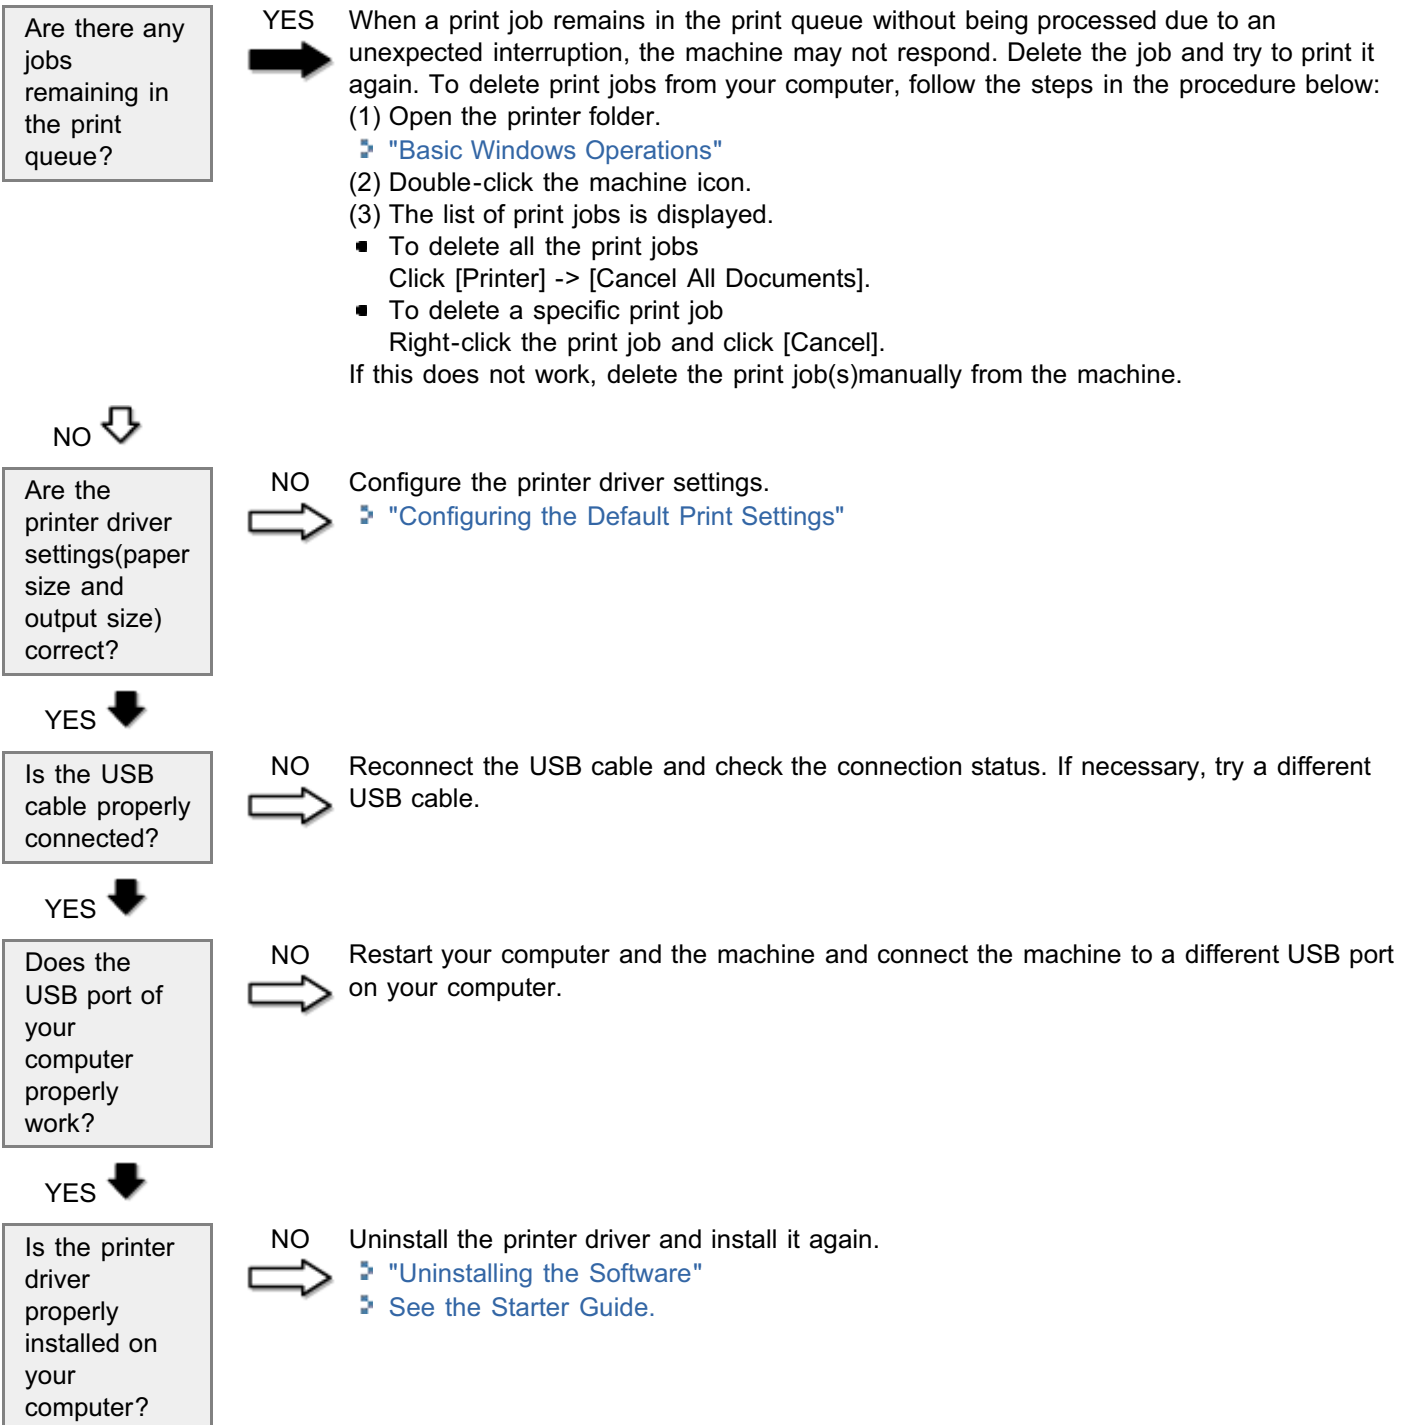

## Scanning Problems

030E-046

### See the following sections.

- ❏ Cannot scan a document.
- ❏ Cannot scan multiple documents to create a combined multi-page PDF file.
- ❏ During scanning, a computer connected to the machine freezes or is disconnected.
- ❏ In the event that applications installed from the User Software CD-ROM that comes with the machine are not properly registered in the MF Toolbox.
- ❏ A different application opens when you want to scan a document.
- ❏ Scanned images are spotted or distorted.
- ❏ A scanned image is displayed larger (or smaller) than its actual size on the computer screen.
- ❏ Cannot scan highlighting marks.

### Cannot scan a document.

Refer to the following section:

- ❏ "Cannot Scan a Document"

### Cannot scan multiple documents to create a combined multi-page PDF file.

Start ScanGear MF, access the Preferences dialog box, and clear the check box next to [Automatically Quit ScanGear after Scanning] before you perform a scan. When this check box is selected, you can only perform a scan from the platen glass.

### During scanning, a computer connected to the machine freezes or is disconnected.

Quit all running applications to increase the memory usage.

Make sure that the machine has sufficient free hard disk space when scanning documents at a high resolution. To scan an A4-sized document at a resolution of 600 dpi in full color, for example, a minimum of 300 MB of free space is required.

If an error occurs while scanning a specific image for Photoshop, access the [Edit] menu, select [Preferences], and click [Memory & Image Cache]. Set [Memory Usage] somewhere between 50 and 60 %.

The scanner driver may not be installed properly. Uninstall the software and install it again.

- ❏ "Uninstalling the Software"
- ❏ See the Starter Guide.

### In the event that applications installed from the User Software CD-ROM that comes with the machine are not properly registered in the MF Toolbox.

Applications are automatically registered to the MF Toolbox once they have been installed. They are not, however, if installed while the MF Toolbox is open. To access these applications from the toolbox, you need to manually register them to the toolbox.

- ❏ "Using the MF Toolbox"

### A different application opens when you want to scan a document.

Register the appropriate application in the MF Toolbox.

➤ ["Using the MF Toolbox"](#)

### **Scanned images are spotted or distorted.**

Clean the platen glass and feeder's scanning area.

Scanned images cannot be displayed correctly if displayed smaller than the actual size, depending on the application. Scale the images to 100 %.

Set the display colors to "High Color (16-bit or 24-bit)" or higher in [Display Properties].

### **A scanned image is displayed larger (or smaller) than its actual size on the computer screen.**

Try one of the following to set the appropriate resolution.

- Enlarge or reduce the image size in the application that you are using. In an application such as MS Paint or Imaging, an image may be displayed larger than its actual size and cannot be scaled down.
- To solve this problem, scan the image again at a different resolution. If scanned at a higher resolution, the image is displayed larger than its actual size, and vice versa.

➤ ["Setting Resolution"](#)

### **Cannot scan highlighting marks.**


Start the ScanGear MF, access [Advanced Mode], and set [Color Correction] to [Color Matching].

➤ ["Using Advanced Mode"](#)



# Cannot Scan a Document

030E-069

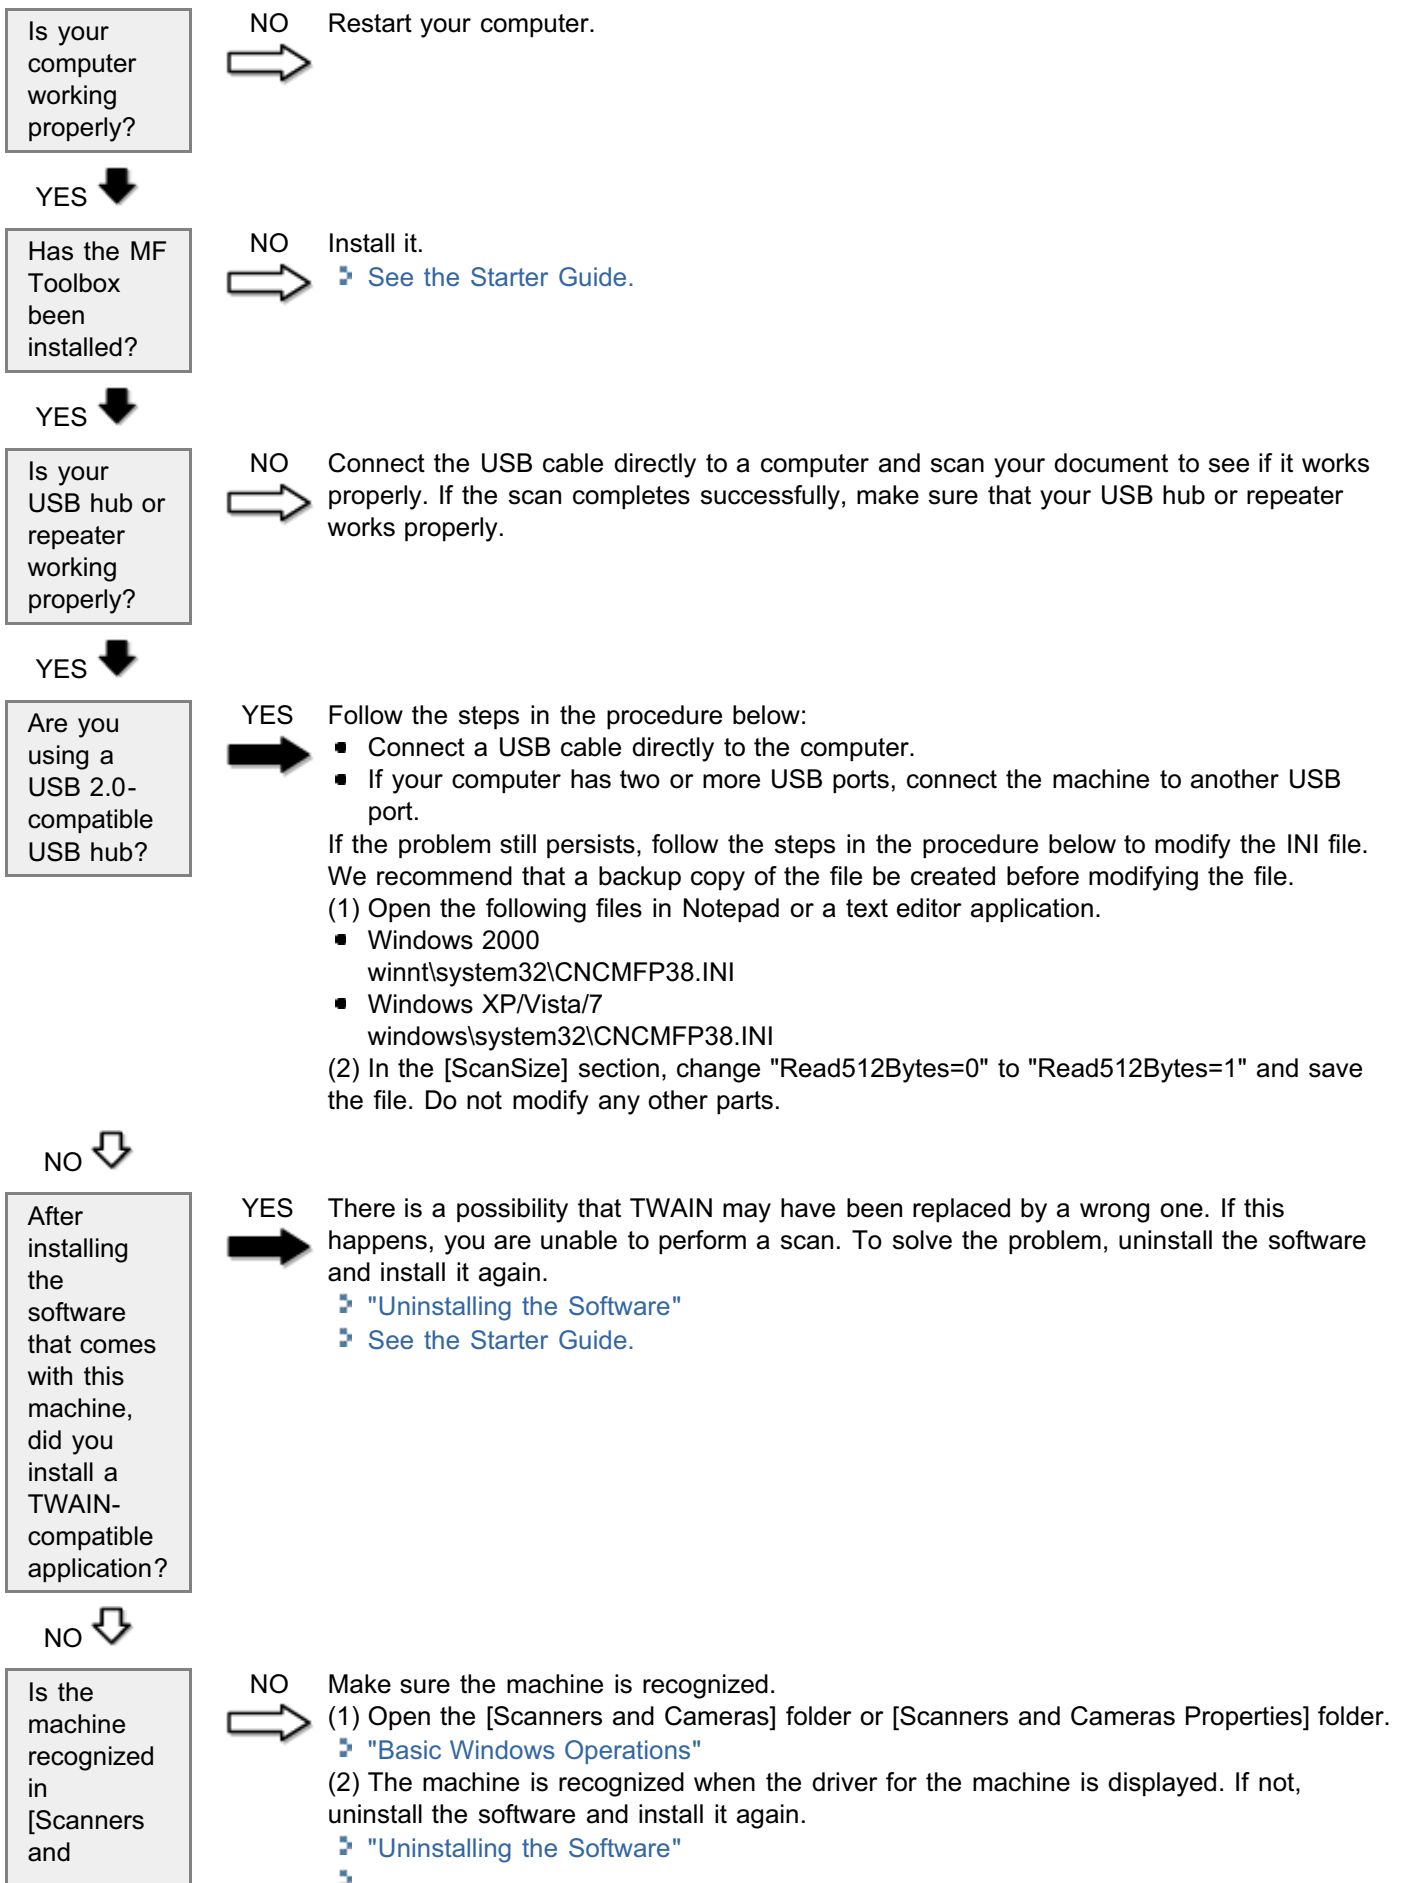

Cameras]  
in  
Windows?

[See the Starter Guide.](#)

---

## Installation and Uninstallation Problems

030E-06A

### See the following sections.

- Cannot install the software.
- It takes too long to uninstall the drivers (Windows XP).
- The [Canon] folder remains in the Start menu after the software has been uninstalled.
- Cannot use the software after the operating system on your computer has been upgraded to Windows XP/Vista/7.

### Cannot install the software.

Follow the onscreen instructions to install the software. If an error occurs during the installation, uninstall the software, restart your computer, and install it again.

- "Uninstalling the Software"
- See the Starter Guide.

Quit all running applications and install the software again.

### It takes too long to uninstall the drivers (Windows XP).

Quit all running applications (including anti-virus software) before uninstalling the software.

### The [Canon] folder remains in the Start menu after the software has been uninstalled.

Uninstall the MF Toolbox first before uninstalling the MF drivers. If you uninstall the MF drivers first, the [Canon] folder may remain after the MF Toolbox has been uninstalled.

Follow the steps in the procedure below to remove the folder:

- **For Windows 2000**  
From the [Start] menu, click [Settings] -> [Taskbar & Start Menu] -> [Taskbar and Start Menu Properties] -> the [Advanced] tab -> Click [Advanced], select [Programs] from [Start Menu] in [All Users], and delete the [Canon] folder.
- **For Windows XP**  
Right-click the [Start] menu and open Windows Explorer. From [All Users], select [Start Menu] -> [Programs] and delete the [Canon] folder.
- **For Windows Vista**  
Right-click the [Start] menu and select [Explore All Users]. From [Programs] in [Start Menu], delete the [Canon] folder.
- **For Windows 7**  
Delete the [Canon] folder in [All Programs] under the [Start] menu.

### Cannot use the software after the operating system on your computer has been upgraded to Windows XP/Vista/7.

Uninstall the software that comes with the machine before upgrading the operating system on your computer to Windows XP/Vista/7. Once the upgrade has been complete, reinstall the software.

- "Uninstalling the Software"
- See the Starter Guide.

## Miscellaneous Problems

030E-06C

### See the following sections.

- ❖ Steam is emitted from the machine's output area.
- ❖ Water droplets form on the back side of the operation panel and in the output area.
- ❖ The settings that you specified are not enabled or saved.

### Steam is emitted from the machine's output area.

Use only in the machine. Moisture evaporates from damp paper due to the heat generated inside the fixing unit (it is most likely to occur at low room temperatures). This is not a malfunction, but you can prevent this by using a stack of new unopened paper.

Should you smell something burning, immediately turn OFF the machine, unplug the power plug from the AC power outlet, and contact your local authorized Canon dealer or the Canon help line. Continued use may lead to a fire or electrical shock.

### Water droplets form on the back side of the operation panel and in the output area.

Use only in the machine. Moisture evaporates from damp paper due to the heat generated inside the fixing unit (it is most likely to occur at low room temperatures). This is not a malfunction, but you can prevent this by using a stack of new unopened paper.

Should you smell something burning, immediately turn off the machine, unplug the power plug from the AC power outlet, and contact your local authorized Canon dealer or the Canon help line. Continued use may lead to a fire or electrical shock.

### The settings that you specified are not enabled or saved.

If the machine is turned OFF immediately after changes have been made to the settings from the operation panel, the changes may not be saved on the machine.

Wait for approximately five seconds after changes have been made to the settings and turn OFF the machine.



## Paper curls or creases.

- ❖ "Paper Curls"
- ❖ "Paper Creases"



## Unevenness or smudge marks appears.

- ❖ "Printing is Uneven"
- ❖ "White Specks or Spots Appear on the Printout"
- ❖ "The Toner does Not Flow Well into the Paper"
- ❖ "Vertical Streaks Appear on the Output"
- ❖ "Toner Smudges and Spatters Appear around Text and Images"
- ❖ "The Printout is Too Dark"



## Others

- ❖ "Printed Bar Codes Cannot be Scanned"
- ❖ "Images may be partially cut off on the output"

### NOTE

#### **To contact your local authorized Canon dealer**

When a problem occurs that is not suggested in the e-Manual, or a problem persists if you follow the instructions, or you cannot determine the nature of the problem, contact your local authorized Canon dealer.



Try one of the following to solve the problem.

## <Cause 1> Damp paper is used.

<b>Solution 1</b>	Replace the paper stack with new unopened one. ➤ <a href="#">"Supported Paper Types"</a>
<b>Solution 2</b>	Follow the steps in the procedure below when plain paper (60 to 90 g/m <sup>2</sup> ) is loaded. <ol style="list-style-type: none"><li>1. Access the [Page Setup] tab.</li><li>2. Set [Paper Type] to [Plain Paper L].</li></ol>
<b>Solution 3</b>	Change the <Special Mode d> setting from the operation panel. ➤ <a href="#">"Special Mode"</a>

## <Cause 2> The paper type loaded is not appropriate.

<b>Solution</b>	Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications. ➤ <a href="#">"Supported Paper Types"</a>
-----------------	---



Try one of the following to solve the problem.

## <Cause 1> The paper stack is not loaded correctly.

### Solution

Load the paper stack is not loaded correctly.  
➤ ["Loading Paper"](#)

## <Cause 2> Damp paper is used.

### Solution

Replace the paper stack with new unopened one.  
➤ ["Supported Paper Types"](#)

## <Cause 3> The paper type loaded is not appropriate.

### Solution

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.  
➤ ["Supported Paper Types"](#)

## <Cause 4> There is a foreign object inside the machine.

### Solution

Remove the foreign object from the machine.

## <Cause 5> Paper creases due to the paper type used or usage conditions of the machine.

### Solution

Change the <Special Mode d> setting from the operation panel.  
➤ ["Special Mode"](#)

## Printing is Uneven

---

030E-04F



Try one of the following to solve the problem.

### <Cause 1> Paper is too moist or Too dry.

---

#### **Solution**

Replace the paper stack with new unopened one.  
➤ ["Supported Paper Types"](#)

### <Cause 2> Toner is nearly empty.

---

#### **Solution**

To view the onscreen instructions, see the following.  
➤ ["Replacing the Toner Cartridge"](#)

### <Cause 3> The drum in the toner cartridge is deteriorated.

---

#### **Solution**

Replace the toner cartridge with new one.  
➤ ["Replacing the Toner Cartridge"](#)

---



## White Specks or Spots Appear on the Printout

030E-04H



Try one of the following to solve the problem.

### <Cause 1> The paper type loaded is not appropriate.

#### **Solution**

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.

➤ ["Supported Paper Types"](#)

### <Cause 2> Damp paper is used.

#### **Solution**

Replace the paper stack with new unopened one.

➤ ["Supported Paper Types"](#)

### <Cause 3> The drum in the toner cartridge is deteriorated.

#### **Solution**

Replace the toner cartridge with new one.

➤ ["Replacing the Toner Cartridge"](#)

### <Cause 4> White specks or spots appear around text and images when a high-contrast document is printed.

#### **Solution**

Change the [Special Print Mode] setting to [Special Settings 2] in the printer driver.

➤ ["Special Mode"](#)

※ The density becomes lower with [Special Settings 2] than with [Off] or [Special Settings 1].  
Additionally, text and lines may be reproduced less clearly.

## The Toner does Not Flow Well into the Paper

---

030E-04J



Try one of the following to solve the problem.

### <Cause 1> The paper type setting specified is not appropriate.

---

#### **Solution**

Select the appropriate paper type setting.  
➤ ["Setting a Paper Type"](#)

### <Cause 2> The paper type loaded is not appropriate.

---

#### **Solution**

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.  
➤ ["Supported Paper Types"](#)

---

## Vertical Streaks Appear on the Output

030E-04K



Try one of the following to solve the problem.

### <Cause 1> Due to the paper type or usage conditions, vertical streaks appear on the output.

<b>Solution 1</b>	Replace the paper stack with new unopened one. ❖ "Supported Paper Types"
<b>Solution 2</b>	<b>To copy or print</b> Change the <Special Mode b> setting from the operation panel. ❖ "Special Mode"
	<b>To print from a computer</b> Change the [Special Print Adjustment] setting in the print driver. ❖ "Special Mode"

### <Cause 2> The toner cartridge was replaced recently, or the machine has not printed anything for an extended period of time.

<b>Solution</b>	Change the <Special Mode c> setting from the operation panel. ❖ "Special Mode"
-----------------	---

## Toner Smudges and Spatters Appear around Text and Images

030E-04L



Try one of the following to solve the problem.

### <Cause 1> The paper type loaded is not appropriate.

#### **Solution**

Make sure that the number of sheets or the paper type loaded in the paper cassette meets the paper specifications.

➤ ["Supported Paper Types"](#)

## The Printout is Too Dark

030E-04R



Try one of the following to solve the problem.

### <Cause 1> The copy density setting specified is not appropriate.

#### **Solution**

Adjust the <Density> or <Correct Density> to a lower level from the operation panel.  
❖ "Adjusting the Density"

### <Cause 2> The machine is exposed to direct sunlight or strong light

#### **Solution**

Relocate the machine.  
❖ "Relocating the Machine"

### <Cause 3> The size of the paper loaded in the paper cassette does not match the documents.

#### **Solution**

Perform cleaning the fixing unit in <Special Mode C> using the operation panel.  
❖ "Special Mode"  
❖ "Cleaning the Fixing Unit"

## Printed Bar Codes Cannot be Scanned

030E-04S



Try one of the following to solve the problem.

### <Cause> A bar code cannot be scanned correctly when printing it using the default print settings.

#### **Solution**

Change the [Special Print Mode] setting to [Special Settings 1] in the print driver.

#### ▣ "Special Mode"

- ※ The density becomes lower with [Special Settings 1] than with [Off]. Additionally, text and lines may be reproduced less clearly.
- ※ If [Special Settings 1] is specified, the print speed slows down slower than default settings.

## Images may be partially cut off on the output

---

030E-06J



Try one of the following to solve the problem.

**<Cause> The print speed is prioritized, and [Output Adjustment Mode] is set to [Off].**

### **Solution**

Change the settings for [Output Adjustment Mode] to [On] in the printer driver.

➤ ["Viewing the Online Help"](#)

※ Changing to [On] slows down the print speed.

# Uninstalling the Software

030E-06E

Follow the steps in the procedure below to uninstall the printer driver, scanner driver, or MF Toolbox if you do not need them installed on your computer.

## IMPORTANT

Be aware of the following before uninstalling the software.

- Log on to your computer with administrator privileges.
- Have the installation software ready in case you want to re-install the drivers).
- Quit all running applications on your computer.


## To uninstall the printer/scanner driver

# 1

From the [Start] menu, click [(All) Programs] -> [Canon] -> [MF3010] -> [Uninstall Drivers].


# 2

Click [Delete].

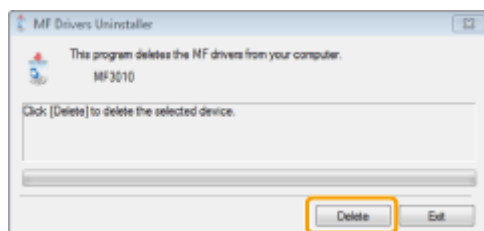

# 3

Click [Yes] to confirm the uninstallation.

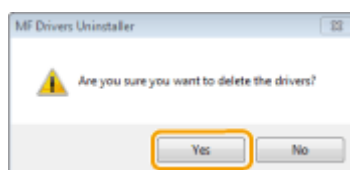

# 4

Click [Exit] (or [Restart]).






## To uninstall the MF Toolbox

1

From the [Start] menu, click [(All) Programs] -> [Canon] -> [MF Toolbox 4.9] -> [Toolbox Uninstall].

2

Click [Remove].

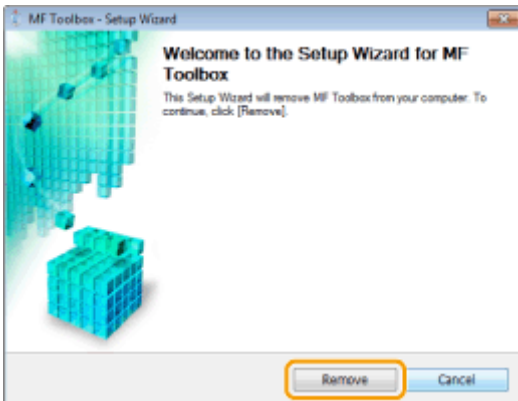



3

Click [Exit].



## When a Service Error Has Occurred

030E-06F

The service error has occurred when the error number appears on the display and [  ] indicator and [  ] indicator light up.

### NOTE

#### **Error numbers**

The error number appears on the display and switches in order of "E" → "x" → "x" → "x" ("xxx" represents a three-digit number).


## When a Problem cannot be Resolved

030E-03R

If you cannot solve the problem after having referred to the information in this chapter, contact your local authorized Canon dealer or the Canon help line.

### **Please have the following information ready when contacting the Canon Customer Care Center:**

- Product name (MF3010)
- Serial number (a character string of three letters and a 5-digit number; located on the rating label on the rear side of the machine)

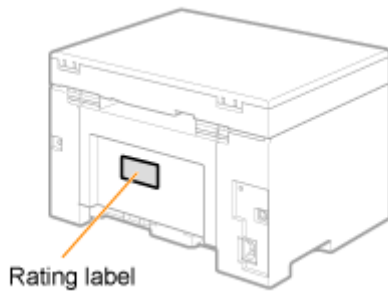

- Place of purchase
- Nature of the problem
- Steps you have taken to solve the problem and the results

### **WARNING**

#### **If the machine makes strange noises or emits smoke or an odd odor**

Turn OFF the power switch immediately, disconnect the power cord, and contact the Canon Customer Care Center. Do not attempt to disassemble or repair the machine yourself.

### **IMPORTANT**

#### **If you attempt to fix the machine yourself**

It may void the limited warranty.

This chapter describes how to clean the machine, replace toner cartridges, make adjustments, and transport the machine.

Cleaning the machine	<ul style="list-style-type: none"><li>▪ When the machine is dirty See "<a href="#">Cleaning the Exterior.</a>"</li><li>▪ When the inside of the machine is dirty See "<a href="#">Cleaning the Inside of the Machine.</a>"</li><li>▪ When black streaks appear on the output See "<a href="#">Cleaning the Fixing Unit.</a>"</li><li>▪ When the platen glass is dirty See "<a href="#">Cleaning the Platen Glass.</a>"</li></ul>
Replacing the toner cartridge	See " <a href="#">Replacing Toner Cartridges.</a> "
Adjusting the Machine	See " <a href="#">Special Mode.</a> "
Relocating the machine	See " <a href="#">Relocating the Machine.</a> "

## Cleaning the Machine

---

030E-04X

See following sections to clean the components of the machine.

- ❖ "Cleaning the Exterior"
  - ❖ "Cleaning the Inside of the Machine"
  - ❖ "Cleaning the Fixing Unit"
  - ❖ "Cleaning the Platen Glass"
-

## Cleaning the Exterior

030E-04Y

See "Attention (Cleaning the Machine)" in advance.

Clean the exterior of the machine and ventilation slots.

**1**

**Turn OFF the power switch and disconnect the power cord.**

**2**

**Clean the exterior of the machine with a soft, well wrung out cloth dampened with water or a mild detergent diluted with water.**



**3**

**Wait for the machine to dry completely before reconnecting the power cord and turn ON the power.**

# Cleaning the Inside of the Machine

030E-050

See "Attention (Cleaning the Machine)" in advance.


Clean the machine's print area at regular intervals so that toner powder, as well as paper dust and other debris, do not accumulate inside the machine.

## 1

**Turn OFF the power switch and disconnect the power cord.**


## 2

**Hold the operation panel.**

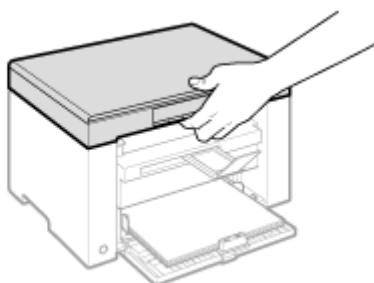

## 3

**Lift the scanning platform.**

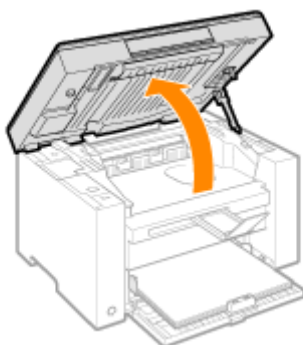

### **?** When you cannot lift the scanning platform


Make sure that the platen glass is completely closed.

Do not try to forcefully lift the scanning platform, as this may damage the machine.

- ※ The platen glass may not be completely closed when a thick document such as books is placed inside. In such case, remove it from the platen glass.


## 4

**Hold the grip on the left front side of the toner cover.**

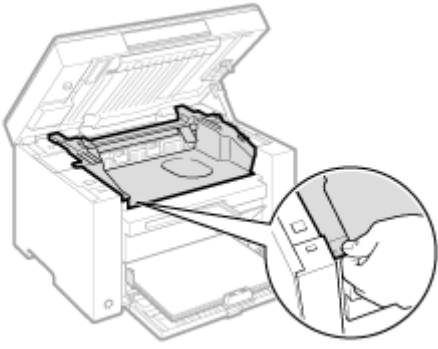


**5**

**Open the toner cover.**

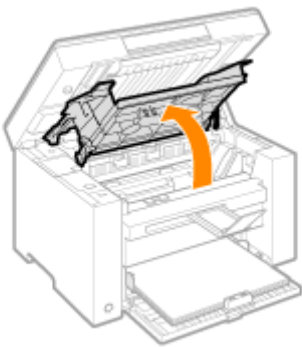

**6**

**Remove the toner cartridge.**

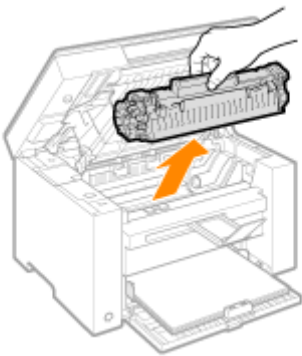

**7**


**Remove toner powder, as well as paper dust and other debris from the inside of the machine, using a clean, soft, dry, and lint-free cloth.**

**8**

**Insert the toner cartridge.**

Fit the protrusions (A) on both sides of the toner cartridge into the guides located on both sides of the machine and slide the toner cartridge into the machine until the toner cartridge comes to rest and is held against the back of the machine.



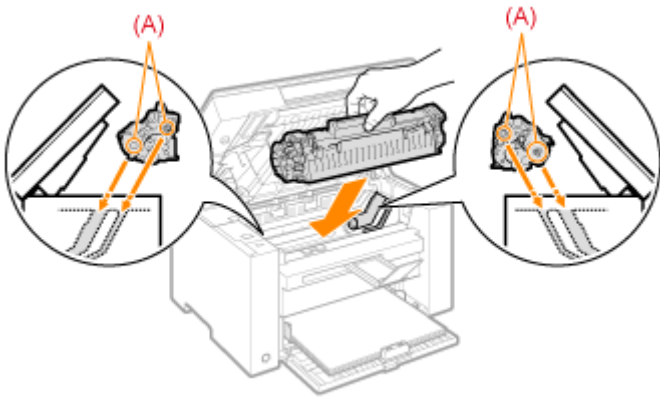

## 9

**Close the toner cover.**

### **When you cannot close the toner cover**

Make sure that the toner cartridge is properly set inside the machine.  
Do not try to forcefully close the toner cover, as this may damage the machine.

## 10

**Lower the scanning platform.**

## 11









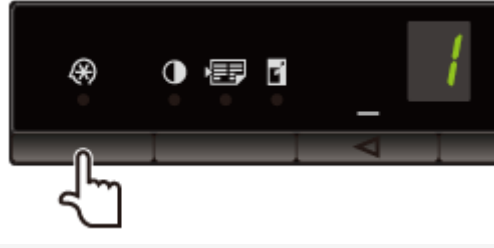

**Connect the power cord and turn ON the power switch.**

# Cleaning the Fixing Unit

030E-051

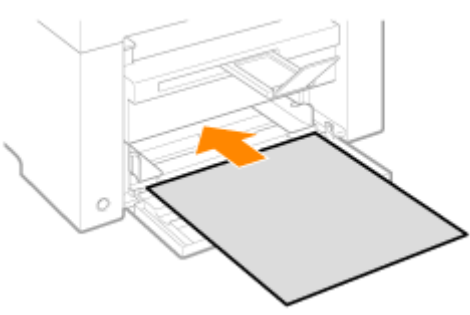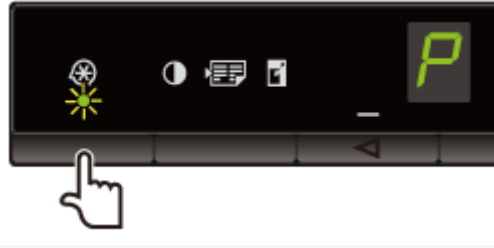The fixing unit may be dirty under the following conditions. Clean the fixing unit.

- When black streaks appear on the output
- When replacing the toner cartridge

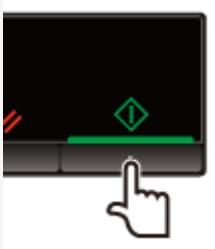	Operating results	Operating results
1		<p><b>Load A4 or Letter size plain paper.</b></p> <p>▸ "In the Paper Cassette"</p>
2		<p><b>Press [  ] (Menu setting key), and then start the menu operation.</b></p> <p>When the menu is operating, the menu indicator blinks.</p>
3		<p><b>Press [  ] or [  ] until "C" is displayed.</b></p>
4		<p><b>When [  ] is pressed, cleaning starts.</b></p> <p>It takes approximately 140 seconds.</p> <ul style="list-style-type: none"> <li>※ We recommend that plain paper be loaded when cleaning the fixing unit.</li> <li>※ You cannot perform cleaning when jobs are stored in the memory.</li> </ul>
5		<p><b>Press [  ] (Menu setting key) to exit the menu operation.</b></p> <p>The menu indicator turns off.</p>

## Cleaning the Platen Glass

030E-052

See "Attention (Cleaning the Machine)" in advance.


Follow the steps in the procedure below to clean the platen glass and the under surface of the platen glass cover.

**1**

**Turn OFF the power switch and disconnect the power cord.**

**2**

**Open the platen glass.**

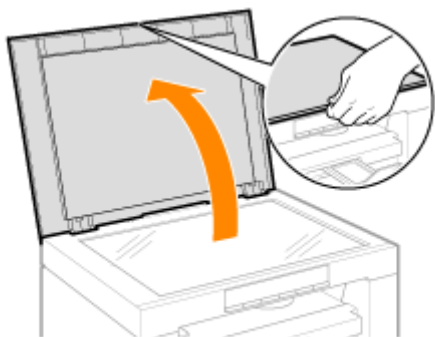

**3**

**Clean the platen glass and the under surface of the platen glass cover.**

- (1) Clean the areas with a cloth dampened with water.
- (2) Wipe the areas with a soft, dry cloth.



**4**

**Close the platen glass.**

**5**

**Connect the power cord and turn ON the power switch.**

---

## Attention (Cleaning the Machine)

030E-053

See "Maintenance and Inspections" in "Important Safety Instructions".

Before cleaning the machine, note the following.

- Use a soft cloth to avoid scratching the components.
- Do not clean the machine components with tissue paper, paper towels, or similar materials. These materials tend to stick to the components or generate static charges.


### CAUTION

#### Precautions to take when closing the platen glass

Be careful not to get your fingers caught.

#### Do not touch the fixing unit (A).

Touching the fixing unit (A) may cause burns as it becomes very hot while the machine is in operation.

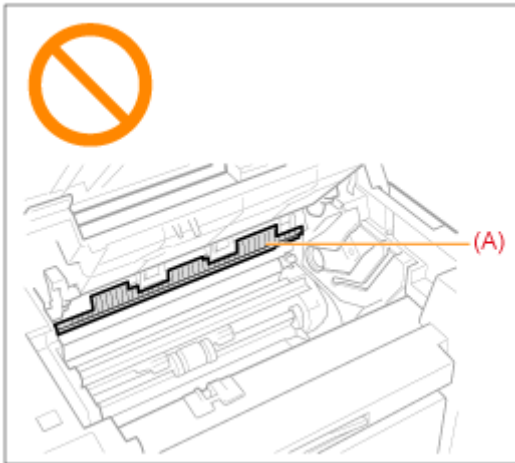

#### Precautions to take when you get toner onto your hands or into clothing


If toner gets on your hands or clothing, wash them immediately with cold water.

The toner sets onto hands or into clothing if you try to wash it with warm water. Once it is set, you can hardly remove the toner stains.

### IMPORTANT

#### Do not touch the transfer roller (A).

The act may damage the machine.

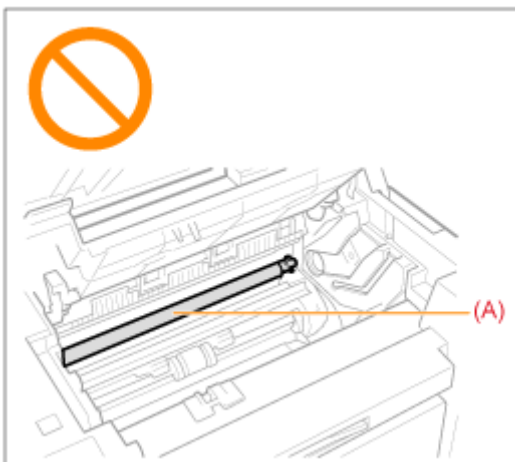


### NOTE

**When a job is waiting to be printed**

The job is deleted when you turn OFF the power switch.

---

When the toner nearly runs out, white streaks appear on the output, or the output is partially faded.

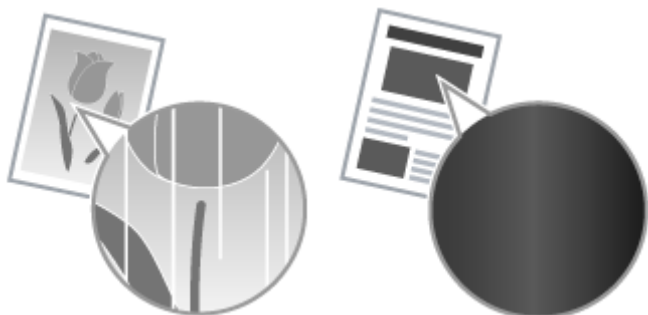

- ※ No message appears on the screen, if the toner nearly runs out. Replace the toner cartridge when white streaks appear on the output, or the output is partially faded.

### ▼ When this problem occurs

Follow the steps in the procedure below before replacing the toner cartridge. The machine continues printing until the toner runs out completely.

- ["Before Replacing the Toner Cartridge"](#)

### ▼ When the print quality is still unacceptable

If the problem persists after you have followed the steps in the procedure below, replace the toner cartridge.

- ["Replacing the Toner Cartridge"](#)

## IMPORTANT

### About toner cartridges

For more information on toner cartridges, see the following sections.

- ["About the Supplied Toner Cartridge"](#)
- ["About Replacement Toner Cartridges"](#)
- ["Handling Toner Cartridges"](#)
- ["Purchasing Consumables"](#)

- ※ The average yield of replacement toner cartridges varies from that of the supplied toner cartridge.

## Before Replacing the Toner Cartridge


030E-055

See "Attention (Replacing the Toner Cartridge)" in advance.

When the toner nearly runs out, follow the steps in the procedure below before replacing the toner cartridge. The machine continues printing until the toner runs out completely.


### 1

**Hold the operation panel.**

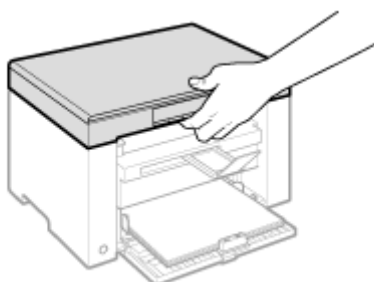

### 2

**Lift the scanning platform.**

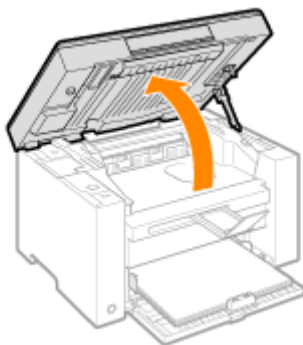

#### **?** When you cannot lift the scanning platform

Make sure that the platen glass is completely closed.


Do not try to forcefully lift the scanning platform, as this may damage the machine.

- ※ The platen glass may not be completely closed when a thick document such as books is placed inside. In such case, remove it from the platen glass.

### 3


**Hold the grip on the left front side of the toner cover.**



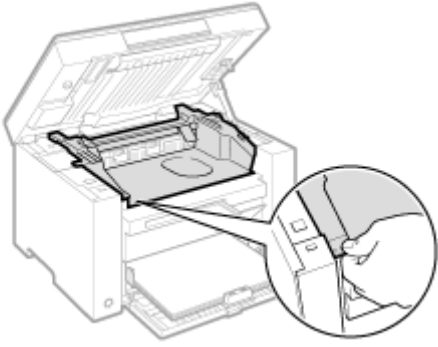


**4**

**Open the toner cover.**

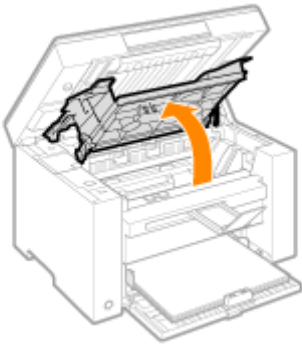

**5**

**Remove the toner cartridge.**

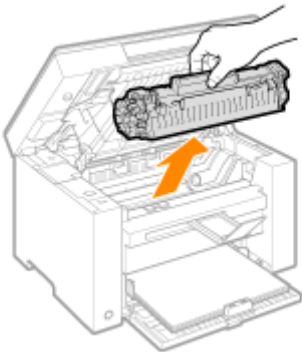

**6**


**Gently shake the toner cartridge five or six times to evenly distribute the toner inside the cartridge.**



# 7

## Insert the toner cartridge.

Fit the protrusions (A) on both sides of the toner cartridge into the guides located on both sides of the machine and slide the toner cartridge into the machine until the toner cartridge comes to rest and is held against the back of the machine.

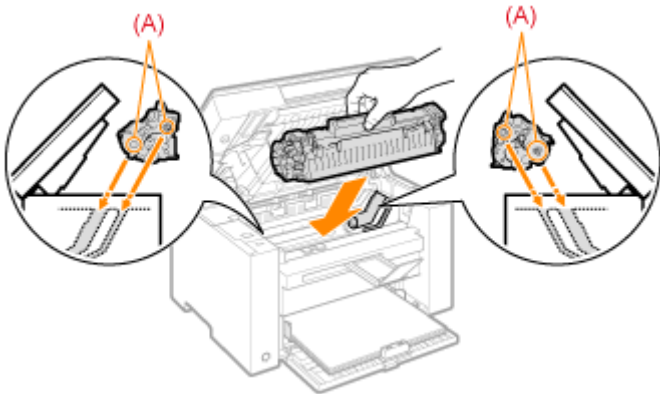

# 8

## Close the toner cover.

### When you cannot close the toner cover

Make sure that the toner cartridge is properly set in the machine.

Do not try to forcefully close the toner cover, as this may damage the machine.

# 9

## Lower the scanning platform.


# Replacing the Toner Cartridge

030E-056

See "Attention (Replacing the Toner Cartridge)" in advance.


## 1

**Hold the operation panel.**

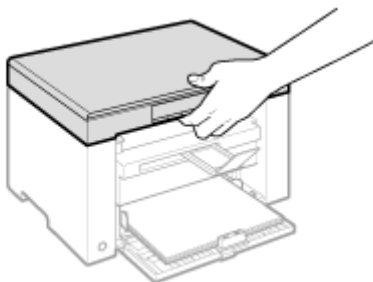

## 2

**Lift the scanning platform.**

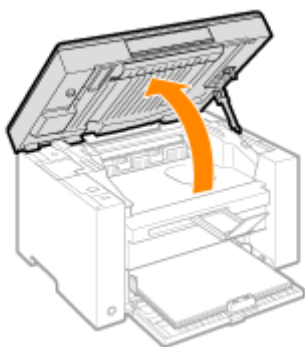

### **?** When you cannot lift the scanning platform


Make sure that the platen glass is completely closed.

Do not try to forcefully lift the scanning platform, as this may damage the machine.

- ※ The platen glass may not be completely closed when a thick document such as books is placed inside. In such case, remove it from the platen glass.


## 3

**Hold the grip on the left front side of the toner cover.**

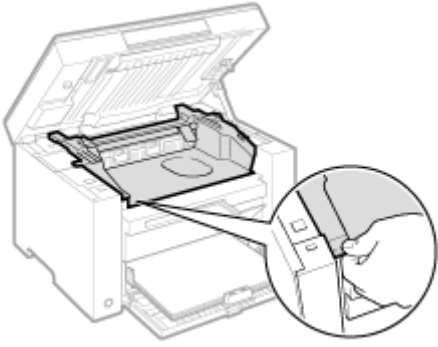


**4**

**Open the toner cover.**

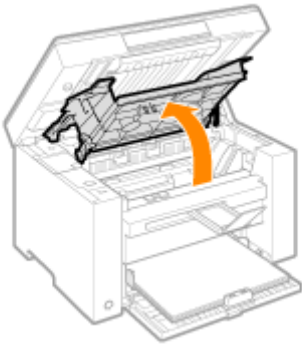

**5**

**Remove the toner cartridge.**

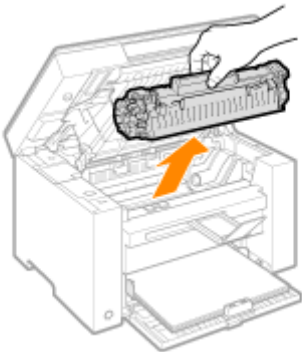

**6**

**Take out the new toner cartridge from the protective bag.**

Tear the notch with both hands to open the protective bag.



# 7


**Gently shake the toner cartridge five or six times to evenly distribute the toner inside the cartridge.**



# 8

**Place the toner cartridge on a flat surface, lift the tab, and gently pull the sealing tape completely out.**


The full length of the sealing tape is approximately 50 cm.

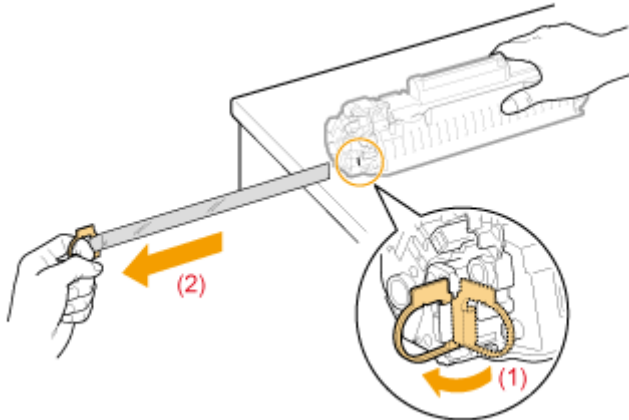

# 9

**Insert the toner cartridge.**

Fit the protrusions (A) on both sides of the toner cartridge into the guides located on both sides of the machine and slide the toner cartridge into the machine until the toner cartridge comes to rest and is held against the back of the machine.

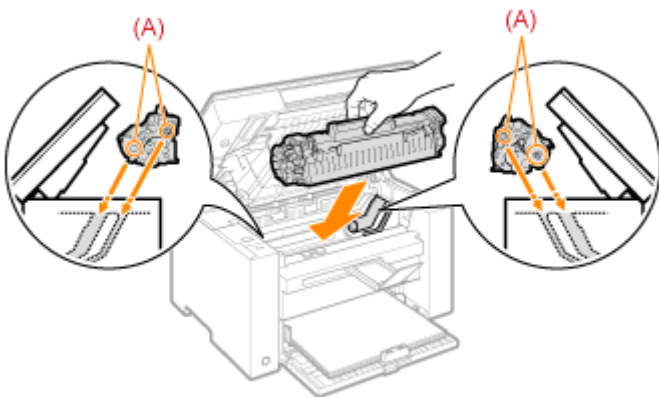

# 10

**Close the toner cover.**

 **When you cannot close the toner cover**

Make sure that the toner cartridge is properly set in the machine.

Do not try to forcefully close the toner cover, as this may damage the machine.

# 11

**Lower the scanning platform.**

## Attention (Replacing the Toner Cartridge)

030E-057

See "Maintenance and Inspections" in "Important Safety Instructions".

### **WARNING**

#### **Do not dispose of a used toner cartridge in an open flame.**

This may ignite the toner remaining inside the cartridge, resulting in burns or fire.

#### **When cleaning up spilled or scattered toner:**

If you accidentally spill or scatter toner, carefully gather the toner particles together or wipe them up with a soft, damp cloth in a way that prevents inhalation.

Never use a vacuum cleaner that does not have safeguards against dust explosions to clean up spilled toner. Doing so may cause a malfunction in the vacuum cleaner, or result in a dust explosion due to static discharge.

### **CAUTION**

#### **Precautions to take when you get toner onto your hands or into clothing**

If toner gets on your hands or clothing, wash them immediately with cold water.

The toner sets onto hands or into clothing if you try to wash it with warm water. Once it is set, you can hardly remove the toner stains.

#### **Be careful not to scatter the toner.**

Do not pull out the sealing tape forcefully or stop pulling the tape halfway, as this may cause toner to spill out.

If toner gets into your eyes or mouth, wash them immediately with cold water and consult a physician.

#### **Precautions to take when lowering the scanning platform**

Be careful not to catch your fingers.

### **IMPORTANT**

#### **About replacement toner cartridges**

For optimum print quality, replace the toner cartridge with the Genuine Canon Toner.

Model Name	Supported Canon Genuine Toner Cartridge
MF3010	Canon Cartridge 725

#### **Be careful of counterfeit toner cartridges.**

Please be aware that there are counterfeit Canon toner cartridges in the marketplace.

Use of counterfeit toner cartridge may result in poor print quality or machine performance.

Canon is not responsible for any malfunction, accident or damage caused by the use of counterfeit toner cartridge.


For more information, see <http://www.canon.com/counterfeit>.

#### **Shake the toner cartridge before replacement.**

If the toner is not distributed evenly inside the cartridge, this may cause poor print quality.


#### **Hold the toner cartridges properly.**

When handling the toner cartridge, hold it properly, as shown in the illustration below. Do not stand it vertically or hold it upside down.

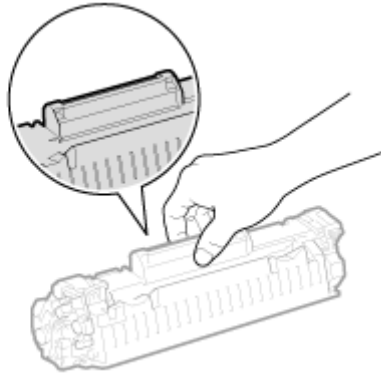


**Do not touch the toner cartridge memory (A) or the electrical contacts (B).**

This may result in damage to the cartridge.

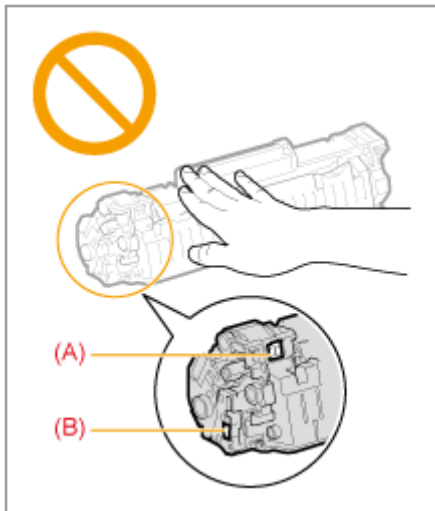


**Do not open the drum protective shutter (A).**

Print quality may deteriorate if you touch or damage the drum inside the drum protective shutter (A). Do not touch or open the drum protective shutter (A).

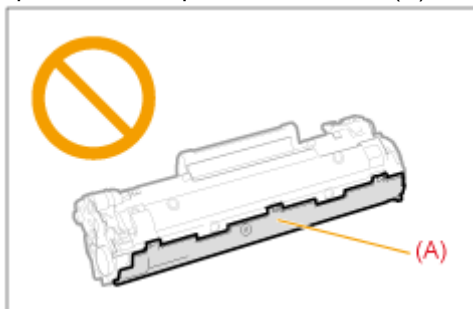

**When pulling out the sealing tape**

- Do not pull the sealing tape at an angle or sideways. If the tape breaks, the tape may not be pulled out completely.

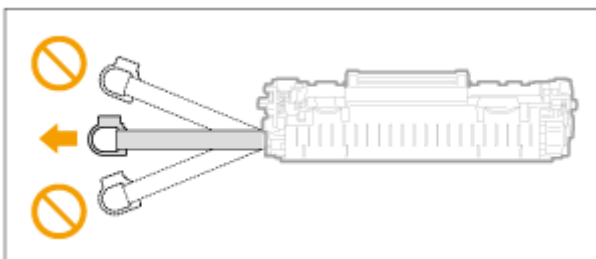

- If the sealing tape is still hanging outside the toner cartridge, pull it out completely.
- If the tape remains inside the toner cartridge, this may cause poor print quality.



### **When disposing of the removed sealing tape**


Dispose of the packing materials in accordance with local regulations.

### **Keep the protective bag.**

Keep the protective bag for storing the toner cartridge. You will need it when you remove the toner cartridge for machine maintenance or other purposes.

### **Do not touch the high-voltage contacts (A).**

This may result in damage to the machine.

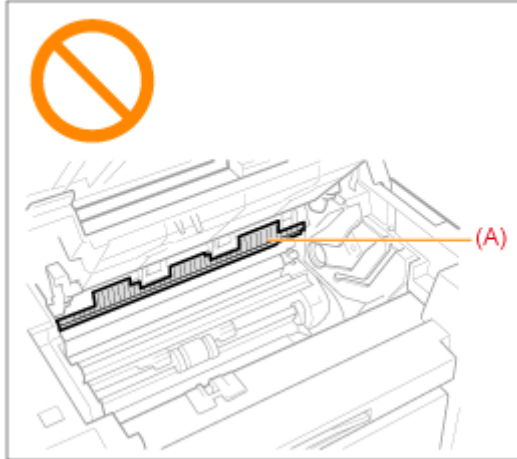

### **Do not leave the toner cover open for an extended period of time when the toner cartridge is installed.**

This may result in print quality deterioration.

#### **NOTE**

#### **About the packing materials**

The packing materials are subject to change in form or placement, or may be added or removed without notice.

# Special Mode

030E-058

Use the Special Mode settings to fix print quality problems.

Read the following carefully before changing the settings.

## IMPORTANT

### Use default settings in normal operation

Change the settings only when the problems noted below occur.

## Settings That Can Be Specified From the Operation Panel

### Settings

※ Default settings are highlighted in bold.

Special mode	Options		Details
Special Mode b	0	Off	<p>Due to the paper type or usage conditions, vertical streaks appear on the output. When this occurs, change this setting.</p> <p>The effect becomes greater as the number goes up.</p> <p style="text-align: center;">&lt;Off&gt; -&gt; &lt;Mode 1&gt; -&gt; &lt;Mode 2&gt; -&gt; &lt;Mode 3&gt; -&gt; &lt;Mode 4&gt;</p> <p style="text-align: center;">(low) <span style="float: right;">(high)</span></p> <p>※ Streaks can be minimized by changing the paper type or usage conditions, without needing to change the setting.</p> <p>※ The more effective the setting, the lower the density becomes. Additionally, the outline of text and images may be reproduced less clearly, and images may appear slightly jagged.</p>
	1	Mode 1	
	<b>2</b>	<b>Mode 2</b>	
	3	Mode 3	
	4	Mode 4	
Special Mode c	<b>0</b>	<b>Off</b>	<p>Vertical streaks appear on the output after the toner cartridge was replaced recently, or the machine has not printed anything for an extended period of time.</p> <p>When this occurs, change this setting.</p> <p>The effect becomes greater as the number goes up.</p> <p style="text-align: center;">&lt;Off&gt; -&gt; &lt;Mode 1&gt; -&gt; &lt;Mode 2&gt; -&gt; &lt;Mode 3&gt;</p> <p style="text-align: center;">(low) <span style="float: right;">(high)</span></p> <p>※ Streaks can be minimized by changing the paper type or usage conditions, without needing to change the setting.</p> <p>※ The more effective the setting becomes, the slower the print speed.</p>
	1	Mode 1	
	2	Mode 2	
	3	Mode 3	
Special Mode d	<b>0</b>	<b>Off</b>	<p>Due to the paper type or usage conditions, paper curls or creases. When this occurs, change this setting.</p> <p>The effect becomes greater as the number goes up.</p> <p style="text-align: center;">&lt;Off&gt; -&gt; &lt;Mode 1&gt; -&gt; &lt;Mode 2&gt;</p> <p style="text-align: center;">(low) <span style="float: right;">(high)</span></p> <p>※ Paper curls and creases can be minimized by changing the paper type and usage conditions, without needing to change the setting.</p> <p>※ This setting can be selected when</p> <ul style="list-style-type: none"> <li>▪ &lt;Paper Type&gt; is set to &lt;Plain (16 lb Bond-24 lb Bond)&gt;, &lt;Plain L (16 lb Bond-24 lb Bond)&gt;, &lt;Heavy paper&gt;, &lt;Rough paper&gt;, &lt;Label&gt;, or &lt;Envelope&gt;</li> </ul>
	1	Mode 1	
	2	Mode 2	

			※ The more effective the setting becomes, the slower the print speed.
Special Mode h	<b>0</b>	<b>Off</b>	Due to the paper type (for example, heavy paper) or usage conditions (for example, dry conditions), toner smudges and spatters appear on the output. When this occurs, set this setting to <On>.  ※ The print quality may become lower when this setting is enabled, depending on the paper type used (for example, thin paper) or usage conditions (humid conditions).
	1	On	
Special Mode C	C		Perform cleaning when black streaks appear on the output or toner cartridges are replaced.  ※ Set the setting for this item to <"C">.  ➤ "Cleaning the Fixing Unit"

## Settings That Can Be Specified In the Printer Driver

### Settings


※ Default settings are highlighted in bold.

Special mode	Setting options	Details
Special Print Adjustment	Off, Mode 1, <b>Mode 2</b> , Mode 3, Mode 4	Due to the paper type or usage conditions, vertical streaks appear on the output. When this occurs, change this setting. The effect becomes greater as the number goes up. [Off] -> [Mode 1] -> [Mode 2] -> [Mode 3] -> [Mode 4] (low) (high)  ※ Streaks can be minimized by changing the paper type or usage conditions, without needing to change the setting.  ※ The more effective the setting, the lower the density becomes. Additionally, the outline of text and images may be reproduced less clearly, and images may appear slightly jagged.
Special Print Mode	<b>Off</b> , Special Settings 1, Special Settings 2	[Off] The special print mode is disabled and has no effect. [Special Settings 1] If a printed barcode is hardly readable when using the default print settings, set this setting to [Special Settings 1].  ※ The density becomes lower with [Special Settings 1] than with [Off]. Additionally, text and lines may be reproduced less clearly.  ※ If [Special Settings 1] is specified, the print speed slows down slower than default settings.  [Special Settings 2] If white specks or spots appear around text and images when a high-contrast document is printed, set this setting to [Special Settings 2].  ※ The density becomes lower with [Special Settings 2] than with [Off] or [Special Settings 1]. Additionally, text and lines may be reproduced less clearly.

## Specifying Special Mode Settings In the Printer Driver

# 1

Click the [Finishing] tab.

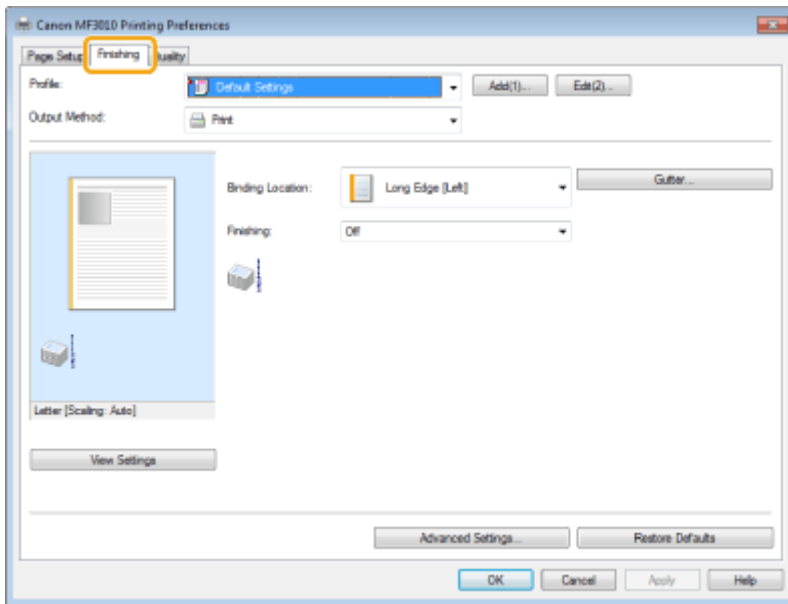


## NOTE

For the instructions on how to access the printer driver screen, see "[Printing](#)" and "[Configuring the Default Print Settings.](#)"

# 2

Click [Advanced Settings].

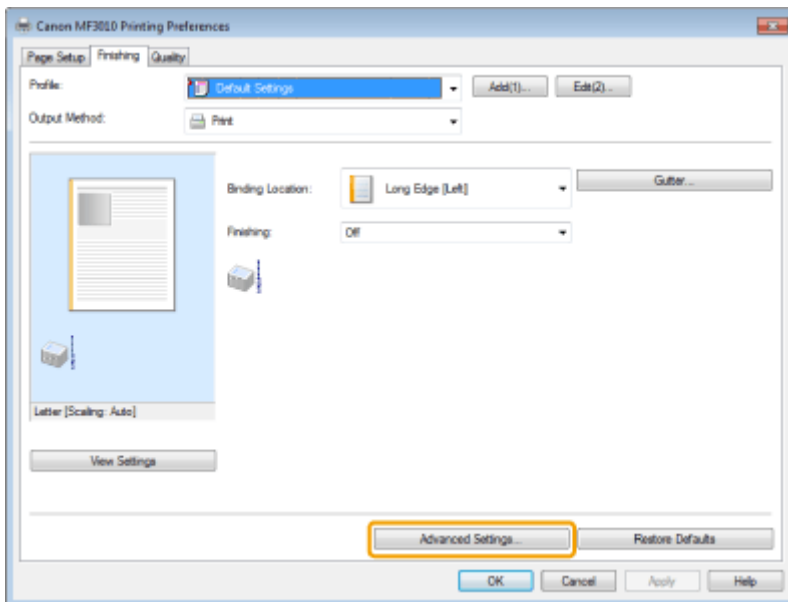

# Relocating the Machine


030E-059

See "Attention (Relocating the Machine)" in advance.

Follow the steps in the procedure below to relocate the machine somewhere else for maintenance and other purposes.


## 1

**Turn OFF the machine and all the computers connected to the machine.**

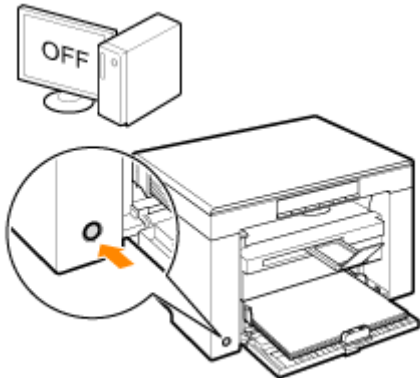

## 2

**Disconnect all cables and the power cord from the machine.**

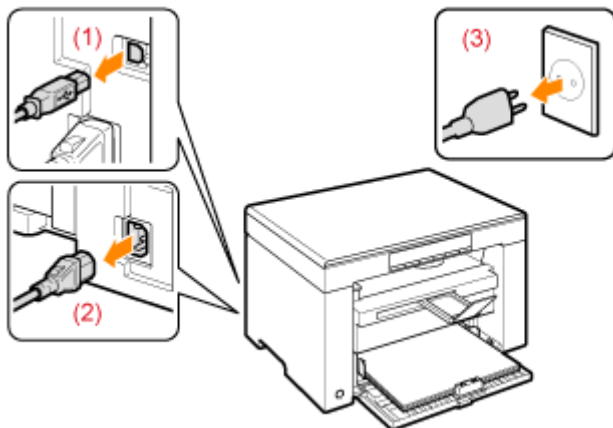


### How to remove the cables and power cord

USB cable	(1) Remove it from the machine.
Power cord	(2) Unplug the power plug from the AC power outlet. (3) Remove it from the machine.

\* The cable may be or may not be connected to the machine depending on your network environment.

### 3

**Fold the paper stopper and push the output tray extension into the machine.**

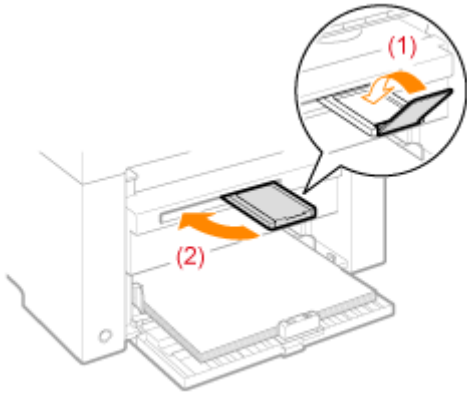


#### NOTE

**When paper is left in the output tray**

Remove the paper from the output tray.

### 4

**Remove the paper stack from the paper cassette.**

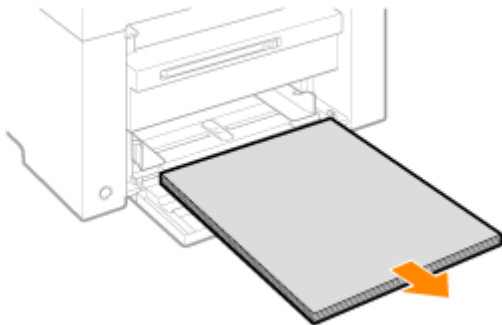

#### NOTE

**When the front paper guide is pulled out from the paper cassette**


Push the guide into the paper cassette.

### 5

**Lower the dust cover.**

### 6

**Close the paper cassette.**

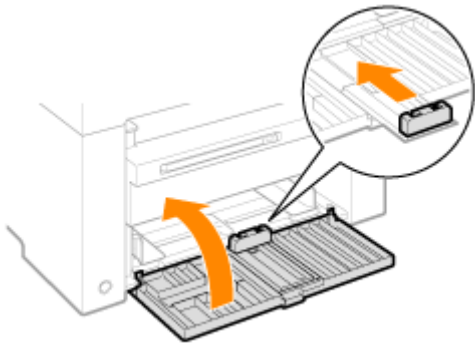


## 7

### Relocate the machine.

Make sure that all the covers and trays are closed and hold the lift handles with the front side of the machine facing you. Check the weight of the machine before lifting, carrying, and relocating it.

❖ "Machine Specifications"

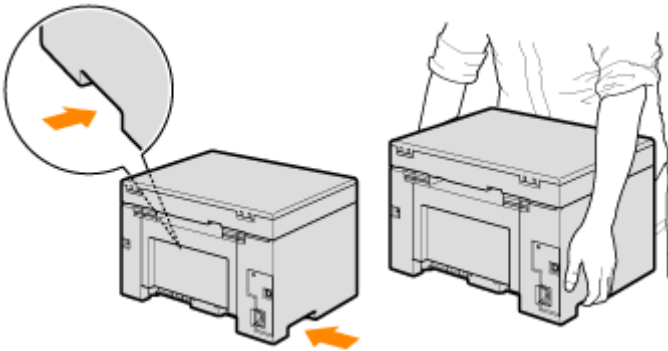

## 8

### Carefully set the machine down at the new installation site.

#### NOTE

#### When reinstalling the machine

See the Starter Guide that comes with the machine.

#### When relocating the machine to a far-off place

To prevent damage to the machine when relocating the machine to a far-off place, note the following.

- Remove the toner cartridge.
  - Securely pack the machine in its original box with the original packing materials.
- ※ When the original box and packing materials cannot be found, find an appropriate box and packing materials to pack the machine and the parts properly.

## Attention (Relocating the Machine)

030E-05A

### **WARNING**

#### **When relocating the machine**

Be sure to turn OFF the power switch on the machine and your computer, and unplug the power plug and interface cables.

Failure to do so can damage the cables or cords, resulting in a fire or electrical shock.

### **CAUTION**

#### **Set the machine down slowly and carefully.**

Be careful not to hurt your hands or fingers.

### **IMPORTANT**

#### **Do not carry the machine with the covers or trays open.**

Make sure that the scanning platform and paper cassette are closed before lifting, carrying, and relocating the machine.



# Appendix

---

030E-05C

➤ "Basic Windows Operations"

---

# Basic Windows Operations

030E-05E

- ❖ How to Open the Printer Folder
- ❖ How to Display the [Scanners and Cameras] or [Scanners and Cameras Properties] Screen
- ❖ How to Display [Windows Fax & Scan] Screen
- ❖ How to Display the Top Screen of CD-ROM
- ❖ How to Check the Windows Vista/7 Process Version

## How to Open the Printer Folder

### Windows 2000

From the [Start] menu, select [Settings] and [Printers].

### Windows XP Professional

From the [Start] menu, select [Printers and Faxes].

### Windows XP Home Edition

From the [Start] menu, select [Control Panel], click [Printers and Other Hardware] and [Printers and Faxes].

### Windows Vista

From the [Start] menu, select [Control Panel] and click [Printer].

### Windows 7

From the [Start] menu, select [Devices and Printers].

## How to Display the [Scanners and Cameras] or [Scanners and Cameras Properties] Screen

### Windows 2000

From [Start] menu -> select [Settings] -> [Control Panel] -> double-click [Scanners and Cameras].

### Windows XP

From the [Start] menu, select [Control Panel] and click [Printers and Other Hardware] -> [Scanners and Cameras].

### Windows Vista

From the [Start] menu, select [Control Panel] and click [Hardware and Sound] -> [Scanners and Cameras].

### Windows 7

1. Enter "scanner" in [Search programs and files] under the [Start] menu.
2. Click [View scanners and cameras].

## How to Display [Windows Fax & Scan] Screen

### Windows Vista

From the [Start] menu, select [Control Panel] -> [Hardware and Sound] -> [Scan a document or picture] in [Scanners and Cameras].

### Windows 7

From the [Start] menu, select [All Programs] -> [Windows Fax and Scan].

## How to Display the Top Screen of CD-ROM

If you cannot display the top screen when setting CD-ROM, perform the following operations.

- ※ The CD-ROM drive name is indicated as "D:" in this manual. The CD-ROM drive name may differ depending on the computer you are using.

### Windows 2000, XP

1. From the [Start] menu, select [Run].
2. Enter "D:\Minst.exe", and then click [OK].

### Windows Vista, 7

1. Enter "D:\Minst.exe" in [Search programs and files] (or [Start Search]) under the [Start] menu.
2. Press the [ENTER] key on the keyboard.

## How to Check the Windows Vista/7 Process Version

### 1

Select [Control Panel] from the [Start] menu.

### 2

Display [System].

### Windows Vista/Windows 7

Click [System and Maintenance] or [System and Security] -> [System].

### 3


Check the process version.

#### For 32-bit versions

[32-bit Operating System] is displayed.

#### For 64-bit versions

[64-bit Operating System] is displayed.

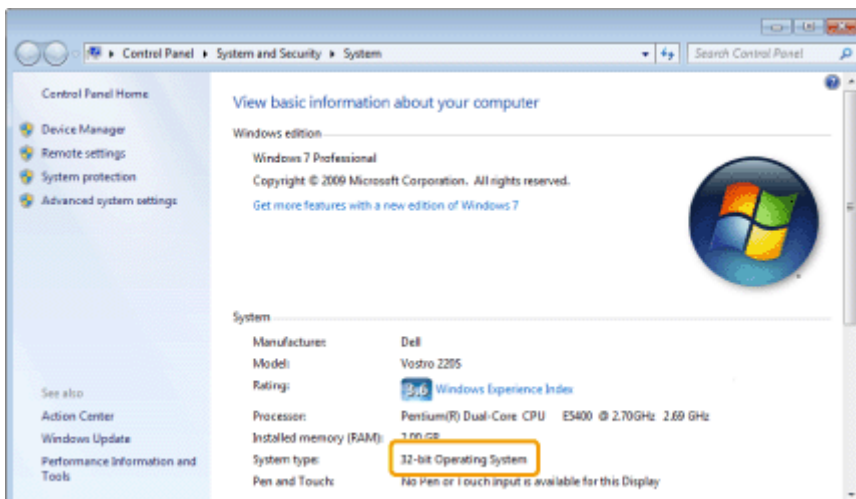

## Disclaimers

---

030E-05F

The information in this document is subject to change without notice.

CANON INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXCEPT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

---

© 2012 by Canon Inc. All rights reserved.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Canon Inc.

---

## Trademarks

---

030E-05J

Canon and the Canon logo are registered trademarks of Canon Inc. in the United States and may also be trademarks or registered trademarks in other countries.

Apple, Mac OS, and Macintosh are trademarks or registered trademarks of Apple Inc. in the U.S. and/or other countries.

Microsoft, Windows, Windows Vista, Windows Server and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All other product and brand names are registered trademarks, trademarks or service marks of their respective owners.

---

## Contact Us

---

030E-05K

### **CANON INC.**

30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

### **CANON MARKETING JAPAN INC.**

16-6, Konan 2-chome, Minato-ku, Tokyo 108-8011, Japan

### **CANON U.S.A., INC.**

One Canon Plaza, Lake Success, NY 11042, U.S.A.

### **CANON EUROPA N.V.**

Bovenkerkerweg, 59-61, 1185 XB Amstelveen, The Netherlands

### **CANON CHINA CO. LTD.**

15F Jinbao Building No.89, Jinbao Street, Dongcheng District, Beijing 100005, PRC

### **CANON SINGAPORE PTE LTD**

1 HarbourFront Avenue, #04-01 Keppel Bay Tower, Singapore 098632

### **CANON AUSTRALIA PTY LTD**

1 Thomas Holt Drive, North Ryde, Sydney NSW 2113, Australia

### **CANON GLOBAL WORLDWIDE SITES**

<http://www.canon.com/>

---

This chapter describes how to use the e-Manual.

You can view the content of the e-Manual anytime once you have it installed on your computer, without needing to keep the CD-ROM handy. See "[Installing the e-Manual](#)."

The e-Manual provides several search tools for you to quickly find the right information, allowing for fast access.

### To find information you are looking for

- **Searching from the categories**

You can search the desired description by clicking the category icon on the top page.

➤ "[Top Page](#)"

- **Searching from the table of contents**

The contents page shows the table of contents. Click the content that you want to display.

➤ "[Contents Page](#)"

- **Full text search function**

The function provides keyword searching. Type in a keyword or phrase in the keyword/text field or search box. Search results to match your query are displayed. This function supports AND search.

➤ "[Search Method](#)"



## How to Use the e-Manual

---

030E-05R

Click the following links to see the system requirements and learn how to install/uninstall and use the e-Manual.

[System Requirements](#)

[Installing the e-Manual](#)

[Uninstalling the e-Manual](#)

---

# System Requirements

---

030E-05S

You can view the e-Manual in a Web browser. Supported (tested) browsers include the following.

## Windows:

- Internet Explorer 6.0/7.0/8.0
- Firefox 2.x/3.x

## Mac OS:

- Safari 2.x/3.x
- Firefox 2.x/3.x

 **NOTE**

### Java scripting

Enable Java scripting in your browser before using the e-Manual.


## Installing the e-Manual

030E-05U

Install the e-Manual provided on the CD-ROM that comes with the machine on your computer. Follow the steps in the procedure below.

### 1


**Insert the User Manual CD-ROM into the slot on your computer.**

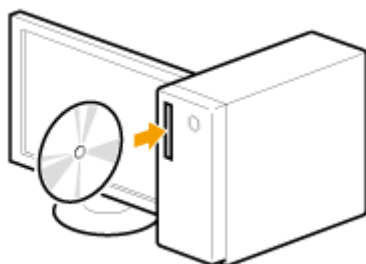

### 2


**Perform the following procedure.**

- (1) Select your language.
- (2) Click [Install].

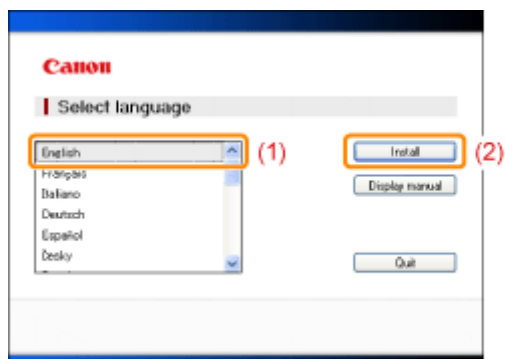

The installation starts.

Wait until the following screen disappears. (It may take a long time to install the e-Manual.)

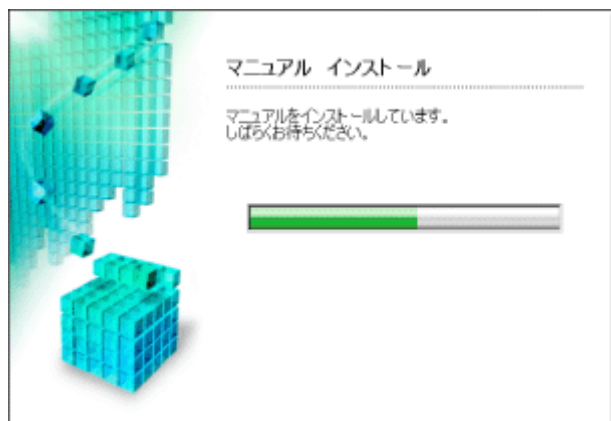


## Starting the e-Manual

Double-click the [MF3010 e-Manual] on the desktop.




### When a security warning message appears


To help protect your security, Internet Explorer has restricted this webpage from running scripts or ActiveX controls that could access your computer.  [Click here for options...](#)

Perform the following procedure.

1. Click the information bar and select [Allow Blocked Content] from the pop-up menu.



2. Click [Yes].

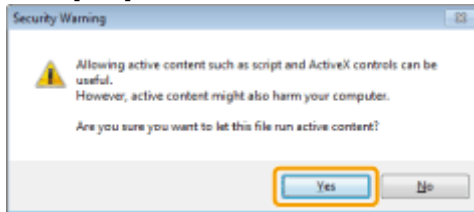

### NOTE

#### Viewing the e-Manual Directly from the CD-ROM

You can also view the e-Manual directly from the CD-ROM without installing it on the computer.

1. Insert the User Manual CD-ROM in your computer.
2. Select your language.
3. Click [Display manual].

※ Depending on the operating system you are using, a security protection message appears. Allow the contents to be displayed.

## Uninstalling the e-Manual

---

030E-05W

The process of removing the e-Manual to restore the computer to the same state as before the e-Manual was installed is called uninstallation. When uninstalling the e-Manual, delete the file manually in the following location.

- The [MF3010 e-Manual] folder in "C:\Documents and Settings\*(the user name)*\My Documents\Canon\MFP\Manuals".
  - The [MF3010 e-Manual] short cut icon on the desktop.
-

# Screen Layout of the e-Manual

---

030E-05X

This section describes the screen layout of the e-Manual.

The "Top Page" is the default home page that appears when the e-Manual is started. The "Topic Page" is the page displayed the main contents.

The "Contents Page" is the page that you can access by clicking "Contents" in the upper right side of each page. The search box appears when a keyword is entered in the keyword/text field on the upper right hand corner.

The screen layout varies across the page. For more information, click the following links.


[\*\*↳ Top Page\*\*](#)

[\*\*↳ Topic Page\*\*](#)

[\*\*↳ Contents Page\*\*](#)

[\*\*↳ Search Method\*\*](#)

---

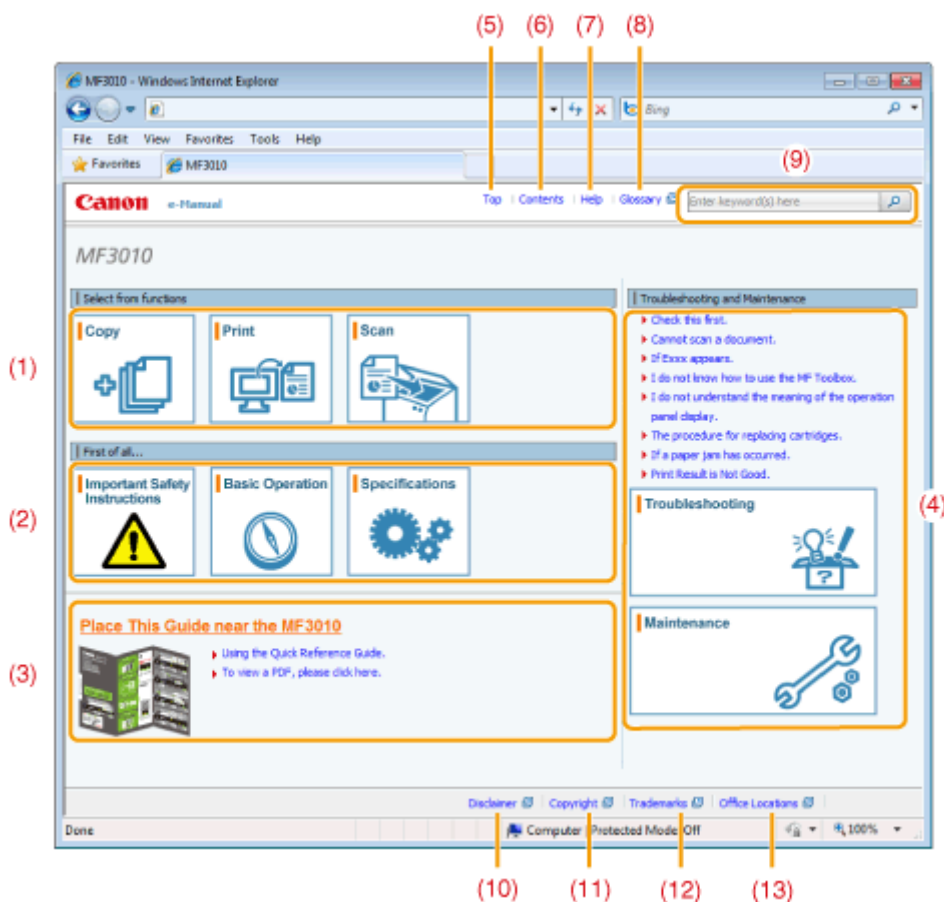

**(1) Select from functions**

Provide a link to the selected content, to let you to learn how to use the functions of the machine.

**(2) First of all...**

Provide a link to the selected content, to describe the safety instructions, features of the machine, and how to configure and use the machine efficiently (for example, loading paper and using the sleep mode.)

**(3) Place This Guide near the MF3010**

Click to see Using the Quick Reference Guide.

**(4) Troubleshooting and Maintenance**

Provide a link to the selected content, to describe how to troubleshoot problems and maintain the machine.

**(5) [Top]**

Return to the Top page.

**(6) [Contents]**

Provide the link to the Contents page, to show the table of contents.


**(7) [Help]**

Provide tips to use the e-Manual efficiently.

**(8) [Glossary]**

Display the glossary of terms used in the e-Manual.

**(9) [Enter keyword(s) here]**

Enter a keyword in this field and click [  ]. The search box appears. For more information, see "[Search Method](#)."

**(10) [Disclaimer]**

Display the disclaimers.

**(11) [Copyright]**


Display the copyright information.

**(12) [Trademarks]**

Display the trademarks.

**(13) [Office Locations]**

Display the contact information for inquiries.

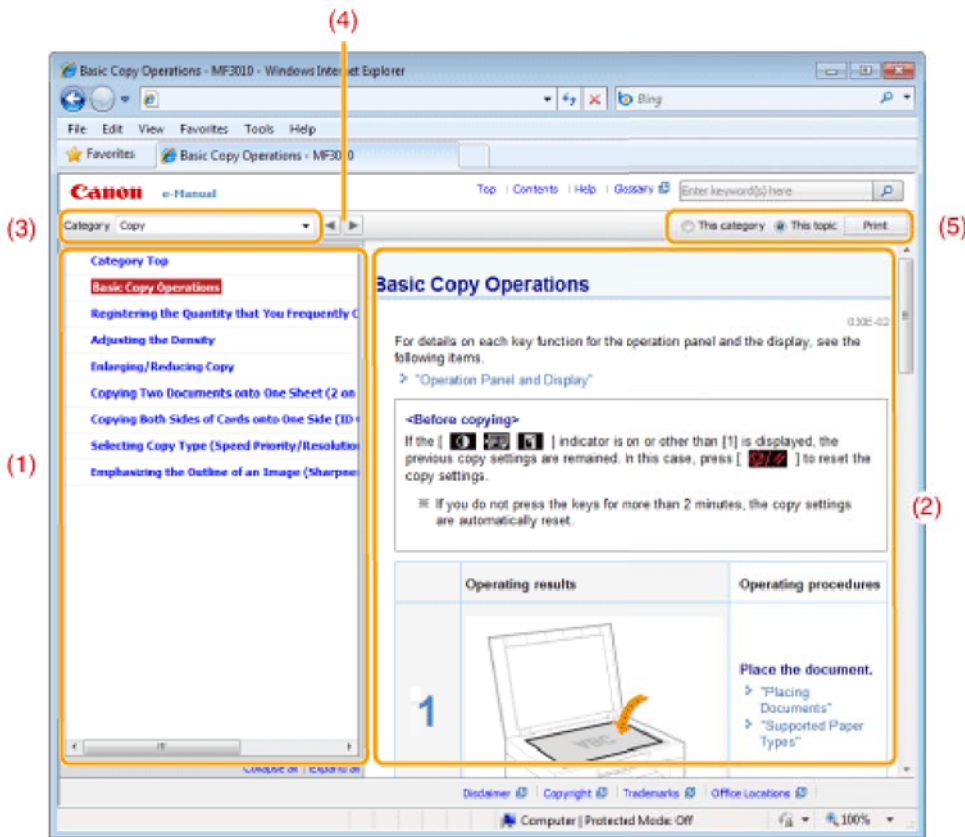

**(1) Category contents**

Display the contents of the selected category. Click the content that you want to view in the left column. The entire section is displayed in the right column (topic page). Click [+] to expand the selected content, or click [-] to collapse it.

**(2) Topic page**

Display the entire section of the selected content.

**(3) [Category] menu**

Select different categories from the drop-down menu.

**(4) [ < > ]**

Click to move to the previous or next category.

**(5) [Print]**

Click to print the selected content.


Choose one of the following.

[This category]	Print full content of the current category.
[This topic]	Print only the content currently displayed in the Topic page.



# Contents Page

030E-061

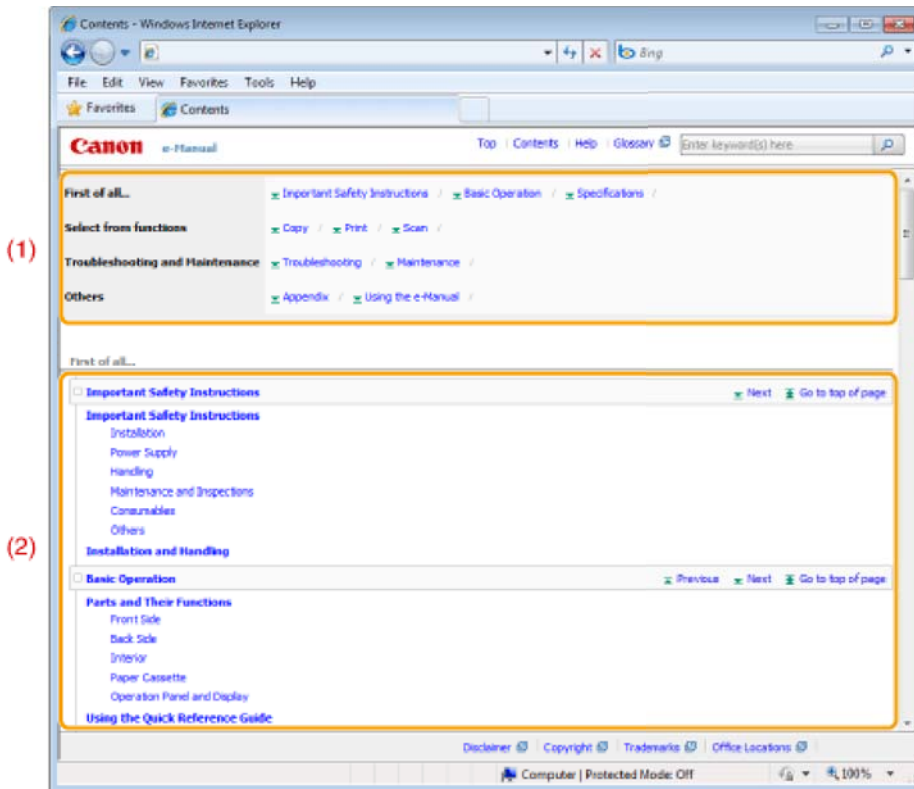


## (1) Categories


Show the categories of the e-Manual. Click a category to view its details.

## (2) Whole contents

Show all the categories and sections of the e-Manual. Click a category or section to view its details.

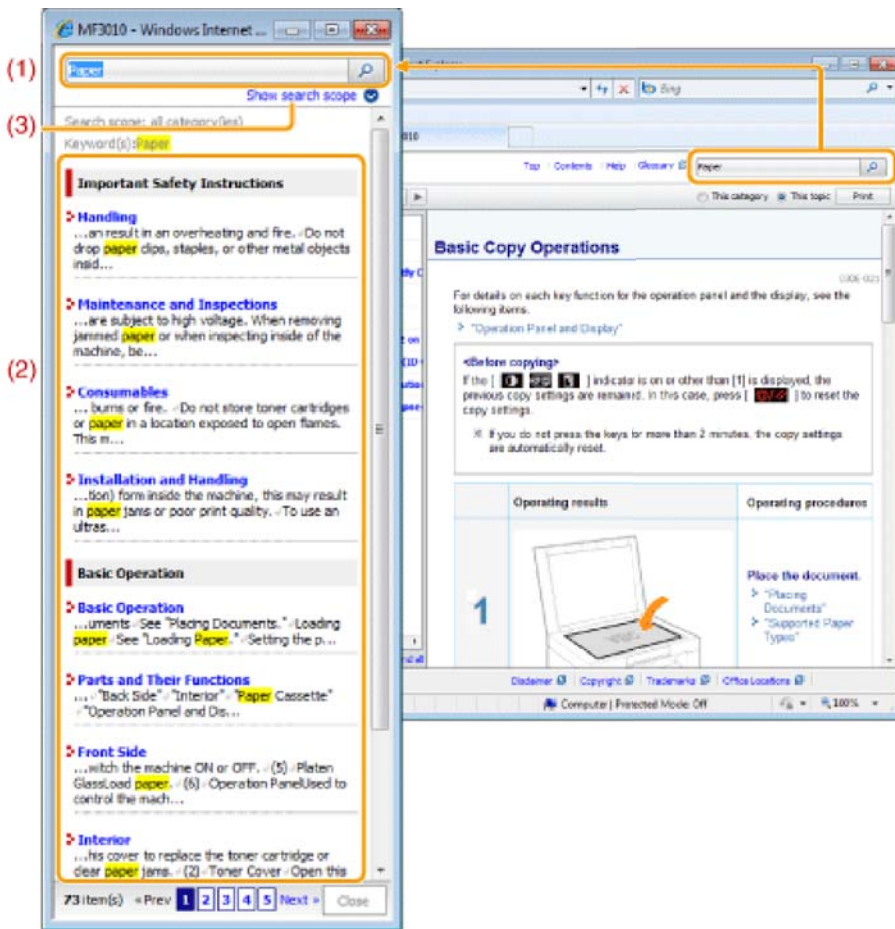

## (1) [Enter keyword(s) here]

Enter a keyword in the keyword/text field located on the upper right hand corner of the "Top" or "Topic page", and click [  ]. The search box appears.

You can also enter your query in the search box. Additionally, more than one keyword can be entered by adding space in between.

Example: "Toner Message" (to display pages which include words, "Toner" and "Message")

## (2) Search result

Display search results. Click [ >>Next ], [ <<Prev ], or the page number at the bottom of the page to move through search results when your search produces more than 10 results.

## (3) [Show search scope]

Click to specify a search scope and select the check box next to the category that you want to search.

## Symbols Used in This Manual

The following is a list of warnings and cautions provided in the e-Manual, to explain handling restrictions, precautions, and instructions that should be observed for your safety.

### **WARNING**

Indicates a warning concerning operations that may lead to death or injury to persons if not performed correctly. To use the machine safely, always pay attention to these warnings.

### **CAUTION**

Indicates a caution concerning operations that may lead to injury to persons if not performed correctly. To use the machine safely, always pay attention to these cautions.

### **IMPORTANT**

Indicates operational requirements and restrictions. Be sure to read these items carefully to operate the machine correctly, and avoid damage to the machine or property.

### **NOTE**


Indicates a clarification of an operation, or contains additional explanations for a procedure. Reading these notes is highly recommended.



Indicates an operation that must not be performed. Read these items carefully, and make sure not to perform the described operations.

## Keys and Buttons Used in This Manual

The e-Manual uses the following keys and buttons.

Type	Description style used in the manual	Example
Operation panel keys	[Key icon]	[  ]
Buttons displayed on the computer and so on	[Button name and so on]	[Preferences]

## Screen Layout of the e-Manual

The screen layout of the e-Manual is predefined.  
It may vary depending on the operating system that you are using.

※ The functions of the driver or software are subject to change due to upgrades.

## Abbreviations Used in the e-Manual

### Abbreviations of operating systems

The following abbreviations are used to refer to the operating systems described in the e-Manual.

Microsoft Windows 2000	Windows 2000
Microsoft Windows XP	Windows XP
Microsoft Windows Vista operating system	Windows Vista
Microsoft Windows 7 operating system	Windows 7
Microsoft Windows Server 2003	Windows Server 2003
Microsoft Windows Server 2008	Windows Server 2008
Microsoft Windows operating system	Windows

---