


Installation Guide

SPDS2100 + SPDS2116 + SPDS2128

Telescopic ceiling pole



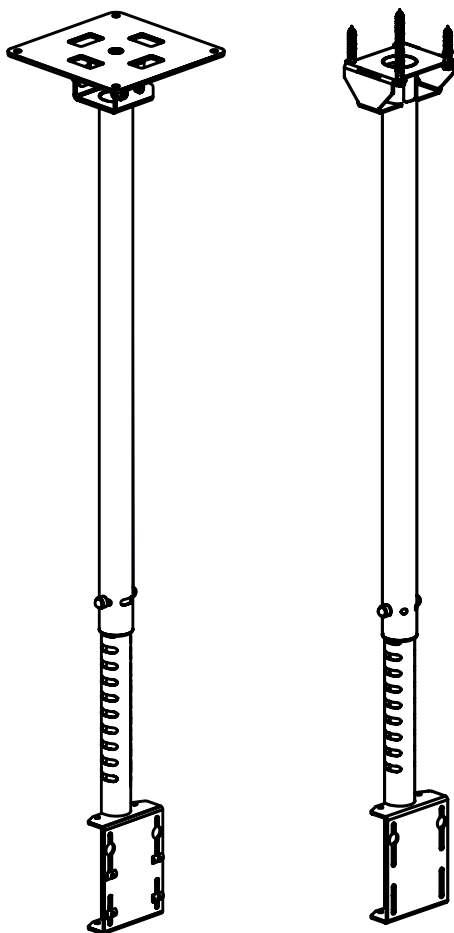

CAUTION

This product must be installed by a professional installer. It is recommended that more than one person is involved in the installation of this product.

This product is designed to be ceiling mounted. Before installing please verify that the ceiling can bear the combined weight of the solution and hardware.

Do not exceed the stated weight limits.

The maximum weight limit for this product is 150 kg per ceiling pole.

It is the responsibility of the installer to use the correct fixings for the specific installation location. Standard fixings for wooden material and fixings for concrete material are supplied as part of the product, but they will not be suitable for all types of ceilings.

This product is intended for indoor use only.


If these installation instructions are not followed precisely, it could lead to product failure and potential personal injury.

Ergonomic Solutions / SpacePole Inc cannot be held responsible for any failure or injury, if the installation instructions are not followed correctly.


Ergonomic Solutions/SpacePole Inc cannot be held responsible for any product failure or personal injury, if any modifications have been made to the product by the customer.

Box content


SPDS2100

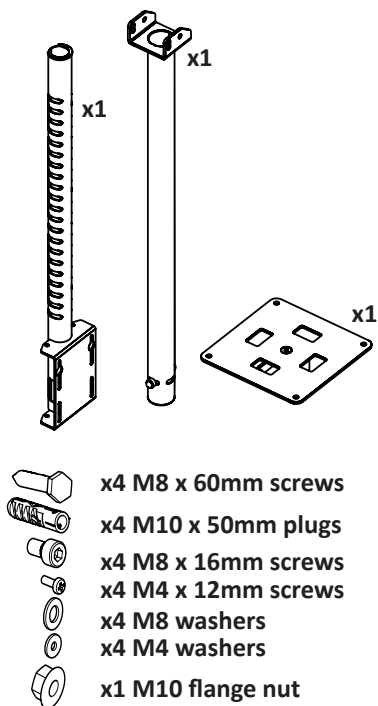

SPDS2128

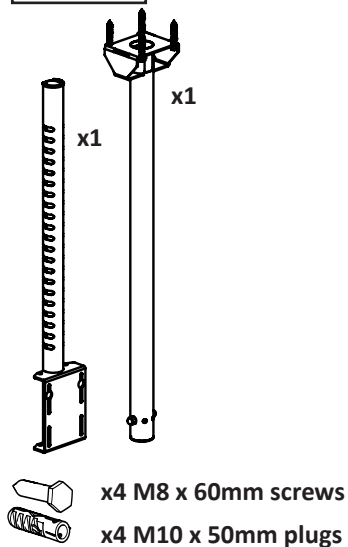


SPDS2116




1 Assemble ceiling mount and pole

Applies to SPDS2100 only

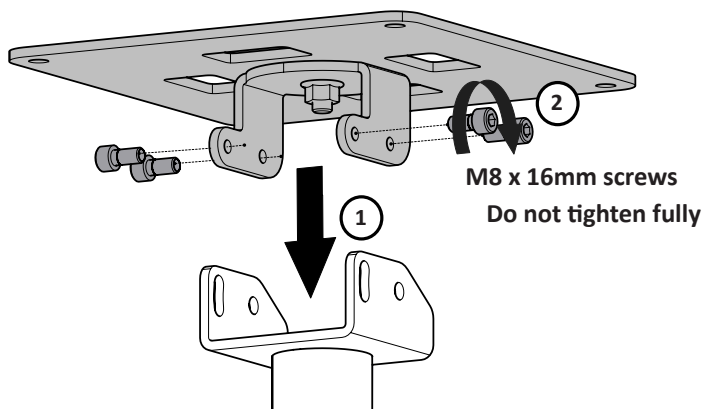

2 Ceiling mount


Designs may vary

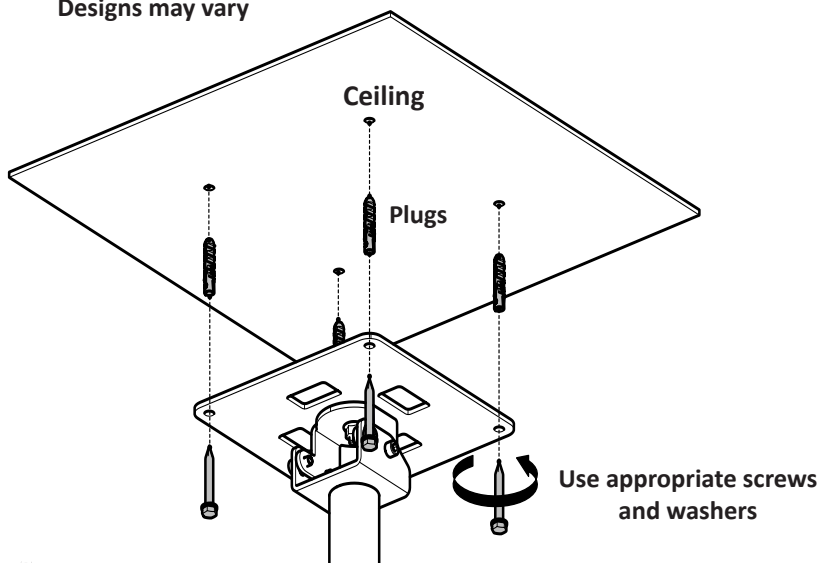

WARNING: Ensure that appropriate ceiling fixings are used


3 Route cables

Designs may vary

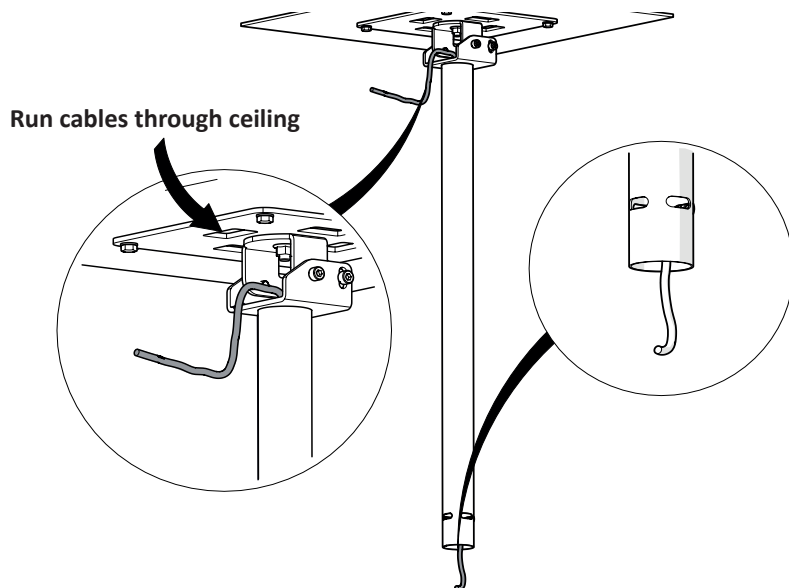

④ Fine adjustment for sloping ceiling

Applies to SPDS2100 only

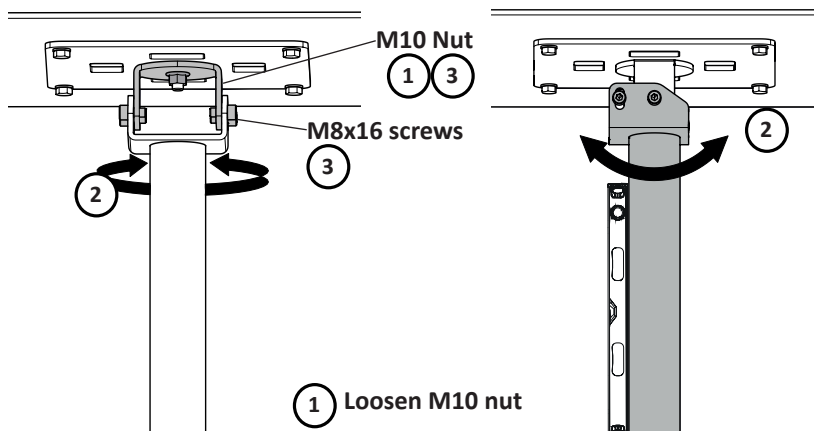


① Loosen M10 nut

② Rotate and tilt pole bracket until vertical position can be achieved


③ Tighten M10 nut and M8x16 screws

⑤ Pole assembly

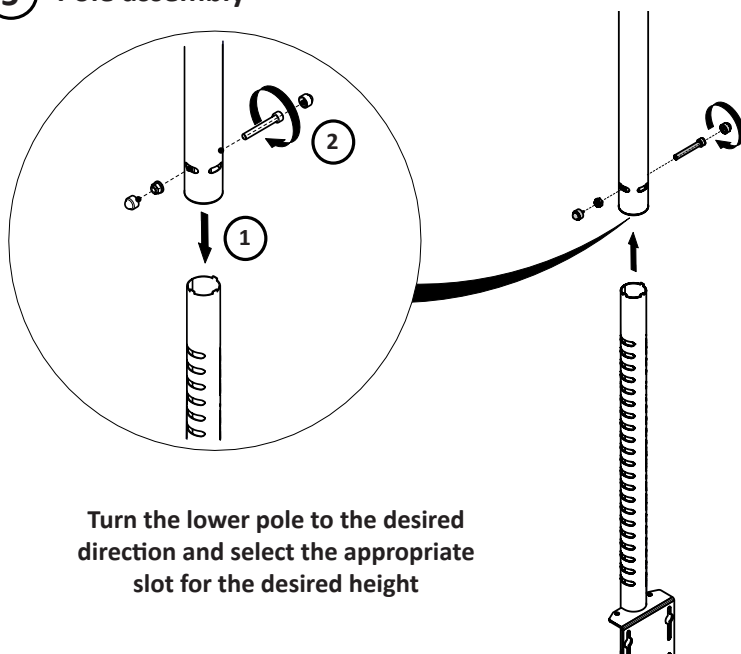

A6 Rail mounting


Applies for rail mounting only

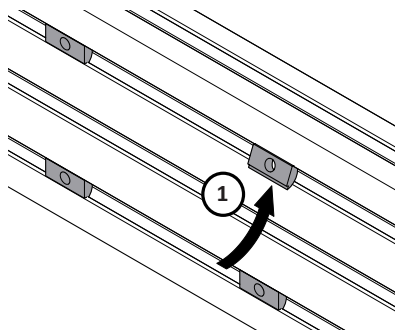

① Insert T-Nuts into rail x4

② Fix top screws in T-Nuts and hook rail onto the pole


③ Tighten top screws and mount bottom screws

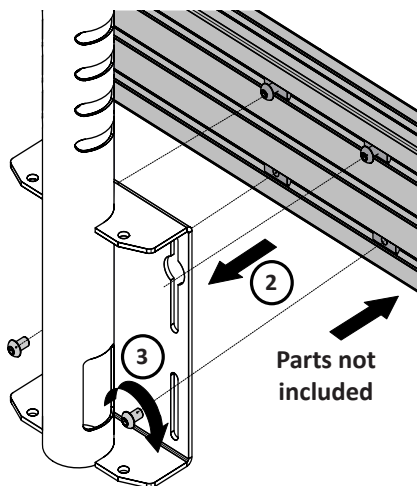

Use T-Nuts and screws from
SPDS2116

B6 Screen mounting

Only for VESA 100

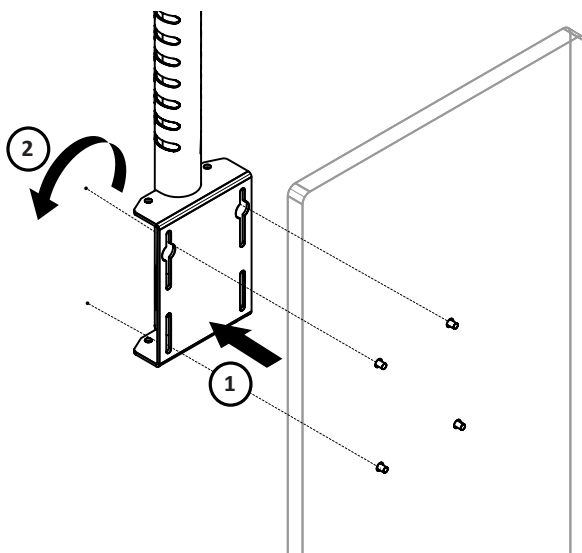

Need help? Contact us



ergonomic.solutions/about/contact-us



spacepole.com/about/contact-us