Go to www.vtechphones.com to register your product for enhanced warranty support and the latest VTech product news.

## VM341

VM341-2

Safe & Sound Full Color Video Monitor



### Congratulations


on purchasing your new VTech product. Before using this product, please read Important safety instructions.


This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature rich VTech product.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.

#### What's in the box



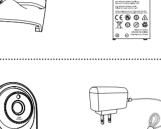





1 set for VM34 2 sets for VM341-2

## Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only

#### **P**NOTES

- Use only the battery supplied with this product. • The operating time for using the rechargeable battery is short. If you want to monitor your baby for a long time, we recommend you connect the
- parent unit to AC power. • If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.

Install the battery as shown below.



**O**NOTE • Press down on the large tab of the battery compartment cover to pull it out




#### 

• Make sure the label THIS SIDE UP is facing up while inserting the battery.



#### **Replace the battery**

To replace the battery, press down on the large tab of the battery compartment cover and pull it out, then follow the steps above to install the battery.

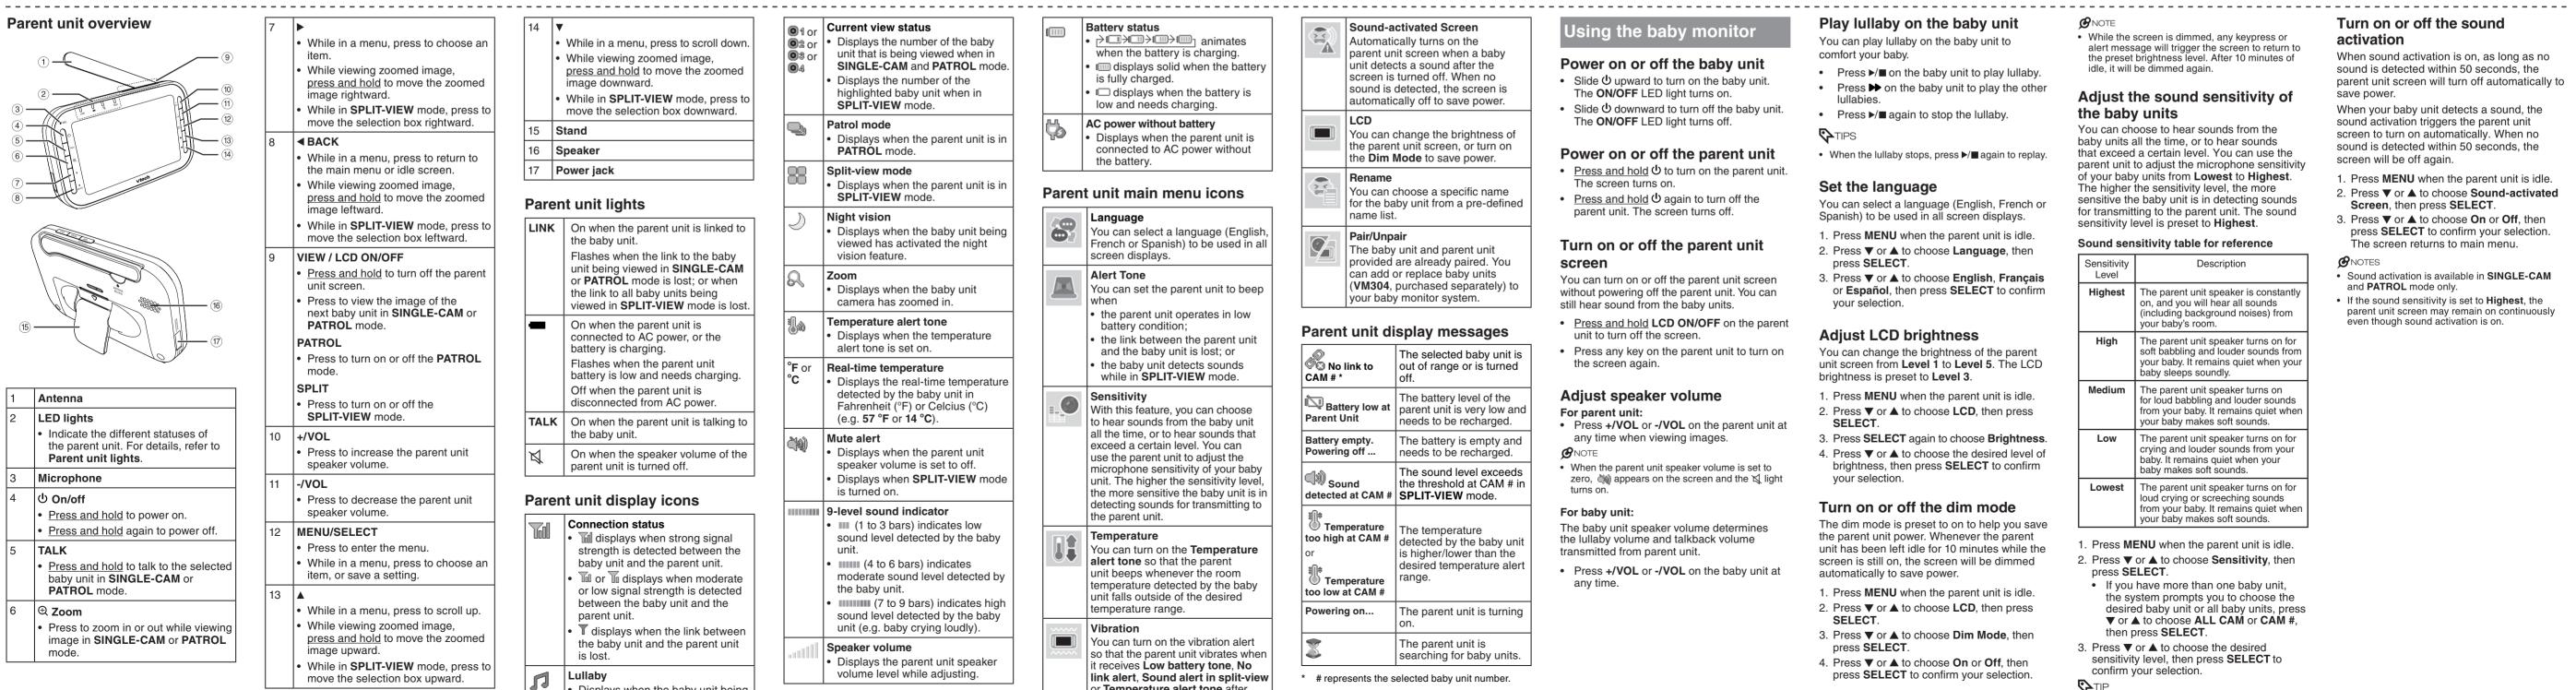




# vtech

vtech

## User's manual

10

#### Parent unit overview

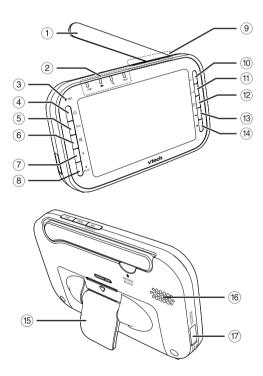

1	Antenna		
2	LED lights		
	<ul> <li>Indicate the different statuses of the parent unit. For details, refer to Parent unit lights.</li> </ul>		
3	Microphone		
4	<ul> <li>ひ On/off</li> <li>Press and hold to power on.</li> </ul>		
	Press and hold again to power off.		
5	TALK         • Press and hold to talk to the selected baby unit in SINGLE-CAM or PATROL mode.		
6	<ul> <li>Toom</li> <li>Press to zoom in or out while viewing image in SINGLE-CAM or PATROL mode.</li> </ul>		

	<ul> <li>While in a menu, press to choose an item.</li> <li>While viewing zoomed image, press and hold to move the zoomed image rightward.</li> <li>While in SPLIT-VIEW mode, press to move the selection box rightward.</li> <li><b>BACK</b></li> <li>While in a menu, press to return to the main menu or idle screen.</li> <li>While viewing zoomed image, press and hold to move the zoomed image leftward.</li> </ul>		14 15 16 17	<ul> <li>While in a menu, press to scroll down.</li> <li>While viewing zoomed image, press and hold to move the zoomed image downward.</li> <li>While in SPLIT-VIEW mode, press to move the selection box downward.</li> <li>Stand</li> <li>Speaker</li> <li>Power jack</li> </ul>	
			Parent unit lights		
	• While in <b>SPLIT-VIEW</b> mode, press to move the selection box leftward.		LINK	C On when the parent unit is linked to the baby unit.	
	<ul> <li>VIEW / LCD ON/OFF</li> <li>Press and hold to turn off the parent unit screen.</li> <li>Press to view the image of the next baby unit in SINGLE-CAM or PATROL mode.</li> <li>PATROL</li> <li>Press to turn on or off the PATROL mode.</li> <li>SPLIT</li> <li>Press to turn on or off the</li> </ul>			Flashes when the link to the baby unit being viewed in <b>SINGLE-CAM</b> or <b>PATROL</b> mode is lost; or when the link to all baby units being viewed in <b>SPLIT-VIEW</b> mode is lost	
			-	On when the parent unit is connected to AC power, or the battery is charging. Flashes when the parent unit battery is low and needs charging. Off when the parent unit is disconnected from AC power.	
	SPLIT-VIEW mode. +/VOL		TALI	K On when the parent unit is talking to the baby unit.	
	• Press to increase the parent unit speaker volume.		¥.	On when the speaker volume of the parent unit is turned off.	
	<ul> <li>-/VOL</li> <li>Press to decrease the parent unit speaker volume.</li> </ul>		Pare	ent unit display icons	
	<ul> <li>MENU/SELECT</li> <li>Press to enter the menu.</li> <li>While in a menu, press to choose an item, or save a setting.</li> <li>M</li> <li>While in a menu, press to scroll up.</li> <li>While viewing zoomed image, press and hold to move the zoomed image upward.</li> </ul>		T	<ul> <li>Connection status</li> <li>I displays when strong signal strength is detected between the baby unit and the parent unit.</li> <li>I or displays when moderate or low signal strength is detected between the baby unit and the parent unit.</li> <li>I displays when the link between the baby unit and the parent unit is lost.</li> </ul>	
	While in SPLIT-VIEW mode, press to move the selection box upward.		IJ	• Displays when the baby unit being	

	<ul> <li>While in a menu, press to scroll down.</li> <li>While viewing zoomed image, press and hold to move the zoomed image downward.</li> <li>While in SPLIT-VIEW mode, press to move the selection box downward.</li> </ul>
15	Stand
16 Speaker	
17 Power jack	
LINK	C On when the parent unit is linked to the baby unit.
	Flashes when the link to the baby unit being viewed in SINGLE-CAM or PATROL mode is lost; or when the link to all baby units being viewed in SPLIT-VIEW mode is lost.
	On when the parent unit is connected to AC power, or the battery is charging.
	Flashes when the parent unit battery is low and needs charging. Off when the parent unit is disconnected from AC power.
TAL	K On when the parent unit is talking to the baby unit.

14 ▼

### unit display icons

- onnection status displays when strong signal strength is detected between the baby unit and the parent unit. or in displays when moderate or low signal strength is detected
- between the baby unit and the parent unit.
- T displays when the link between the baby unit and the parent unit is lost.

#### Illaby

Displays when the baby unit being viewed is playing lullaby.

### Connect and charge the attery


**P**NOTES

product

· Use only the battery supplied with this product. • Use only the power adapters supplied with this

- Make sure the electrical outlets are not controlled by wall switches
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if they are plugged into a ceiling, under-the-table or cabinet outlet
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

#### Connect the baby monitor

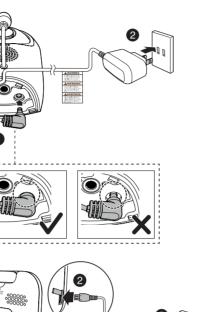



- when the battery is charging. i displays solid when the battery is fully charged.
- C displays when the battery is low and needs charging.
- AC power without battery Displays when the parent unit is connected to AC power without the battery.

### Parent unit main menu icons

Language You can select a language (English French or Spanish) to be used in all screen displays.

- Alert Tone You can set the parent unit to beep
- the parent unit operates in low battery condition;
- the link between the parent unit and the baby unit is lost; or the baby unit detects sounds while in SPLIT-VIEW mode.

### Sensitivity

With this feature, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit.

#### Temperature

You can turn on the **Temperature** alert tone so that the parent unit beeps whenever the room temperature detected by the baby unit falls outside of the desired temperature range.

#### Vibration

You can turn on the vibration alert so that the parent unit vibrates when t receives Low battery tone, No link alert, Sound alert in split-view or Temperature alert tone after turning on the respective alert tones.

#### Charge the parent unit battery

When you have connected the parent unit and installed its battery for the first time or after power outage, the parent unit powers on automatically. The battery icon indicates the battery status (see the following table).

#### **P**NOTES

- The parent unit battery is fully charged after 3 hours of continuous charging • It takes longer to charge the battery when the
- parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

Battery indicators	Battery status	Action
The battery icon is off and 🏠 displays.	No battery is installed but operates using AC power, or the battery has been installed incorrectly.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
The screen displays Battery low at Parent Unit and I The Iight flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid I	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

Sound-activated Screer

LCD

Rename

name list.

Pair/Unpair

🖉 🖸 No link to

CAM # \*

Parent Unit

Battery empty.

Powering off ...

Temperature

Temperature

too low at CAM #

Powering on...

Sound 🔍

Automatically turns on the

parent unit screen when a baby

unit detects a sound after the

screen is turned off. When no

sound is detected, the screen is

automatically off to save power.

You can change the brightness of

the parent unit screen, or turn on

You can choose a specific name

The baby unit and parent unit

provided are already paired. You

can add or replace baby units

your baby monitor system.

Battery low at parent unit is very low and

detected at CAM # SPLIT-VIEW mode.

too high at CAM # detected by the baby unit

range

\* # represents the selected baby unit number.

Parent unit display messages

VM304, purchased separately) to

The selected baby unit is

out of range or is turned

The battery level of the

needs to be recharged.

The battery is empty and

needs to be recharged.

The sound level exceeds

the threshold at CAM # in

is higher/lower than the

desired temperature aler

The parent unit is turning

searching for baby units.

The parent unit is

The temperature

for the baby unit from a pre-defined

the **Dim Mode** to save power.

### efore use

#### **O**NOTE


· This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

#### Test your baby monitor

You may test the baby monitor before initial use, and at regular times thereafter.

#### ()CAUTION

 For hearing protection, make sure the parent
 For hearing protection, make sure the parent unit is more than 1 meter (3 feet) away from the baby unit. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press -/VOL on the parent unit to lower or mute the noise

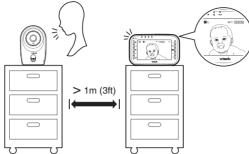

- 1. Make sure your baby units and parent unit are on
- 2. The parent unit displays images from the baby unit.
- Speak towards the baby unit microphone. You will hear the sound at the parent unit
- 3. If you have more than one baby unit, press **VIEW** on the top of your parent unit. The screen switches to other baby units. Then, repeat step 2.

#### RNOTE

 When the parent unit displays and then No link to CAM # (# represents the selected baby unit number), and the LINK LED light flashes, move the parent unit closer to the baby unit (observe the minimum distance of 1 meter/ 3 feet). You can also check if the baby monitor is connected to a live power socket and switched on.

#### 

 Increase the parent unit speaker volume if you cannot hear the sounds transmitted from the baby

#### Ising the baby monitor

### Power on or off the baby unit

- Slide 0 upward to turn on the baby unit. The **ON/OFF** LED light turns on.
- Slide  $\oplus$  downward to turn off the baby unit. The **ON/OFF** LED light turns off.

#### Power on or off the parent unit

- Press and hold  $\bullet$  to turn on the parent unit. The screen turns on.
- parent unit. The screen turns off.

#### Turn on or off the parent unit screer

You can turn on or off the parent unit screen without powering off the parent unit. You can still hear sound from the baby units.

- Press and hold LCD ON/OFF on the parent unit to turn off the screen.
- Press any key on the parent unit to turn on the screen again.

#### Adjust speaker volume For parent unit:

- Press +/VOL or -/VOL on the parent unit at any time when viewing images.
- **O**NOTE
- When the parent unit speaker volume is set to zero, appears on the screen and the 🛛 light turns on.

#### For baby unit:

The baby unit speaker volume determines the lullaby volume and talkback volume transmitted from parent unit.

• Press +/VOL or -/VOL on the baby unit at any time.

#### Positioning the baby monitor

### ()CAUTION

 Keep the baby units out of the reach of your baby. Never place or mount the baby units inside the baby's crib or playpen


#### 

- To avoid interference from other electronic devices, place your baby monitor far away from devices such as wireless routers, microwaves, cell phones and computers.
- 1. Place the baby units more than 1 meter (3 feet) away from your baby.

2. Adjust the angle of the baby unit camera to aim at your baby.



3. Place the parent unit more than 1 meter (3 feet) away from the baby units.

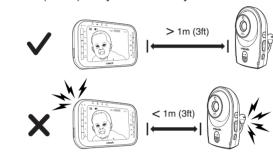

- The default volume of your parent unit is level 4. If you experience high-pitched screeching noise
- from your baby monitor while positioning:
- Make sure your baby units and parent unit are more than 1 meter (3 feet) apart. OR Turn down the volume of your parent unit

### Play lullaby on the baby unit

You can play lullaby on the baby unit to comfort your baby

- Press ►/■ on the baby unit to play lullaby. Press ▶ on the baby unit to play the other
- lullabies
- Press ►/■ again to stop the lullaby.

#### **C**TIPS

• When the lullaby stops, press ►/■ again to replay.

#### Set the language

You can select a language (English, French or Spanish) to be used in all screen displays.

Sound sensitivity table for reference

Sensitivity

Leve

Highest

High

Medium

Low

Lowest

press SELECT.

confirm your selection.

the baby units

**B**NOTE

- 1. Press MENU when the parent unit is idle. 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose Language, then press SELECT.
- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **English**, **Français** or Español, then press SELECT to confirm your selection.

#### Adjust LCD brightness

You can change the brightness of the parent unit screen from Level 1 to Level 5. The LCD brightness is preset to Level 3.

- 1. Press **MENU** when the parent unit is idle. 2. Press  $\triangledown$  or  $\blacktriangle$  to choose **LCD**, then press
- SELECT.
- Press SELECT again to choose Brightness.
- 4. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose the desired level of brightness, then press **SELECT** to confirm your selection.

#### Turn on or off the dim mode

The dim mode is preset to on to help you save the parent unit power. Whenever the parent unit has been left idle for 10 minutes while the screen is still on, the screen will be dimmed automatically to save power.

1. Press **MENU** when the parent unit is idle.

2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **LCD**, then press

3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Dim Mode**, then

4. Press ▼ or ▲ to choose **On** or **Off**, then

press **SELECT** to confirm your selection.

SELECT.


press SELECT.

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other

Operating range

obstructions.

Overview

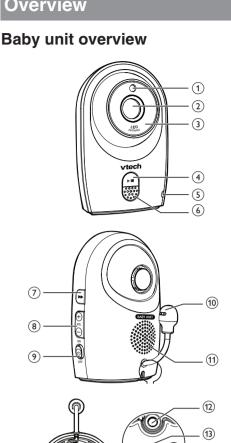



<b>MOTE</b>				
While the screen is dimmed, any keypress or				
alert message will trigger the screen to return to				
the preset brightness level. After 10 minutes of				
idle, it will be dimmed again.				

#### Adjust the sound sensitivity of

You can choose to hear sounds from the baby units all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby units from **Lowest** to **Highest**. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity level is preset to Highest.

Description

The parent unit speaker is constantly on, and you will hear all sounds including background noises) from our baby's room

The parent unit speaker turns on for oft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.

The parent unit speaker turns on or loud babbling and louder sounds from your baby. It remains quiet when vour baby makes soft sounds.

The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.

The parent unit speaker turns on for oud crying or screeching sounds rom your baby. It remains quiet when your baby makes soft sounds.

1. Press **MENU** when the parent unit is idle. 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Sensitivity**, then

 If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press ▼ or ▲ to choose ALL CAM or CAM #, then press SELECT.

3. Press  $\nabla$  or  $\blacktriangle$  to choose the desired sensitivity level, then press **SELECT** to

٠	You can adjust the baby unit placement to
	improve the sound detection.

1	Light sensor		
2			
	Camera		
3	Infrared LEDs		
4	<ul> <li>Play/Stop</li> <li>Press to play or stop lullaby on the baby unit.</li> </ul>		
5	ON/OFF light		
	<ul> <li>On when the baby unit is turned on and is paired to the parent unit.</li> <li>Flashes when the baby unit is not being viewed; or when the link to the parent unit is lost.</li> </ul>		
6	Microphone		
7	▶ Skip		
	<ul> <li>Press to play the next lullaby.</li> </ul>		
8	<ul> <li>+/VOL/-</li> <li>Press to adjust the speaker volume. It determines the lullaby volume and talkback volume transmitted from parent unit.</li> </ul>		
9	ON/OFF switch		
	Slide to turn on or off the baby unit.		
10	Temperature sensor		
11	Speaker		
12	<ul><li>Threaded socket</li><li>For wall mount installation use.</li></ul>		
13	<ul> <li>PAIR</li> <li>Your baby units and parent unit provided are already paired.</li> <li>Press and hold on accessory baby units (VM304, purchased separately) to pair to the parent unit.</li> </ul>		
14	Power jack		

#### Turn on or off the sound activation

When sound activation is on, as long as no sound is detected within 50 seconds, the parent unit screen will turn off automatically to save power.

When your baby unit detects a sound, the sound activation triggers the parent unit screen to turn on automatically. When no sound is detected within 50 seconds, the screen will be off again.


- 1. Press **MENU** when the parent unit is idle.
- 2. Press ▼ or ▲ to choose **Sound-activated** Screen, then press SELECT.
- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **On** or **Off**, then press **SELECT** to confirm your selection. The screen returns to main menu.

**B**NOTES

- Sound activation is available in SINGLE-CAM and **PATROL** mode only.
- If the sound sensitivity is set to **Highest**, the parent unit screen may remain on continuously even though sound activation is on.


#### Monitoring mode

Every time the parent unit is turned on, it displays a baby unit in SINGLE-CAM mode If there are more than one baby units in your system, you can also monitor your baby in PATROL or SPLIT-VIEW mode.

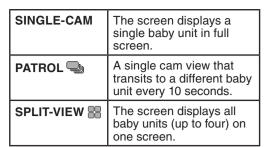


In SINGLE-CAM or PATROL mode:

Press VIEW to view the next baby unit.

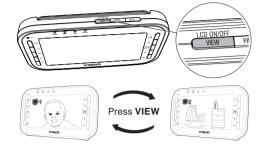

Press PATROL to switch to PATROL mode if you are in **SINGLE-CAM** mode, and vice

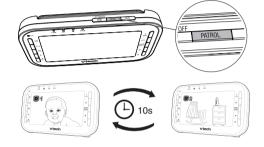

- 16. This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register
- 17. Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product. 18. To reduce the risk of electric shock, do not
- lisassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassemblir can cause electric shock when the product is subsequently used
- 19. You should test the sound reception every time you turn on the units or move one of the components
- 20. Periodically examine all components for damage 21. Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors, cordless phones, scanners, etc.
- 22. Children should be supervised to ensure that they do not play with the product.
- 23. The product is not intended for use by persons (including children) with reduced physical. sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

#### SAVE THESE INSTRUCTIONS

#### Cautions

- . Use and store the product at a temperature between 32°F and 104°F.
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- Batteries should not be exposed to excessiv heat such as bright sunshine or fire.
- Make sure the baby unit(s) and the adapter cord(s) are always out of reach of the baby, at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard
- Never place the baby unit(s) inside the baby's crib or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket. Other electronic products may cause
- interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions personal computers, kitchen appliances and cordless telephones.

• Press SPLIT to enter the SPLIT-VIEW mode.



#### In SPLIT-VIEW mode:

- Press ▲, ▼, ◀ or ▶ to select a baby unit. baby unit temporarily in SINGLE-CAM mode. It returns to SPLIT-VIEW mode after
- 10 seconds. Press PATROL to enter PATROL mode. • Press SPLIT to return to the mode
- (SINGLE-CAM or PATROL) used before entering SPLIT-VIEW mode.

#### RNOTE

 The parent unit is muted while in SPLIT-VIEW mode

#### Zoom

You can zoom in or out while viewing image from baby unit in **SINGLE-CAM** and **PATROL** mode

- Press <sup>①</sup> to zoom in.
- <u>Press and hold</u>  $\blacktriangle$ ,  $\triangledown$ ,  $\triangleleft$  or  $\triangleright$  to move the zoomed image upward, downward, leftward or rightward correspondingly
- Press ⊕ again to zoom out.

#### Talk

You can use the **TALK** function of the parent unit to comfort your baby in SINGLE-CAM and PATROL mode

- 1. Press and hold TALK on the parent unit. The TALK light turns on.
- 2. Speak towards the microphone on the parent unit. Your voice is broadcast to the baby unit.
- 3. Release the TALK key to stop the broadcast. The TALK light goes off.

#### Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices)

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable vireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

- Pacemaker patients
- Should keep wireless devices at least six inches from the pacemake Should NOT place wireless devices directly over
- the pacemaker, such as in a breast pocket, when it is turned ON

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons usina wireless devices.

#### Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today

#### The RBRC<sup>®</sup> seal


The RBRC<sup>®</sup> seal on the lithium-ion battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada

The RBRC<sup>®</sup> program provides a convenient alternative to placing used lithium-ion batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation in BBBC<sup>®</sup> makes it easy for you to drop off the spent battery at local retailers participating in the RBRC<sup>®</sup> program or at authorized VTech product service centers. Please call

1 (800) 8 BATTERY® for information on Li-ion battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment

and conserving natural resources.



#### Set alert tone

#### Low battery tone

You can set the parent unit to beep when the parent unit operates in low battery condition.

- 1. Press **MENU** when the parent unit is idle. 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Alert Tone**, then
- press SELECT.
- 3. Press **SELECT** again to choose Low Battery Tone
- 4. Press  $\triangledown$  or  $\blacktriangle$  to choose **On** or **Off**, then press SELECT to confirm your selection.

#### No link alert

You can set the parent unit to beep when the link between the parent unit and the baby unit is lost

- 1. Press **MENU** when the parent unit is idle.
- 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Alert Tone**, then press SELECT
- 3. Press ▼ or ▲ to choose No Link Alert, then press SELECT.
- 4. Press  $\nabla$  or  $\blacktriangle$  to choose **On** or **Off**, then press SELECT to confirm your selection.

#### Sound alert in split-view

You can turn on the sound alert feature so that, while in **SPLIT-VIEW** mode, the parent unit beeps and displays Sound detected at CAM # whenever the baby unit detects sounds.

- 1. Press **MENU** when the parent unit is idle. 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Alert Tone**, then
- press SELECT to select. 3. Press ▼ or ▲ to choose Sound alert in
- split-view, then press SELECT. 4. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **On** or **Off**, then press SELECT to confirm your selection

#### **O**NOTE

• The sound alert feature is only available in SPLIT-VIEW mode.

## FCC and IC regulations

#### FCC Part 15

This equipment has been tested and found to comply with the requirements for a Class B digital levice under Part 15 of the Federal Communications nmission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna Increase the separation between the equipment
- and receiver Connect the equipment into an outlet on a
- circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Changes or modifications to this equipment not expressly approved by the party nsible for compliance could void the user's authority to operate the equipment

This device complies with Part 15 of the ECC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference. and (2) this device must accept any interference received, including interference that may cause undesired operation.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystande according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria. The baby unit shall be installed and used such that parts of all persons' body are maintained at a distance of approximately 8 in (20 cm) or more. The transmitter and antenna of the parent unit shall be held at least 1 in (2.5 cm) from vour face.

This Class B digital apparatus complies with Canadian requirement: CAN ICES-3 (B)/NMB-3(B)

#### Monitor the temperature

Your baby unit monitors the temperature of your baby's room with its built-in temperature sensor. If the detected temperature is outside of the preset temperature range, the parent unit will display alert message.

#### Set temperature range

You can set the desired room temperature alert range. The minimum temperature can be set between 52 °F (11 °C) and 69 °F (20 °C). The maximum temperature can be set between 70 °F (21 °C) and 86 °F (30 °C).

- 1. Press **MENU** when the parent unit is idle. 2. Press ▼ or ▲ to choose **Temperature**, then press SELECT.
- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Minimum** or Maximum, then press SELECT.
- If you have more than one baby unit, the system prompts you to choose the desired baby unit or all baby units, press ▼ or ▲ to choose ALL CAM or CAM #. then press SELECT.
- 4. Press  $\nabla$  or  $\blacktriangle$  to choose the desired minimum or maximum temperature, then press SELECT to confirm your selection.

#### Temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range

- 1. Press **MENU** when the parent unit is idle.
- 2. Press  $\triangledown$  or  $\blacktriangle$  to choose **Temperature**, then press SELECT.
- 3. Press  $\nabla$  or  $\blacktriangle$  to choose **Alert Tone**, then press SELECT. If you have more than one baby unit,

the system prompts you to choose the

desired baby unit or all baby units, press

 $\checkmark$  or  $\blacktriangle$  to choose ALL CAM or CAM #,

4. Press  $\nabla$  or  $\blacktriangle$  to choose **On** or **Off**, then

press SELECT to confirm your selection.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference,

Privacy of communications may not be ensured when

and (2) this device must accept any interference,

including interference that may cause undesired

The term "IC:" before the certification/registration

This product meets the applicable Industry Canada

number only signifies that the Industry Canada

The baby unit complies with FCC RF radiation

environment. The baby unit should be installed and

between the baby unit and all persons' body. Use of

operated with a minimum distance of 8 in (20 cm)

other accessories may not ensure compliance with

FCC RF exposure guidelines. This transmitter must

not be co-located or operating in conjunction with

any other antenna or transmitter. This equipment

complies also with Industry Canada RSS-102 with

California Energy Commissi

This baby monitor meets the California Energy

consumption. Your baby monitor is set up to comply

with the energy-conserving standards right out of

battery. The CEC battery charging testing mode is

Even if the parent unit is paired to baby units, the

CEC battery charging testing mode is activated while

Follow the instructions to install and charge the

Commission (CEC) regulations for energy

attery charging testing mode

respect to Canada's Health Code 6 for Exposure of

exposure limits set forth for an uncontrolled

technical specifications were met

RF radiation exposure statement

then press SELECT.

Industry Canada

using this product.

technical specifications.

Humans to BE Fields.

activated while charging.

it is powered off and charging.

the box.

operation

#### Temperature format

You can choose to display the temperature in Fahrenheit (°F) or Celcius (°C).

1. Press MENU when the parent unit is idle. 2. Press ▼ or ▲ to choose Temperature, then

press SELECT. 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Format**, then press SELECT.

4. Press ▼ or ▲ to choose Fahrenheit or Celsius, then press SELECT to confirm your selection.

#### Turn on or off the vibration

You can turn on the vibration feature so that the parent unit vibrates when it receives any of Low battery tone, No link alert, Sound alert in split-view or Temperature alert tone after turning on the respective alert tones.

1. Press **MENU** when the parent unit is idle. 2. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose **Vibration**, then press SELECT.

3. Press  $\triangledown$  or  $\blacktriangle$  to choose **On** or **Off**. 4. Press SELECT to confirm your selection.

#### Rename the baby units

You can rename each baby unit. Once the baby unit is renamed, its new name together with the baby unit number will appear in the sub-menu of below options:

- Sensitivity Rename
- Temperature
   Pair/Unpair

SELECT

1. Press **MENU** when the parent unit is idle. 2. Press  $\triangledown$  or  $\blacktriangle$  to choose **Rename**, then press

- 3. Press  $\mathbf{\nabla}$  or  $\mathbf{A}$  to choose the desired baby unit, then press SELECT.
- 4. Press ▼ or ▲ to choose the desired name for the baby unit, then press **SELECT** to confirm your selection.

## For cETL compliance only

#### Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez oujours suivre certaines mesures de précautior de base afin de réduire les risques d'incendie, d'électrocution et de blessures corporelles, dont ceux aui suivent

 Observez toutes les instructions et mises en garde inscrites sur l'appareil.

- 2. L'installation par un adulte est requise. 3. Ce produit a été concu pour être un dispositif d'appoint seulement. Il n'est pas le remplacement
- d'une supervision responsable et adéquate par un adulte et ne devrait pas être utilisé comme
- 4. Ce produit n'est pas conçu pour être utilisé en tant que moniteur médical.
- N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine. dans un soussol humide ou une douche. MISE EN GARDE: Il peut y avoir un risque
- d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de rechange (BT198555/BT298555). N'incinérez pas es piles. Celles-ci risqueraient d'exploser. Jetez les piles usées selon les renseignements suivant
- le sceau du RBRC<sup>®</sup> N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre
- votre sécurité en péril. Adaptateur de l'unité du bébé Sortie : 5.9 V CC 1A
- Adaptateur de l'unité du parent :
- Sortie : 5 V CC 1A Pour les PRODUITS À BRANCHER À LINE PRISE DE COURANT, la prise de courant doit
- être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant. 8. Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la
- verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celuic est branché dans une prise au plafond, sous une table ou dans un meuble.
- 9. Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas de nettoyants en aérosols. Utilisez un chiffon humide pour le nettoyer.
- 10. Débranchez les cordons d'alimentation avant de remplacer le bloc-piles
- 11. Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.

#### Night vision

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from this baby unit is in black and white, and  $\mathcal{A}$ appears on screen.

#### **O**NOTES

- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment • When the infrared LEDs are on, the image is in
- black and white. This is normal due to external light sources.

#### 

Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display

#### Pair new baby unit (VM304)

The baby units and parent unit provided are already paired. You can add or replace any baby units (VM304, purchased separately) to your video and audio monitor system. You can pair a maximum of four baby units to your parent unit.

For more details, refer to the user's manual that comes with your VM304 new baby unit.

#### eneral product care

To keep this product working well and looking good, follow these guidelines

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture. · Avoid dropping the product or treating it roughly.
- Clean with a soft cloth. DO NOT immerse the parent unit and the baby
- unit in water and do not clean them under the tap DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

#### Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby uni and the adapters in a cool and dry place

- 12. Ne laissez aucun objet reposer ni appuver sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser e cordon d'alimentation ou de le piétiner
- 13. Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité.
- 14. Ne surchargez pas les prises de courant murales ni les rallonges électriques.
- 15. Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table chancelants.
- 16. Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer ne bloquez sous aucun prétexte ces ouvertures et n'empêchez pas l'aération adéquate de l'appareil en le placant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation
- ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit.
- démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution
- 19. Vous devriez tester la réception chaque fois que vous mettez l'appareil en fonction 20. Examinez les composantes afin de vérifier si
- celles-ci ne sont pas endommagées. Soyez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des scanneurs, etc.
- 22. Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'apparei
- 23 Le produit n'est pas concu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

#### **CONSERVEZ CES INSTRUCTIONS**

#### Frequently asked question

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com, or contact 1 (800) 595-9511 for customer service.

/hy does the aby monitor ot respond ormally?	<ul> <li>Try the following (in the order listed) for common cure:</li> <li>1. Disconnect the power to the baby units and the parent unit.</li> <li>2. Remove the batteries in the parent unit. Then install the batteries again.</li> <li>3. Wait a few seconds before connecting power back to the baby units and the parent unit.</li> <li>4. Turn on the baby units and the parent unit.</li> <li>5. Wait for the parent unit to synchronize with the baby units. Allow up to one minute for this to take place.</li> </ul>
/hy don't le power-on ght of the aby unit and arent unit o on when I witch on the nits?	Perhaps the parent unit is not connected to the mains. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then press and hold $\Phi$ to switch on the parent unit and to establish connection with the baby unit.
	Perhaps the baby unit is not connected to the mains. Connect the baby unit to the mains. Then set the <b>ON/OFF</b> switch to <b>ON</b> to switch on the baby unit and to establish connection with the parent unit.
/hy doesn't ly parent unit	Make sure the power is not controlled by a wall switch.
harge while onnected to C power?	Make sure the battery is correctly installed in your parent unit.
	You may have used the battery for a long time. Replace a new battery.
/hy is my creen in ack and	The screen is in black and white during nighttime or in a dark room. This is normal due to

external light sources.

white?

Mises en garde

chauffage.

ou au feu.

l'organisme

en marche.

auiourd'hui.

Utilisez et entreposez le produit à une

3. Le bloc-piles ne doit pas être exposé à la

4. Assurez-vous que le moniteur et le cordon

el une serviette ou une couverture.

vidéo et audio. Tentez d'installer votre

D'autres équipements électroniques peuvent

produire des interférences sur votre moniteur

moniteur vidéo ou audio à l'écart des appareils

moniteurs, téléphones, ordinateurs personnels,

électroniques tels que des routeurs sans fil,

radios, téléphones cellulaires, interphones,

électroménagers et téléphones sans fil.

Les simulateurs cardiaques (ne s'applique qu'aux

L'organisme 'Wireless Technology Research, LLC

interférences entre les téléphones sans fil portatifs

aliments et drogues (FDA) des États-Unis, la firme

Avis aux détenteurs de stimulateurs cardiaques

Vous devriez maintenir les dispositifs sans fil à

au moins six pouces du simulateur cardiaque.

Ils ne doivent PAS placer le téléphone sans fil

L'étude effectuée par l'organisme WRS n'a pas

cardiaques causés par les gens qui utilisent

dispositifs sans fil à proximité de ceux-ci.

Ce produit de VTech est conforme à toutes

électromagnétiques (EMF) standard. Si vous le

de nombreuses années, selon les meilleures

évidences scientifiques dont nous disposons

manipulez correctement en suivant les instructions

de ce quide, son utilisation sera sécuritaire pendant

Champs électromagnétiques (EMF)

les normes se rapportant aux champs

directement sur le stimulateur cardiague, tel que

dans une poche de chemise, lorsque celui-ci est

identifié de risque pour les détenteurs de simulateurs

(WTR)', une firme de recherche indépendante,

et les stimulateurs cardiagues implantés dans

organisme. Appuyée par l'Administration des

a mené une évaluation pluridisciplinaire des

Stimulateurs cardiaques implantés dans

dispositifs numériques sans fil) :

WTR recommande aux médecins

température entre 0° C (32°F) et 40°C (104° F).

chaleurs extrêmes, ainsi qu'à la lumière directe

chaleur excessive telle que la lumière du soleil

du soleil. Ne l'installez pas près d'une source de

2. N'exposez pas cet appareil à des froids ou des

	Why do I get glare or blurry display on my screen when	During nighttime or in a dark room, the surroundings and other interfering factors, like lightings, objects, colors and backgrounds may affect the image quality on your parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.		Why does the parent unit beep?	The baby un range. Move closer to the less than 3 fe
	viewing my baby at night?				If the parent by the provid not have end parent unit to Charge the b
	Why does the baby monitor	The parent unit and baby units may be too close to each other.	unit for up to		
	produce a high-pitched noise?	<ul> <li>Move the parent unit away from the baby units until the noise stops; OR</li> </ul>			If your paren SPLIT-VIEW baby units m
		<ul> <li>Turn down the volume of your parent unit.</li> </ul>		The tempera room may be	
li b fl tł	The <b>ON/OFF</b> light on the baby unit flashes and the parent unit displays <b>T</b> .	the the parent unit. Follow below steps to pair the baby unit. Make and sure both parent unit and baby ent unit are on before pairing.	·	Why does the parent unit beep/vibrate frequently in <b>SPLIT-VIEW</b> mode?	You may hav sensitivity lev the sound ald feature are tu unit notifies y including bac beeps (or vib sound sensit
				Why does the parent unit react too quickly to other sounds?	The baby un sounds than Adjust the se lower level of unit speaker
				Why don't I hear a sound/ Why can't I	The parent u may be too lo +/VOL to inc
				hear my baby cry?	You may hav sensitivity lev sound sens unit to set to
				Why can't I establish a connection? Why is the connection lost every now and then? Why are there sound interruptions?	The baby un range. Move closer to the (observe the of 1 meter/ 3
					Other electro cause interfe monitor. Try i monitor as fa

displays Pairing failed. Try the

pairing process again.

paired at a time.

Only one baby unit can be

#### imited warrant

#### What does this limited warranty cover?

The manufacturer of this VTech Product warrants to the holder of a valid proof of purchase ("Consumer or "you") that the Product and all accessories provided in the sales package ("Product") are free from defects in material and workmanship pursuant to the following terms and conditions, when installed and used normally and in accordance with the Product operating instructions. This limited warranty extends only to the Consumer for Products purchased and used in the United States of America and Canada.

#### What will VTech do if the Product is not free from defects in materials and workmanship during the limited warranty period ("Materially Defective Product")?

During the limited warranty period, VTech's authorized service representative will repair or replace at VTech's option, without charge a Materially Defective Product. If we repai the Product, we may use new or refurbished replacement parts. If we choose to replace the Product, we may replace it with a new or refurbished Product of the same or similar design. We will etain defective parts, modules, or equipmen Repair or replacement of the Product, at VTech's option, is your exclusive remedy. VTech will return the repaired or replacement Products to you in working condition. You should expect the repair or eplacement to take approximately 30 days

#### How long is the limited warranty period?

The limited warranty period for the Product extends for ONE (1) YEAR from the date of purchase. If VTech repairs or replaces a Materially Defective Product under the terms of this limited warranty. this limited warranty also applies to the repaired or replacement Product for a period of either (a) 90 days from the date the repaired or replacement Product is shipped to you or (b) the time remaining on the original one-year warranty; whichever is

#### What is not covered by this limited warranty? This limited warranty does not cover:

- 1. Product that has been subjected to misuse, accident, shipping or other physical damage, improper installation, abnormal operation or handling, neglect, inundation, fire, water or other liquid intrusion; or
- 2. Product that has been damaged due to repair, alteration or modification by anyone other than an
- authorized service representative of VTech; or 3. Product to the extent that the problem experienced is caused by signal conditions, network reliability,
- or cable or antenna systems; or 4. Product to the extent that the problem is caused
- by use with non-VTech accessories; or
- 5. Product whose warranty/quality stickers, product

- or Canada, or used for commercial or institutional purposes (including but not limited to Products used for rental purposes); or 7. Product returned without a valid proof of purchase
  - (see item 2 on the next page); or 8. Charges for installation or set up, adjustment of customer controls, and installation or repair of systems outside the unit.

### How do you get warranty service?

our website at www.vtechphones.com or call 1 (800) 595-9511. In Canada, go to www.vtechcanada.com or call 1 (800) 267-7377. NOTE: Before calling for service, please review the user's manual - a check of the Product's controls and features may save you a service call. Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or nandling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charge are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warra nty, or proof o purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any furthe repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty

#### What must you return with the Product to get warranty service?

- 1. Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty: and
- 2. Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model)
- 3. Provide your name, complete and correct mailing address, and telephone number.

#### Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized

should not rely on any such modification. State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

- de l'adaptateur sont toujours hors de portée des enfants, à au moins 1 mètre (3 pieds) de l'enfant ou du berceau, pour éviter tout risque de strangulation Ne jamais placer le moniteur à l'intérieur du berceau ou du parc de bébé. Ne jamais couvrir le moniteur ou l'unité (s) portative avec un article
- 17. N'enfoncez jamais d'objets à travers les
- 18. Afin de réduire les risques d'électrocution, ne

nits may be out of the parent unit baby units (but not

unit is powered led battery, it m ough charge for the o perform normally pattery in the parent 3 hours.

nt unit is in W mode, some of you nay detect sounds.

rature of your baby's e too high or too low.

ive set the sound evel to **Highest** when lert (and vibration) urned on. The paren you of all sounds ckground noise with brations). Adjust the tivity to a lower leve

nit also picks up other those of your baby. sensitivity level to a or lower the parent r volume.

unit speaker volume ow or off. Press crease the volume

ive set a low sound vel. See **Adjust the** sitivity of the baby to a higher level.

nits may be out of the parent unit baby units e minimum distance 3 feet).

ronic products may erence with your baby installing your baby monitor as far away from these electronic devices as possible.

serial number plates or electronic serial numbers have been removed, altered or rendered illegible; or 6. Product purchased, used, serviced, or shipped for repair from outside the United States of America

To obtain warranty service in the USA, please visit

and the date of purchase or receipt; and

to make modifications to this limited warranty and you

#### portant safety structions

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire. electric shock and injury, including the following: . Follow all warnings and instructions marked on

- the product.
- Adult setup is required
- 3. This product is intended as an aid. It is not a substitute for responsible and proper adult
- supervision and should not be used as such. 4. This product is not intended for use as a medical
- 5. Do not use this product near water. For example, do not use it next to a bath tub, wash bow kitchen sink, laundry tub or swimming pool, or in a wet basement or shower
- CAUTION: Use only the batteries indicated in his manual. There may be a risk of explosio if a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT198555/ BT298555) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in The RBRC<sup>®</sup> seal
- . Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Output: 5.9V DC 1A Parent unit power adapter: Output: 5V DC 1A. For pluggable equipment, the socket-outlet shal be installed near the equipment and shall be easily accessible
- 8. The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet
- 0. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners Use a damp cloth for cleaning.
- 10. Unplug the power cords before replacing
- 11. Do not cut off the power adapters to replace them with other plugs, as this causes a nazardous situatio
- 12. Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped
- 13. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company
- 14. Do not overload wall outlets or use an extension
- 15. Do not place this product on an unstable table. shelf, stand or other unstable surfaces.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (ar unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidenta consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cos of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/ provinces do not allow the exclusion or limitation or ncidental or consequential damages, so the above limitation or exclusion may not apply to you.

#### Please retain your original sales receipt as proof of purchase.

Technical specifications			
Frequency control	Crystal controlled PLL synthesizer		
Transmit frequency	Baby unit: 2406 - 2475 MHz Parent unit: 2406 - 2475 MHz		
Channels	24		
LCD	4.3" Color LCD (WQVGA 480x272 pixel)		
Nominal effective range	Maximum power allowed by FCC and IC. Actual operating range may vary according to environmental conditions at the time of use.		
Power requirements	Parent unit: 3.7V Li-polymer battery Baby unit power adapter: Output: 5.9V DC @ 1A Parent unit power adapter: Output: 5V DC @ 1A		

#### Credits:

The Background Noise sound file was created by Caroline Ford, and is used under the Creative Commons license. The Stream Noise sound file was created by Caroline Ford and is used under the Creative Commons license. The Crickets At Night sound file was created by Mike Koenig and is used under the Creative Commons license. The *Heart Beat* sound file was created by Zarabadeu, and is

used under the Creative Commons license



Specifications are subject to change without notice. © 2016 VTech Communications, Inc. All rights reserved. 05/16. VM341-X CIB V11 Document order number: 91-008406-070-100