Inspiron 3250 Service Manual



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © **2015 Dell Inc. All rights reserved.** This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2015 - 09

Rev. A00

Contents

Before working inside your computer	9
Before you begin	
Safety instructions	
Recommended tools	
After working inside your computer	12
Technical overview	13
Inside view of your computer	
System board components	
Removing the computer cover	15
Procedure	
Replacing the computer cover	16
Procedure	
Removing the front bezel	17
Prerequisites	
Procedure	17
Replacing the front bezel	19
Procedure	
Post-requisites	19
Removing the 3.5-inch hard drive	20
Prerequisites	
Procedure	20

Replacing the 3.5-inch hard drive	
Procedure	
Post-requisites	24
Removing the 2.5-inch hard drives	25
Prerequisites	
Procedure	26
Replacing the 2.5-inch hard drives	29
Procedure	29
Post-requisites	29
Removing the heat-sink assembly	30
Prerequisites	
Procedure	31
Replacing the heat-sink assembly	33
Procedure	
Post-requisites	33
Removing the memory module	34
Prerequisites	
Procedure	35
Replacing the memory module	39
Procedure	
Post-requisites	40
Removing the graphics card	41
Prerequisites	
Procedure	41

Replacing the graphics card	43
Procedure	43
Post-requisites	43
Removing the drive cage	44
Prerequisites	44
Procedure for removing drive cage with 2.5 inch hard drive	45
Procedure for removing drive cage with 3.5-inch hard drive	47
Replacing the drive cage	49
Procedure	49
Post-requisites	49
Removing the processor	50
Prerequisites	50
Procedure	50
Replacing the processor	52
Procedure	52
Post-requisites	53
Removing the optical drive	54
Prerequisites	54
Procedure	54
Replacing the optical drive	56
Procedure	56
Post-requisites	56
Removing the coin-cell battery	57
Prerequisites	57
Procedure	57

Replacing the coin-cell battery	59
Procedure	
Post-requisites	
Removing the wireless card	60
Prerequisites	60
Procedure	60
Replacing the wireless card	62
Procedure	62
Post-requisites	63
Removing the chassis fan	64
Prerequisites	64
Procedure	64
Replacing the chassis fan	66
Procedure	66
Post-requisites	66
Removing the antenna modules	67
Prerequisites	
Procedure	68
Replacing the antenna modules	70
Procedure	70
Post-requisites	70
Removing the power-button module	71
Prerequisites	71
Procedure	71

Replacing the power-button module	73
Procedure	73
Post-requisites	73
Removing the power-supply unit	74
Prerequisites	74
Procedure	74
Replacing the power-supply unit	77
Procedure	77
Postrequisites	77
Removing the system board	78
Prerequisites	78
Procedure	78
Replacing the system board	81
Procedure	
Post-requisites	81
BIOS setup program	83
Overview	83
Entering BIOS setup program	83
Clearing Forgotten Passwords	83
Prerequisites	84
Procedure	84
Post-requisites	84
Clearing CMOS Settings	84
Prerequisites	85
Procedure	85
Post-requisites	85
Flashing the BIOS	86

Getting help and contacting Dell	87
Self-help resources	87
Contacting Dell	88

Before working inside your computer



NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Before you begin

- Save and close all open files and exit all open applications.
- 2 Shut down your computer.
 - Windows 10: Click or tap Start → **②** Power → Shut down.
 - Windows 8.1: On the **Start** screen, click or tap the power icon $oldsymbol{\psi}
 ightarrow$ Shut down.
 - Windows 7: Click or tap Start → Shut down.



NOTE: If you are using a different operating system, see the documentation of your operating system for shut-down instructions.

- 3 Disconnect your computer and all attached devices from their electrical outlets
- 4 Disconnect all cables such as telephone cables, network cables and so on, from your computer.
- 5 Disconnect all attached devices and peripherals, such as keyboard, mouse, monitor, and so on, from your computer.
- 6 Remove any media card and optical disc from your computer, if applicable.
- 7 After the computer is unplugged, press and hold the power button for 5 seconds to ground the system board.

Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.



WARNING: Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



WARNING: Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the power source.



CAUTION: To avoid damaging the computer, ensure that the work surface is flat and clean.



CAUTION: To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.



 \bigwedge CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at www.dell.com/regulatory_compliance.



CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.



CAUTION: When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.



CAUTION: Press and eject any installed card from the media-card reader.

Recommended tools

The procedures in this document may require the following tools:

Philips screwdriver

- Flat-head screwdriver
- Plastic scribe

After working inside your computer

Δ

CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, and cables you removed before working on your computer.
- 3 Replace any media cards, discs, and any other parts that you removed before working on your computer.
- 4 Connect your computer and all attached devices to their electrical outlets.
- **5** Turn on your computer.

Technical overview



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Inside view of your computer



- 1 drive cage
- 3 power-supply unit
- 5 chassis fan

- 2 processor fan
- 4 graphics card

System board components

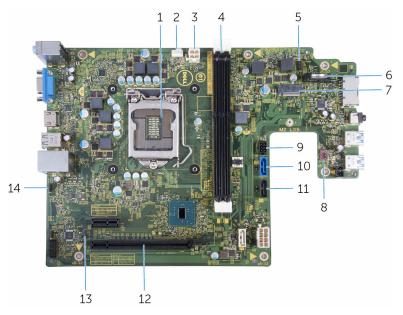

1	processor	2	processor-fan cable connector
3	power-cable connector	4	memory-module slots
5	power-button cable connector	6	coin-cell battery
7	wireless-card slot	8	chassis-fan cable connector
9	drive power-cable connector	10	primary hard-drive data cable connector
11	optical-drive data-cable/ secondary hard-drive data-cable connector	12	graphics-card slot
13	CMOS jumper	14	password jumper


Removing the computer cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Place the computer on its side with the vents facing up.
- 2 Remove the screws that secure the computer cover to the chassis.
- 3 Release the computer cover by sliding it toward the back of the computer.
- 4 Lift the computer cover away from the chassis.

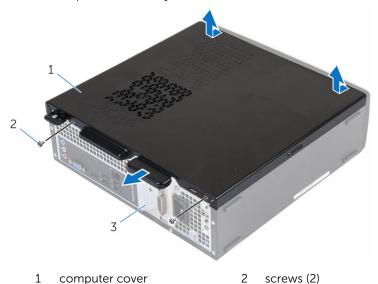

3 chassis

15

Replacing the computer cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- Align the tabs on the computer cover with the slots on the chassis and slide it toward the front of the computer.
- 2 Replace the screws that secure the computer cover to the chassis.
- **3** Place the computer in an upright position.

Removing the front bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

Remove the computer cover.

Procedure

- 1 Place the computer in an upright position.
- 2 Release the front-bezel tabs by moving them outward.

3 Gently rotate and pull the front bezel away from the chassis.

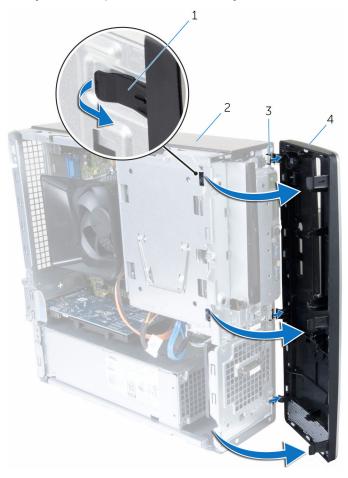

- 1 tabs (6)
- 3 slots (3)

- 2 chassis
- 4 front bezel

Replacing the front bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- Align and insert the tabs on the front bezel into the slots on the front panel.
- 2 Rotate the front bezel toward the chassis until the front-bezel tabs snap into place.
- **3** Place on the computer on its side.

Post-requisites

Replace the computer cover.

Removing the 3.5-inch hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the computer cover.
- 2 Remove the front bezel.

Procedure

1 Disconnect the power cable and the data cable from the hard drive.

2 Remove the screw that secures the hard-drive assembly to the drive cage.

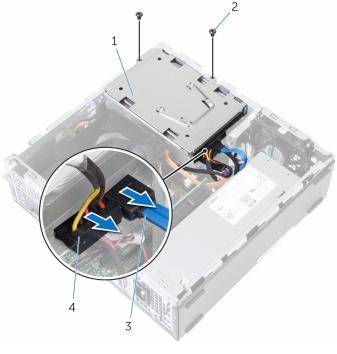

- 1 hard-drive assembly
- 3 data cable


- 2 screws (2)
- 4 power cable

3 Using the pull-tab, slide the hard-drive assembly toward the inside of the computer and lift it off the drive cage.



- 1 hard-drive assembly
- 2 pull-tab
- 4 Turn the hard-drive assembly over.
- **5** Remove the screws that secure the hard-drive bracket to the hard-drive assembly.

Slide the hard drive out of the hard-drive bracket.

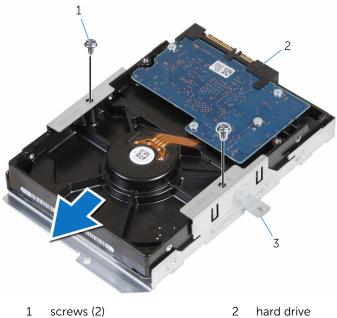

- hard-drive bracket

Replacing the 3.5-inch hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the hard drive into the hard-drive bracket.
- 2 Align the screw holes on the hard drive with the screw holes on the harddrive bracket.
- **3** Replace the screws that secure the hard-drive bracket to the hard drive.
- **4** Turn over the hard-drive assembly.
- 5 Slide and place the hard-drive assembly into the drive cage.
- **6** Replace the screws that secure the hard-drive assembly to the drive cage.
- 7 Connect the power cable and data cable to the hard-drive assembly.

Post-requisites

- 1 Replace the front bezel.
- 2 Replace the computer cover.

Removing the 2.5-inch hard drives



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites


Remove the computer cover.

Procedure

1 Disconnect the power cable and the data cable from the hard drive.




NOTE: Disconnect the cables from the second hard drive, if installed.

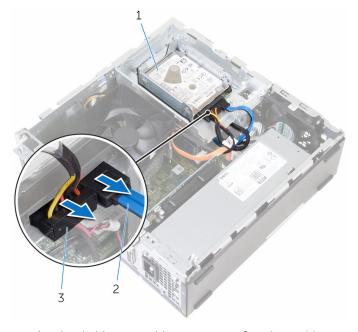

- 1 hard-drive assembly
- 2 data cable


- 3 power cable
- 2 Remove the screw that secures the hard-drive bracket to the drive cage.

3 Slide and lift the hard-drive assembly off the drive cage.

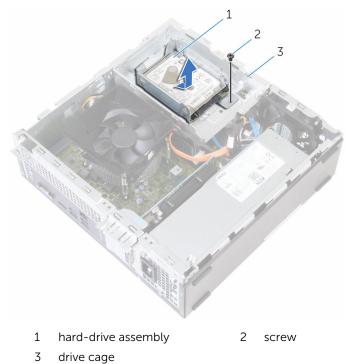

4 Remove the screws that secure the hard drive to the hard-drive bracket.

5 Slide the hard drive out of the hard-drive bracket.

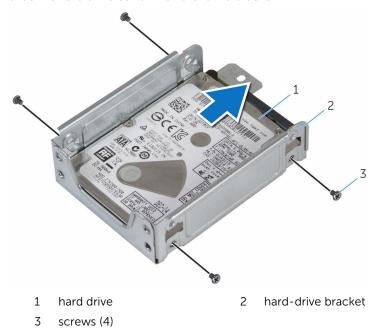

NOTE: Follow step 4 to step 5 to remove the second hard drive, if installed.


Replacing the 2.5-inch hard drives



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the hard drive into the hard-drive bracket.
- 2 Align the screw holes on the hard drive with the screw holes on the harddrive bracket
- 3 Replace the screws that secure the hard drive to the hard-drive bracket.

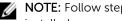

- NOTE: Follow step 1 to step 3 to replace the second hard drive, if
- Slide and place the hard-drive assembly into the drive cage. 4
- 5 Replace the screw that secures the hard-drive bracket to the drive cage.
- 6 Connect the power cable and data cable to the hard drive.
 - **NOTE:** Connect the cables to the second hard drive, if installed.

Post-requisites

Replace the computer cover.

Removing the heat-sink assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



MARNING: The heat sink may become not during.

Allow sufficient time for the heat sink to cool before you touch it. WARNING: The heat sink may become hot during normal operation.




CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

Prerequisites

Remove the computer cover.


Procedure

1 Pull the tabs outward and release the fan-shroud from the processor fan.

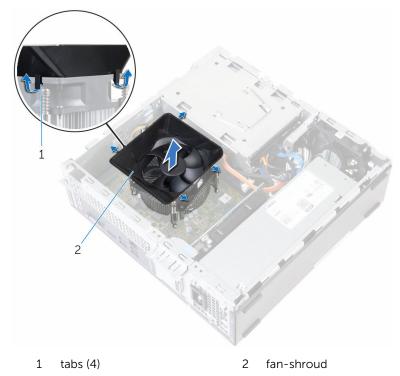

- 2 Disconnect the processor-fan cable from the system board.
- In sequential order (indicated on the heat-sink assembly), loosen the captive screws that secure the heat-sink assembly to the system board.

4 Lift the heat-sink assembly along with its cable off the system board.

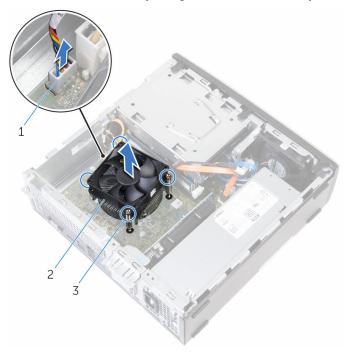

- 1 processor-fan cable
- 3 captive screws (4)
- 2 heat-sink assembly

Replacing the heat-sink assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.



NOTE: The original thermal grease can be reused if the original system board and fan are reinstalled together. If either the system board or the fan is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

Procedure

- 1 Place the heat-sink assembly on the system board.
- 2 Align the captive screws on the heat-sink assembly with the screw holes on the system board.
- 3 Tighten the captive screws to secure the heat-sink assembly to the system board.
- 4 Connect the processor-fan cable to the system board.
- 5 Align the tabs according to the direction indicated on the fan-shroud with the slots on the processor fan and snap it into place.

Post-requisites

Replace the computer cover.

Removing the memory module




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- **1** Remove the computer cover.
- 2 Remove the front bezel.
- **3** Remove the <u>heat-sink assembly</u>.


Procedure

1 Disconnect the power cable and the data cable from the hard drive.

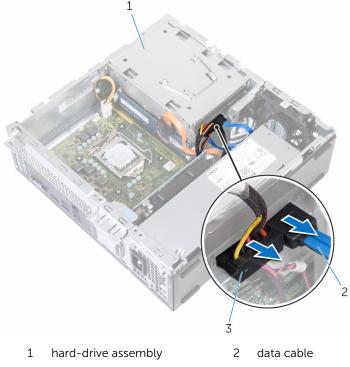


- 3 power cable
- Remove the screws that secure the drive cage to the chassis. 2

Press the tab and slide the drive cage outward.

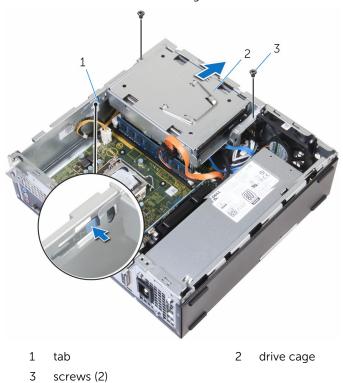


4 Using your fingertips, spread apart the securing clips at each end of the memory-module slot until the memory module pops up.

CAUTION: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

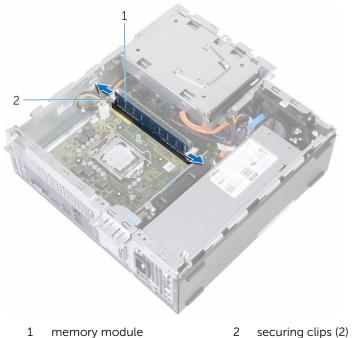

5 Slide and remove the memory module from the memory-module slot.

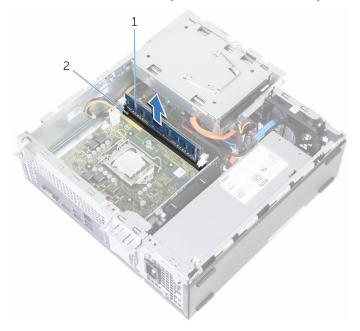

1 memory module

2 memory-module slot

Replacing the memory module



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Procedure

Align the notch on the memory module with the tab on the memory-module slot

2 Insert the memory module into the memory-module slot and press the memory module down until it clicks into place.



NOTE: If you do not hear the click, remove the memory module and reinstall it.

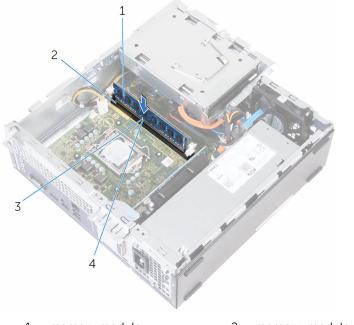

- 1 memory module
- 3 tab

- 2 memory-module slot
- 4 notch
- **3** Slide the drive cage into the chassis.
- 4 Align the screw holes on the drive cage with screw holes on the chassis.
- **5** Replace the screws that secure the drive cage to the chassis.
- **6** Connect the power cable and the data cable to the hard drive.

- 1 Replace the <u>heat-sink assembly</u>.
- 2 Replace the <u>front bezel</u>.
- **3** Replace the <u>computer cover</u>.

Removing the graphics card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

Remove the computer cover.

Procedure

1 Open and release the card-retention bracket from the chassis.

Pushing the securing tab away from the graphics card, grasp the card by its top corners and ease it out of the slot.

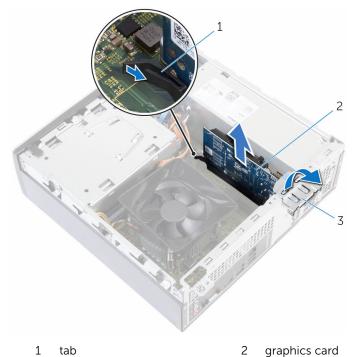

3 card-retention bracket

Replacing the graphics card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- **1** Align the graphics card with the slot on the system board.
- 2 Place the card in the slot and press down firmly. Ensure that the card is firmly seated in the slot.
- **3** Rotate the card retention bracket towards the computer until it snaps into place.
- 4 Close the side-chassis.

- 1 Replace the <u>front bezel</u>.
- 2 Replace the computer cover.

Removing the drive cage




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- **1** Remove the computer cover.
- 2 Remove the front bezel.
- **3** Remove the <u>heat-sink assembly</u>.

Procedure for removing drive cage with 2.5 inch hard drive


1 Disconnect the power cables and data cables from all the drives.

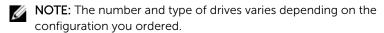



- 1 drive cage
- 3 optical-drive cable
- 2 hard-drive cable
- 4 power cable
- 2 Remove the screws that secure the drive cage to the chassis, then press the tab and slide the drive cage outward.


3 Turn the drive cage at an angle to release the tab on the drive cage from the slot on the chassis.

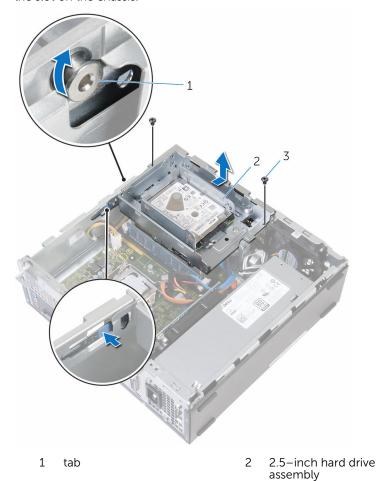

- 3 screws (2)
- 4 Lift the drive cage off the chassis.
- **5** Follow procedure from step 2 to step 5 in "Removing the hard drive".
- **6** Remove the <u>optical drive</u>, if applicable.


Procedure for removing drive cage with 3.5—inch hard drive

- 1 Disconnect the power cables and data cables from all the drives.
 - **NOTE:** The number and type of drives varies depending on the configuration you ordered.

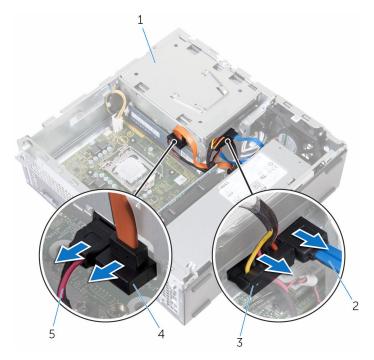

- 1 drive cage
- 3 hard-drive power cable
- 5 optical-drive power cable
- 2 hard-drive data cable
- 4 optical-drive data cable
- 2 Remove the screws that secure the drive cage to the chassis, then press the tab and slide the drive cage outward.
- **3** Turn the drive cage at an angle to release the tab on the drive cage from the slot on the chassis.
- 4 Lift the drive cage off the chassis.

5 Using the pull-tab, slide the hard-drive assembly toward the inside of the computer and lift it.

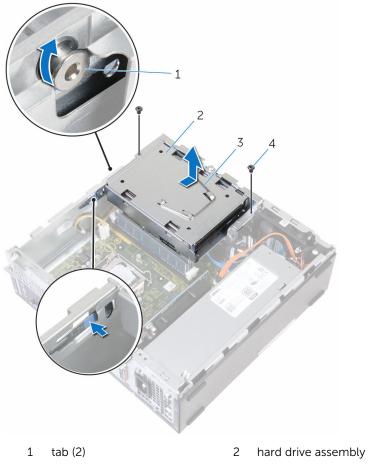

3 pull-tab

- screws (2)
- 6 Remove the optical drive, if applicable.

Replacing the drive cage



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Replace the optical drive, if applicable.
- 2 Replace the <u>2.5-inch hard drive</u>.

 \circ r

Slide and place the 3.5 inch hard-drive assembly into the drive cage, if installed.

- **3** Align the tab on the drive cage to the slot on the chassis.
- 4 Slide the drive cage into the chassis.
- **5** Replace the screws that secure the drive cage to the chassis.
- **6** Connect the power cables and data cables to all the drives.
 - W

NOTE: The number and type of drives varies depending on the configuration you ordered.

- 1 Replace the <u>heat-sink assembly</u>.
- 2 Replace the front bezel.
- **3** Replace the <u>computer cover</u>.

Removing the processor



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the <u>computer cover</u>.
- 2 Remove the front bezel.
- 3 Remove the <u>heat-sink assembly</u>.


Procedure



NOTE: To avoid damaging the processor, handle the processor only by the edges.

- Press the release lever down and then pull it outwards to release it from the securing tab.
- **2** Extend the release lever completely to open the processor cover.

3 Gently lift the processor off the processor socket.

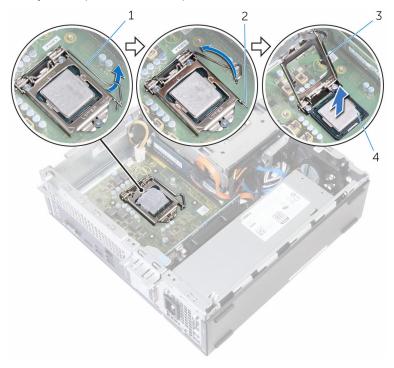

- 1 release lever
- 3 processor cover

- 2 securing tab
- 4 processor

Replacing the processor



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: If either the processor or the heat sink is replaced, use the thermal grease provided in the kit to ensure that thermal conductivity is achieved.

Procedure




NOTE: The original thermal grease can be reused, if the original processor and heat sink are reinstalled together. If either the processor or the heat sink is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.




CAUTION: You must position the processor correctly in the processor socket to avoid permanent damage to the processor.

- **1** Ensure that the processor cover is fully open.
- 2 Orient the alignment notches on the processor with the alignment tabs on the processor socket.
- 3 Align the pin-1 corner on the processor with the pin-1 corner on the processor socket and place the processor in the processor socket.
- 4 After the processor is fully seated in the socket, close the processor cover while keeping the release lever fully extended..

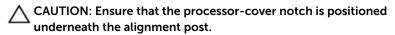

5 Pivot the release lever down and place it under the tab on the processor cover.

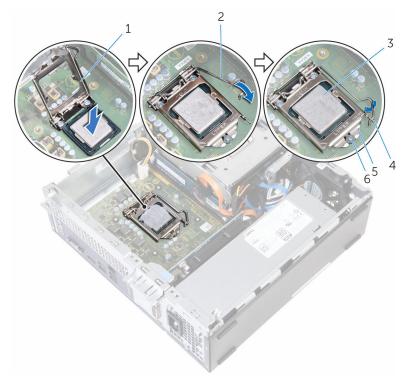

- 1 processor cover
- 3 processor
- 5 processor cover

- 2 release lever
- 4 tab
- 6 alignment post

- 1 Replace the <u>heat-sink assembly</u>.
- 2 Replace the <u>front bezel</u>.
- **3** Replace the <u>computer cover</u>.

Removing the optical drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- **1** Remove the computer cover.
- 2 Remove the front bezel.
- 3 Remove the <u>heat-sink assembly</u>.
- 4 Remove the <u>drive cage</u>.

Procedure

- 1 Turn the drive cage over.
- 2 Remove the screws that secure the optical-drive assembly to the drive cage.

- 3 Slide the optical-drive assembly out of the drive cage.
 - **NOTE:** Note the orientation of the optical drive so that you can replace it correctly.

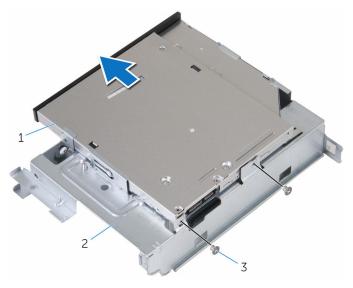

- 1 optical-drive assembly
- 2 drive cage

- 3 screws (2)
- 4 Carefully pull the optical-drive bezel and remove it from the optical drive.



- 1 optical-drive bezel
- 2 optical drive

Replacing the optical drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the tabs on the optical-drive bezel with the slots on the optical drive and snap the optical-drive bezel into place.
- 2 Slide the optical-drive assembly into the drive cage.
- 3 Replace the screws that secure the optical-drive assembly to the drive cage.

- 1 Replace the <u>drive cage</u>.
- 2 Replace the <u>heat-sink assembly</u>.
- **3** Replace the <u>front bezel</u>.
- 4 Replace the <u>computer cover</u>.

Removing the coin-cell battery

Λ

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.

Prerequisites

- **1** Remove the computer cover.
- 2 Remove the front bezel.
- **3** Remove the heat-sink assembly.
- 4 Remove the drive cage.

Procedure

Using your fingertips, gently push the coin-cell battery to release it from the coin-cell battery socket.



Replacing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

Insert the coin-cell battery into the battery socket sideways and snap it into place.

- 1 Replace the <u>drive cage</u>.
- 2 Replace the <u>heat-sink assembly</u>.
- **3** Replace the front bezel.
- 4 Replace the computer cover.

Removing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- **1** Remove the computer cover.
- 2 Remove the front bezel.
- **3** Remove the <u>heat-sink assembly</u>.
- 4 Remove the <u>drive cage</u>.

Procedure

- 1 Remove the screw that secures the wireless-card bracket to the system board.
- 2 Slide and lift the wireless-card bracket off the wireless card.
- **3** Disconnect the antenna cables from the wireless card.

4 Slide the wireless card out of the wireless-card slot.

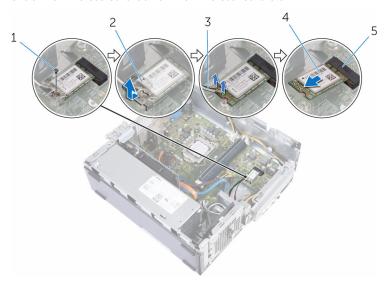

- 1 screw
- 3 antenna cables (2)
- 5 wireless-card slot

- 2 wireless-card bracket
- 4 wireless card

Replacing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure




CAUTION: To avoid damage to the wireless card, do not place any cables under it.

- Align the notch on the wireless card with the tab on the wireless-card slot.
- 2 Slide the wireless card into the wireless-card slot.
- 3 Connect the antenna cables to the wireless card.
 The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	White
Auxiliary (black triangle)	Black

4 Place the wireless-card bracket on the wireless card and align the screw hole on the wireless-card bracket with the screw hole on the system board. **5** Replace the screw that secures the wireless card to the system board.

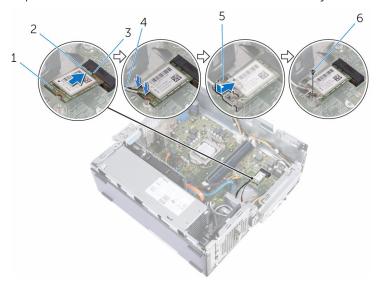

- 1 wireless card
- 3 tab
- 5 wireless-card bracket
- 2 notch
- 4 antenna cables (2)
- 6 screw

- 1 Replace the <u>drive cage</u>.
- 2 Replace the <u>heat-sink assembly</u>.
- **3** Replace the <u>front bezel</u>.
- 4 Replace the <u>computer cover</u>.

Removing the chassis fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- **1** Remove the computer cover.
- 2 Remove the front bezel.
- **3** Remove the <u>heat-sink assembly</u>.
- 4 Remove the <u>drive cage</u>.

Procedure

- 1 Remove the screws that secure the chassis fan to the chassis.
- **2** Disconnect the chassis-fan cable from the system board.

Remove the chassis fan from the chassis.

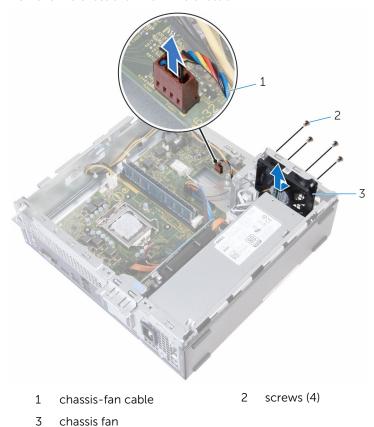

Replacing the chassis fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the chassis fan with the screw holes on the chassis
- 2 Replace the screws that secure the chassis fan to the chassis.
- **3** Connect the chassis fan cable to the system board.

- 1 Replace the drive cage.
- 2 Replace the heat-sink assembly.
- **3** Replace the <u>front bezel</u>.
- 4 Replace the computer cover.

Removing the antenna modules



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the computer cover.
- 2 Remove the front bezel.
- **3** Remove the <u>heat-sink assembly</u>.
- 4 Remove the <u>drive cage</u>.
- 5 Remove the wireless card.

Procedure

1 Gently slide the antenna cables through the routing hole on the chassis.



2 Using a plastic scribe, gently pry the antenna modules off the chassis.



NOTE: Note the location of the antenna modules so that you can replace them correctly.



1 plastic scribe

- 2 antenna cables (2)
- 3 antenna modules (2)

Replacing the antenna modules



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Adhere the antenna modules to the chassis.
- 2 Slide the antenna cables through the routing hole on the chassis.

- 1 Replace the wireless card.
- 2 Replace the drive cage.
- 3 Replace the <u>heat-sink assembly</u>.
- 4 Replace the front bezel.
- **5** Replace the computer cover.

Removing the power-button module



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.


Prerequisites

- 1 Remove the computer cover.
- 2 Remove the front bezel.
- **3** Remove the <u>heat-sink assembly</u>.
- 4 Remove the drive cage.

Procedure

- 1 Disconnect the power-button cable from the system board.
- 2 Using a plastic scribe, press down the clip on top of the power-button module to release it from the chassis.
- **3** Using a plastic scribe, press the clip at the bottom of the power-button module upward.

4 Slide the power-button module, along with its cable, through the slot on the front panel.

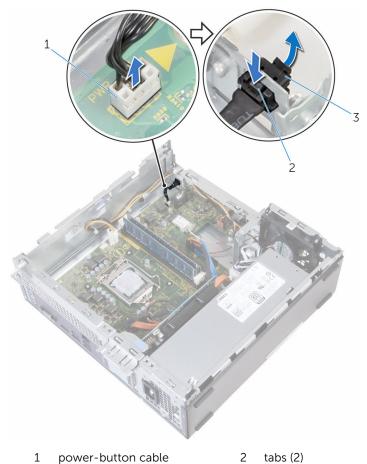

3

power-button module

Replacing the power-button module



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the power-button cable through the slot on the chassis.
- 2 Align and push the power-button module into the slot on the front panel till the clips on the module snap in place.
- **3** Connect the power-button cable to the system board.

Post-requisites

- 1 Replace the <u>drive cage</u>.
- 2 Replace the heat-sink assembly.
- **3** Replace the <u>front bezel</u>.
- 4 Replace the computer cover.

Removing the power-supply unit



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the computer cover.
- 2 Remove the front bezel.
- 3 Remove the <u>heat-sink assembly</u>.
- 4 Remove the <u>drive cage</u>.


Procedure

Press the securing clips and disconnect the power cables from the system board. 2 Note the routing and remove the power cables from the routing guides.



- 3 routing guides
- **3** Remove the screws that secure the power-supply unit to the chassis.
- **4** Press the clamp and release the power-supply unit from the chassis.

5 Slide and lift the power-supply unit off the chassis.

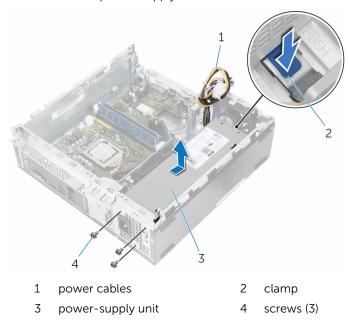

Replacing the power-supply unit



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the power supply towards the back of the chassis.
- 2 Align the screw holes on the power-supply unit with the screw holes on the chassis.
- **3** Replace the screws that secure the power-supply unit to the chassis.
- 4 Route the power cables through the routing guide and connect the power cables the system board.
- **5** Close the side-chassis.

Postrequisites

- 1 Replace the <u>drive cage</u>.
- 2 Replace the heat-sink assembly.
- **3** Replace the front bezel.
- 4 Replace the computer cover.

Removing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.




NOTE: Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.

Prerequisites

- 1 Remove the <u>computer cover</u>.
- 2 Remove the <u>front bezel</u>.
- **3** Remove the heat-sink assembly.
- 4 Remove the drive cage.
- **5** Remove the memory module.
- 6 Remove the wireless card.
- 7 Remove the graphics card.

Procedure


Disconnect the power-button cable, hard-drive data cable, optical-drive data cable, and hard-drive and optical-drive power cable from the system board. 2 Remove the screw that secures the front panel to the chassis.

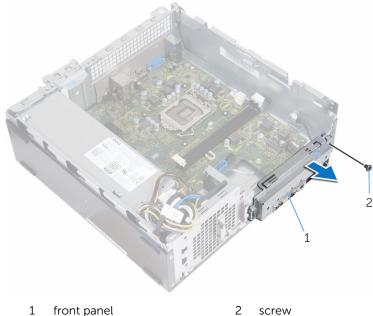

front panel

- screw
- 3 Press the tab down to release the front panel from the chassis and then rotate it outward.
- Remove the screws that secure the system board to the chassis.

5 Starting from the back of the chassis, lift and slide the system board out of the chassis.

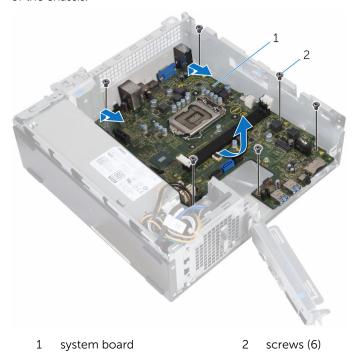

Replacing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.

Procedure

- 1 Slide the ports on the system board into the slots on the back of the chassis and gently place the system board into the chassis.
- 2 Align the screw holes on the system board with the screw holes on the chassis.
- **3** Replace the screws that secure the system board to the chassis.
- 4 Close the front panel and align the screw hole on the front panel to the screw hole on the chassis.
- **5** Replace the screw that secures the front panel to the chassis.
- 6 Connect the power-button cable, hard-drive data cable, optical-drive data cable, and hard-drive and optical-drive power cable to the system board.

Post-requisites

- 1 Replace the graphics card.
- 2 Replace the <u>wireless card</u>.
- **3** Replace the <u>memory module</u>.
- 4 Replace the <u>drive cage</u>.
- 5 Replace the <u>heat-sink assembly</u>.
- 6 Replace the front bezel.

7 Replace the <u>computer cover</u>.

BIOS setup program

Overview



CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS setup program. Certain changes can make your computer work incorrectly.



NOTE: Before you change BIOS setup program, it is recommended that you write down the BIOS setup program screen information for future reference

Use BIOS setup program to:

- Get information about the hardware installed in your computer, such as the amount of RAM, the size of the hard drive, and so on.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, enabling or disabling base devices, and so on.

Entering BIOS setup program

- 1 Turn on (or restart) your computer.
- 2 During POST, when the DELL logo is displayed, watch for the F2 prompt to appear and then press F2 immediately.



NOTE: The F2 prompt indicates that the keyboard has initialized. This prompt can appear very quickly, so you must watch for it, and then press F2. If you press F2 before the F2 prompt, this keystroke is lost. If you wait too long and the operating system logo appears, continue to wait until you see the operating system's desktop. Then, turn off your computer and try again.

Clearing Forgotten Passwords




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

Remove the computer cover.

Procedure

- 1 Remove the jumper plug from pins 2 and 3 and replace it on pins 1 and 2.
- 2 Wait for 5 seconds.
- **3** Remove the jumper plug from pins 1 and 2 and replace it on pins 2 and 3.

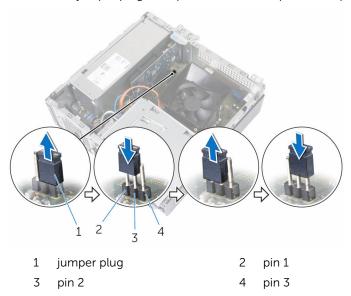

Post-requisites

Replace the computer cover.

Clearing CMOS Settings




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

Remove the computer cover.

Procedure

- 1 Remove the jumper plug from pins 2 and 3 and replace it on pins 1 and 2.
- **2** Wait for 5 seconds.
- **3** Remove the jumper plug from pins 1 and 2 and replace it on pins 2 and 3.

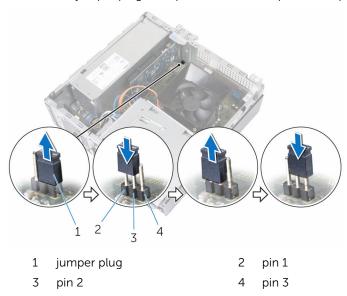

Post-requisites

Replace the computer cover.

Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- 1 Turn on the computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product Support**, enter the Service Tag of your computer and click Submit.

NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click Drivers & downloads.
- 5 Select the operating system installed on your computer.
- Scroll down the page and expand BIOS.
- 7 Click **Download File** to download the latest version of the BIOS for your computer.
- 8 Save the file and, once the download is complete, navigate to the folder where you saved the BIOS update file.
- 9 Double-click the BIOS update file icon and follow the instructions on the screen

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Information about Dell products and services

www.dell.com

Windows 8.1 and Windows 10

Dell Help & Support app



Windows 10

Get started app



Windows 8 1

Help + Tips app



Accessing help in Windows 8, Windows 8.1, and Windows 10

Accessing help in Windows 7

Online help for operating system

In Windows search, type **Help and Support**, and press **Enter**.

Click Start \rightarrow Help and Support.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on

Learn about your operating system, setting up and using your computer, data backup, diagnostics, and so on.

See Me and My Dell at www.dell.com/support/manuals.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.



NOTE: Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.