Inspiron 15 5000 2-in-1 Service Manual



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your product.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2017 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2017 - 08

Rev. A00

Contents

Before working inside your computer	11
Before you begin	
Safety instructions	
Recommended tools	
Screw list	
After working inside your computer	15
Removing the base cover	16
Procedure	16
Replacing the base cover	19
Procedure	19
Removing the battery	20
Prerequisites	20
Procedure	20
Replacing the battery	22
Procedure	22
Post-requisites	22
Removing the memory modules	23
Prerequisites	
Procedure	



Replacing the memory modules	26
Procedure	26
Post-requisites	28
Removing the hard drive	29
Prerequisites	
Procedure	29
Replacing the hard drive	34
Procedure	
Post-requisites	34
Removing the coin-cell battery	35
Prerequisites	
Procedure	35
Replacing the coin-cell battery	37
Procedure	37
Post-requisites	37
Removing the wireless card	38
Prerequisites	38
Procedure	38
Replacing the wireless card	40
Procedure	40
Post-requisites	41
Removing the status-light board	42
Prerequisites	
Procedure	42



Replacing the status-light board	44
Procedure	44
Post-requisites	44
Removing the touchpad	45
Prerequisites	45
Procedure	45
Replacing the touchpad	48
Procedure	48
Post-requisites	48
Removing the speakers	49
Prerequisites	49
Procedure	49
Replacing the speakers	52
Procedure	52
Post-requisites	52
Removing the fan	53
Prerequisites	53
Procedure	53
Replacing the fan	55
Procedure	55
Post-requisites	55
Removing the heat sink	56
Prerequisites	56
Procedure	56



Replacing the heat sink	58
Procedure	58
Post-requisites	58
Removing the power-adapter port	59
Prerequisites	
Procedure	59
Replacing the power-adapter port	61
Procedure	
Post-requisites	61
Removing the power and volume-buttons board	62
Prerequisites	62
Procedure	62
Replacing the power and volume-buttons board	64
Procedure	64
Post-requisites	64
Removing the I/O board	65
Prerequisites	65
Procedure	65
Replacing the I/O board	68
Procedure	68
Post-requisites	68
Removing the system board	69
Prerequisites	69
Procedure	69



Replacing the system board	/s
Procedure	73
Post-requisites	73
Entering the Service Tag in the BIOS setup program	74
Removing the display assembly	75
Prerequisites	75
Procedure	76
Replacing the display assembly	78
Procedure	78
Removing the palm rest and keyboard assembly	79
Prerequisites	79
Procedure	79
Replacing the palm rest and keyboard assembly	81
Procedure	81
Post-requisites	81
Removing the display panel	82
Prerequisites	82
Procedure	82
Replacing the display panel	85
Procedure	85
Post-requisites	85
Removing the display cable	86
Prerequisites	86
Procedure	86



Replacing the display cable	89
Procedure	89
Post-requisites	89
Pomoving the display hook cover and entenne	
Removing the display back-cover and antenna assembly	
Prerequisites	
Procedure	
Replacing the display back-cover and antenna	\
assembly	
Procedure	
Post-requisites	92
Removing the camera	93
Prerequisites	
Procedure	
Replacing the camera	95
Procedure	
Post-requisites	95
Removing the sensor board	96
Prerequisites	
Procedure	96
Replacing the sensor board	98
Procedure	
Post-requisites	98



Downloading drivers	99
Downloading the audio driver	
Downloading the graphics driver	99
Intel USB 3.0 xHCI	100
Downloading the Wi-Fi driver	100
Downloading the media-card reader driver	100
Downloading the chipset driver	101
Downloading the network driver	101
System setup	. 103
Boot Sequence	103
Navigation keys	103
BIOS overview	104
Entering BIOS setup program	104
System setup options	105
System and setup password	112
Assigning a system password and setup password	113
Deleting or changing an existing system and/or setup password.	113
Clearing CMOS settings	114
Clearing forgotten passwords	114
Troubleshooting	115
Flashing the BIOS	115
Flashing BIOS (USB key)	115
Enhanced Pre-Boot System Assessment (ePSA) diagnostics	116
Running the ePSA diagnostics	116
System diagnostic lights	117
Flea power release	118
Wi-Fi power cycle	119



Ge	etting help and contacting Dell1	20
	Self-help resources	120
	Contacting Dell	12



Before working inside your computer



NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Before you begin

- Save and close all open files and exit all open applications.
- 2 Shut down your computer. Click Start → **②** Power → Shut down.
 - NOTE: If you are using a different operating system, see the documentation of your operating system for shut-down instructions.
- **3** Disconnect your computer and all attached devices from their electrical outlets.
- **4** Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
- **5** Remove any media card and optical disc from your computer, if applicable.

Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.



WARNING: Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



WARNING: Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the electrical outlet.



CAUTION: To avoid damaging the computer, ensure that the work surface is flat and clean.





CAUTION: To avoid damaging the components and cards, handle them by their edges, and avoid touching pins and contacts.



CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at www.dell.com/regulatory_compliance.



CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.



CAUTION: When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.



CAUTION: Press and eject any installed card from the media-card reader.

Recommended tools

The procedures in this document may require the following tools:

- Philips screwdriver #1
- Plastic scribe



Screw list

Table 1. Screw list

Component	Secured to	Screw type	Quantity	Screw image
Base cover	Palm rest and keyboard assembly	M2.5x7	10	
Battery	Palm rest and keyboard assembly	M2x3	2	
Display hinge	Palm rest and keyboard assembly	M2.5x7	2	
Display hinge	Display back-cover and antenna assembly	M2.5x2.5 Big Head	6	Mr.
Display hinge	Display back-cover and antenna assembly	M2x3	2	
Fan	Palm rest and keyboard assembly	M2x3	2	
Hard-drive bracket	Palm rest and keyboard assembly	M2x3	3	
Hard drive	Hard-drive bracket	М3х3	4	
I/O board	Palm rest and keyboard assembly	M2x3	2	
Power-adapter port	Palm rest and keyboard assembly	M2x3	1	
Power and volume- buttons board	Palm rest and keyboard assembly	M2x3	1	
System board	Palm rest and keyboard assembly	M2x2 Big Head	5	



Component	Secured to	Screw type	Quantity	Screw image
Sensor board	Display panel	M2.5x2.5 Big Head	1	. Alpr
Touchpad	Palm rest and keyboard assembly	M2x2	4	165
Touchpad bracket	Palm rest and keyboard assembly	M2x2.5	3	
Wireless card	Palm rest and keyboard assembly	M2x3	1	



After working inside your computer

Δ

CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, or cables you removed before working on your computer.
- **3** Replace any media cards, discs, or any other parts that you removed before working on your computer.
- **4** Connect your computer and all attached devices to their electrical outlets.
- **5** Turn on your computer.



Removing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

1 Close the display and turn the computer over.



2 Remove the ten screws (M2.5x7) that secure the base cover to the palm rest and keyboard assembly.

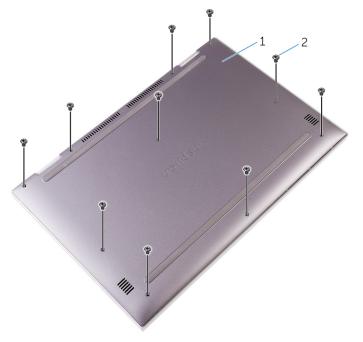


Figure 1. Removing screws from the base cover

1 base cover

2 screws (10)



3 Using a plastic scribe, pry the base cover off the palm rest and keyboard assembly.



Figure 2. Removing the base cover

- 1 plastic scribe
- 3 base cover

2 palm rest and keyboard assembly



Replacing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the tabs on the base cover into the slots on the palm rest and keyboard assembly and snap the base cover into place.
- 2 Replace the ten screws (M2.5x7) that secure the base cover to the palm rest and keyboard assembly.



Removing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

Remove the base cover.

Procedure

- 1 Disconnect the battery cable from the system board.
- **2** Press and hold the power button for 5 seconds to ground the system board.
- 3 Remove the two screws (M2x3) that secure the battery to the palm rest and keyboard assembly.



4 Lift the battery along with its cable off the palm rest and keyboard assembly.

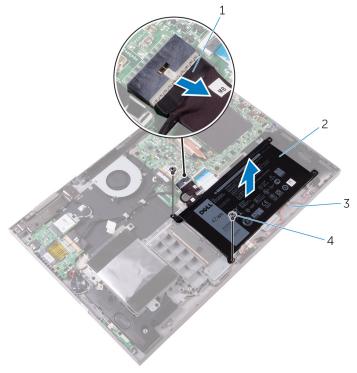


Figure 3. Removing the battery

- 1 battery cable
- 3 palm rest and keyboard assembly
- 2 battery
- 4 screws (2)



Replacing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the battery with the screw holes on the palm rest and keyboard assembly.
- 2 Replace the two screws (M2x3) that secure the battery to the palm rest and keyboard assembly.
- **3** Connect the battery cable to the system board.

Post-requisites

Replace the base cover.



Removing the memory modules



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.



Procedure

1 Lift the Mylar from to access the memory module.

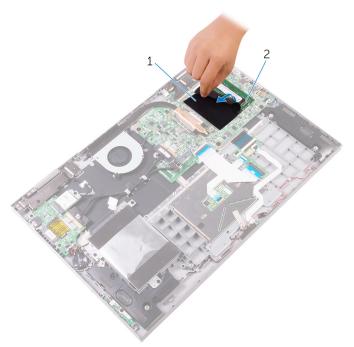


Figure 4. Removing the memory modules

1 Mylar

- 2 memory module
- 2 Use your fingertips to carefully spread apart the securing-clips on each end of the memory-module slot until the memory module pops up.



3 Remove the memory module from the memory-module slot.

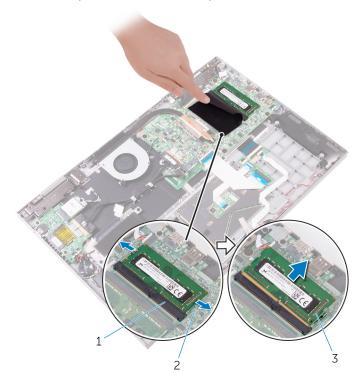


Figure 5. Removing the memory modules

- 1 memory-module slot
- 2 securing clips (2)
- 3 memory module



Replacing the memory modules



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Lift the Mylar to access the memory-module slot.
- 2 Align the notch on the memory module with the tab on the memory-module slot.



Slide the memory module firmly into the slot at an angle and press the memory 3 module down until it clicks into place.



NOTE: If you do not hear the click, remove the memory module and reinstall it.

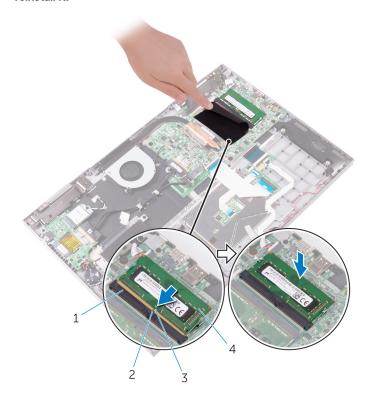


Figure 6. Replacing the memory modules

1 2 memory-module slot tab

3 notch 4 memory module



Post-requisites

- 1 Replace the <u>battery</u>.
- 2 Replace the <u>base cover</u>.



Removing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.



CAUTION: To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.

Procedure

- 1 Using the pull tab, disconnect the hard-drive cable from the system board.
- 2 Peel off the tape that secures the hard-drive cable to the palm rest and keyboard assembly.



3 Note the hard-drive cable routing and remove the cable from the routing guides.

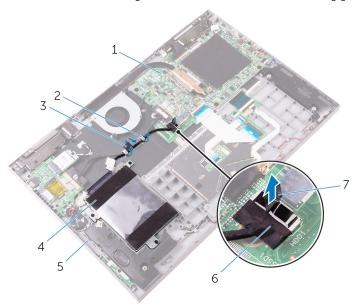


Figure 7. Removing the hard-drive assembly

- 1 system board
- 3 tape
- 5 palm rest and keyboard assembly
- 7 pull tab

- 2 routing guides
- 4 hard-drive assembly
- 6 hard-drive cable

4 Remove the three screws (M2x3) that secure the hard-drive assembly to the palm rest and keyboard assembly.



5 Lift the hard-drive assembly along with its cable off the palm rest and keyboard assembly.

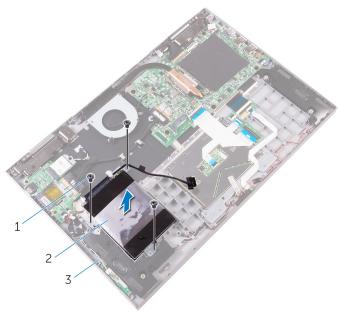


Figure 8. Removing the hard-drive assembly

- 1 screws (3)
- 3 palm rest and keyboard assembly
- 2 hard-drive assembly



6 Disconnect the interposer from the hard-drive assembly.

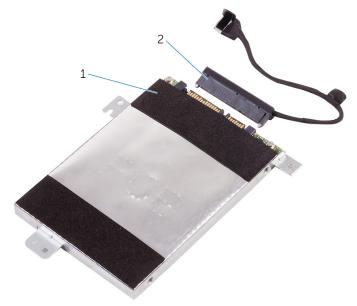


Figure 9. Disconnecting the interposer

- 1 hard-drive assembly
- 2 interposer
- **7** Remove the four screws (M3x3) that secure the hard-drive bracket to the hard drive.



8 Lift the hard drive off the hard-drive bracket.

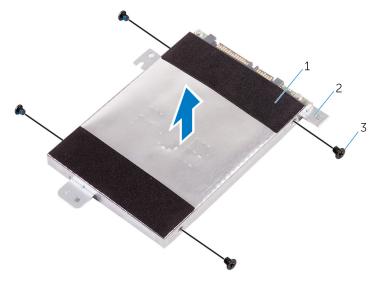


Figure 10. Removing the hard-drive bracket

- 1 hard drive
- 3 screws (4)

2 hard-drive bracket



Replacing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.

Procedure

- 1 Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.
- 2 Replace the four screws (M3x3) that secure the hard-drive bracket to the hard drive.
- **3** Connect the interposer to the hard-drive assembly.
- **4** Align the screw holes on the hard-drive assembly with the screw holes on the palm rest and keyboard assembly.
- **5** Replace the screws three (M2x3) that secure the hard-drive assembly to the palm rest and keyboard assembly.
- **6** Route the hard-drive cable through the routing guides on the palm rest and keyboard assembly.
- 7 Connect the hard-drive cable to the system board.
- **8** Adhere the tape that secures the hard-drive cable to the palm rest and keyboard assembly.

Post-requisites

- 1 Replace the battery.
- 2 Replace the base cover.



Removing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.



CAUTION: Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.

Procedure

1 Disconnect the coin-cell battery cable from the I/O board.



2 Peel the coin-cell battery off the palm rest and keyboard assembly.

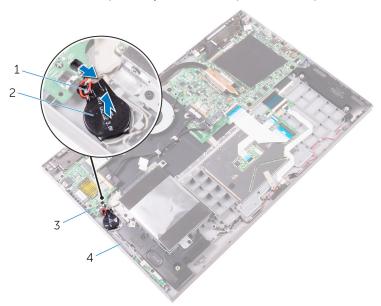


Figure 11. Removing the coin-cell battery

- 1 coin-cell battery cable
- 3 I/O board

- 2 coin-cell battery
- 4 palm rest and keyboard assembly



Replacing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Adhere the coin-cell battery to the palm rest and keyboard assembly.
- 2 Connect the coin-cell battery cable to the I/O board.

- 1 Replace the <u>battery</u>.
- 2 Replace the base cover.



Removing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.

- 1 Remove the screw (M2x3) that secures the wireless-card bracket to the wireless card and the palm rest and keyboard assembly.
- 2 Remove the wireless-card bracket and disconnect the antenna cables from the wireless card.



3 Slide and remove the wireless card from the wireless-card slot.

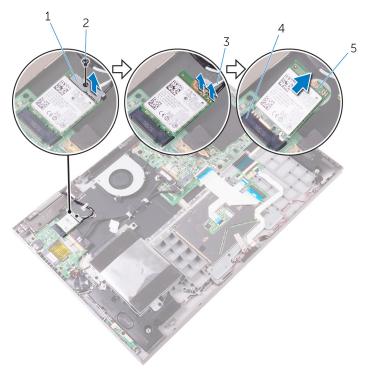


Figure 12. Removing the wireless card

- 1 wireless-card bracket
- 3 antenna cables (2)
- 5 wireless card

- 2 screw
- 4 wireless-card slot



Replacing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure



CAUTION: To avoid damage to the wireless card, do not place any cables under it.

- 1 Align the notch on the wireless card with the tab on the wireless-card slot.
- 2 Insert the wireless card at an angle into the wireless-card slot.
- **3** Connect the antenna cables to the wireless card.

The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Table 2. Antenna-cable color scheme

Connectors on the wireless card	Antenna-cable color		
Main (white triangle)	White		
Auxiliary (black triangle)	Black		

4 Align the screw hole on the wireless-card bracket with the screw hole on the wireless card and the palm rest and keyboard assembly.



5 Replace the screw (M2x3) that secures the wireless-card bracket to the wireless card and the palm rest and keyboard assembly.

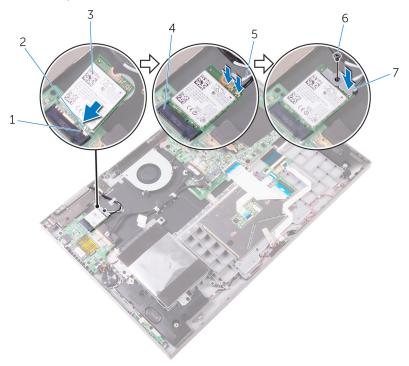


Figure 13. Replacing the wireless card

- 1 tab
- 3 wireless card
- 5 antenna cables (2)
- 7 wireless-card bracket

- 2 notch
- 4 wireless-card slot
- 6 screw

- 1 Replace the <u>battery</u>.
- 2 Replace the <u>base cover</u>.



Removing the status-light board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the battery.

- Open the latch and disconnect the status-light board cable from the system board.
- 2 Peel off the foam that secures the status-light board to the palm rest and keyboard assembly.



3 Lift the status-light board along with its cable off the palm rest and keyboard assembly.

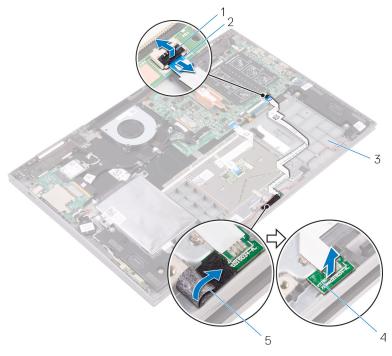


Figure 14. Removing the status-light board

- 1 latch
- 3 palm rest and keyboard assembly
- 5 foam

- 2 status-light board cable
- 4 status-light board



Replacing the status-light board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Place the status-light board into the slot on the palm rest and keyboard assembly.
- 2 Slide the status-light board cable into the connector on the system board and close the latch to secure the cable.
- 3 Adhere the foam that secures the status-light board to the palm rest and keyboard assembly.

- 1 Replace the <u>battery</u>.
- 2 Replace the base cover.



Removing the touchpad



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the <u>battery</u>.
- **3** Remove the <u>status-light board</u>.

- 1 Open the latch, and then disconnect the touchpad cable from the system board.
- **2** Peel off the touchpad cable from the touchpad.



3 Peel off the tape that secures the touchpad assembly to the palm rest and keyboard assembly.

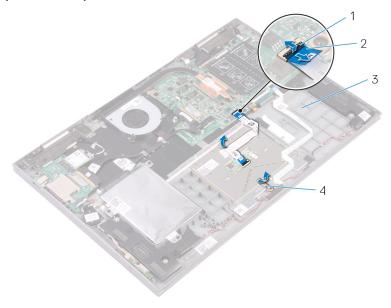


Figure 15. Disconnecting the touchpad cable

- 1 latches
 2 touchpad cable
 3 palm rest and keyboard assembly
 4 tape
- **4** Remove the four screws (M2x2) that secure the touchpad to the palm rest and keyboard assembly.



5 Lift the touchpad at an angle off the palm rest and keyboard assembly.

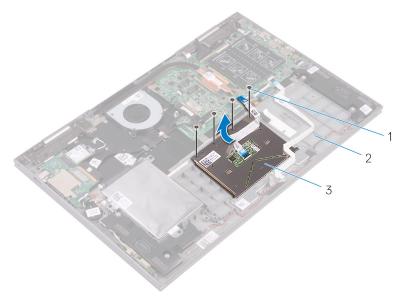


Figure 16. Removing the touchpad

- 1 screws (4)

2 palm rest and keyboard assembly

3 touchpad

Replacing the touchpad



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Slide the touchpad into the slot on the palm rest and keyboard assembly.
- 2 Align the screw holes on the touchpad with the screw holes on the palm rest and keyboard assembly.
- **3** Replace the four screws (M2x2) that secure the touchpad to the palm rest and keyboard assembly.
- **4** Adhere the tape that secures the touchpad to the palm rest and keyboard assembly.
- **5** Adhere the touchpad cable to the touchpad.
- 6 Slide the end of the touchpad cable into the connector on the system board and close the latch to secure the cable.

- **1** Replace the <u>status-light board</u>.
- 2 Replace the battery.
- **3** Replace the <u>base cover</u>.



Removing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.

- 1 Disconnect the speaker cable from the system board.
- 2 Disconnect the power and volume-buttons board cable and the coin-cell battery cable from the I/O board.
- 3 Note the cable routing and remove the power and volume-buttons board cable from the routing guides on the palm rest and keyboard assembly and the speaker.
- **4** Note the cable routing and remove the speaker cable from the routing guides on the palm rest and keyboard assembly.



5 Peel off the tape that secures the speaker cable to the palm rest and keyboard assembly.

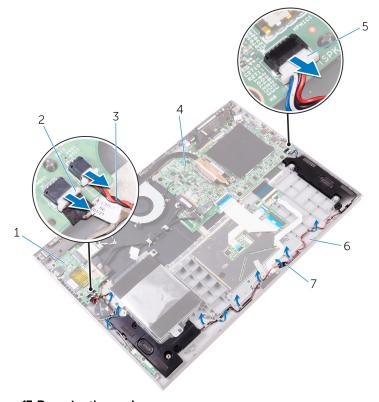


Figure 17. Removing the speakers

- 1 I/O board
- 3 coin-cell battery cable
- 5 speaker cable
- 7 tape

- 2 power and volume-buttons board cable
- 4 system board
- 6 palm rest and keyboard assembly



6 Release the tabs on the speakers from the slots on the palm rest and keyboard assembly and lift the speakers along with the cable off the palm rest and keyboard assembly.

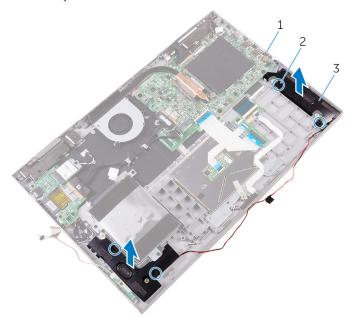


Figure 18. Removing the speakers

- 1 system board 2 tabs (4)
- 3 speakers (2)



Replacing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Using the tabs on the speakers, place the speakers in the slots on the palm rest and keyboard assembly and snap the speakers into place.
- 2 Route the speaker cable through the routing guides on the palm rest and keyboard assembly.
- 3 Adhere the tape that secures the speaker cable to the palm rest and keyboard assembly.
- **4** Connect the speaker cable to the system board.
- **5** Route the power and volume-buttons board cable through the routing guides on the speaker and the palm rest and keyboard assembly.
- 6 Connect the power and volume-buttons board cable and the coin-cell battery cable to the I/O board.

- 1 Replace the <u>battery</u>.
- 2 Replace the base cover.



Removing the fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.

- 1 Disconnect the fan cable from the system board.
- 2 Remove the two screws (M2x3) that secure the fan to the palm rest and keyboard assembly.



3 Lift the fan along with its cable off the palm rest and keyboard assembly.

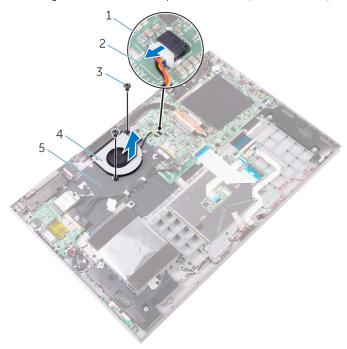


Figure 19. Removing the fan

- 1 fan cable
- 3 screws (2)
- 5 palm rest and keyboard assembly
- 2 system board
- 4 fan



Replacing the fan



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw holes on the fan with the screw holes on the palm rest and keyboard assembly.
- 2 Replace the two screws (M2x3) that secure the fan to the palm rest and keyboard assembly.
- **3** Connect the fan cable to the system board.

- 1 Replace the <u>battery</u>.
- 2 Replace the base cover.



Removing the heat sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.



WARNING: The heat sink may become hot during normal operation. Allow sufficient time for the heat sink to cool before you touch it.



CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.

Prerequisites

- 1 Remove the <u>base cover</u>.
- 2 Remove the battery.

Procedure

1 In sequential order (as indicated on the heat sink), loosen the captive screws that secure the heat sink to the system board.



2 Lift the heat sink off the system board.

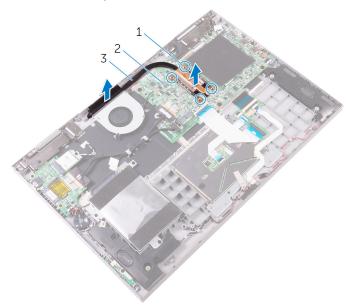


Figure 20. Removing the heat sink

- 1 captive screws (4)
- 3 heat sink

2 system board



Replacing the heat sink



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.



CAUTION: Incorrect alignment of the heat sink can damage the system board and processor.



NOTE: The original thermal grease can be reused if the original system board and heat sink are reinstalled together. If either the system board or the heat sink is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

Procedure

- 1 Align the screw holes on the heat sink with the screw holes on the system board.
- 2 In sequential order (indicated on the heat sink), tighten the captive screws that secure the heat sink to the system board.

- 1 Replace the battery.
- 2 Replace the base cover.



Removing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.

Prerequisites

- Remove the base cover.
- 2 Remove the battery.

- Disconnect the power-adapter port cable from the system board.
- 2 Remove the screw (M2x3) that secures the power-adapter port to the palm rest and keyboard assembly.



3 Lift the power-adapter port along with its cable off the palm rest and keyboard assembly.

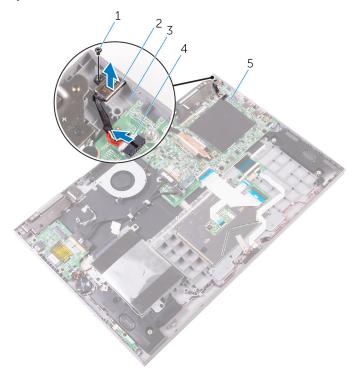


Figure 21. Removing the power-adapter port

- 1 screw
- 3 palm rest and keyboard assembly
- 5 system board

- 2 power-adapter port
- 4 power-adapter port cable



Replacing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.

Procedure

- 1 Place the power-adapter port into the slot on the palm rest and keyboard assembly.
- 2 Align the screw hole on the power-adapter port with the screw hole on the palm rest and keyboard assembly.
- **3** Replace the screw (M2x3) that secures the power-adapter port to the palm rest and keyboard assembly.
- **4** Connect the power-adapter port cable to the system board.

- 1 Replace the battery.
- 2 Replace the base cover.



Removing the power and volumebuttons board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the <u>battery</u>.

- 1 Disconnect the coin-cell battery cable from the I/O board.
- 2 Disconnect the power and volume-buttons board cable from the I/O board.
- **3** Peel off the tape tat secures the power and volume-buttons board cable to the palm rest and keyboard assembly.
- **4** Remove the power and volume-buttons board cable from the routing guides on the palm rest and keyboard assembly and the speaker.
- **5** Remove the screw (M2x3) that secures the power and volume-buttons board to the palm rest and keyboard assembly.



6 Lift the power and volume-buttons board along with its cable off the palm rest and keyboard assembly.

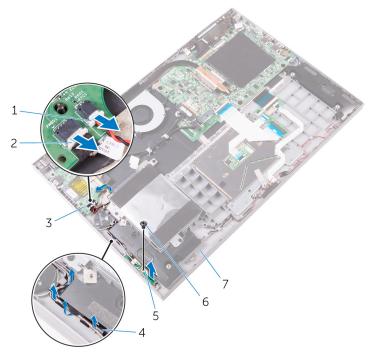


Figure 22. Removing the power and volume-buttons board

- 1 coin-cell battery cable
- 3 I/O board
- 5 power and volume-buttons board
- 7 palm rest and keyboard assembly

- 2 power and volume-buttons board cable
- 4 routing guides
- 6 screw



Replacing the power and volumebuttons board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.

Procedure

- 1 Using the alignment posts, place the power and volume-buttons board on the palm rest and keyboard assembly.
- 2 Replace the screw (M2x3) that secures the power and volume-buttons board to the palm rest and keyboard assembly.
- **3** Route the power and volume-buttons board cable through the routing guides on the palm rest and keyboard assembly and the speaker.
- **4** Connect the power and volume-buttons board cable to the I/O board.
- **5** Adhere the tape that secures the power and volume-buttons board to the palm rest and keyboard assembly.
- 6 Connect the coin-cell battery cable to the I/O board.

- 1 Replace the battery.
- 2 Replace the base cover.



Removing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>wireless card</u>.

- 1 Peel off the tape that secures the I/O-board cable to the I/O board.
- 2 Open the latch and disconnect the I/O-board cable from the I/O board.



3 Disconnect the coin-cell battery cable and the power and volume-buttons board cable from the I/O board.

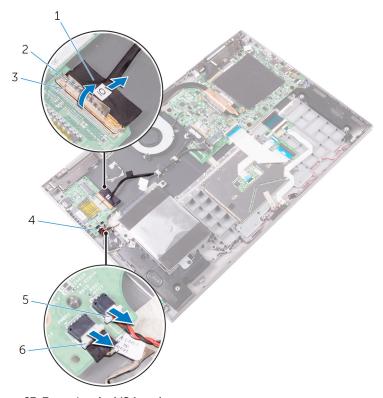


Figure 23. Removing the I/O board

- 1 I/O-board cable
 2 tape
 3 latch
 4 I/O board
 5 coin-cell battery cable
 6 power and volume-buttons board cable
- **4** Remove the two screws (M2x3) that secure the I/O board to the palm rest and keyboard assembly.



5 Lift the I/O board off the palm rest and keyboard assembly.

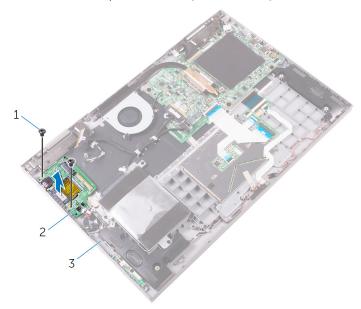


Figure 24. Removing the I/O board

- 1 screws (2)
- 3 palm rest and keyboard assembly
- 2 I/O board



Replacing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Using the alignment posts, place the I/O board on the palm rest and keyboard assembly.
- 2 Align the screw holes on the I/O board with the screw holes on the palm rest and keyboard assembly.
- **3** Replace the two screws (M2x3) that secure the I/O board to the palm rest and keyboard assembly.
- 4 Connect the power and volume-buttons board cable and the coin-cell battery cable to the I/O board.
- 5 Slide the I/O-board cable into the connector on the I/O board and close the latch to secure the cable.
- 6 Adhere the tape that secures the I/O-board cable to the I/O board.

- 1 Replace the wireless card.
- 2 Replace the battery.
- **3** Replace the base cover.



Removing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.



NOTE: Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect the cables correctly after you replace the system board.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the memory modules.
- 4 Remove the heat sink.

- 1 Disconnect the fan cable from the system board.
- 2 Peel off the pieces of tape that secure the display cable and touch-screen board cable from their respective connectors.
- **3** Open the latches and disconnect the display cable and the touch-screen board cable from the system board.



4 Open the latch and disconnect the I/O-board cable from the system board.

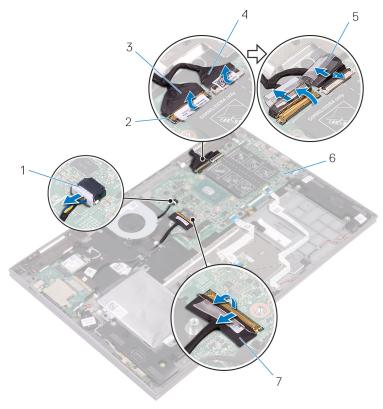


Figure 25. Removing the system board cables

1	fan cable	2	latches (2)
3	display cable	4	touch-screen board cable
5	tape (2)	6	system board
7	I/O-board cable		

- **5** Using the pull tab, disconnect the hard-drive cable from the system board.
- **6** Disconnect the power-adapter port cable and speaker cable from the system board.

D&LL

7 Open the latches and disconnect the status-light board cable, keyboard cable, keyboard-backlight cable, and touchpad cable from the system board.

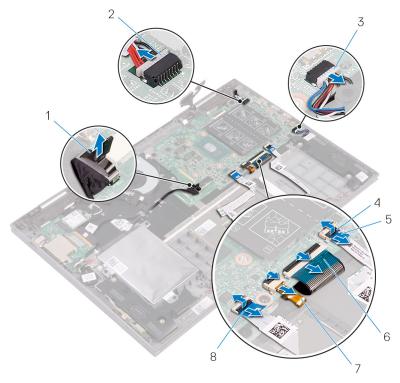


Figure 26. Removing the system board cables

1	hard-drive cable	2	power-adapter port cable
3	speaker cable	4	latches (4)
5	status-light board cable	6	keyboard cable
7	keyboard-backlight cable	8	touchpad cable

8 Remove the five screws (M2x2 Big Head) that secure the system board to the palm rest and keyboard assembly.



9 Lift the system board off the palm rest and keyboard assembly.

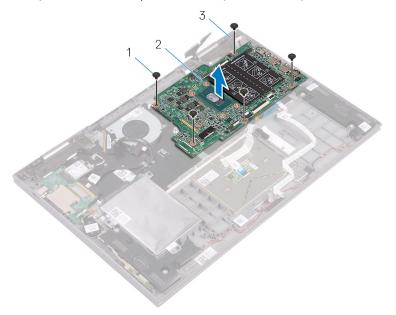


Figure 27. Removing the system board

- 1 screws (5)
- 3 palm rest and keyboard assembly
- 2 system board



Replacing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.



NOTE: Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



NOTE: Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the appropriate changes again after you replace the system board.

Procedure

- 1 Align the screw holes on the system board with the screw holes on the palm rest and keyboard assembly.
- 2 Replace the five screws (M2x2 Big Head) that secure the system board to the palm rest and keyboard assembly.
- 3 Connect the fan cable, hard-drive cable, power-adapter port cable and speaker cable to the system board.
- 4 Slide the touchpad cable, status-light board cable, keyboard cable, keyboard-backlight cable, and I/O-board cable into their respective connectors on the system board and close the latches to secure the cables.
- 5 Slide the display cable and the touch-screen board cable into their respective connectors on the system board and close the latches to secure the cables.
- **6** Adhere the pieces of tape that secure the display cable and the touch-screen board cable to their respective connectors on the system board.

- 1 Replace the heat sink.
- 2 Replace the <u>memory modules</u>.



- **3** Replace the <u>battery</u>.
- 4 Replace the <u>base cover</u>.

Entering the Service Tag in the BIOS setup program

- 1 Turn on or restart your computer.
- 2 Press F2 when the Dell logo is displayed to enter the BIOS setup program.
- 3 Navigate to the Main tab and enter the Service Tag in the Service Tag Input field.



Removing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the wireless card.
- 4 Remove the memory modules.
- **5** Remove the heat sink.
- 6 Remove the system board.



Procedure

1 Turn the computer over and open the display to 180-degree angle.

CAUTION: Place the computer on a soft and clean surface to avoid scratching the display.



Figure 28. Removing the display assembly

- 1 palm rest and keyboard assembly
- 2 display assembly
- 2 Place the computer on a flat surface with the display facing down.
- **3** Remove the two screws (M2.5x7) that secure the display assembly to the palm rest and keyboard assembly.
- **4** Remove the antenna cables from the routing guide on the palm rest and keyboard assembly.



5 Lift the display assembly off the palm rest and keyboard assembly.

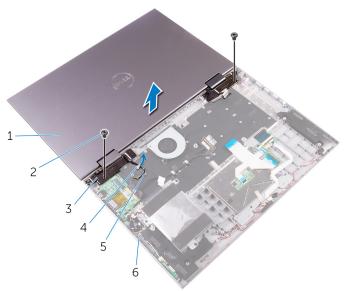


Figure 29. Removing the display assembly

- 1 display assembly
- 3 display hinges (2)
- 5 antenna cables (2)

- 2 screws (2)
- 4 routing guide
- 6 palm rest and keyboard assembly



Replacing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure



CAUTION: Place the computer on a soft and clean surface to avoid scratching the display.

- 1 With the display facing down, align the screw holes on the display hinges with the screw holes on the palm rest and keyboard assembly.
- 2 Replace the two screws (M2.5x7) that secure the display assembly to the palm rest and keyboard assembly.
- **3** Turn the computer over and close the display.

- 1 Replace the system board.
- 2 Replace the heat sink.
- **3** Replace the memory modules.
- 4 Replace the wireless card.
- **5** Replace the battery.
- 6 Replace the base cover.



Removing the palm rest and keyboard assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- Remove the base cover.
- 2 Remove the battery.
- **3** Remove the memory modules.
- 4 Remove the wireless card.
- **5** Remove the coin-cell battery.
- **6** Follow the procedure from step 1 to step 5 in "Removing the hard drive".
- **7** Remove the fan.
- 8 Remove the heat sink.
- 9 Remove the I/O board.
- 10 Remove the power and volume-buttons board.
- 11 Remove the <u>power-adapter port</u>.
- 12 Remove the status-light board.
- 13 Remove the <u>speakers</u>.
- 14 Remove the touchpad.
- **15** Remove the system board.
- **16** Remove the display assembly.

Procedure

After performing the steps in prerequisites, we are left with the palm rest and keyboard assembly.



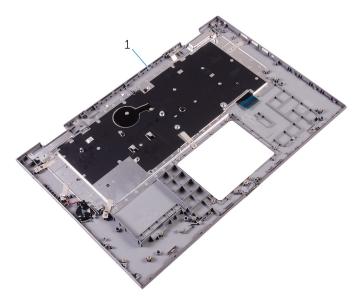


Figure 30. Removing the palm rest and keyboard assembly

1 palm rest and keyboard assembly



Replacing the palm rest and keyboard assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

Place the palm rest and keyboard assembly on a clean and flat surface.

- 1 Replace the display assembly.
- 2 Replace the system board.
- **3** Replace the touchpad.
- 4 Replace the status-light board.
- **5** Replace the speakers.
- 6 Replace the power-adapter port.
- 7 Replace the power and volume-buttons board.
- 8 Replace the <u>I/O board</u>.
- **9** Replace the <u>heat sink</u>.
- 10 Replace the fan.
- 11 Follow the procedure from step 4 to step 8 in "Replacing the hard drive".
- 12 Replace the coin-cell battery.
- 13 Replace the wireless card.
- **14** Replace the memory modules.
- **15** Replace the battery.
- **16** Replace the <u>base cover</u>.



Removing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the display assembly.

Procedure

1 Remove the display cable from inside the hinge covers.



2 Using a plastic scribe, pry up the display-panel assembly to release the tabs that secure display-panel assembly to the display back-cover and antenna assembly.

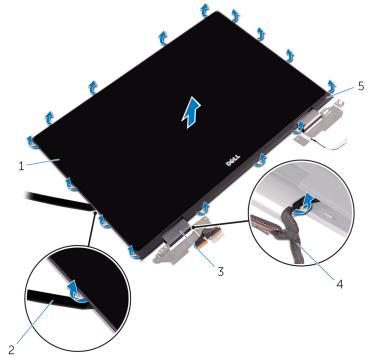


Figure 31. Removing the display back cover and antenna assembly

- 1 display-panel assembly
- 3 hinge covers (2)
- 5 display back-cover and antenna assembly
- 2 plastic scribe
- 4 display cable

- **3** Remove the <u>camera</u>.
- 4 Remove the sensor board.



5 Remove the <u>display cable</u>.

After performing the preceding steps, we are left with the display panel.



Figure 32. Display panel

1 display panel



Replacing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/ regulatory_compliance.

Procedure



CAUTION: Place the display panel on a soft and clean surface to avoid scratching the display.

- 1 Place the display panel on a flat surface with the display facing down.
- 2 Replace the display cable.
- **3** Replace the sensor board.
- 4 Replace the camera.
- **5** Turn over the display-panel assembly.
- 6 Align the display-panel assembly with the display back-cover and antenna assembly and gently snap the display-panel assembly into place.

- **1** Replace the display assembly.
- 2 Replace the battery.
- **3** Replace the base cover.



Removing the display cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the <u>display assembly</u>.
- **4** Follow the procedure from step 1 to step 2 in "Removing the display panel".
- **5** Remove the camera.

Procedure

1 Peel off the tape on the sensor-board connector.



2 Open the latch and disconnect the sensor-board cable from the sensor board.



Figure 33. Removing the sensor-board cable

- 1 display panel2 tape3 latch4 sensor-board cable
- **3** Peel off the tape on the display-cable connector.
- 4 Open the latch and disconnect the display cable from the display panel.
- Note the display cable routing and remove the display cable from the routing guides on the display-panel assembly.
- **6** Peel off the tape that secures the display cable from the display-panel assembly.



7 Lift the display cable off the display-panel assembly.

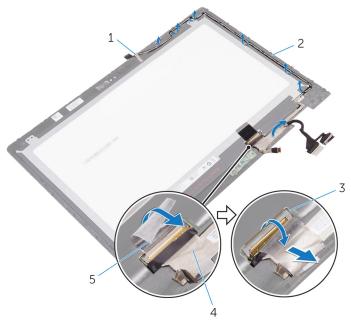


Figure 34. Removing the display cable

- 1 tape
- 3 latch
- 5 tape

- 2 display-panel assembly
- 4 display cable

Replacing the display cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Adhere the tape that secures the display cable to the display-panel assembly.
- 2 Route the display cable through the routing guides on the display-panel assembly.
- 3 Slide the display cable into the connector on the display panel and close the latch to secure the cable.
- 4 Adhere the tape on the display-cable connector.
- 5 Slide the sensor-board cable into the connector on the sensor board and close the latch to secure the cable.
- **6** Adhere the tape on the sensor-board connector.

- 1 Replace the camera.
- **2** Follow the procedure from step 5 to step 6 in "Replacing the display panel".
- **3** Replace the display assembly.
- 4 Replace the battery.
- **5** Replace the <u>base cover</u>.



Removing the display back-cover and antenna assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- Remove the base cover.
- 2 Remove the battery.
- **3** Remove the display assembly.
- **4** Follow the procedure from step 1 to step 2 in "Removing the display panel".

Procedure

After performing the steps in prerequisites, we are left with the display back-cover and antenna assembly.



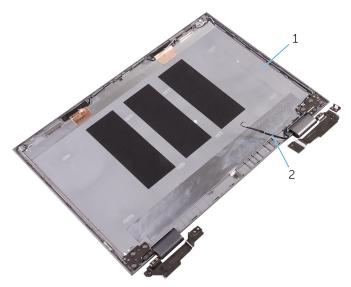


Figure 35. Display back-cover and antenna assembly

1 display back-cover and antenna assembly

2 antenna cables



Replacing the display back-cover and antenna assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

Place the display back-cover and antenna assembly on a flat surface.

- 1 Follow the procedure from step 5 to step 6 in "Replacing the display panel".
- 2 Replace the display assembly.
- **3** Replace the battery.
- 4 Replace the base cover.



Removing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the display assembly.
- **4** Follow the procedure from step 1 to step 2 in "Removing the display panel".

Procedure



CAUTION: Place the display-panel assembly on a soft and clean surface to avoid scratching the display.

- 1 Place the display-panel assembly face down on a flat surface.
- 2 Using a plastic scribe, pry the camera module off the display-panel assembly.



3 Turn the camera over and disconnect the display cable from the camera module.

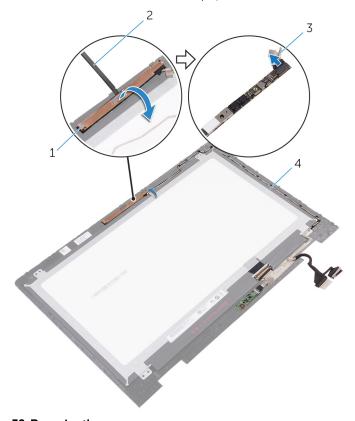


Figure 36. Removing the camera

- 1 camera module
- 3 display cable

- 2 plastic scribe
- 4 display-panel assembly



Replacing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Connect the display cable to the camera module.
- 2 Using the alignment posts, place the camera module on the display panel and snap it into place.

- 1 Follow the procedure from step 5 to step 6 in "Replacing the display panel".
- 2 Replace the display assembly.
- **3** Replace the <u>battery</u>.
- 4 Replace the base cover.



Removing the sensor board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Prerequisites

- 1 Remove the base cover.
- 2 Remove the battery.
- **3** Remove the display assembly.
- **4** Follow the procedure from step 1 to step 2 in "Removing the display panel".

Procedure



CAUTION: Place the display-panel assembly on a soft and clean surface to avoid scratching the display.

- 1 Place the display-panel assembly face down on a flat surface.
- 2 Remove the screw that secures the sensor board to the display panel.
- **3** Peel off the tape that secures the sensor-board cable to the sensor board.
- 4 Open the latch to disconnect the sensor-board cable from the sensor board.



Lift the sensor board off the display-panel assembly.

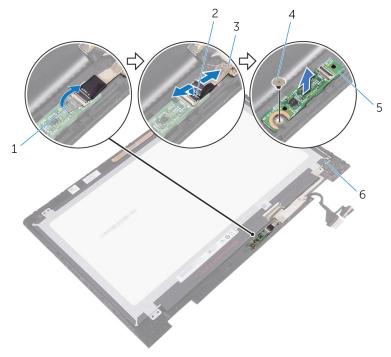


Figure 37. Removing the sensor board

1	tape	2	latch
3	sensor-board cable	4	screw
5	sensor board	6	display-panel assembly



Replacing the sensor board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at www.dell.com/regulatory_compliance.

Procedure

- 1 Align the screw hole on the sensor board with the screw hole on the displaypanel assembly and snap the sensor board in place.
- 2 Slide the sensor-board cable into the connector on the sensor board and close the latch to secure the cable.
- **3** Adhere the tape on the sensor-board connector to secure the cable.
- **4** Replace the screw that secures the sensor board to the display-panel assembly.

- 1 Follow the procedure from step 5 to step 6 in "Replacing the display panel".
- 2 Replace the display assembly.
- **3** Replace the battery.
- 4 Replace the base cover.



Downloading drivers

Downloading the audio driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap **Product support**, enter the Service Tag of your computer, and then click or tap **Submit**.
 - NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click or tap **Drivers & downloads** → **Find it myself**.
- Scroll down the page and expand **Audio**.
- 6 Click or tap **Download** to download the audio driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the audio driver file.
- 8 Double-click or double-tap the audio driver file icon and follow the instructions on the screen.

Downloading the graphics driver

- Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap **Product support**, enter the Service Tag of your computer, and then click or tap **Submit**.



NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click or tap **Drivers & downloads** → **Find it myself**.
- Scroll down the page and expand Video. 5
- 6 Click or tap **Download** to download the graphics driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the graphics driver file.
- 8 Double-click or double-tap the graphics driver file icon and follow the instructions on the screen.



Intel USB 3.0 xHCl

Install the Intel USB 3.0 xHCl driver update from www.dell.com/support.

Universal Serial Bus controllers

Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)

USB Composite Device

USB Root Hub (USB 3.0)

Figure 38. USB controllers



NOTE: USB 3.0 driver supports USB 3.1 Gen 1 features.

Downloading the Wi-Fi driver

- Turn on the computer.
- 2 Go to www.dell.com/support.
- 3 Click or tap **Product support**, enter the Service Tag of your computer, and then click or tap **Submit**.
 - NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- Click or tap **Drivers & downloads** → **Find it myself**. 4
- 5 Scroll down the page and expand **Network**.
- 6 Click or tap **Download** to download the Wi-Fi driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the Wi-Fi driver file.
- 8 Double-click or double-tap the driver file icon and follow the instructions on the screen.

Downloading the media-card reader driver

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.



- 3 Click or tap Product support, enter the Service Tag of your computer, and then click or tap Submit.
 - NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click or tap **Drivers & downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Chipset**.
- 6 Click or tap **Download** to download the media-card reader driver for your computer.
- 7 After the download is complete, navigate to the folder where you saved the card reader driver file.
- 8 Double-click or double-tap the card reader driver file icon and follow the instructions on the screen.

Downloading the chipset driver

- 1 Turn on your computer.
- **2** Go to www.dell.com/support.
- 3 Click or tap **Product support**, enter the Service Tag of your computer, and then click or tap **Submit**.
 - NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click or tap **Drivers & downloads** → **Find it myself**.
- 5 Scroll down the page and expand **Chipset**.
- 6 Click or tap **Download** to download the chipset driver for your computer.
- **7** After the download is complete, navigate to the folder where you saved the chipset driver file.
- 8 Double-click or double-tap the chipset driver file icon and follow the instructions on the screen.

Downloading the network driver

- 1 Turn on your computer.
- **2** Go to www.dell.com/support.
- 3 Click **Product support** enter the Service Tag of your computer and click **Submit**.
 - NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.



- 4 Click Drivers & downloads → Find it myself.
- **5** Scroll down the page and expand **Network**.
- 6 Click **Download** to download the network driver for your computer.
- **7** Save the file, and after the download is complete, navigate to the folder where you saved the network driver file.
- 8 Double-click the network driver file icon and follow the instructions on screen.



System setup



NOTE: Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

Boot Sequence

Boot Sequence allows you to bypass the System Setup—defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- · Removable Drive (if available)
- STXXXX Drive
 - NOTE: XXX denotes the SATA drive number.
- · Optical Drive (if available)
- Diagnostics
 - Ø

NOTE: Choosing Diagnostics, will display the ePSA diagnostics screen.

The boot sequence screen also displays the option to access the System Setup screen.

Navigation keys



NOTE: For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys Navigation

Up arrow Moves to the previous field.



Keys Navigation

Down arrow Moves to the next field.

Enter Selects a value in the selected field (if applicable) or follow

the link in the field.

Spacebar Expands or collapses a drop-down list, if applicable.

Tab Moves to the next focus area.

NOTE: For the standard graphics browser only.

Esc Moves to the previous page until you view the main screen.

Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the

system.

BIOS overview



CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.



NOTE: Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- · Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Entering BIOS setup program

1 Turn on (or restart) your computer.



2 During POST, when the DELL logo is displayed, watch for the F2 prompt to appear, and then press F2 immediately.



NOTE: The F2 prompt indicates that the keyboard is initialized. This prompt can appear very quickly, so you must watch for it, and then press F2. If you press F2 before the F2 prompt, this keystroke is lost. If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

System setup options

General-System Information



NOTE: Depending on this computer and its installed devices, the items listed in this section may or may not appear.

Table 3. System setup options—System information menu

deficial Cystem information			
System Information			
BIOS Version	Displays the BIOS version number.		
Service Tag	Displays the Service Tag of the computer.		
Asset Tag	Displays the Asset Tag of the computer.		
Ownership Tag	Displays the ownership tag of the computer.		
Manufacture Date	Displays the manufacture date of the computer.		
Ownership Date	Displays the ownership date of the computer.		
Express Service Code	Displays the express service code of the computer.		
Memory Information			
Memory Installed	Displays the total computer memory installed.		
Memory Available	Displays the total computer memory available.		
Memory Speed	Displays the memory speed.		
Memory Channel Mode	Displays single or dual channel mode.		
Memory Technology	Displays the technology used for the memory.		
DIMM A Size	Displays the DIMM A memory size.		
DIMM B Size	Displays the DIMM B memory size.		



General-System Information

Processor Information

Processor Type Displays the processor type.

Core Count Displays the number of cores on the processor.

Processor ID Displays the processor identification code.

Current Clock Speed Displays the current processor clock speed.

Minimum Clock Speed Displays the minimum processor clock speed.

Maximum Clock Speed Displays the maximum processor clock speed.

Processor L2 Cache Displays the processor L2 Cache size.

Processor L3 Cache Displays the processor L3 Cache size.

HT Capable Displays whether the processor is HyperThreading

(HT) capable.

64-Bit Technology Displays whether 64-bit technology is used.

Device Information

SATA-0 Displays the SATA-0 device information of the

computer.

SATA-2 Displays the SATA-2 device information of the

computer.

M.2 PCle SSD-0 Displays the M.2 PCle SSD information of the

computer.

Video Controller Displays the video controller type of the computer.

dGPU Video Controller Displays the discrete graphics information of the

computer.

Video BIOS Version Displays the video BIOS version of the computer.

Video Memory Displays the video memory information of the

computer.

Panel Type Displays the Panel Type of the computer.

Native Resolution Displays the native resolution of the computer.

Audio Controller Displays the audio controller information of the

computer.



General-System Information			
Wi-Fi Device	Displays the wireless device information of the computer.		
Bluetooth Device	Displays the bluetooth device information of the computer.		
Battery Information	Displays the battery health information.		
Boot Sequence			
Boot Sequence	Displays the boot sequence.		
Boot List Option	Displays the available boot options.		
Advanced Boot Options			
Enable Legacy Option ROMs	Enable or disable the Legacy Option ROMs.		
Enable UEFI Network Stack	Enable or disable UEFI Network Stack.		
UEFI Boot Path Security	Enable or disable the system to prompt the user to enter the Admin password when booting a UEFI boot path from the F12 boot menu.		
Date/Time	Displays the current date in MM/DD/YY format and current time in HH:MM:SS AM/PM format.		

Table 4. System setup options—System Configuration menu

System Configuration			
SATA Operation	Configure operating mode of the integrated SATA hard drive controller.		
Drives	Enable or disable various drives on board.		
SMART Reporting	Enable or disable SMART Reporting during system startup.		
USB Configuration			
Enable Boot Support	Enable or disable booting from USB mass storage devices such as external hard drive, optical drive, and USB drive.		



System Configuration		
Enable External USB Port	Enable or disable booting from USB mass storage devices connected to external USB port.	
USB PowerShare	Enable or disable charging external devices through the USB PowerShare port.	
Audio	Enable or disable the integrated audio controller.	
Keyboard Illumination	Configure the operating mode of the keyboard illumination feature.	
Keyboard Backlight with AC	Enable or disable the keyboard backlight.	
Miscellaneous Devices	Enable or disable various onboard devices.	
Enable Camera	Enable or disable the camera.	
Enable Secure Digital (SD) Card	Enable or disable the SD card.	

Table 5. System setup options—Video menu

Video				
LCD Brightness	Set the panel brightness independently for Battery and AC power.			
Table C. Orostono autom autiona	On a south a second			

Table 6. System setup options—Security menu

Security		
Strong Password	Enable or disable strong passwords.	
Password Configuration	Control the minimum and maximum number of characters allowed for Admin and System passwords.	
Password Bypass	Bypass the System (Boot) Password and the internal HDD password prompts during a system restart.	
Password Change	Enable or disable changes to the System and Hard Disk passwords when an administrator password is set.	



S	Security		
	Non-Admin Setup Changes	Determines whether changes to the setup option are permitted when an administrator password is set.	
	UEFI Capsule Firmware Updates	Enable or disable BIOS updates through UEFI capsule update packages.	
	PTT Security	Enable or disable Platform Trust Technology (PTT) visibility to the operating system.	
	Computrace(R)	Enable or disable the BIOS module interface of the optional Computrace(R) Service from Absolute Software.	
	CPU XD Support	Enable or disable the Execute Disable mode of the Processor.	
	Admin Setup Lockout	Enable to prevent users from entering Setup when an Admin Password is set.	

Table 7. System setup options—Secure Boot menu

Secure Boot		
Secure Boot Enable	Enable or disable the secure boot feature.	
Expert Key Management		
Expert Key Management	Enable or disable Expert Key Management.	
Custom Mode Key Management	Select the custom values for expert key management.	

Table 8. System setup options—Intel Software Guard Extensions menu

Intel Software Guard Extensions		
Intel SGX Enable	Enable or disable Intel Software Guard Extensions.	
Enclave Memory Size	Set the Intel Software Guard Extensions Enclave Reserve Memory Size.	
Performance		
Multi Core Support	Enable multiple cores.	
	Default: Enabled.	



Intel Software Guard Extensions

Intel SpeedStep Enable or disable Intel Speedstep Technology.

Default: Enabled.

Ø

NOTE: If enabled, the processor clock speed and core voltage are adjusted dynamically based on the processor load.

C-States Control Enable or disable additional processor sleep states.

Default: Enabled.

Intel TurboBoost Enable or disable Intel TurboBoost mode of the

processor.

Default: Enabled.

HyperThread control Enable or disable HyperThreading in the processor.

Default: Enabled.

Power Management

AC Behavior Enables the system to turn on automatically, when

AC is inserted.

Enable Intel Speed Shift

Technology

Enable or disable Intel Speed Shift Technology.

Auto on Time Enable to set the computer to turn on automatically

every day or on a preselected date and time. This option can be configured only if the Auto On Time is

set to Everyday, Weekdays or Selected Days.

Default: Disabled.

USB Wake Support Enable the USB devices to wake the computer from

Standby.

Advanced Battery Charge

Configuration

Enable Advanced Battery Charge Configuration

from the beginning of the day to a specified work

period.

Primary Battery Charge

Configuration

Set the primary battery charge settings with a

preselected custom charge start and stop.

Default: Adaptive.

POST Behavior

Adapter Warnings Enable adapter warnings.



Intel Software Guard Extensions

Default: Enabled.

Numlock Enable Enable or disable Numlock.

Default: Enable Numlock.

Fn Lock Options Enable or disable the Fn lock mode.

Fastboot Enable to set the speed of the boot process.

Default: Thorough.

Extend BIOS POST Time Configure additional pre-boot delay.

Pull Screen Logo Enable or disable to display full screen logo.

Warnings and Errors Select an action on encountering a warning or error.

Table 9. System setup options—Virtualization Support menu

Virtualization Support	
Virtualization	Specify whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization Technology.
VT for Direct I/O	Specify whether a Virtual Machine Monitor (VMM) can utilize the additional hardware capabilities provided by Intel Virtualization Technology for Direct I/O.

Table 10. System setup options—Wireless menu

Wireless	
Wireless Switch	Determine which wireless devices can be controlled by the Wireless Switch.
Wireless Device Enable	Enable or disable internal wireless devices.

Table 11. System setup options—Maintenance menu

Maintenance	
Service Tag	Display the system's Service Tag.
Asset Tag	Create a system Asset Tag.



Maintenance	
BIOS Downgrade	Control flashing of the system firmware to previous revisions.
Data Wipe	Enable to securely erase data from all internal storage devices.
BIOS Recovery	Enable the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB key.

Table 12. System setup options—System Logs menu

System Logs		
BIOS Events	Display BIOS events.	
Thermal Events	Display Thermal events.	
Power Events	Display Power events.	

Table 13. System setup options—SupportAssist System Resolution menu

SupportAssist System Resolution		
Auto OS Recovery Threshold	Control the automatic boot flow for SupportAssist System Resolution Console and for Dell OS Recovery tool.	
SupportAssist OS Recovery	Enable or disable the boot flow for SupportAssist OS Recovery tool in the even of certain system errors.	

System and setup password

You can create a system password and a setup password to secure your computer.

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.



CAUTION: The password features provide a basic level of security for the data on your computer.





CAUTION: Anyone can access the data stored on your computer if it is not locked and left unattended.



NOTE: Your computer is shipped with the system and setup password feature is disabled.

Assigning a system password and setup password

You can assign a new **System Password** only when the status is in **Not Set**. To enter the system setup, press F2 immediately after a power-on or re-boot.

- 1 In the **System BIOS** or **System Setup** screen, select **Security** and press Enter. The **Security** screen is displayed.
- 2 Select System Password and create a password in the Enter the new password field.

Use the following guidelines to assign the system password:

- A password can have up to 32 characters.
- The password can contain the numbers 0 through 9.
- Only lower case letters are valid, upper case letters are not allowed.
- Only the following special characters are allowed: space, ("), (+), (,), (-), (.),
 (/), (;), ([), (\), (]), (\).
- 3 Type the system password that you entered earlier in the Confirm new password field and click OK.
- 4 Press Esc and a message prompts you to save the changes.
- **5** Press Y to save the changes. The computer reboots.

Deleting or changing an existing system and/or setup password

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and/or Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

To enter the System Setup, press F2 immediately after a power-on or reboot.

1 In the System BIOS or System Setup screen, select System Security and press Enter.

The **System Security** screen is displayed.



- 2 In the **System Security** screen, verify that **Password Status** is **Unlocked**.
- 3 Select **System Password**, alter or delete the existing system password and press Enter or Tab.
- 4 Select **Setup Password**, alter or delete the existing setup password and press Enter or Tab.



NOTE: If you change the System and/or Setup password, re-enter the new password when promoted. If you delete the System and/or Setup password, confirm the deletion when promoted.

- 5 Press Esc and a message prompts you to save the changes.
- Press Y to save the changes and exit from System Setup. The computer reboots.

Clearing CMOS settings



CAUTION: Clearing CMOS settings will reset the BIOS settings on your computer.

- 1 Remove the base cover.
- 2 Remove the battery.
- 3 Disconnect the coin-cell battery.
- 4 Wait for one minute.
- 5 Connect the coin-cell battery.
- 6 Replace the battery.
- 7 Replace the base cover.

Clearing forgotten passwords

Contact Dell technical support to clear the forgotten passwords, see www.dell.com/ contactdell.



Troubleshooting

Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board.

Follow these steps to flash the BIOS:

- 1 Turn on your computer.
- 2 Go to www.dell.com/support.
- 3 Click **Product support**, enter the Service Tag of your computer, and then click Submit.



NOTE: If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

- 4 Click Drivers & downloads → Find it myself.
- 5 Select the operating system installed on your computer.
- 6 Scroll down the page and expand **BIOS**.
- 7 Click **Download** to download the latest version of the BIOS for your computer.
- 8 After the download is complete, navigate to the folder where you saved the BIOS update file.
- 9 Double-click the BIOS update file icon and follow the instructions on the screen.

Flashing BIOS (USB key)

- Follow the procedure from step 1 to step 7 in "Flashing the BIOS" to download the latest BIOS setup program file.
- 2 Create a bootable USB drive. For more information see the knowledge base article <u>SLN143196</u> at <u>www.dell.com/support</u>.
- 3 Copy the BIOS setup program file to the bootable USB drive.
- 4 Connect the bootable USB drive to the computer that needs the BIOS update.
- 5 Restart the computer and press F12 when the Dell logo is displayed on the screen.
- 6 Boot to the USB drive from the **One Time Boot Menu**.
- 7 Type the BIOS setup program filename and press **Enter**.



8 The **BIOS Update Utility** appears. Follow the instructions on the screen to complete the BIOS update.

Enhanced Pre-Boot System Assessment (ePSA) diagnostics

The ePSA diagnostics (also known as system diagnostics) performs a complete check of your hardware. The ePSA is embedded with the BIOS and is launched by the BIOS internally. The embedded system diagnostics provides a set of options for particular devices or device groups allowing you to:

- · Run tests automatically or in an interactive mode
- · Repeat tests
- Display or save test results
- Run thorough tests to introduce additional test options to provide extra information about the failed device(s)
- · View status messages that inform you if tests are completed successfully
- · View error messages that inform you of problems encountered during testing



CAUTION: Use the system diagnostics to test only your computer. Using this program with other computers may cause invalid results or error messages.



NOTE: Some tests for specific devices require user interaction. Always ensure that you are present at the computer terminal when the diagnostic tests are performed.

For more information, see <u>Dell EPSA Diagnostic 3.0</u>.

Running the ePSA diagnostics

- **1** Power-on the computer.
- 2 As the computer boots, press the F12 key as the Dell logo appears.
- 3 On the boot menu screen, select the **Diagnostics** option.
- 4 Click the arrow key at the bottom left corner.
 - Diagnostics front page is displayed.
- **5** Press the arrow in the lower-right corner to go to the page listing. The items detected are listed.
- 6 To run a diagnostic test on a specific device, press Esc and click Yes to stop the diagnostic test.



- 7 Select the device from the left pane and click **Run Tests**.
- 8 If there are any issues, error codes are displayed.
 Note the error code and validation number and contact Dell.

System diagnostic lights

Power and battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.



NOTE: Press Fn+H to toggle this light between power and battery-status light and hard-drive activity light.

Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.



NOTE: Hard-drive activity light is supported only on computers shipped with hard drive.

Power and battery-status light

Indicates the power and battery-charge status

Solid white — Power adapter is connected and the battery has more than 5 percent charge.

Amber — Computer is running on battery and the battery has less than 5 percent charge.

Off

- · Power adapter is connected and the battery is fully charged.
- · Computer is running on battery and the battery has more than 5 percent charge.
- Computer is in sleep state, hibernation, or turned off



NOTE: Hard-drive activity light is supported only on computers shipped with hard drive.

The power and battery-status light blinks amber along with beep codes indicating failures.

For example, the power and battery-status light blinks amber two times followed by a pause, and then blinks white three times followed by a pause. This 2,3 pattern continues until the computer is turned off indicating no memory or RAM is detected.

The following table shows different light patterns and describes what they indicate.



Table 14. Diagnostics

Light pattern	Problem description
2,1	CPU failure
2,2	System board: BIOS and ROM failure
2,3	No memory or RAM detected
2,4	Memory or RAM failure
2,5	Invalid memory installed
2,6	System board or chipset error
2,7	LCD failure
3,1	CMOS battery failure
3,2	PCI or video card or chip failure
3,3	Recovery image not found
3,4	Recovery image found but invalid

Camera status light: Indicates whether the camera is in use.

- Solid white Camera is in use.
- · Off Camera is not in use.

Caps Lock status light: Indicates whether Caps Lock is enabled or disabled.

- · Solid white Caps Lock enabled.
- Off Caps Lock disabled.

Flea power release

Flea power is the residual static electricity that remains on the computer even after it has been powered off and the battery has been removed. The following procedure list the steps to conduct a flea power release for the computer.

- 1 Turn off your computer.
- 2 Remove the base cover.
- **3** Disconnect the battery cable from the system board.
- 4 Press and hold down the power button for 15 seconds to drain the flea power.



- **5** Connect the battery cable to the system board.
- 6 Replace the base cover.
- 7 Turn on your computer.

Wi-Fi power cycle

If your computer is unable to access the internet due to Wi-Fi connectivity issues a Wi-Fi power cycle procedure may be performed. The following procedure provides the instructions on how to conduct a Wi-Fi power cycle:

- 1 Turn off your computer.
- 2 Turn off the modem.
- **3** Turn off the wireless router.
- 4 Wait for 30 seconds.
- **5** Turn on the router.
- 6 Turn on the modem.
- 7 Turn on your computer.



Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 15. Self-help resources

Information about Dell products and services

Dell Help & Support app

www.dell.com



Get started app



Accessing help

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

Dell knowledge base articles for a variety of computer concerns.

In Windows search, type Help and

www.dell.com/support/windows www.dell.com/support/linux

Support, and press Enter.

www.dell.com/support

- 1 Go to www.dell.com/support.
- 2 At the top-right corner, type the subject or keyword in the Search
- 3 Click Search to retrieve the related articles.

about your product:

Product specifications

Learn and know the following information See Me and My Dell at www.dell.com/ support/manuals.



- Operating system
- · Setting up and using your product
- · Data backup
- Troubleshooting and diagnostics
- · Factory and system restore
- BIOS information

To locate the *Me and My Dell* relevant to your product, identify your product through one of the following:

- · Select **Detect Product**.
- Locate your product through the drop-down menu under View Products.
- Enter the Service Tag number or Product ID into the search bar.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.



NOTE: Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

