

Dell Pro Rugged 14

RB14250

Owner's Manual

Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

Chapter 1: Views of Dell Pro Rugged 14 RB14250.....	8
Right.....	8
Left.....	9
Top.....	10
Front.....	11
Back.....	12
Bottom.....	13
Locate the Service Tag or Express Service Code label of your computer.....	14
Battery-charge status light.....	15
Chapter 2: Set up your Dell Pro Rugged 14 RB14250.....	16
Chapter 3: Specifications of Dell Pro Rugged 14 RB14250.....	18
Dimensions and weight.....	18
Processor.....	18
Chipset.....	19
Operating system.....	19
Memory.....	19
External ports and slots.....	20
Internal slots.....	20
Ethernet.....	21
Wireless module.....	21
WWAN module.....	21
Optional GPS module.....	22
Audio.....	23
Storage.....	23
Media-card reader.....	24
Keyboard.....	24
Keyboard shortcuts of Dell Pro Rugged 14 RB14250.....	25
Camera.....	26
Touchpad.....	27
Battery.....	27
Power requirements.....	28
Power adapter.....	29
Power adapter requirements (for computers shipped with integrated graphics).....	29
Power adapter requirements (for computers shipped with discrete graphics).....	30
Display.....	31
Fingerprint reader (optional).....	32
Sensor	32
GPU—Integrated.....	32
Multiple display support matrix.....	32
GPU—Discrete.....	32
Multiple display support matrix.....	33
Hardware security.....	33

Smart-card reader.....	33
Contactless smart-card reader.....	33
Contacted smart-card reader.....	37
Operating and storage environment.....	38
Dell low blue light display.....	38
Chapter 4: Working inside your computer.....	40
Safety instructions.....	40
Before working inside your computer.....	40
Safety precautions.....	41
Electrostatic discharge—ESD protection.....	41
ESD Field Service kit	42
Transporting sensitive components.....	43
After working inside your computer.....	43
BitLocker.....	43
Recommended tools.....	43
Screw list.....	44
Major components of Dell Pro Rugged 14 RB14250.....	47
Chapter 5: Removing and installing Customer Replaceable Units (CRUs).....	50
Battery.....	50
Rechargeable Li-ion battery precautions.....	50
Removing the batteries.....	50
Installing the batteries.....	52
Stylus.....	53
Removing the stylus.....	53
Installing the stylus.....	54
Chapter 6: Removing and installing Field Replaceable Units (FRUs).....	56
Handle.....	56
Removing the handle.....	56
Installing the handle.....	57
Keyboard.....	58
Removing the keyboard (standard).....	58
Installing the keyboard (standard).....	61
Removing the keyboard (rubberized).....	65
Installing the keyboard (rubberized).....	67
Solid state drive carrier.....	71
Removing the solid state drive carrier.....	71
Installing the solid state drive carrier.....	72
M.2 solid state drive.....	73
Removing the M.2 2230 solid state drive from the carrier.....	73
Installing the M.2 2230 solid state drive into the carrier.....	74
Removing the M.2 2280 solid state drive from the carrier.....	76
Installing the M.2 2280 solid state drive into the carrier.....	76
Base cover.....	78
Removing the base cover.....	78
Installing the base cover.....	79
Coin-cell battery.....	81

Removing the coin-cell battery.....	81
Installing the coin-cell battery.....	82
Fan.....	83
Removing the fan.....	83
Installing the fan.....	84
Global Positioning System (GPS) board	85
Removing the GPS board	85
Installing the GPS board	86
Rear I/O-board.....	88
Removing the rear I/O-board.....	88
Installing the rear I/O-board.....	89
RF switch board.....	90
Removing the RF switch board	90
Installing the RF switch board.....	91
Wireless Local Area Network (WLAN) card.....	93
Removing the WLAN card.....	93
Installing the WLAN card.....	94
Wireless Wide Area Network (WWAN) card.....	96
Removing the WWAN card.....	96
Installing the WWAN card.....	98
Dock I/O-module.....	101
Removing the dock I/O-module	101
Installing the dock I/O-module	102
Dock Wi-Fi board.....	104
Removing the dock Wi-Fi board.....	104
Installing the dock Wi-Fi board.....	106
Heat sink.....	107
Removing the heat sink (for computers shipped with integrated graphics).....	107
Installing the heat sink (for computers shipped with integrated graphics).....	108
Removing the heat sink (for computers shipped with discrete graphics)	110
Installing the heat sink (for computers shipped with discrete graphics).....	111
System board.....	112
Removing the system board.....	112
Installing the system board.....	118
Memory module.....	123
Removing the memory modules.....	123
Installing the memory modules.....	124
Right Type-C board	126
Removing the right Type-C board.....	126
Installing the right Type-C board.....	127
Left Type-C board.....	129
Removing the left Type-C board.....	129
Installing the left Type-C board.....	130
Latch doors.....	132
Removing the right Type-C port latch-door.....	132
Installing the right Type-C port latch-door.....	133
Removing the rear Ethernet port latch-door.....	133
Installing the rear Ethernet port latch-door.....	134
Removing the rear HDMI port latch-door.....	135
Installing the rear HDMI port latch-door.....	136

Removing the rear serial port latch-door.....	137
Installing the rear serial port latch-door.....	138
Removing the left audio port latch-door.....	139
Installing the left audio port latch-door.....	140
Removing the left USB port latch-door.....	141
Installing the left USB port latch-door.....	142
Removing the left Type-C port latch-door.....	143
Installing the left Type-C port latch-door.....	144
Display assembly.....	145
Removing the display assembly.....	145
Installing the display assembly.....	147
Display-panel assembly.....	150
Removing the display-panel assembly.....	150
Installing the display-panel assembly.....	151
Display back-cover assembly.....	154
Removing the display back-cover assembly.....	154
Installing the display back-cover assembly.....	155
Palm-rest assembly.....	157
Removing the palm-rest assembly.....	157
Installing the palm-rest assembly.....	158
Chapter 7: Software.....	160
Operating system.....	160
Drivers and downloads.....	160
Chapter 8: Technology and components.....	161
Rugged Control Center.....	161
Chapter 9: BIOS Setup.....	162
Entering BIOS Setup program.....	162
Navigation keys.....	162
F12 One Time Boot menu.....	162
View Advanced Setup options.....	163
View Service options.....	163
System Setup options.....	163
Updating the BIOS.....	184
Updating the BIOS in Windows.....	184
Updating the BIOS using the USB drive in Windows.....	185
Updating the BIOS from the One-Time boot menu.....	185
System and setup password.....	186
Assigning a System Setup password.....	186
Deleting or changing an existing system password or setup password.....	187
Clearing CMOS settings.....	187
Clearing BIOS (System Setup) and System passwords.....	188
Chapter 10: Troubleshooting.....	189
Handling swollen rechargeable Li-ion batteries.....	189
Locating the Service Tag or Express Service Code of your Dell computer	189
Dell SupportAssist Pre-boot System Performance Check diagnostics.....	190

Running the SupportAssist Pre-Boot System Performance Check.....	190
Built-in self-test (BIST).....	190
M-BIST.....	190
LCD Power rail test (L-BIST).....	191
LCD Built-in Self-Test (BIST).....	191
System-diagnostic lights	192
Recovering the operating system.....	192
Real-Time Clock (RTC Reset).....	193
Backup media and recovery options.....	193
Wi-Fi power cycle.....	193
Drain residual flea power (perform hard reset).....	193
Chapter 11: Getting help and contacting Dell.....	195

Views of Dell Pro Rugged 14 RB14250

Right



Figure 1. Right view

1. Smart-card reader slot (optional)

Reads information from a smart card with an integrated-chip.

NOTE: Ensure that the smart card does not exceed the edge of the back cover while inserting in to the smart-card cover.

2. Stylus slot (optional)

Dock the stylus into the slot after use.

3. Nano-SIM card slot (optional)

Insert a SIM card to connect to a mobile broadband network.

4. microSD-card slot

Insert a microSD card to expand the computer's storage capacity.

5. Thunderbolt 4.0 with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery (optional)

Supports USB4, DisplayPort 1.4, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Supports data transfer rates of up to 40 Gbps for USB4 and Thunderbolt 4.

NOTE: You can connect a Dell Docking Station to the Thunderbolt 4 ports. For more information, search in the Knowledge Base Resource at [Dell Support Site](#).

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

NOTE: USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.

NOTE: Thunderbolt 4 supports two 4K displays or one 8K display.

Left



Figure 2. Left view

1. Thunderbolt 4.0 with DisplayPort Alt Mode/USB Type-C/USB4/Power Delivery

Supports USB4, DisplayPort 1.4, Thunderbolt 4 and also enables you to connect to an external display using a display adapter. Provides data transfer rates of up to 40 Gbps for USB4 and Thunderbolt 4.

NOTE: You can connect a Dell Docking Station to the Thunderbolt 4 ports. For more information, search in the Knowledge Base Resource at [Dell Support Site](#).

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

NOTE: USB4 is backward compatible with USB 3.2, USB 2.0, and Thunderbolt 3.

NOTE: Thunderbolt 4 supports two 4K displays or one 8K display.

Connect devices such as external storage devices and printers. Supports Power Delivery that enables two-way power supply between devices. Provides up to a 5 V power output that enables faster charging.

Provides data transfer speeds up to 10 Gbps.

2. Air vent

Air vents provide ventilation for your computer. Clogged air vents can cause overheating and can affect your computer's performance and potentially cause hardware issues. Keep the air vents clear of obstructions and clean them regularly to prevent the build-up of dust and dirt. For more information about cleaning air vents, search for articles in the Knowledge Base Resource at [Dell Support Site](#).

3. USB 3.2 Gen 1 port with PowerShare

Connect devices such as external storage devices and printers.

Supports data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.

NOTE: If your computer is turned off or in a hibernating state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.

NOTE: Certain USB devices may not charge when the computer is turned off or in a sleep state. In such cases, turn on the computer to charge the device.

4. USB 3.2 Gen 1 (5 Gbps) port

Connect to external storage devices. Provides data transfer speeds up to 5 Gbps.

5. Headset (headphone and microphone combo) port

Connect headphones or a headset (headphone and microphone combo).

Top



Figure 3. Top view

1. Power-status light

Indicates the power state of the computer.

2. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernating state.

When the computer is turned on, press the power button to put the computer into a sleep state; press and hold the power button for 10 s to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button steadily to log in.

NOTE: You can customize the power-button behavior in Windows.

3. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap on the left button for left-click and the right button for right-click.

4. NFC-sensor area

Enables NFC-enabled devices to communicate with your computer.

Front

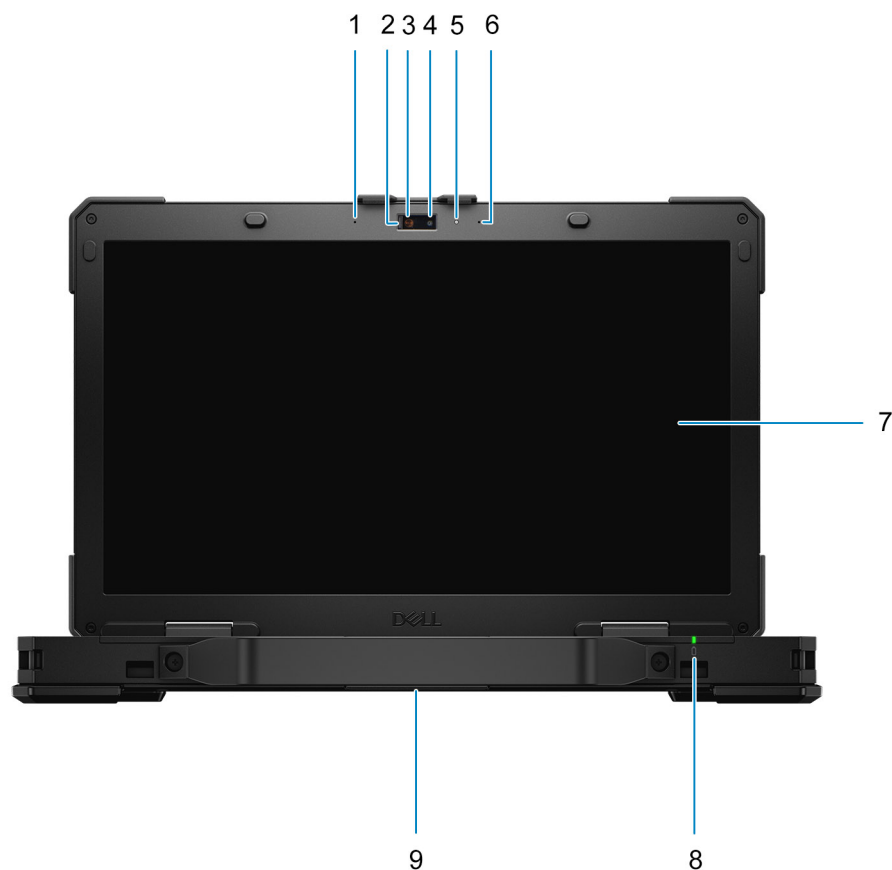


Figure 4. Front view

1. Left microphone

Provides digital sound input for audio recording and voice calls.

2. Privacy shutter

Slide the privacy shutter to cover the camera lens and protect your privacy when the camera is not in use.

3. Infrared emitter

Emits infrared light, which enables the infrared camera to sense and track motion.

4. Infrared camera

Enhances security when paired with Windows Hello face authentication.

5. Camera-status light

Turns on when the camera is in use.

6. **Right microphone**

Provides digital sound input for audio recording and voice calls.

7. **Display panel**

Provides visual output to the user.

8. **Battery-status light or diagnostic-status light**

Indicates the battery-charge status.

- Solid amber-Battery charge is low.
- Off-Battery is fully charged.

9. **Display latch**

Secures the display panel when closed. Press the latch to open the lid.

Back

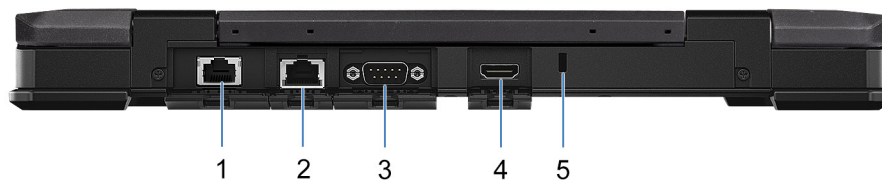


Figure 5. Back view

1. **Optional I/O bay**

Choose from: RJ45 (1 Gbps) Ethernet port/USB 3.2 Type-A port/Serial port/Fischer USB port.

- With RJ45 Ethernet port - Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access, with a transfer rate of 10/100/1000 Mbps.
- With USB 3.2 Type-A port - Connect devices such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.
- With Serial port - Connects serial devices using the RS-232 standard through an adapter or external interface, enabling communication with legacy hardware and peripherals.
- With Fischer USB port - Provides a secure, high-speed connection for USB 3.0 devices, supporting data transfer rates up to 5 Gbps.

2. **RJ45 Ethernet port**

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access, with a transfer rate of 10/100/1000 Mbps.

3. **Serial port**

Connects serial devices using the RS-232 standard, enabling communication with legacy hardware and peripherals.

4. **HDMI 2.1 TMDS port**

Connect to a TV, external display, or another HDMI-in enabled device. Provides video and audio output.

5. **Security-cable slot (wedge-shaped)**

Connect a security cable to prevent unauthorized movement of your laptop.

Bottom

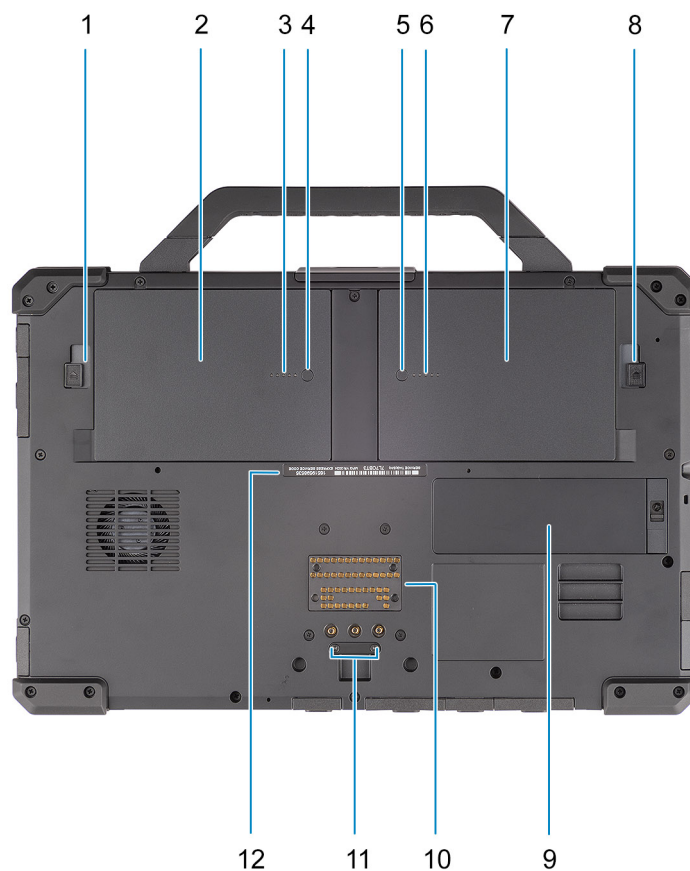


Figure 6. Bottom view

1. Battery-release latch

Lock or unlock the battery in the battery bay. Slide the latch to the unlocked position to release the battery.

2. Battery

Supplies power to the laptop. It enables the laptop to work without connecting to an electrical outlet for a certain time.

3. Battery-status light

Indicates the battery-charge status.

Solid green-Battery is charging.

Off-Battery is fully charged.

4. Battery-charge status button

Press to check the charge remaining in the battery.

5. Battery-charge status button

Press to check the charge remaining in the battery.

6. Battery-status light

Indicates the battery-charge status.

Solid green-Battery is charging.

Off-Battery is fully charged.

7. Battery

Supplies power to the laptop. It enables the laptop to work without connecting to an electrical outlet for a certain time.

8. Battery-release latch

Lock or unlock the battery in the battery bay. Slide the latch to the unlocked position to release the battery.

9. Solid state drive door

Covers and protects the solid state drive, ensuring secure installation and access.

10. Docking port

Enables docking to the laptop.

11. Radio frequency pass-through connectors

Provides an option to switch the main WWAN, WLAN, and GPS antenna signals from internal to external antennas when the device is docked.

12. Service tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

Locate the Service Tag or Express Service Code label of your computer

The service tag is a unique alphanumeric identifier that allows Dell service technicians to identify the hardware components in your computer and access warranty information. The Express Service Code is a numeric version of the Service Tag.

For more information about how to find the Service Tag of your computer, search in the Knowledge Base Resource at the [Dell Support Site](#).

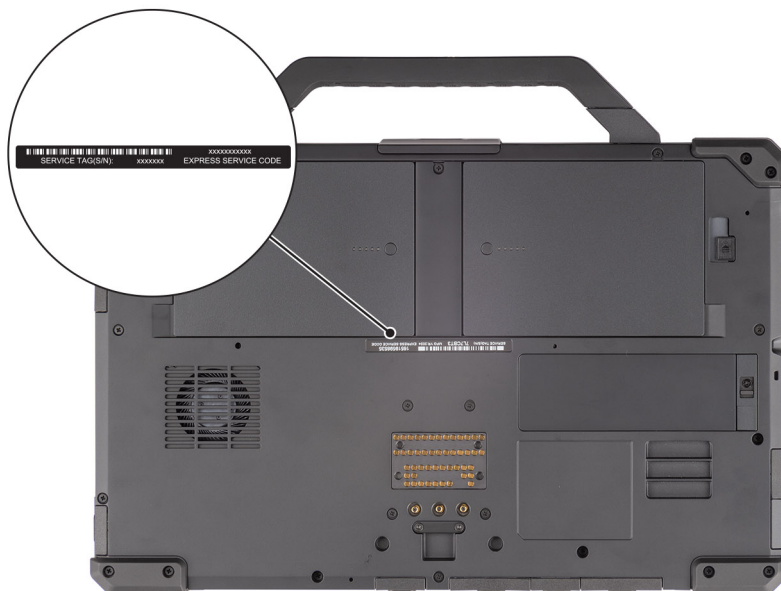


Figure 7. Service Tag/Express Service Code location

Battery-charge status light

The following table lists the battery-charge status light of your Dell Pro Rugged 14 RB14250.

Table 1. Battery charge and status light behavior

Power source	LED behavior	System power state	Battery charge level
AC adapter	Off	S0 or S5	Fully charged
AC adapter	Solid green	S0 or S5	< Fully charged
Battery	Off	S0 or S5	11-100%
Battery	Solid amber (590+/-3 nm)	S0 or S5	< 10%

- S0 (ON): Computer is turned on.
- S4 (Hibernate): The computer consumes the least power in the Hibernate state than in the ON or OFF state. The computer is almost in the OFF state. The context data is written to a storage device, allowing you to resume from where you left when the computer is turned on.
- S5 (OFF): The computer is in a shutdown state.

Set up your Dell Pro Rugged 14 RB14250

About this task

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Steps

1. Connect the power adapter and press the power button.



Figure 8. Setting up Dell Pro Rugged 14 RB14250 Laptop

NOTE: The battery may go into power-saving mode during shipment to conserve charge on the battery. Ensure that the power adapter is connected to your computer when it is turned on for the first time.

2. Finish the operating system setup.

For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell Technologies recommends that you:






- Connect to a network for Windows updates.

NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the Internet, sign-in with an existing Microsoft account or create an account. If not connected to the Internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 2. Locate Dell apps


Resources	Description
	Dell Product Registration Register your computer with Dell.
	Dell Help & Support Access help and support for your computer.
	SupportAssist SupportAssist is the smart technology that keeps your computer running at its best by optimizing settings, detecting issues, removing viruses and notifies when you must make computer updates. SupportAssist proactively checks the health of your computer hardware and software. When an issue is detected, the necessary computer state information is sent to Dell to begin troubleshooting. SupportAssist is preinstalled on most of the Dell devices running the Windows operating system. For more information, see <i>SupportAssist for Business PCs manual</i> at Dell Support Site . NOTE: In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.
	Dell Update Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the product guides and third-party license documents at Dell Support Site .
	Dell Digital Delivery Download software applications, which are purchased but not preinstalled on your computer. For more information about using Dell Digital Delivery, search in the Knowledge Base Resource at Dell Support Site .

Specifications of Dell Pro Rugged 14 RB14250

Dimensions and weight

The following table lists the height, width, depth, and weight of your Dell Pro Rugged 14 RB14250.

Table 3. Dimensions and weight

Description	Values
Height:	
Front height	33.60 mm (1.32 in.)
Rear height	33.60 mm (1.32 in.)
Width	340.00 mm (13.38 in.)
Depth	220.00 mm (8.66 in.)
Weight  NOTE: The weight of your computer depends on the configuration that is offered.	Minimum - 2.04 kg (4.49 lb)

Processor

The following table lists the details of the processors that are supported in your Dell Pro Rugged 14 RB14250.

Table 4. Processor

Description	Option one	Option two	Option three
Processor type	Intel Core Ultra 5 125U	Intel Core Ultra 5 135U	Intel Core Ultra 7 165U
Processor wattage	15 W	15 W	15 W
Processor core count	12	12	12
Processor thread count	14	14	14
Processor speed	Up to 4.30 GHz	Up to 4.40 GHz	Up to 4.90 GHz
Processor cache	12 MB	12 MB	12 MB
Integrated graphics	Intel Graphics	Intel Graphics	Intel Graphics

Chipset

The following table lists the details of the chipset that is supported in your Dell Pro Rugged 14 RB14250.

Table 5. Chipset

Description	Values
Chipset	Integrated in the processor
Processor	Intel Core Ultra 5/7
DRAM bus width	64-bit
Flash EPROM	64 MB
PCIe bus	Up to Gen4

Operating system

Your Dell Pro Rugged 14 RB14250 supports the following operating systems:

- Windows 11 Home
- Windows 11 Pro

Memory

The following table lists the memory specifications that are supported by your Dell Pro Rugged 14 RB14250.

Table 6. Memory specifications

Description	Values
Memory slots	Two SODIMM slots
Memory type	DDR5
Memory speed	5600 MT/s
Maximum memory configuration	64 GB
Minimum memory configuration	8 GB
Memory size per slot	8 GB, 16 GB, or 32 GB
Memory configurations supported	<ul style="list-style-type: none">• 8 GB, 1 x 8 GB, DDR5, 5600 MT/s, single-channel• 16 GB, 2 x 8 GB, DDR5, 5600 MT/s, dual-channel• 32 GB, 2 x 16 GB, DDR5, 5600 MT/s, dual-channel• 64 GB, 2 x 32 GB, DDR5, 5600 MT/s, dual-channel

External ports and slots

The following table lists the external ports of your Dell Pro Rugged 14 RB14250.


Table 7. External ports and slots

Description	Values
Network port	One RJ45 Ethernet port 1 Gbps
USB ports	<ul style="list-style-type: none">• One USB 3.2 Gen 1 (5 Gbps) port• One USB 3.2 Gen 1 (5 Gbps) port with PowerShare• One Thunderbolt 4 (40 Gbps)/USB 3.2 Gen 2 Type-C port with PowerDelivery• One Thunderbolt 4 (40 Gbps)/USB 3.2 Gen 2 Type-C port with PowerDelivery (optional)• One optional I/O bay (Choose from: RJ45 (1 Gbps) Ethernet port/USB 3.2 Type-A port/Serial port/Fischer USB port)
Audio port	One headset (headphone and microphone combo) port
Video port(s)	One HDMI 2.1 TMDS port
Serial port	One Serial RS-232 port
SIM slot	One nanoSIM-card slot
Media-card reader	<ul style="list-style-type: none">• One microSD-card slot• Smart-card reader slot
Power-adaptor port	65W/100W adapter, USB Type-C
Security-cable slot	One wedge-shaped lock slot

Internal slots

The following table lists the internal slots of your Dell Pro Rugged 14 RB14250.

Table 8. Internal slots

Description	Values
M.2	<ul style="list-style-type: none">• One M.2 2230/2280 slot for solid state drive• One M.2 2230 slot for Wi-Fi and Bluetooth combo card• One M.2 3042 slot for WWAN card <p> NOTE: To learn more about the features of different types of M.2 cards, search in the Knowledge Base Resource at Dell Support Site.</p>

Ethernet

The following table lists the wired Ethernet Local Area Network (LAN) specifications of your Dell Pro Rugged 14 RB14250.


Table 9. Ethernet specifications

Description	Values
Model	Intel i219LM
Transfer rate	10/100/1000 Mbps

Wireless module

The following table lists the Wireless Local Area Network (WLAN) modules that are supported on your Dell Pro Rugged 14 RB14250.

Table 10. Wireless module specifications

Description	Option one	Option two
Model number	Intel AX211	Intel BE200
Transfer rate	Up to 2400 Mbps	Up to 5760 Mbps
Frequency bands supported	2.4 GHz/5 GHz/6 GHz	2.4 GHz/5 GHz/6 GHz
Wireless standards	<ul style="list-style-type: none">• Wi-Fi 802.11 a/b/g• Wi-Fi 4 (Wi-Fi 802.11n)• Wi-Fi 5 (Wi-Fi 802.11ac)• Wi-Fi 6E (Wi-Fi 802.11ax)	<ul style="list-style-type: none">• Wi-Fi 802.11a/b/g• Wi-Fi 4 (Wi-Fi 802.11n)• Wi-Fi 5 (Wi-Fi 802.11ac)• Wi-Fi 6E (Wi-Fi 802.11ax)• Wi-Fi 7 (Wi-Fi 802.11be)
Encryption	<ul style="list-style-type: none">• 64-bit/128-bit WEP• AES-CCMP• TKIP	<ul style="list-style-type: none">• 64-bit/128-bit WEP• AES-CCMP• TKIP
Bluetooth wireless card	Bluetooth 5.3	Bluetooth 5.4
	 NOTE: The functionality of the Bluetooth wireless card may vary depending on the operating system that is installed on your computer.	


WWAN module

The following table lists the Wireless Wide Area Network (WWAN) module supported on your Dell Pro Rugged 14 RB14250.

Table 11. WWAN module specifications

Description	Option one	Option two
Model number	Qualcomm Snapdragon X62 Global 5G (DW5932e)	Qualcomm Snapdragon SDX12 Global LTE-Advanced (DW5826e)
Transfer rate	<ul style="list-style-type: none">• 5G NR: DL 3.5 Gbps/UL 900 Mbps• LTE: DL 1.6 Gbps (CAT19)/UL 211 Mbps (CAT18)• UMTS: DL DC-HSPA+ Rel8:42 Mbps/UL 5.76 Mbps	<ul style="list-style-type: none">• Up to 600 Mbps DL (CAT12)• Up to 150 Mbps UL

Table 11. WWAN module specifications (continued)

Description	Option one	Option two
Frequency bands supported	<ul style="list-style-type: none"> NR (n1, n2, n3, n5, n7, n8, n12, n13, n14, 18, n20, n25, n26, n28, n30, n38, n40, n41, n48, n53, n66, n70, n71, n75, n76, n77, n78, n79) LTE (B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B17, B18, B19, B20, B25, B26, B28, B29, B30, B32, B34, B38, B39, B40, B41, B42, B43, B46, B48, B66, B71) WCDMA/HSPA+ (1, 2, 4, 5, 8) 	<ul style="list-style-type: none"> LTE(B1, B2, B3, B4, B5, B7, B8, B12, B13, B14, B18, B19, B20, B25, B26, B28, B29, B32, B38, B39, B40, B41, B42, B43, B48, B66, B71) HSPA+ (1,2,4,5,6,8,9,19)
Wireless standards	<ul style="list-style-type: none"> NR FR1 (Sub6) FDD/TDD LTE FDD/TDD WCDMA/HSPA+ GPS/GLONASS/Beidou/Galileo 	<ul style="list-style-type: none"> LTE FDD/TDD WCDMA/HSPA+ GPS/GLONASS/Beidou/Galileo/QZSS
Encryption	Supported	Not supported
Global Navigation Satellite System (GNSS)	Supports GPS, and GLONASS Location sensor	Supports GPS, and GLONASS Location sensor
 NOTE: For instructions on how to find your computer's International Mobile Station Equipment Identity (IMEI) number, search in the Knowledge Base Resource at Dell Support Site .		

Optional GPS module

The following table lists the u-blox NEO-M9N module that is supported on your Dell Pro Rugged 14.

Table 12. u-blox NEO-M9N module specifications

u-blox NEO-M9N module	
Interface	USB (default) and UART
Performance	
Receiver type	92-channel u-blox M9 engine GPS L1 C/A, QZSS L1 C/A/S, GLONASS L10F, BeiDou B1I, Galileo E1 B/C SBAS L1 C/A: WAAS, EGNOS, MSAS, GAGAN
Navigation update rate (maximum)	25 Hz (four concurrent GNSS modes)
Position accuracy	2.0 m CEP (four concurrent GNSS modes)
Supported protocol	<ul style="list-style-type: none"> UBX NMEA 4.10 (default), 4.0, 2.3, and 2.1 RTCM 3.3
Security features	<ul style="list-style-type: none"> Anti-jamming Anti-spoofing Configuration lockdown Message integrity Secure boot JTAG debug port (locked by default)
Absolute maximum ratings	
Power supply voltage	-0.5 V (minimum)

Table 12. u-blox NEO-M9N module specifications (continued)

u-blox NEO-M9N module	
	3.6 V (maximum)
Storage temperature	-40°C to 85°C (-40°F to 185°F)
Operating conditions	
Power supply voltage	2.7 V (minimum) 3.6 V (maximum)
Operating temperature	-40°C to 85°C (-40°F to 185°F)

Audio

The following table lists the audio specifications of your Dell Pro Rugged 14 RB14250.

Table 13. Audio specifications

Description		Values
Audio controller		Realtek ALC3254
Stereo conversion		Supported
Internal audio interface		High definition audio
External audio interface		One headset (headphone and microphone combo) port
Number of speakers		Two
Internal-speaker amplifier		Supported
External volume controls		Keyboard shortcut controls
Speaker output:		
	Average	2 W x 2 = 4 W
	Peak	2.5 W x 2 = 5 W
Microphone		Dual-array

Storage

This section lists the storage options on your Dell Pro Rugged 14 RB14250.

Your Dell Pro Rugged 14 RB14250 supports one of the following storage configurations:

- One M.2 2230/2280 solid state drive

Table 14. Storage specifications

Storage type	Interface type	Capacity
M.2 2230 solid state drive	Gen4 PCIe x4, Class 35	256 GB/512 GB/1 TB
M.2 2230 solid state drive	Gen4 PCIe x4, Class 35, Self-Encrypting Drive	256 GB


Table 14. Storage specifications (continued)

Storage type	Interface type	Capacity
M.2 2280 solid state drive	Gen4 PCIe x4, Class 40, Self-Encrypting Drive	512 GB/1 TB
M.2 2280 solid state drive	Gen4 PCIe x4, Class 40, Self-Encrypting Drive	2 TB

Media-card reader

The following table provides the specification of media cards supported by your Dell Pro Rugged 14 RB14250.

Table 15. Media-card reader specifications

Description	Values
Media-card slot type	One micro-SD card
Media-cards supported	<ul style="list-style-type: none"> • Micro Secure Digital (mSD) • Micro Secure Digital High Capacity (mSDHC) • Micro Secure Digital Extended Capacity (mSDXC)
 NOTE: The maximum capacity that is supported by the media-card reader varies depending on the standard of the media card that is installed on your computer.	



Keyboard

The following table lists the keyboard specifications of your Dell Pro Rugged 14 RB14250.


Table 16. Keyboard specifications

Description	Values
Keyboard type	<ul style="list-style-type: none"> • Standard, non-backlit keyboard with Copilot key • Standard, RGB backlit keyboard with Copilot key • Rubberized Sealed RGB backlit keyboard with Copilot key
Keyboard layout	<ul style="list-style-type: none"> • QWERTY • AZERTY • Kanji
Number of keys	<ul style="list-style-type: none"> • United States and Canada: 82 keys • United Kingdom: 83 keys • Brazil: 84 keys • Japan: 86 keys
Keyboard size	X = 19.05 mm key pitch Y = 19.05 mm key pitch
Keyboard shortcuts	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

Table 16. Keyboard specifications (continued)

Description	Values
	<p> NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in the BIOS setup program.</p> <p> NOTE: If Copilot in Windows is not available on your computer, pressing the Copilot key launches Windows search. For more information about Copilot in Windows, search in the Knowledge Base Resource at the Dell Support site.</p>

Keyboard shortcuts of Dell Pro Rugged 14 RB14250

 **NOTE:** Keyboard characters may differ depending on the keyboard language configuration. Keys that are used for shortcuts remain the same across all language configurations.

Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol that is shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol that is shown on the upper part of the key is typed out. For example, if you press **2**, 2 is typed out; if you press **Shift + 2**, @ is typed out.

The keys F1-F12 at the top row of the keyboard are function keys for multimedia control, as indicated by the icon on the key. Press the function key to invoke the task represented by the icon. For example, pressing F1 mutes the audio (see the table below).

However, if the function keys F1-F12 are needed for specific software applications, multimedia functionality can be disabled by pressing **Fn + Esc**. Later, multimedia control can be invoked by pressing **Fn** and the respective function key. For example, mute audio by pressing **Fn + F1**.


 **NOTE:** You can also define the primary behavior of the function keys (F1–F12) by changing **Function Key Behavior** in BIOS setup program.

Table 17. Function key primary behavior

Function key	Primary behavior
F1	Mute or unmute audio
F2	Decrease volume
F3	Increase volume
F4	Microphone Mute
F5	KB Illumination/Backlight
F6	Decrease brightness
F7	Increase brightness
F8	Switch to external display
F9	Stealth mode
F10	Print screen
F11	Full-screen mode
F12	Home

The **Fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

Table 18. Secondary behavior

Function key	Secondary behavior
Fn + F1	Operating system and application-specific F1 behavior
Fn + F2	Operating system and application-specific F2 behavior
Fn + F3	Operating system and application-specific F3 behavior
Fn + F4	Operating system and application-specific F4 behavior
Fn + F5	Operating system and application-specific F5 behavior
Fn + F6	Operating system and application-specific F6 behavior
Fn + F7	Operating system and application-specific F7 behavior
Fn + F8	Operating system and application-specific F8 behavior
Fn + F9	Operating system and application-specific F9 behavior
Fn + F10	Operating system and application-specific F10 behavior
Fn + F11	Operating system and application-specific F11 behavior
Fn + F12	Operating system and application-specific F12 behavior
Fn + Ctrl	Open the application menu
Fn + Esc	Toggle between multimedia and function key behavior
Copilot	<p>Launch Copilot in Windows</p> <p>NOTE: If Copilot in Windows is not available on your computer, the Copilot key launches Recall. If both Recall and Copilot in Windows are not available on your computer, the Copilot key launches Windows Search. For more information about Copilot in Windows and Recall, search in the Knowledge Base Resource at the Dell Support Site.</p>

Camera

The following table lists the camera specifications of your Dell Pro Rugged 14 RB14250.

Table 19. Camera specifications

Description	Values
Number of cameras	Two
Camera type	<ul style="list-style-type: none"> • HD-RGB • FHD-IR
Camera location	Front camera
Camera sensor type	CMOS sensor technology
Camera resolution:	
Still image	<ul style="list-style-type: none"> • 0.92 megapixel • 2.0 megapixel
Video	<ul style="list-style-type: none"> • 1280 x 720 at 30 fps • 1920 x 1080 at 30 fps
Infrared camera resolution:	

Table 19. Camera specifications (continued)

Description		Values
	Still image	<ul style="list-style-type: none"> 0.23
	Video	<ul style="list-style-type: none"> 640 x 360
Diagonal viewing angle:		
	Camera	<ul style="list-style-type: none"> 87 degrees
	Infrared camera	<ul style="list-style-type: none"> 87.60 degrees

Touchpad

The following table lists the touchpad specifications of your Dell Pro Rugged 14 RB14250.

Table 20. Touchpad specifications

Description		Values
Touchpad resolution:		
	Horizontal	>= 300 dpi
	Vertical	>= 300 dpi
Touchpad dimensions:		
	Horizontal	99.70 mm (3.92 in.)
	Vertical	50.00 mm (1.96 in.)
Touchpad gestures		For more information about the touchpad gestures available on Windows, see the Microsoft Knowledge Base article at Microsoft Support Site .

Battery

The following table lists the battery specifications of your Dell Pro Rugged 14 RB14250.

Table 21. Battery specifications

Description		Option one	Option two
Battery type		3-cell, 53.5 Wh, ExpressCharge, ExpressCharge Boost	3-cell, 53.5 Wh, Long Cycle Life, ExpressCharge
Battery voltage		11.4 VDC	11.4 VDC
Battery weight (maximum)		0.265 kg (0.584 lb)	0.265 kg (0.584 lb)
Battery dimensions:			
	Height	15.30 mm (0.60 in.)	15.30 mm (0.60 in.)
	Width	86.29 mm (3.39 in)	86.29 mm (3.39 in)
	Depth	128.44 mm (5.05 in.)	128.44 mm (5.05 in.)
Temperature range:			

Table 21. Battery specifications (continued)

Description		Option one	Option two
	Operating	<ul style="list-style-type: none"> Charge: 0°C to 50°C (32°F to 122°F) Discharge: -20°C to 70°C (-4°F to 158°F) 	<ul style="list-style-type: none"> Charge: 0°C to 50°C (32°F to 122°F) Discharge: -20°C to 70°C (-4°F to 158°F)
	Storage	-20°C to 60°C (-4°F to 140°F)	-20°C to 60°C (-4°F to 140°F)
Battery operating time		Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.
Express charging time (approximate) <i>i</i> NOTE: You can control the charging time, duration, start and end time, and so on, using the settings on the MyDell application (Power option). For more information about MyDell application, search in the Knowledge Base Resource at Dell Support Site .		Two hours	Two hours
Coin-cell battery		CR2032	CR2032
<p>CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.</p> <p>CAUTION: Dell Technologies recommends that you charge the battery regularly for optimal power consumption.</p>			

Power requirements

i **NOTE:** The information in this section is applicable to the European Union (EU) countries.

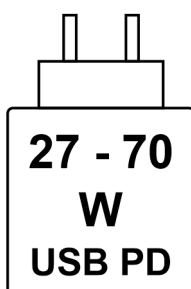


Figure 9. Pictogram for power charging requirements


The power that is delivered by the charger must be between a minimum of 27 Watts that is required by the radio equipment, and a maximum of 70 Watts in order to achieve the maximum charging speed.

This computer supports USB Power Delivery (PD) fast charging.

Power adapter

The following table lists the power adapter specifications of your Dell Pro Rugged 14 RB14250.

Table 22. Power-adapter specifications

Description		Option one	Option two
Type		65W AC adapter, USB Type-C	100W AC adapter, USB Type-C
Power-adapter dimensions:			
	Height	28 mm (1.10 in.)	26 mm (1.04 in.)
	Width	51 mm (2.01 in.)	60 mm (2.36 in.)
	Depth	112 mm (4.41 in.)	122 mm (4.8 in.)
Input voltage		100 VAC - 240 VAC	100 VAC - 240 VAC
Input frequency		50 Hz - 60 Hz	50 Hz - 60 Hz
Input current (maximum)		1.70 A	1.7 A
Output current (continuous)		<ul style="list-style-type: none"> 20 V/3.25 A (Continuous) 15 V/3 A (Continuous) 9 V/3 A (Continuous) 5 V/3 A (Continuous) 	<ul style="list-style-type: none"> 20 V/5 A (Continuous) 15 V/3 A (Continuous) 9 V/3 A (Continuous) 5 V/3 A (Continuous)
Rated output voltage		<ul style="list-style-type: none"> 20 VDC 15 VDC 9 VDC 5 VDC 	<ul style="list-style-type: none"> 20 VDC 15 VDC 9 VDC 5 VDC
Temperature range:			
	Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
	Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.			

Power adapter requirements (for computers shipped with integrated graphics)






 **NOTE:** The information in this section is applicable only to computers shipped with integrated graphics.

If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter you use meets the following requirements:


Table 23. Power adapter requirements

Description	Value
Power that is required from a power adapter to achieve optimal performance.	65 W
Power that charges the computer at a slower speed.	Less than 60 W

Table 23. Power adapter requirements (continued)

Description	Value
 NOTE: A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	
Minimum power that is required from a power adapter to operate the computer and charge the battery.  NOTE: A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	27 W
USB Power Delivery (PD) fast charging	Supported  NOTE: Ensure that the computer is connected to a 65 W power adapter for this feature to be supported.
ExpressCharge mode	Supported  NOTE: ExpressCharge mode must also be enabled in the BIOS Setup screen by selecting Power > Battery Configuration > ExpressCharge , then pressing Enter.  NOTE: Ensure that the computer is connected to a 65 W power adapter to achieve ExpressCharge .

Power adapter requirements (for computers shipped with discrete graphics)

 **NOTE:** The information in this section is applicable only to computers shipped with discrete graphics.

If you did not purchase the Dell-branded power adapter that is recommended for your computer, ensure that the power adapter you use meets the following requirements:

Table 24. Power adapter requirements






Description	Value
Power that is required from a power adapter to achieve optimal performance.	100 W
Power that charges the computer at a slower speed.  NOTE: A warning message may appear informing you about the use of a lower-powered adapter and slower charging speed.	Less than 75 W
Minimum power that is required from a power adapter to operate the computer and charge the battery.  NOTE: A warning message appears informing you about the use of a lower-powered adapter and slower charging speed.	27 W
USB Power Delivery (PD) fast charging	Supported  NOTE: Ensure that the computer is connected to a 100 W power adapter for this feature to be supported.
ExpressCharge mode	Supported  NOTE: ExpressCharge mode must also be enabled in the BIOS Setup screen by selecting Power > Battery Configuration > ExpressCharge , then pressing Enter.

Table 24. Power adapter requirements (continued)

Description	Value
	 NOTE: Ensure that the computer is connected to a 100 W power adapter to achieve ExpressCharge .

Display

The following table lists the display specifications of your Dell Pro Rugged 14 RB14250.

Table 25. Display specifications

Description	Option one	Option two
Display type	14-inch, Full High Definition (FHD)	14-inch, Full High Definition (FHD)
Touch options	No	Yes
Display-panel technology	Wide-viewing angle (WVA)	Wide-viewing angle (WVA)
Display-panel dimensions (active area):		
Height	173.95 mm (6.84 in.)	173.95 mm (6.84 in.)
Width	309.40 mm (12.18 in.)	309.40 mm (12.18 in.)
Diagonal	355.60 mm (14.00 in.)	355.60 mm (14.00 in.)
Display-panel native resolution	1920 x 1080	1920 x 1080
Luminance (typical)	400 nit	1100 nit
Megapixels	16.7	16.7
Color gamut	sRGB 100% typical	sRGB 100% typical
Pixels Per Inch (PPI)	157	157
Contrast ratio (minimum)	1500:1	1500:1
Response time (maximum)	35 ms	35 ms
Refresh rate	60 Hz	60 Hz
Horizontal view angle	<ul style="list-style-type: none"> Minimum: 80 +/- degrees Typical: 85 degrees 	<ul style="list-style-type: none"> Minimum: 80 +/- degrees Typical: 85 degrees
Vertical view angle	<ul style="list-style-type: none"> Minimum: 80 +/- degrees Typical: 85 degrees 	<ul style="list-style-type: none"> Minimum: 80 +/- degrees Typical: 85 degrees
Pixel pitch	0.161 x 0.161 mm	0.161 x 0.161mm
Power consumption (maximum)	2.5 W	5.95 W
Anti-glare vs glossy finish	Anti-glare	Anti-glare
Low blue light support	Yes	Yes

Fingerprint reader (optional)

The following table lists the specifications of the optional fingerprint-reader of your Dell Pro Rugged 14 RB14250.

Table 26. Fingerprint reader specifications

Description	Values
Sensor technology	Capacitive
Sensor resolution	363 dpi
Sensor pixel size	0.07 mm

Sensor

The following table lists the sensor of your Dell Pro Rugged 14 RB14250.

Table 27. Sensor

Sensor support
Hall Effect sensor

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Dell Pro Rugged 14 RB14250.

Table 28. GPU—Integrated

Controller	Memory size	Processor
Intel Graphics	Shared system memory	Intel Core Ultra 5 125U/Intel Core Ultra 5 135U/Intel Core Ultra 7 165U

Multiple display support matrix

The following table lists the multiple display support matrix for your Dell Pro Rugged 14 RB14250.

Table 29. Multiple display support matrix

Graphics Card	Direct Graphics Controller Direct Output Mode	Supported external displays with computer internal display on
Intel Graphics	Integrated	3

GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your Dell Pro Rugged 14 RB14250.

Table 30. GPU—Discrete

Controller	Memory size	Memory type
NVIDIA RTX 500 Ada Generation	4 GB	GDDR6

Multiple display support matrix

The following table lists the multiple display support matrix for your Dell Pro Rugged 14 RB14250.

Table 31. Multiple display support matrix

Graphics Card	Direct Graphics Controller Direct Output Mode	Supported external displays with computer internal display on	Supported external displays with computer internal display off
NVIDIA RTX 500 Ada Generation	Discrete	4	5

Hardware security

The following table lists the hardware security of your Dell Pro Rugged 14 RB14250.

Table 32. Hardware security

Hardware security
Wedge-shaped lock slot
Mechanical camera privacy shutter
Trusted Platform Module (TPM) 2.0 discrete
FIPS (Federal Information Processing Standards) 140-2 certification for Trusted Platform Module (TPM)
Trusted Computing Group (TCG) Certification for TPM
Self-Encrypting Drive (SED), Opal 2.0 only - PCIe Interface
ControlVault 3 Advanced Authentication with FIPS 140-3 Level 3 Certification
Optional Fingerprint Reader with Control Vault 3 (optional)
Optional Contacted Smart-Card and Control Vault 3 Plus (optional)
Optional Contactless Smart-Card, NFC, and Control Vault 3 Plus (optional)
Statement of Non-Volatility
Chassis Intrusion Detection
Dell Trusted Device Agent Validation
Battery Removal Detection

Smart-card reader

Contactless smart-card reader

This section lists the contactless smart-card reader specifications of your Dell Pro Rugged 14 RB14250. This module is only available in computers shipped with Smart-card readers.

Table 33. Contactless smart-card reader specifications

Title	Description	Dell ControlVault 3 Plus Contactless Smart-card reader with NFC
Felica Card Support	Reader and software capable of supporting Felica contactless cards	Yes

Table 33. Contactless smart-card reader specifications (continued)

Title	Description	Dell ControlVault 3 Plus Contactless Smart-card reader with NFC
Prox (Proximity) (125 kHz) Card support	Reader and software capable of supporting Prox/Proximity/125 kHz contactless cards	No
ISO 14443 Type A Card Support	Reader and software capable of supporting ISO 14443 Type A contactless cards	Yes
ISO 14443 Type B Card Support	Reader and software capable of supporting ISO 14443 Type B contactless cards	Yes
ISO/IEC 21481	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO/IEC 18092	Reader and software capable of supporting ISO/IEC 21481 compliant contactless cards and tokens	Yes
ISO 15693 Card Support	Reader and software capable of supporting ISO15693 contactless cards	Yes
NFC Tag Support	Supports reading and processing of NFC-compliant tag information	Yes
NFC Reader Mode	Support for NFC Forum Defined Reader mode	Yes
NFC Writer Mode	Support for NFC Forum Defined Writer mode	Yes
NFC Peer-to-Peer Mode	Support for NFC Forum Defined Peer to Peer mode	Yes
NFC Proximity OS Interface	Enumerates NFP (Near Field Proximity) device for OS to utilize	Yes
PC/SC OS interface	Personal Computer/Smart-Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for OS level drivers	Yes
Dell ControlVault support	The device connects to Dell ControlVault for usage and processing	Yes


 **NOTE:** 125 Khz proximity cards are not supported.

Table 34. Supported contactless card types

Interface	Card Type	Supported Functionality
NFC Forum (Microsoft Proximity Device)	Type 1 tag	Read/Write NDEF
	Type 2 tag	Read/Write NDEF
	Type 3 tag	Read/Write NDEF
	Type 4 tag	Read/Write NDEF
	Type 5 tag	Read/Write NDEF

Table 34. Supported contactless card types (continued)

Interface	Card Type	Supported Functionality
	P2P	Exchange NDEF
RFID (Microsoft Smartcard Device)	ISO14443A	Read UUID and APDU Exchange (ISO7816)
	ISO14443B	Read UUID and APDU Exchange (ISO7816)
	Sony FeliCa	Read UUID only
	Legacy iClass (ISO15693)	Read UUID only
	Mifare Classic	Read UUID only
	Low Frequency (125 KHz)	Not Supported

Table 35. Qualified cards -1

Manufacturer	Card	Supported
HID	jCOP readertest3 A card (14443a)	Yes
	1430 1L	Yes
	DESFire D8H	Yes
	DESFire 4K Standard - 1450NGGNN	Yes
	iClass 16K/16 - 2002PGGMN	Yes
	iClass SR 16K/16 - 2002HPGGMN	Yes
	iCLASS 2K tag	Yes
	iCLASS GP - 2003 PGGMN	Yes
	iClass Clamshell - 2080PMSMV	Yes
	iClass Prox 16K/16 - 2022BGGMNN	Yes
	Mifare M1P 1430 NGGNN	Yes
	iclass Prox 2020BGGMNM	Yes
	DesFire D8P 1456CSGMN	Yes
	iCLASS MIFARE Px GM49Y 2623BNPGGBNAB	Yes
	iCLASS MIFARE Px 8M1L	Yes
	iClass SEOS JW 5006PGGMN	Yes
	Crescendo iCLASS Px G8H	Yes
	iCLASS Seos IY	Yes
	SEOS JMC4 J1Y 5806VNG1NNN4	Yes
	SEOS Key FOB 5266PNNA	Yes
	SEOS Clamshell 5656PMSAV	Yes
	SEOS + Prox 5106RGGMNN	Yes

Table 36. Qualified cards -2

Manufacturer	Card	Supported
HID	SEOS + DESFire 5906PNG1ANN7	Yes
	SEOS iClass 5006PGGMN7	Yes

Table 36. Qualified cards -2 (continued)

Manufacturer	Card	Supported
	Seos Essential + Prox 551PPGGANN	Yes
	iCLASS 2K 2000PGGMN	Yes
	iCLASS 2K 3000PGGMN	Yes
	MIFARE DESFire 3700CPGGAN	Yes
	iCLASS DP	Yes
	DESFire 1Y	Yes
NXP/Mifare	Mifare DESFire 8K White PVC Cards	Yes
	Mifare Classic 1K White PVC Cards	Yes
	Mifare Mifare S50 ISO Cards	Yes
	Mifare DESFire 2K	Yes
	Mifare Plus S 2K/4K	Yes
	Mifare Plus X 4K	Yes
G&D	idOnDemand - SCE3.2 144K	Yes
	SCE6.0 FIPS 80K Dual+ 1 K Mifare	Yes
	SCE6.0 nonFIPS 80K Dual+ 1 K Mifare	Yes
	SCE6.0 FIPS 144K Dual + 1K Mifare	Yes
	SCE6.0 non-FIPS 144K Dual + 1 K Mifare	Yes
	SCE7.0 FIPS 144K	Yes

Table 37. Qualified cards -2

Manufacturer	Card	Supported
Oberthur	idOnDemand - OCS5.2 80K	Yes
	ID-One Cosmo 64 RSA D V5.4 T = 0 card	Yes
	ID-One Cosmo 128K V5.5 card	Yes
Gemalto	TOP DL GX4 144K card	Yes
Sony	Felica RC-S962	Yes
	Felica RC-S965	Yes
	Felica RC-S966	Yes
PIVKey	C910 PKI	Yes
NIST	PIV1	Yes
IDENTIV	PIV programmed cards	Yes
	uTrust	Yes
Transport cards	Oyster (London) MIFARE DESFire	Yes
	T-Money (Korea)	Yes
	Octopus Card (Hong Kong)	Yes
	SUICA (Japan)	Yes

Table 38. Qualified NFC tags

NFC tag	Supported
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM920203)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz 512 (BCM20203T512)	Yes
Tap and do - NFC Forum Type 1 Tag - Topaz (BCM20203T96)	Yes
Tap and do - NFC Forum Type 2 Tag - Mifare Ultra-Light	Yes
Tap and do - NFC Forum Type 2 Tag - Mifare Ultra-Light C	Yes
Tap and do - NFC Forum Type 2 Tag - NTAG203	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa Lite RC-S965	Yes
Tap and do - NFC Forum Type 3 Tag - FeliCa RC-S962	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 2K	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 4K	Yes
Tap and do - NFC Forum Type 4 Tag - Mifare DESFire EV1Card 8K	Yes
Tap and do - ISO 15693 - Tag-it Plus	Yes
HID I-code ISO card	Yes

Contacted smart-card reader

The following table lists the contacted smart-card reader specifications of your Dell Pro Rugged 14 RB14250.

Table 39. Contacted smart-card reader specifications

Title	Description	Dell ControlVault 3 Plus Smart-card reader
ISO 7816 -3 Class A Card Support	Reader capable of reading 5 V powered smart-card	Yes
ISO 7816 -3 Class B Card Support	Reader capable of reading 3 V powered smart-card	Yes
ISO 7816 -3 Class C Card support	Reader capable of reading 1.8 V powered smart-card	Yes
T = 0 support	Cards support character level transmission	Yes
T = 1 support	Cards support block level transmission	Yes
EMVCo Certified	Formally certified based on EMVCO smart-card standards	Yes
PC/SC OS interface	Personal Computer/Smart-Card specification for integration of hardware readers into personal computer environments	Yes
CCID driver compliance	Common driver support for Integrated Circuit Card Interface Device for OS level drivers.	Yes

Table 39. Contacted smart-card reader specifications (continued)


Title	Description	Dell ControlVault 3 Plus Smart-card reader
Windows Certified	Certified by the Windows Hardware Certification program	Yes
FIPS 201 (PIV/HSPD-12) Compliant	Device compliant with FIPS 201/PIV/HSPD-12 requirements	Yes
ISO 7816-1 Compliant	Specification for the physical characteristics of integrated circuit cards with contacts	Yes
ISO 7816 -2 Compliant	Specification for the dimensions and location of the contacts	Yes
ISO 7816-3 Compliant	Specification for electrical interface and transmission protocols	Yes
ISO 7816-4 Compliant	Specification for organization, security, and commands for interchange	Yes
Dell ControlVault support	The device connects to Dell ControlVault for usage and processing	Yes

Operating and storage environment

This table lists the operating and storage specifications of your Dell Pro Rugged 14 RB14250.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985


Table 40. Computer environment

Description	Operating	Storage
Temperature range	-29°C to 63°C (-20.2°F to 145.4°F)	-51°C to 71°C (-60°F to 160°F)
Relative humidity (maximum)	10% to 95% (Max dew point temperature = 26°C)	5% to 95% (Max dew point temperature = 33°C)
Vibration (maximum)*	Random at 5 Hz to 500 Hz <ul style="list-style-type: none"> Vertical - 1.08 GRMS Transverse - 0.21 GRMS Longitudinal - 0.76 GRMS 	7.70 GRMS random at 5 Hz to 2000 Hz
Shock (maximum)	160 G†	185 G†
Altitude range	12,192 m (40,000 ft)	12,192 m (40,000 ft)
 CAUTION: Operating and storage temperature ranges may differ among components, so operating or storing the device outside these ranges may impact the performance of specific components.		


* Measured using a random vibration spectrum that simulates the user environment.

† Measured using a 2 ms half-sine pulse.

Dell low blue light display

 **WARNING:** Prolonged exposure to blue light from the display may lead to long-term effects such as eye strain, eye fatigue, or damage to the eyes.

Blue light is a color in the light spectrum which has a short wavelength and high energy. Chronic exposure to blue light, particularly from digital sources may disrupt sleep patterns and cause long-term effects such as eye strain, eye fatigue, or damage to the eyes.

 **NOTE:** The display on this computer is designed to minimize blue light and complies with TÜV Rheinland's requirement for low blue light (hardware solution) displays.

Low blue light (hardware solution) mode is enabled at the factory, so no further configuration is necessary.










To reduce the risk of eye strain, it is also recommended that you:

- Position the display at a comfortable viewing distance between 20 and 28 inches (50 cm and 70 cm) from your eyes.
- Blink frequently to moisten your eyes, wet your eyes with water, or apply eye drops.
- Look away from your display, and gaze at a distant object at 20 ft (609.60 cm) away for at least 20 seconds during each break.
- Take an extended break for 20 minutes every two hours.

Working inside your computer



Safety instructions

Use the following safety guidelines to protect your computer from potential damage and to ensure your personal safety. Unless otherwise noted, each procedure in this document assumes that you have read the safety information that shipped with your computer.

-  **WARNING:** Before working inside your computer, read the safety information that is shipped with your computer. For more safety best practices, see [Dell Regulatory Compliance Home Page](#).
-  **WARNING:** Disconnect your computer from all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting your computer to an electrical outlet.
-  **CAUTION:** To avoid damaging the computer, ensure that the work surface is flat, dry, and clean.
-  **CAUTION:** You should only perform troubleshooting and repairs as authorized or directed by the Dell technical support team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that is shipped with the product or at [Dell Regulatory Compliance Home Page](#).
-  **CAUTION:** Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity which could harm internal components.
-  **CAUTION:** To avoid damaging the components and cards, handle them by their edges, and avoid touching the pins and the contacts.
-  **CAUTION:** When you disconnect a cable, pull it by its connector or its pull tab, not the cable itself. Some cables have connectors with locking tabs or thumbscrews that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending the connector pins. When connecting cables, ensure that the connector on the cable is correctly oriented and aligned with the port.
-  **CAUTION:** Press and eject any installed card from the media-card reader.
-  **CAUTION:** Exercise caution when handling rechargeable Li-ion batteries in laptops. Swollen batteries should not be used and should be replaced and disposed properly.

Before working inside your computer

Steps

1. Save and close all open files and exit all open applications.
2. Shut down your computer. For Windows operating system, click **Start** >  **Power** > **Shut down**.
 **NOTE:** If you are using a different operating system, see the documentation of your operating system for instructions.
3. Turn off all the attached peripherals.
4. Disconnect your computer from the electrical outlets.
5. Disconnect all attached network devices and peripherals, such as keyboard, mouse, and monitor from your computer.
6. Remove any media card and optical drive from your computer, if applicable.
7. Enter the Service Mode.

Service Mode

Service Mode is used to cut off power without disconnecting the battery cable from the system board before conducting repairs in the computer.



CAUTION: If you are unable to turn on the computer to put it into Service Mode, proceed to disconnect the battery cable. To disconnect the battery cable, follow the steps in [Removing the battery](#).



NOTE: Ensure that your computer is shut down and the power adapter is disconnected.

- a. Press and hold the B key and the power button for 3 seconds or until the Dell logo appears on the screen.
- b. Press any key to continue.
- c. If the power adapter is not disconnected, a message prompting you to disconnect the power adapter appears on the screen. Disconnect the power adapter and then press any key to enter into the Service Mode. The Service Mode process automatically skips the following step if the **Owner Tag** of the computer is not set up in advance by the user.
- d. When the **ready-to-proceed** message appears on the screen, press any key to proceed. The computer emits three short beeps and shuts down immediately.
The computer shuts down and enters the Service Mode.

Safety precautions

This section details the primary steps to be followed before performing any disassembly instructions.

Observe the following safety precautions before you perform any installation or break-fix procedures involving disassembly or reassembly:

- Turn off the computer and all attached peripherals.
- Disconnect the computer from AC power.
- Disconnect all network cables and peripherals from the computer.
- Use an ESD field service kit when working inside any to avoid electrostatic discharge (ESD) damage.
- Place the removed component on an anti-static mat after removing it from the computer.
- Wear shoes with nonconductive rubber soles to reduce the chance of getting electrocuted.
- Unplugging, pressing, and holding the power button for 15 seconds should discharge residual power in the system board.

Standby power

Dell products with standby power must be unplugged before you open the back cover. Systems that are equipped with standby power are powered while turned off. The internal power enables the computer to be remotely turned on (Wake-on-LAN) and suspended into a sleep mode and has other advanced power management features.

Bonding

Bonding is a method for connecting two or more grounding conductors to the same electrical potential. This is done by using a field service electrostatic discharge (ESD) kit. When connecting a bonding wire, ensure that it is connected to bare metal and never to a painted or nonmetal surface. Ensure that the wrist strap is secure and in full contact with your skin. Remove all jewelry, watches, bracelets, or rings before grounding yourself and the equipment.

Electrostatic discharge—ESD protection

ESD is a major concern when you handle electronic components, especially sensitive components such as expansion cards, processors, memory modules, and system boards. A slight charge can damage circuits in ways that may not be obvious, such as intermittent problems or a shortened product life span. As the industry pushes for lower power requirements and increased density, ESD protection is an increasing concern.

Due to the increased density of semiconductors used in recent Dell products, the sensitivity to static damage is now higher than in previous Dell products. For this reason, some previously approved methods of handling parts are no longer applicable.

Two recognized types of ESD damage are catastrophic and intermittent failures.

- **Catastrophic** – Catastrophic failures represent approximately 20 percent of ESD-related failures. The damage causes an immediate and complete loss of device functionality. An example of catastrophic failure is a memory module that has

received a static shock and immediately generates a "No POST/No Video" symptom with a beep code that is emitted for missing or nonfunctional memory.

- **Intermittent** – Intermittent failures represent approximately 80 percent of ESD-related failures. The high rate of intermittent failures means that most of the time when damage occurs, it is not immediately recognizable. The memory module receives a static shock, but the tracing is merely weakened and does not immediately produce outward symptoms that are related to the damage. The weakened trace may take weeks or months to melt, and in the meantime may cause degradation of memory integrity, intermittent memory errors, and so on.


Intermittent failures that are also called latent or "walking wounded" are difficult to detect and troubleshoot.

Perform the following steps to prevent ESD damage:

- Use a wired ESD wrist strap that is properly grounded. Wireless anti-static straps do not provide adequate protection. Touching the chassis before handling parts does not ensure adequate ESD protection on parts with increased sensitivity to ESD damage.
- Handle all static-sensitive components in a static-safe area. If possible, use anti-static floor pads and workbench pads.
- When unpacking a static-sensitive component from its shipping carton, do not remove the component from the anti-static packing material until you are ready to install the component. Before unwrapping the anti-static packaging, use the anti-static wrist strap to discharge the static electricity from your body. For more information about the wrist strap and ESD wrist strap tester, see [Components of an ESD Field Service Kit](#).
- Before transporting a static-sensitive component, place it in an anti-static container or packaging.

ESD Field Service kit

The unmonitored field service kit is the most commonly used service kit. Each Field Service kit includes three main components: anti-static mat, wrist strap, and bonding wire.

 **CAUTION:** It is critical to keep ESD-sensitive devices away from internal parts that are insulated and often highly charged, such as plastic heat sink casings.

Working Environment

Before deploying the ESD Field Service kit, assess the situation at the customer location. For example, deploying the kit for a server environment is different than for a desktop or laptop environment. Servers are typically installed in a rack within a data center; desktops or laptops are typically placed on office desks or cubicles. Always look for a large open flat work area that is free of clutter and large enough to deploy the ESD kit with additional space to accommodate the type of computer that is being repaired. The workspace should also be free of insulators that can cause an ESD event. On the work area, insulators such as styrofoam and other plastics should always be moved at least 12 inches or 30 centimeters away from sensitive parts before physically handling any hardware components.

ESD Packaging

All ESD-sensitive devices must be shipped and received in static-safe packaging. Metal, static-shielded bags are preferred. However, you should always return the damaged component using the same ESD bag and packaging that the new part arrived in. The ESD bag should be folded over and taped shut and all the same foam packing material should be used in the original box that the new part arrived in. ESD-sensitive devices should be removed from packaging only at an ESD-protected work surface, and parts should never be placed on top of the ESD bag because only the inside of the bag is shielded. Always place parts in your hand, on the anti-static mat, in the computer, or inside an ESD bag.


Components of an ESD Field Service kit

The components of an ESD Field Service kit are:

- **Anti-Static Mat** – The anti-static mat is dissipative and parts can be placed on it during service procedures. When using an anti-static mat, your wrist strap should be snug and the bonding wire should be connected to the anti-static mat and to any bare metal on the computer being worked on. Once deployed properly, service parts can be removed from the ESD bag and placed directly on the anti-static mat. ESD-sensitive items are safe in your hand, on the anti-static mat, in the computer, or inside an ESD bag.
- **Wrist Strap and Bonding Wire** – The wrist strap and bonding wire can be either directly connected between your wrist and bare metal on the hardware if the anti-static mat is not required, or connect to the anti-static mat to protect hardware that is temporarily placed on the mat. The physical connection of the wrist strap and bonding wire between your skin, the anti-static mat, and the hardware is known as bonding. Use only Field Service kits with a wrist strap, anti-static mat, and

bonding wire. Never use wireless wrist straps. Always be cautious that the internal wires of a wrist strap are prone to damage from normal wear and tear, and must be checked regularly with a wrist strap tester in order to avoid accidental ESD hardware damage. It is recommended to test the wrist strap and bonding wire at least once per week.

- **ESD Wrist Strap Tester** – The wires inside an ESD strap are prone to damage over time. When using an unmonitored kit, it is a best practice to regularly test the strap prior to each service, and at a minimum, test once per week. A wrist strap tester is the best method for doing this test. To perform the test, plug the bonding-wire of the wrist-strap into the tester while it is strapped to your wrist and push the button to test. A green LED is lit if the test is successful; a red LED is lit and an alarm sounds if the test fails.

 **NOTE:** It is recommended to always use the traditional wired ESD grounding wrist strap and protective anti-static mat when servicing Dell products. In addition, it is critical to keep sensitive parts separate from all insulator parts while servicing the computer.

Transporting sensitive components

When transporting ESD sensitive components such as replacement parts or parts to be returned to Dell, it is critical to place these parts in anti-static bags for safe transport.


After working inside your computer

About this task

 **CAUTION:** Leaving stray or loose screws inside your computer may severely damage your computer.


Steps

1. Replace all screws and ensure that no stray screws remain inside your computer.
2. Connect any external devices, peripherals, or cables you removed before working on your computer.
3. Replace any media cards, disks, or any other parts that you removed before working on your computer.
4. Connect your computer to their electrical outlets.

 **NOTE:** To exit service mode, ensure to connect the AC adapter to the power-adapter port on your computer.

5. Press the power button to turn on the computer. Your computer will automatically return to normal functioning mode.

BitLocker

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the Bitlocker key is not recognized the next time you reboot the computer. You will then be prompted to enter the recovery key to progress, and the system displays a prompt for the recovery key on each reboot. If the recovery key is not known, this can result in data loss or an operating system reinstall. For more information, see Knowledge Article: [updating the BIOS on Dell systems with BitLocker enabled](#).

The installation of the following components triggers BitLocker:

- Hard disk drive or solid-state drive
- System board

Recommended tools

The procedures in this document may require the following tools:

- Phillips screwdriver #0
- Phillips screwdriver #1
- Torx T8 screwdriver



Figure 10. Torx T8 screw

- 5.5 mm socket wrench

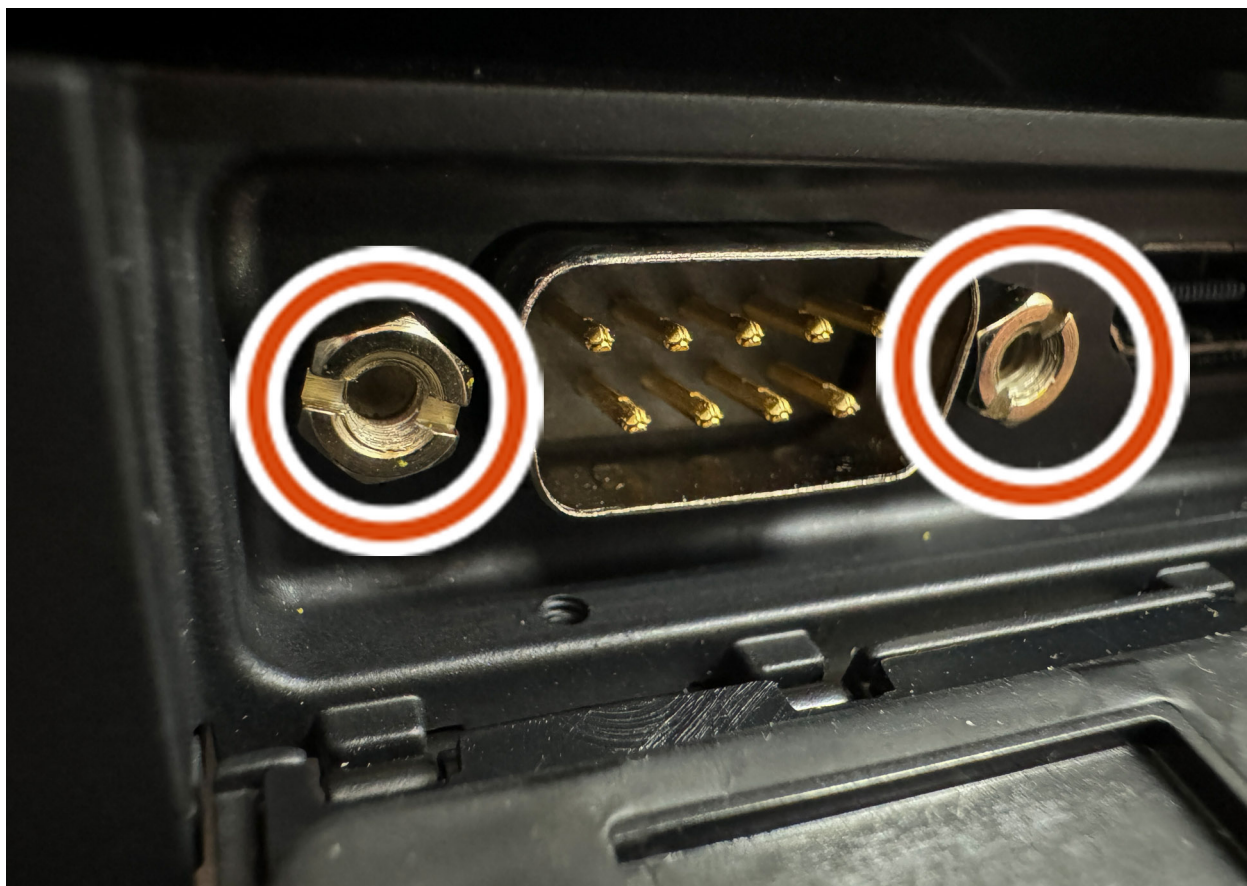


Figure 11. 5.5 mm Socket screw

- Plastic scribe

Screw list

- NOTE:** When removing screws from a component, it is recommended to note the screw type and the quantity of screws, and then place them in a screw storage box. This is to ensure that the correct number of screws and correct screw type is restored when the component is replaced.
- NOTE:** Some computers have magnetic surfaces. Ensure that the screws are not left attached to such surfaces when replacing a component.
- NOTE:** Screw color may vary depending on the configuration ordered.

Table 41. Screw list


Component	Screw type	Quantity	Screw image
Solid state drive carrier	M2x4	1	

Table 41. Screw list (continued)

















Component	Screw type	Quantity	Screw image
M.2 2230 solid state drive	M2x2	1	
	M2x5	1	
M.2 2280 solid state drive	M2x5	1	
Handle	M3.5x9	2	
Keyboard	M2.5x4 (rubberized sealed)	4	
	M2.5x4 (standard)	6	
	M2x3.5	4	
Base cover	M2.5x7	22	
	M2.5x4	8	
Fan	M2.5x6.5 (captive screws)	3	
RF switch board	M2.5x5	2	
WLAN card	M2x3.5	1	
WWAN card	M2x3.5	1	
GPS board	M2.5x5	2	
Dock I/O-module	M2x3.5	1	
Dock Wi-Fi board	M2x3.5	1	
Heat sink	M2x6 (captive screws)	7 (UMA)	
	M2x6 (captive screws)	7 (Discrete)	

Table 41. Screw list (continued)

Component	Screw type	Quantity	Screw image
			
Rear I/O-board	M2.5x5	2	
System board	M2.5x5 M2x3.5 #4-40x6.5	8 5 2	  
Right Type-C board	M2x3.5	5	
Left Type-C board	M2x3.5	5	
Display assembly	M3x7, T8 M2.5x7 M2.5x5	6 2 2	  
Display-panel assembly	M2.5x6, T8 M2.5x6, T8	11 4	 
Right Type-C port latch-door	M2x3.5 M2x3	2 1	 
Left Type-C port latch-door	M2x3.5 M2x3	2 1	

Table 41. Screw list (continued)

Component	Screw type	Quantity	Screw image
			
Ethernet port latch-door	M2x3	2	
HDMI port latch-door	M2x3	1	
Serial port latch-door	M2x3	2	
Left USB port latch-door	M2x3	2	
Left audio port latch-door	M2x3	2	

Major components of Dell Pro Rugged 14 RB14250

The following image shows the major components of Dell Pro Rugged 14 RB14250.

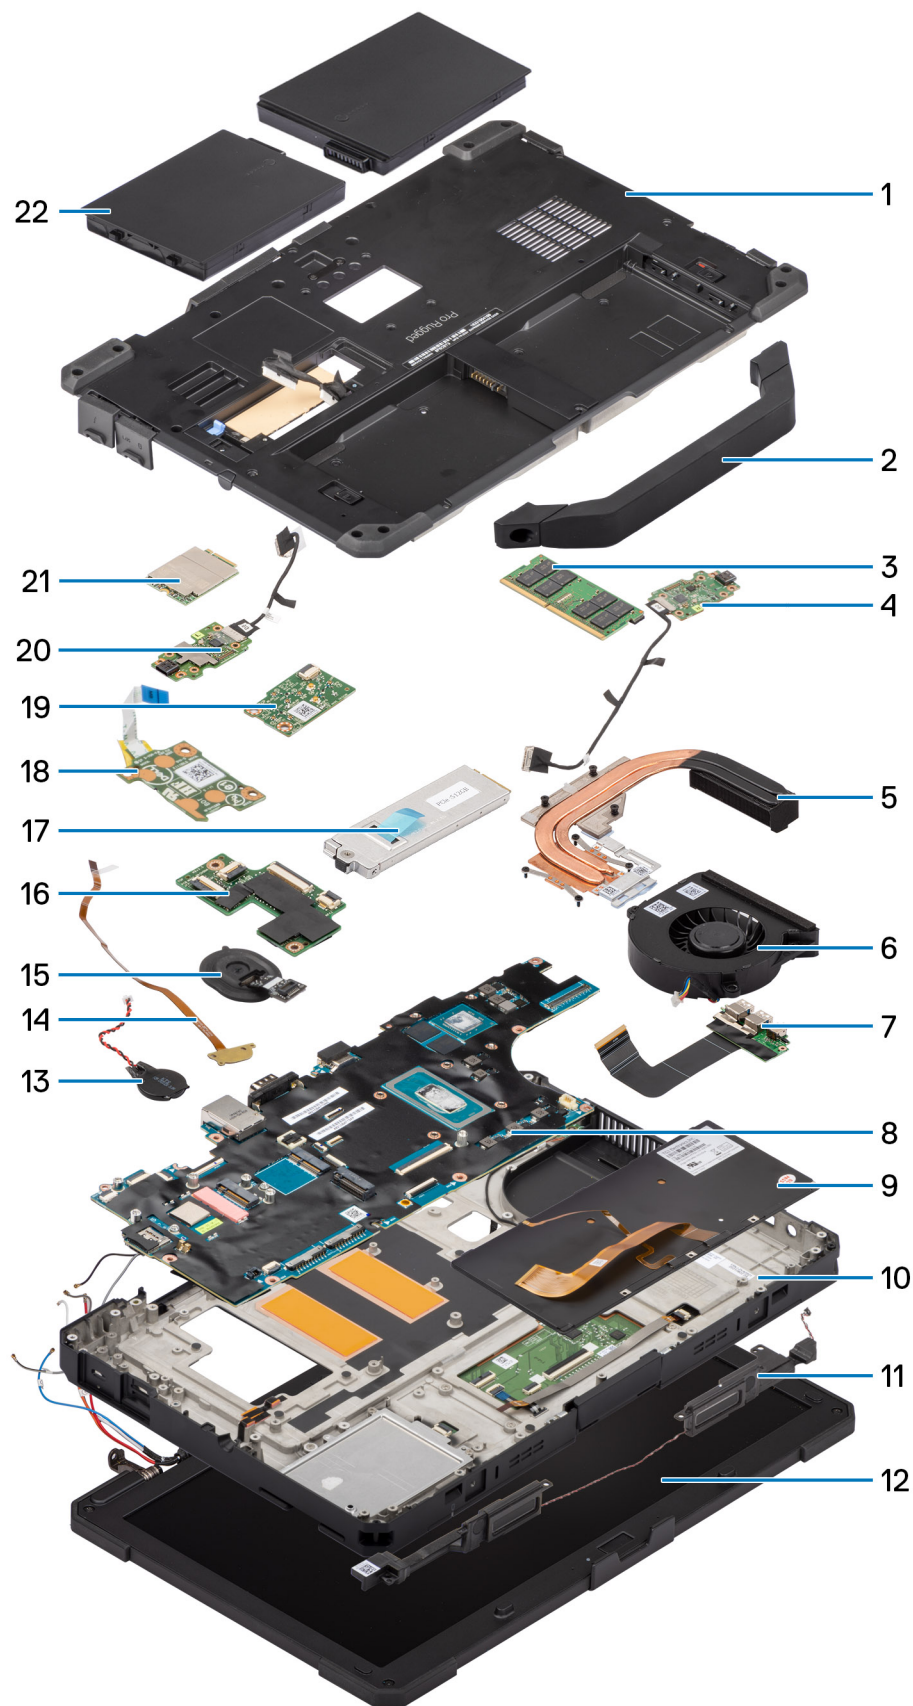



Figure 12. Exploded view

1. Base cover
2. Rigid handle
3. Memory module
4. Left USB Type-C board
5. Heat sink
6. Fan
7. Left I/O-board
8. System board
9. Keyboard
10. Palm-rest assembly
11. Speakers
12. Display assembly
13. Coin-cell battery
14. Keyboard LED board
15. Power button with fingerprint reader
16. USH board
17. Solid state drive
18. Power-button board
19. RF switch board
20. Right USB Type-C board
21. WWAN module
22. Battery

 **NOTE:** Dell provides a list of components and their part numbers for the original computer configuration purchased. These parts are available according to warranty coverage purchased by the customer. Contact your Dell sales representative for purchase options.

Removing and installing Customer Replaceable Units (CRUs)

The replaceable components in this chapter are Customer Replaceable Units (CRUs).

CAUTION: Customers can replace only the Customer Replaceable Units (CRUs) following the safety precautions and replacement procedures.

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

Battery

Rechargeable Li-ion battery precautions

CAUTION:

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery completely before removing it. Disconnect the AC power adapter from the computer and operate the computer solely on battery power—the battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any kind to pry on or against the battery.
- Ensure any screws during the servicing of this product are not lost or misplaced, to prevent accidental puncture or damage to the battery and other computer components.
- If the battery gets stuck inside your computer as a result of swelling, do not try to release it as puncturing, bending, or crushing a rechargeable Li-ion battery can be dangerous. In such an instance, contact Dell technical support for assistance. See [Contact Support at Dell Support Site](#).
- Always purchase genuine batteries from [Dell Site](#) or authorized Dell partners and resellers.
- Swollen batteries should not be used and should be replaced and disposed properly. For guidelines on how to handle and replace swollen rechargeable Li-ion batteries, see [Handling swollen rechargeable Li-ion batteries](#).

Removing the batteries

Prerequisites

1. Follow the procedure in [before working inside your computer](#).

NOTE: Dell Pro Rugged 14 RB14250 can accommodate two swappable batteries (primary and optional). The removal procedure of the primary and optional batteries are identical.

About this task

The following images indicate the location of the right and left batteries and provide a visual representation of the removal procedure.

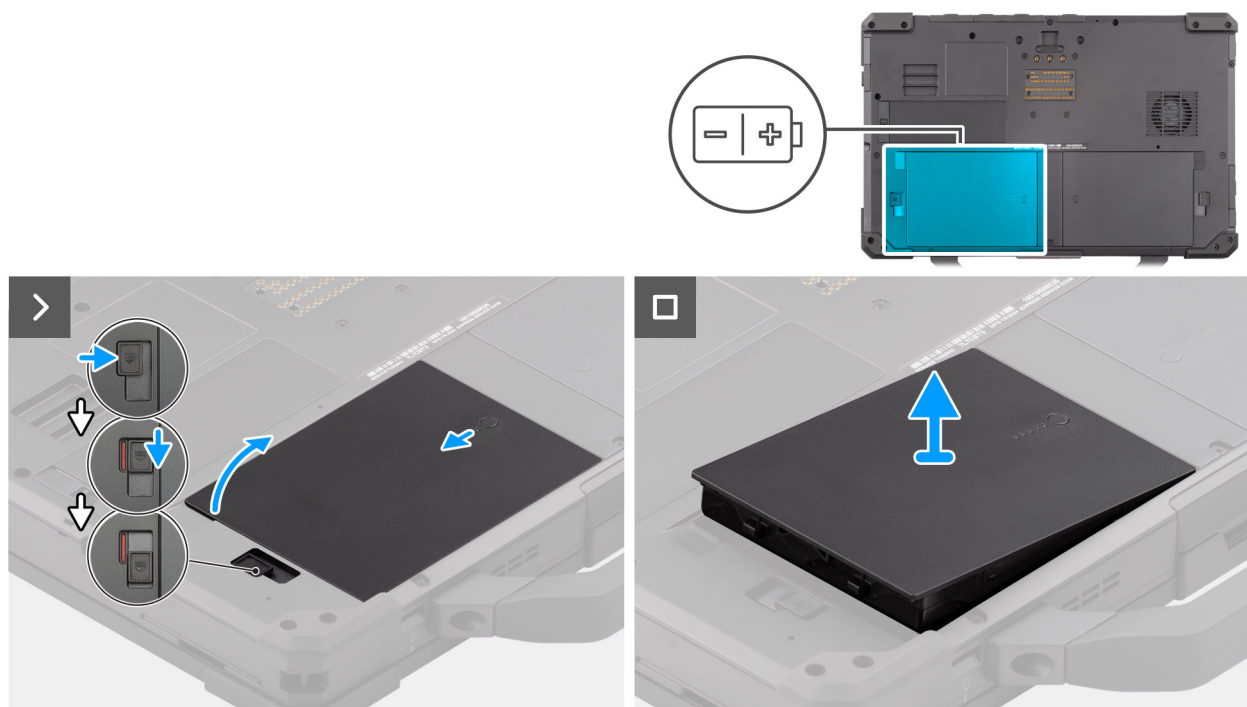


Figure 13. Removing the right-side battery

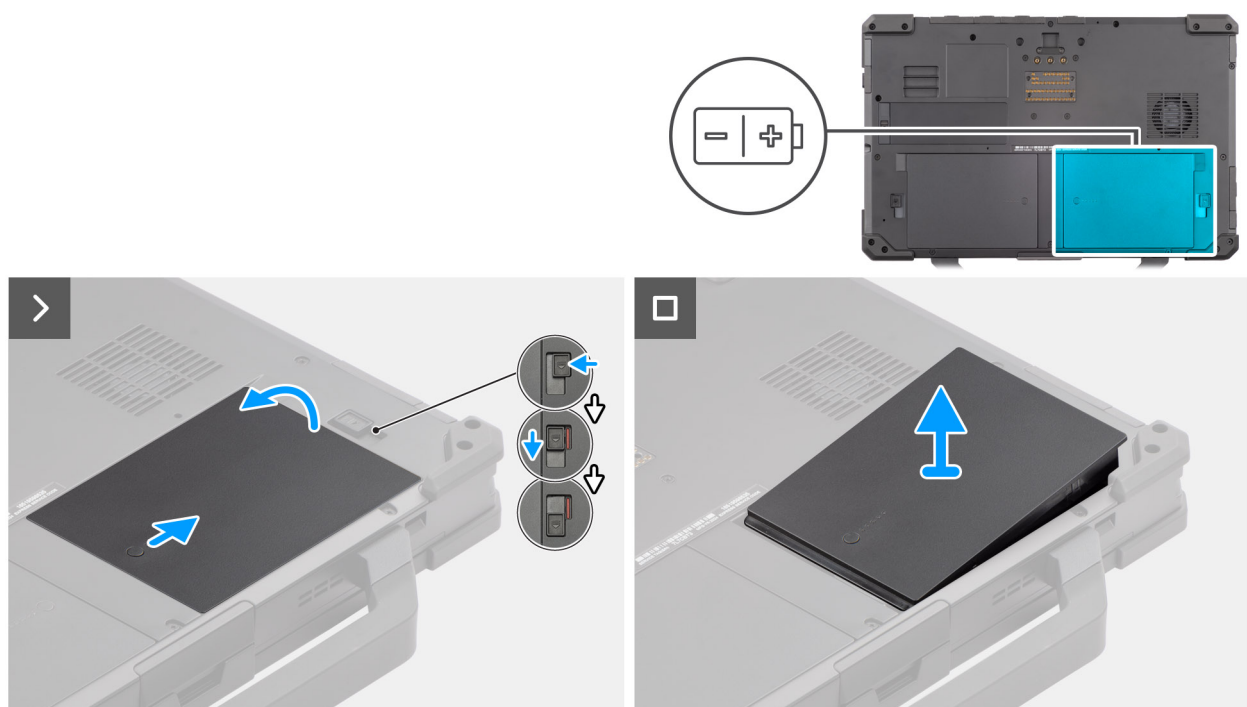


Figure 14. Removing the left-side battery

Steps

1. Slide the battery release latch to the unlocked position.
2. Slide the latch down to unlock the battery.
3. Lift the battery from the battery bay and remove it from the computer.

Installing the batteries

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

NOTE: Dell Pro Rugged 14 RB14250 can accommodate two swappable batteries (primary and optional). The removal procedure of the primary and optional batteries are identical.

NOTE: BIOS displays a battery error when non-Dell Pro Rugged 14 RB14250 batteries are used.

The following images indicate the location of the right and left batteries and provide a visual representation of the installation procedure.

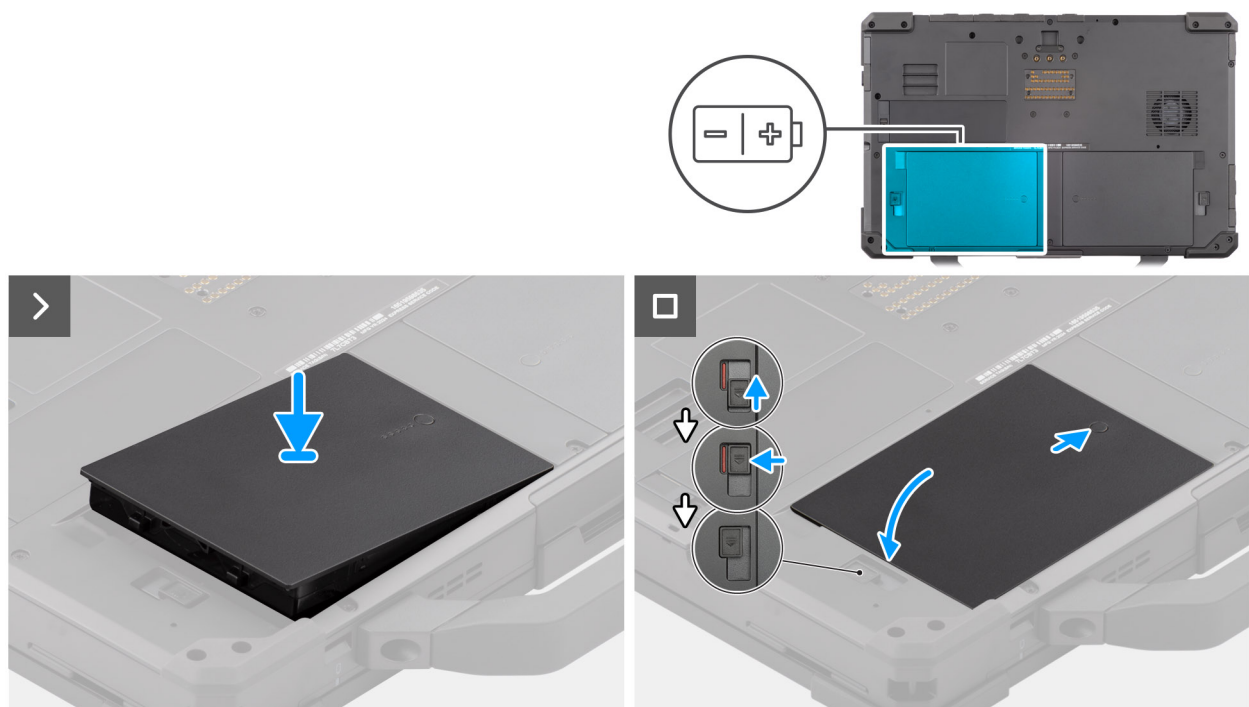


Figure 15. Installing the left-side battery

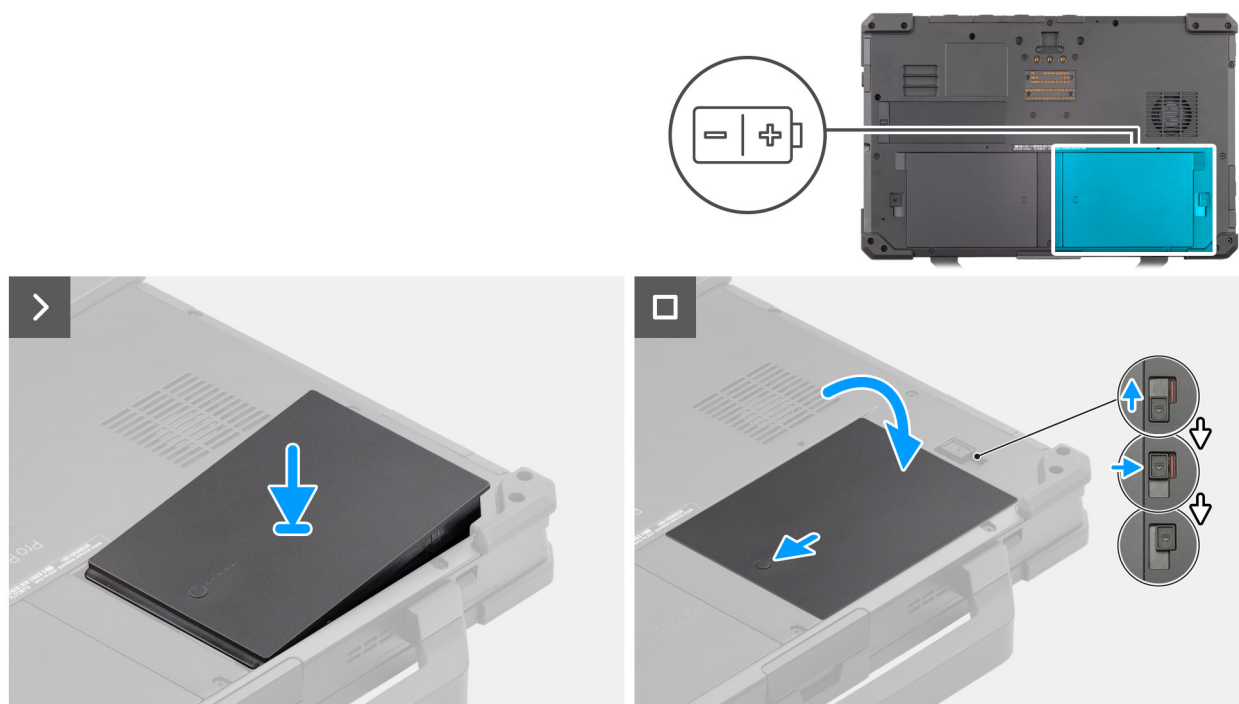


Figure 16. Installing the right-side battery

Steps

1. Align the pins on the battery with the connector on the computer.
 ⓘ **NOTE:** Ensure that the metal pin of the battery is aligned in place.
2. Place the battery into the battery bay until it clicks into place.
3. Slide the battery latch to the locked state.
 ⓘ **NOTE:** Ensure that the battery release latch is in the locked state.

Next steps

1. Follow the procedure in [after working inside your computer](#).

Stylus

Removing the stylus

Prerequisites

1. Follow the procedure in [before working inside your computer](#).

About this task

The following image indicates the location of the stylus and provides a visual representation of the removal procedure.



Figure 17. Removing the stylus

Steps

1. Slide the stylus out using the groove on the stylus pen.
- NOTE:** Avoid pulling the stylus with the stretchable thread.
2. Loosen the knot and slip the stylus through the hole to remove the tether from the computer chassis.

Installing the stylus

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the stylus and provides a visual representation of the installation procedure.



Figure 18. Installing the stylus

Steps

1. Slip the stylus through the hole to create a knot that holds the tether to the computer chassis.
2. Insert the stylus into the slot on the computer.

i **NOTE:** When not in use, avoid suspending the stylus that is detached from its groove.


Next steps

1. Follow the procedure in [after working inside your computer](#).

Removing and installing Field Replaceable Units (FRUs)


The replaceable components in this chapter are Field Replaceable Units (FRUs).

 **CAUTION:** The information in this section is intended for authorized service technicians only.

 **CAUTION:** To avoid any potential damage to the component or loss of data, ensure that an authorized service technician replaces the Field Replaceable Units (FRUs).

 **CAUTION:** Dell Technologies recommends that this set of repairs, if needed, to be conducted by trained technical repair specialists.

 **CAUTION:** As a reminder, your warranty does not cover damages that may occur during FRU repairs that are not authorized by Dell Technologies.


 **NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

Handle

Removing the handle

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

 **NOTE:** The handle screw is part of the handle assembly and cannot be ordered separately.

1. Follow the procedure in [before working inside your computer](#).

About this task

The following image indicates the location of the handle and provides a visual representation of the removal procedure.



2x
M3.5x9

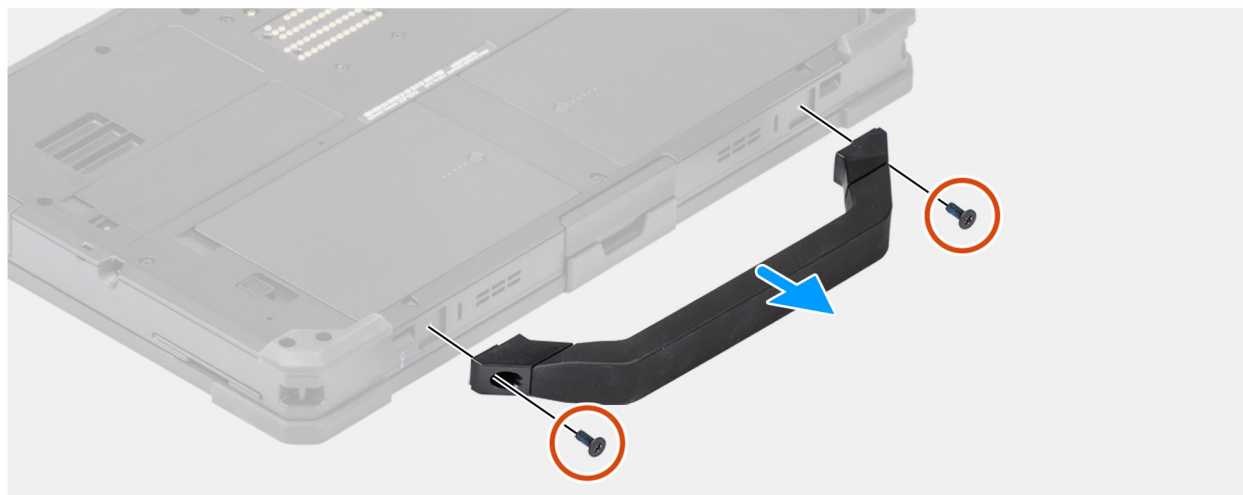
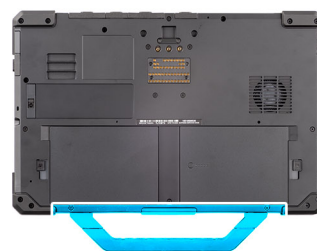


Figure 19. Removing the handle

Steps

1. Remove the two (M3.5x9) screws that secure the handle to the computer.
2. Remove the handle from the computer.

Installing the handle

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

NOTE: The handle screw is part of the handle assembly and cannot be ordered separately.

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the handle and provides a visual representation of the installation procedure.



2x
M3.5x9

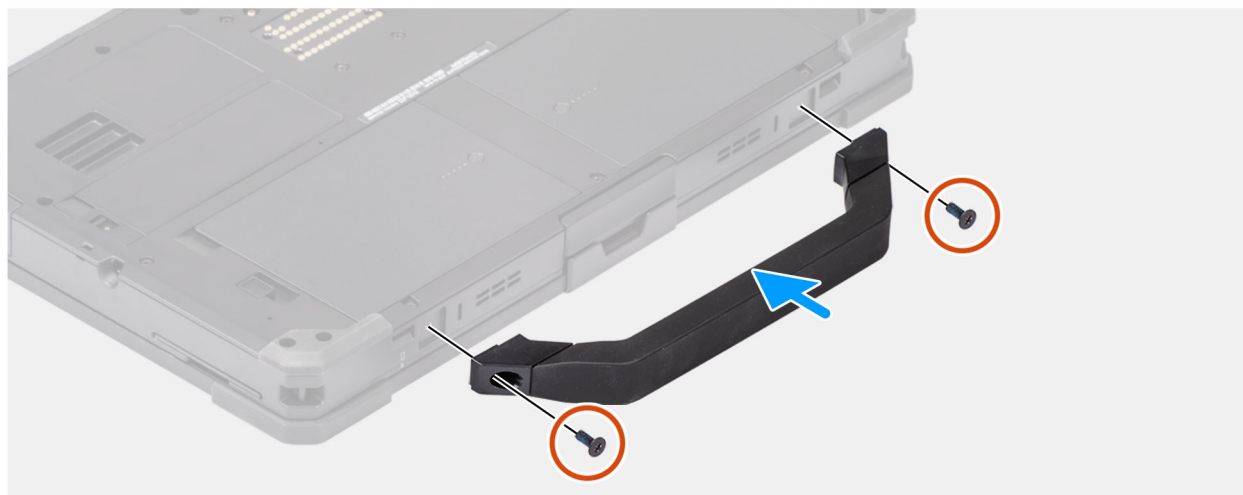


Figure 20. Installing the handle

Steps

1. Align the screw holes on the handle with the screw holes on the computer.
2. Replace the two (M3.5x9) screws to secure the handle to the computer.

Next steps

1. Follow the procedure in [after working inside your computer](#).

Keyboard

Removing the keyboard (standard)

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).

About this task

The following images indicate the location of the keyboard and provide a visual representation of the removal procedure.

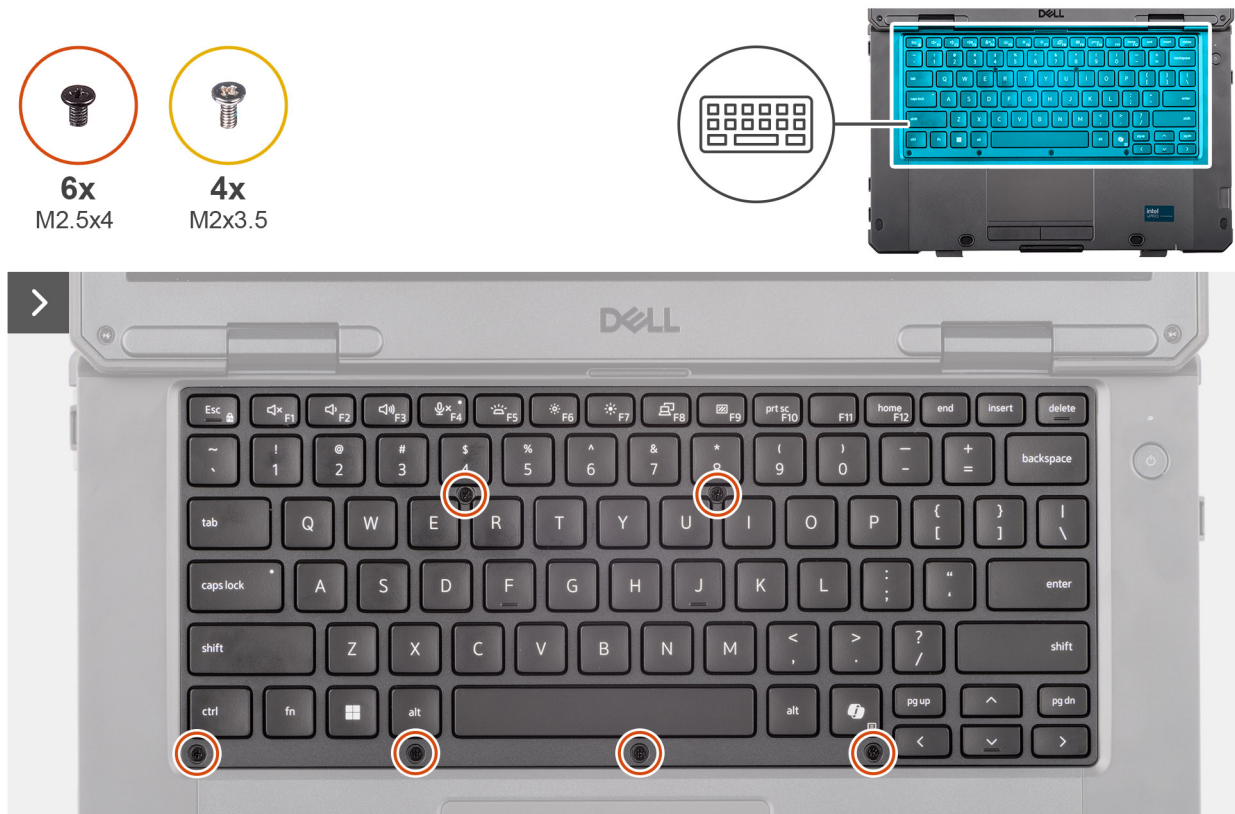


Figure 21. Removing the keyboard (standard)



Figure 22. Removing the keyboard (standard)



Figure 23. Removing the keyboard (standard)

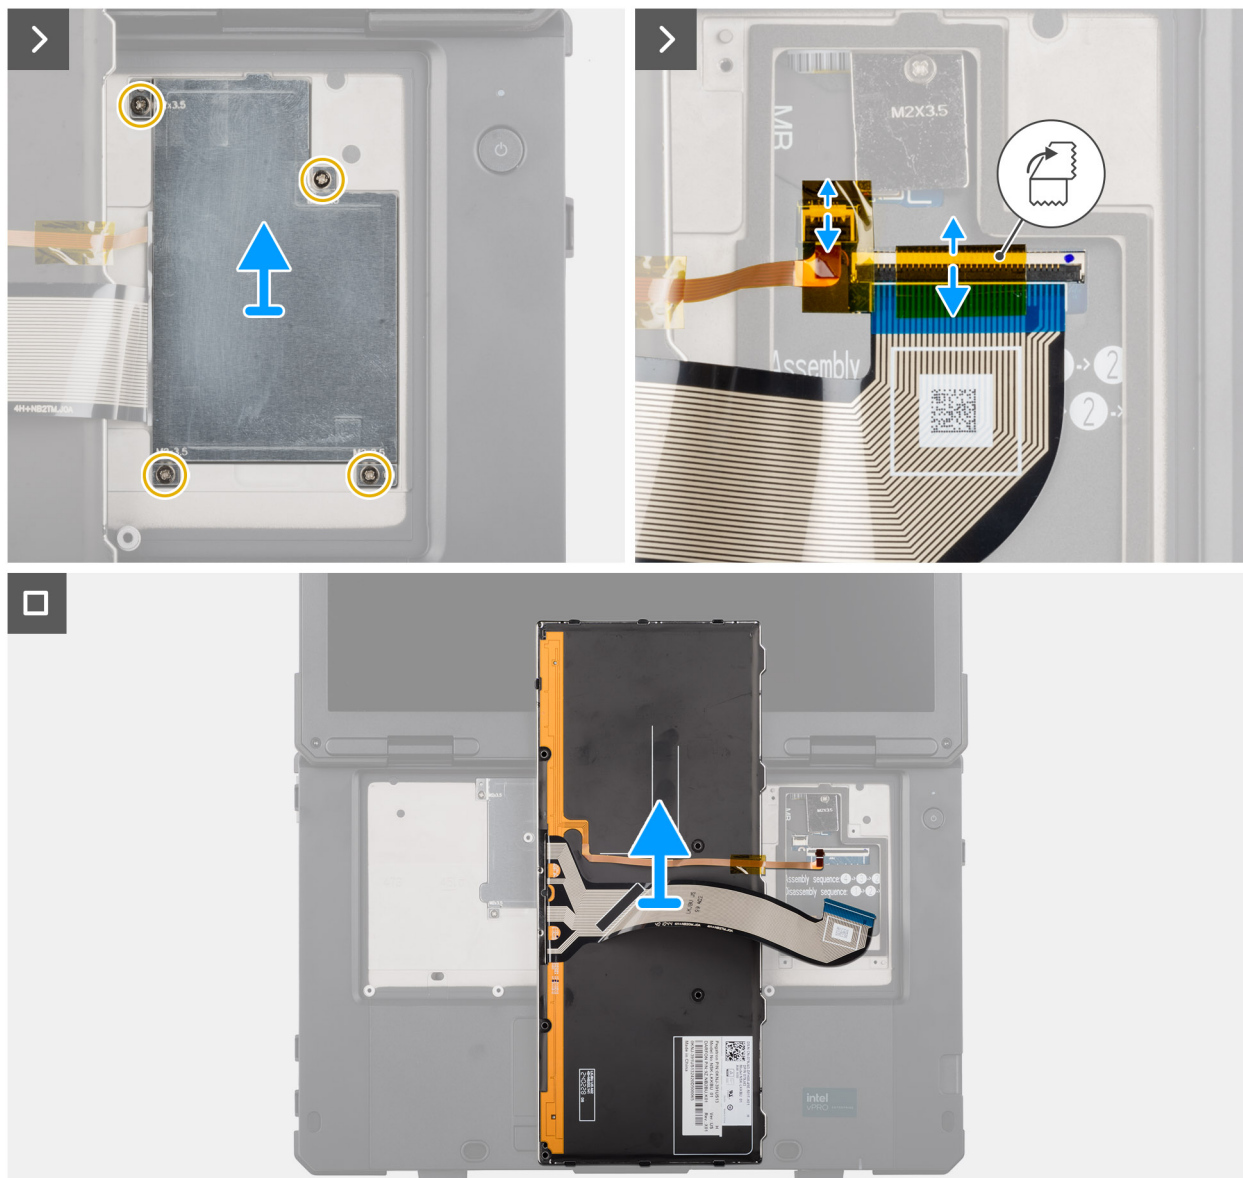


Figure 24. Removing the keyboard (standard)

Steps

1. Remove the six (M2.5x4) screws that secure the keyboard to the computer chassis.
2. Pry the keyboard from the front and then rotate it counterclockwise until the keyboard-cable cover is visible.
3. Flip the keyboard and incline it over the touchpad.
4. Remove the four (M2x3.5) screws that secure the keyboard-cable cover to the computer chassis.
5. Disconnect the keyboard and backlight flexible printed cables from the connectors on the system board.
6. Lift the keyboard from the computer.

Installing the keyboard (standard)

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the keyboard and provide a visual representation of the installation procedure.

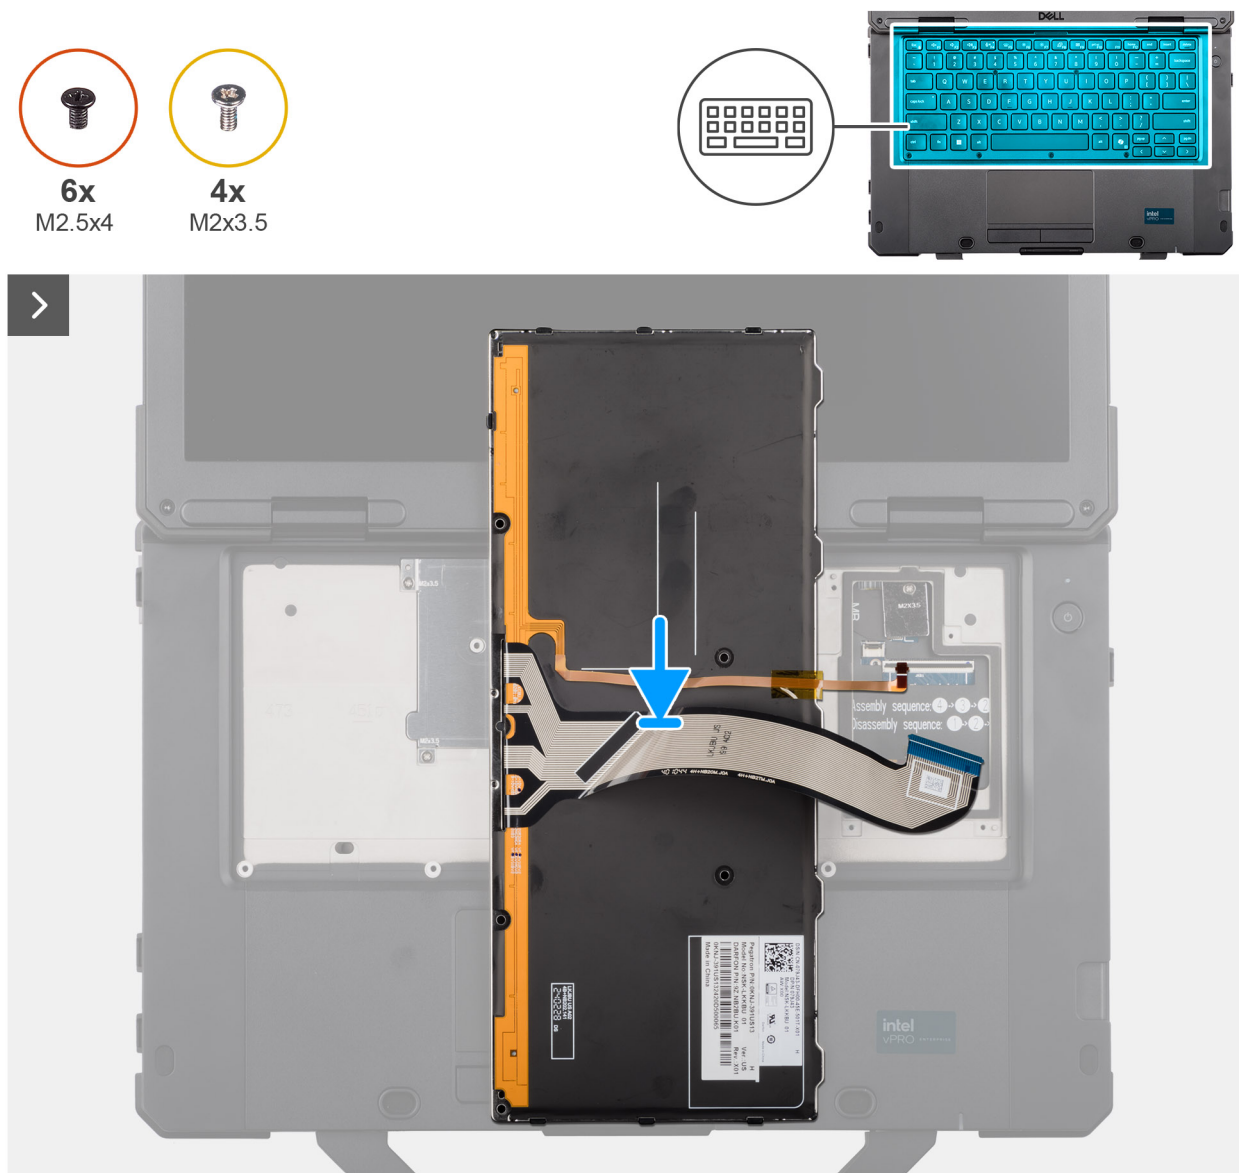


Figure 25. Installing the keyboard (standard)

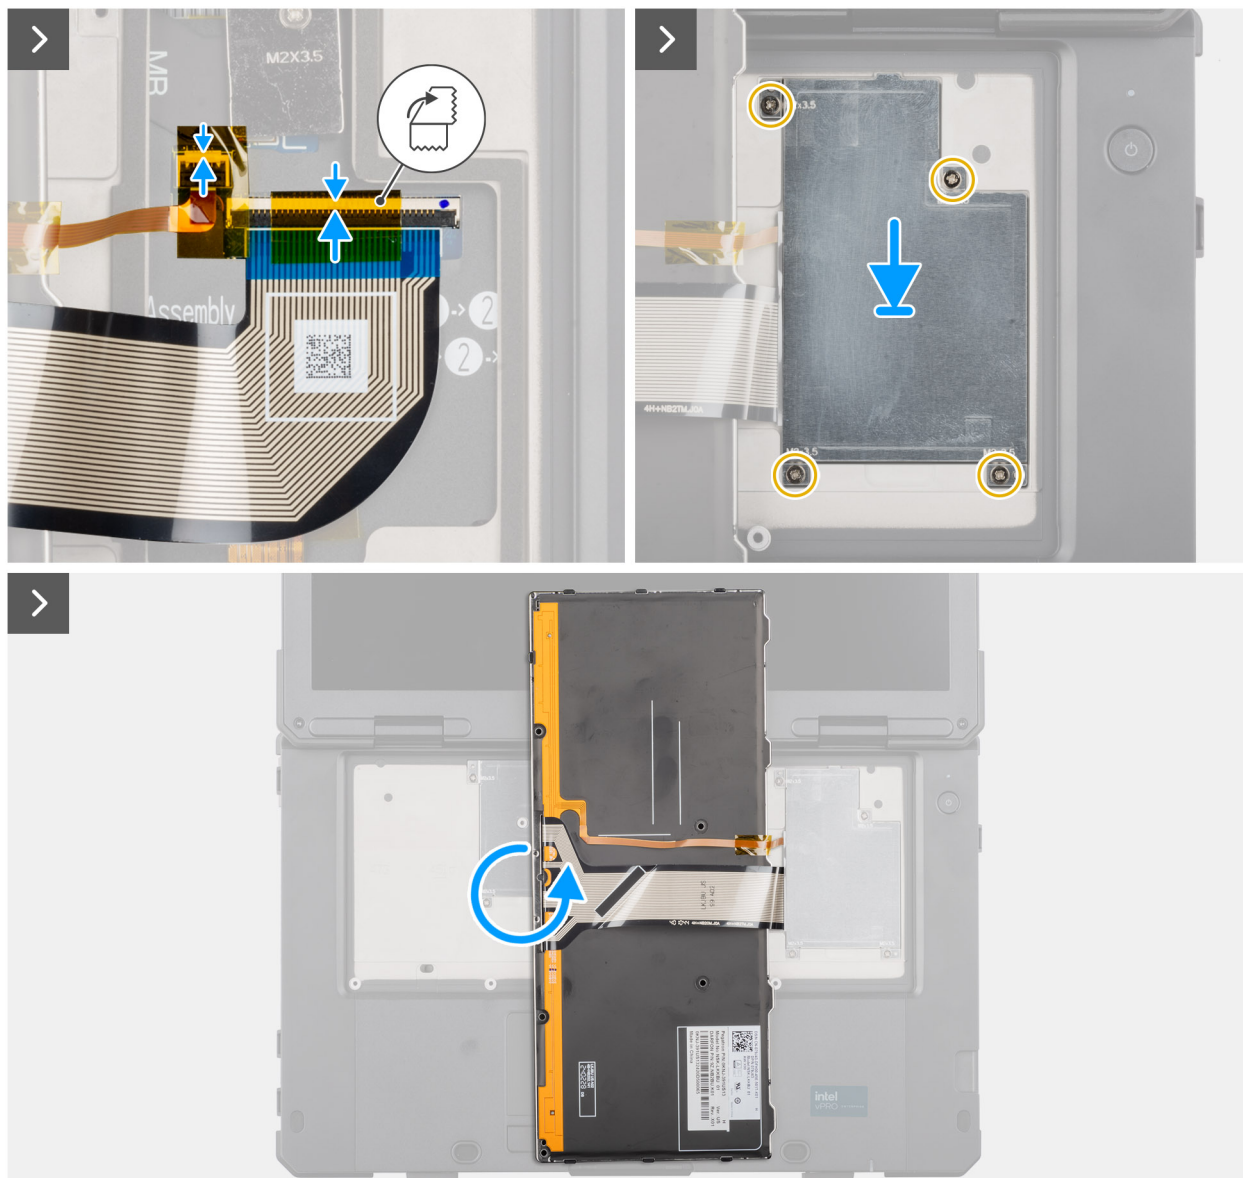


Figure 26. Installing the keyboard (standard)



Figure 27. Installing the keyboard (standard)

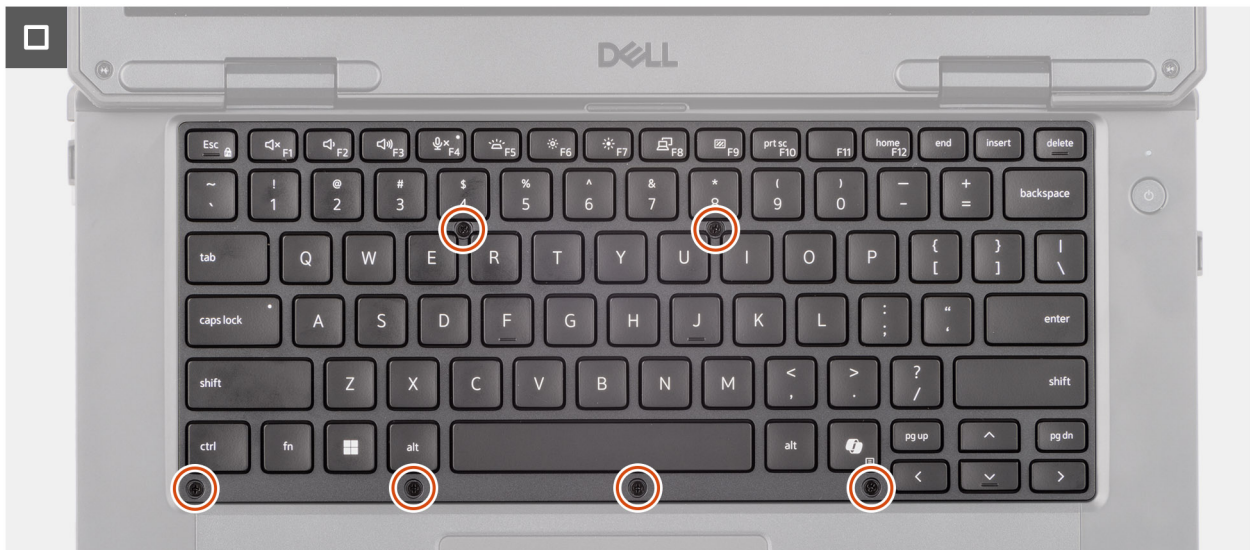


Figure 28. Installing the keyboard (standard)

Steps

1. Place the keyboard on the computer chassis.
2. Connect the keyboard and backlight flexible printed cables to the connectors on the system board.
i NOTE: Adhere the keyboard and backlight flexible printed cable with kapton tapes to the connectors.
3. Replace the four (M2x3.5) screws that secure the keyboard-cable cover to the computer chassis.
4. Flip the keyboard on the chassis and slide it towards the display to align with the screw holes.
5. Replace the six (M2.5x4) screws to secure the keyboard.

Next steps

1. Install the [batteries](#).
2. Follow the procedure in [after working inside your computer](#).

Removing the keyboard (rubberized)

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).

About this task

The following images indicate the location of the keyboard and provide a visual representation of the removal procedure.



Figure 29. Removing the keyboard (rubberized)



Figure 30. Removing the keyboard (rubberized)



Figure 31. Removing the keyboard (rubberized)

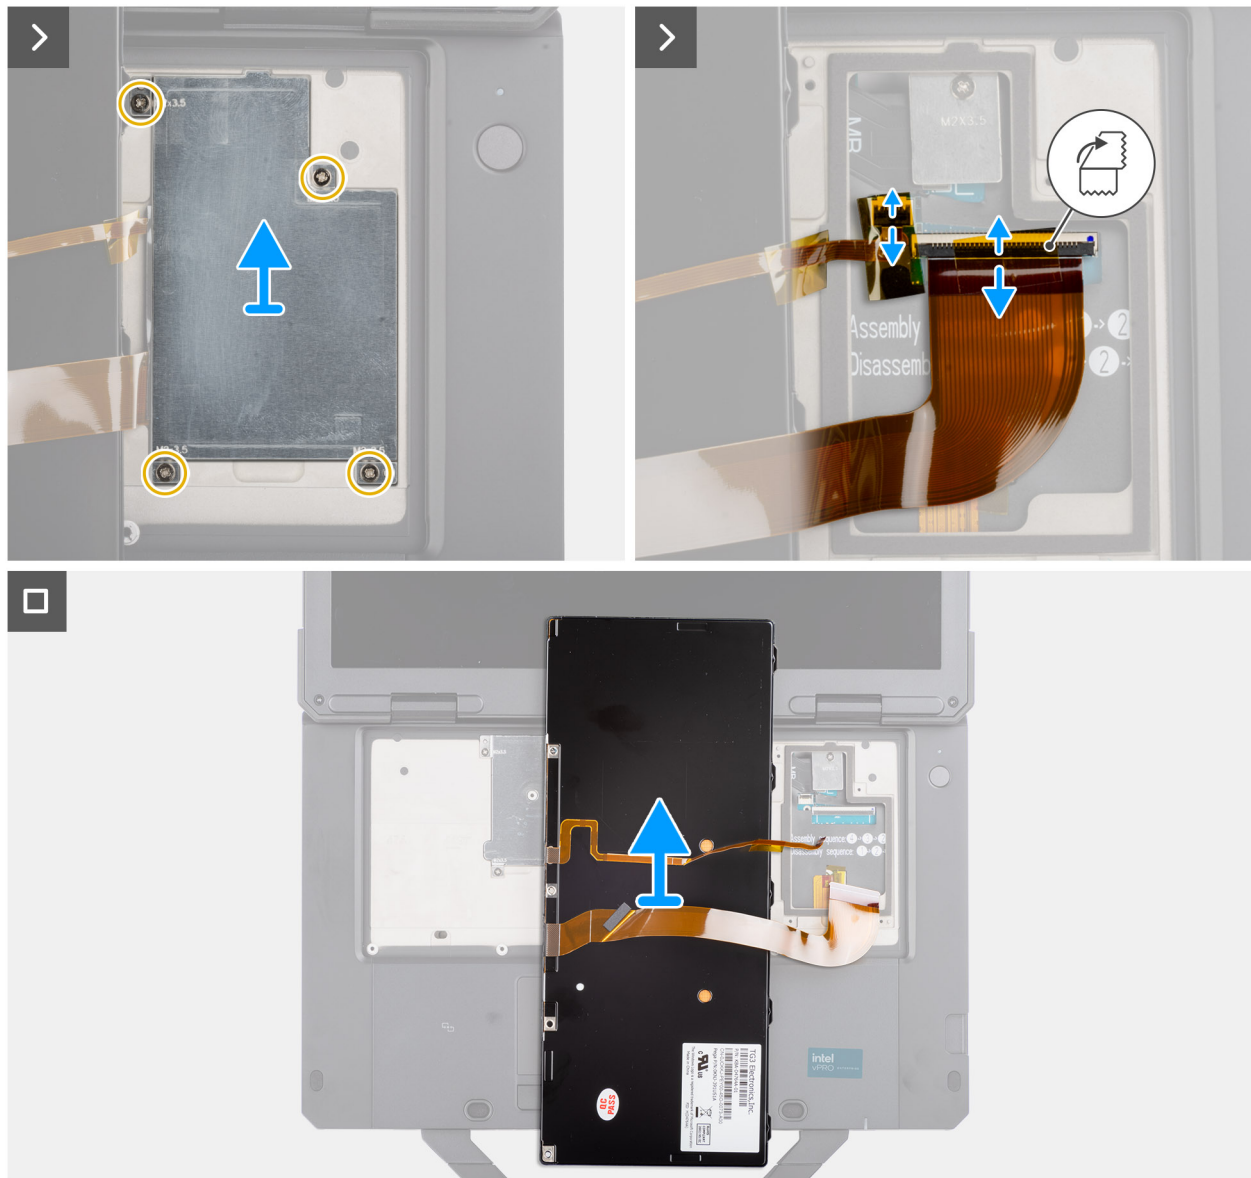


Figure 32. Removing the keyboard (rubberized)

Steps

1. Remove the six (M2.5x4) screws that secure the keyboard to the computer chassis.
2. Pry the keyboard from the front and then rotate it counterclockwise until the keyboard-cable cover is visible.
3. Flip the keyboard and incline it over the touchpad.
4. Remove the four (M2x3.5) screws that secure the keyboard cable cover to the computer chassis.
5. Disconnect the keyboard and backlight flexible printed cables from the connectors on the system board.
6. Lift the keyboard from the computer.

Installing the keyboard (rubberized)

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the keyboard and provide a visual representation of the installation procedure.

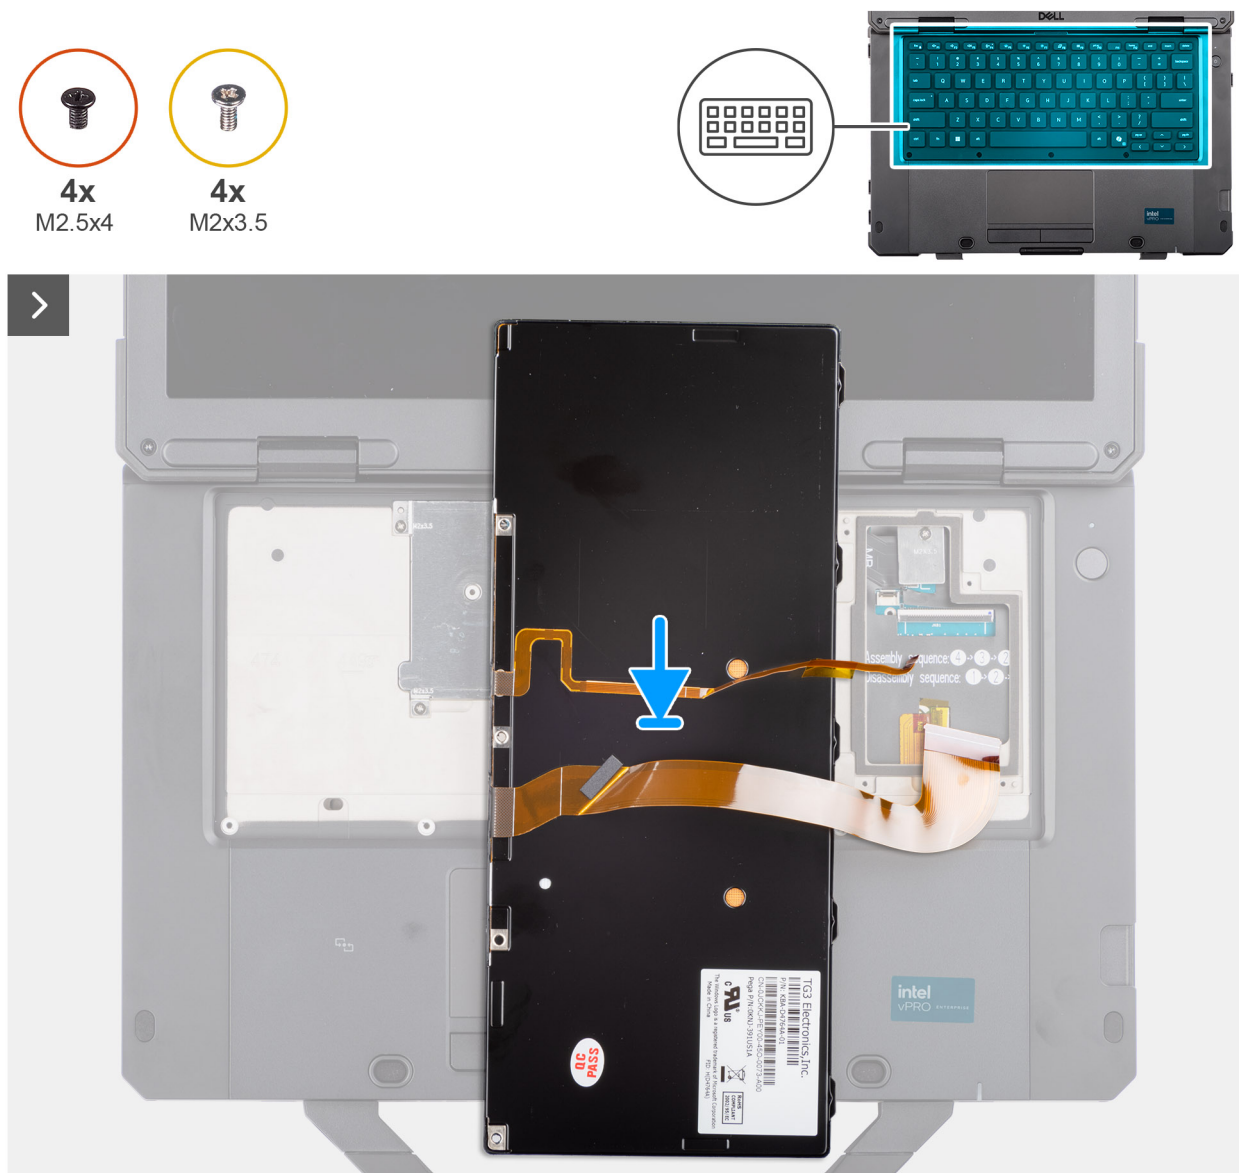


Figure 33. Installing the keyboard (rubberized)

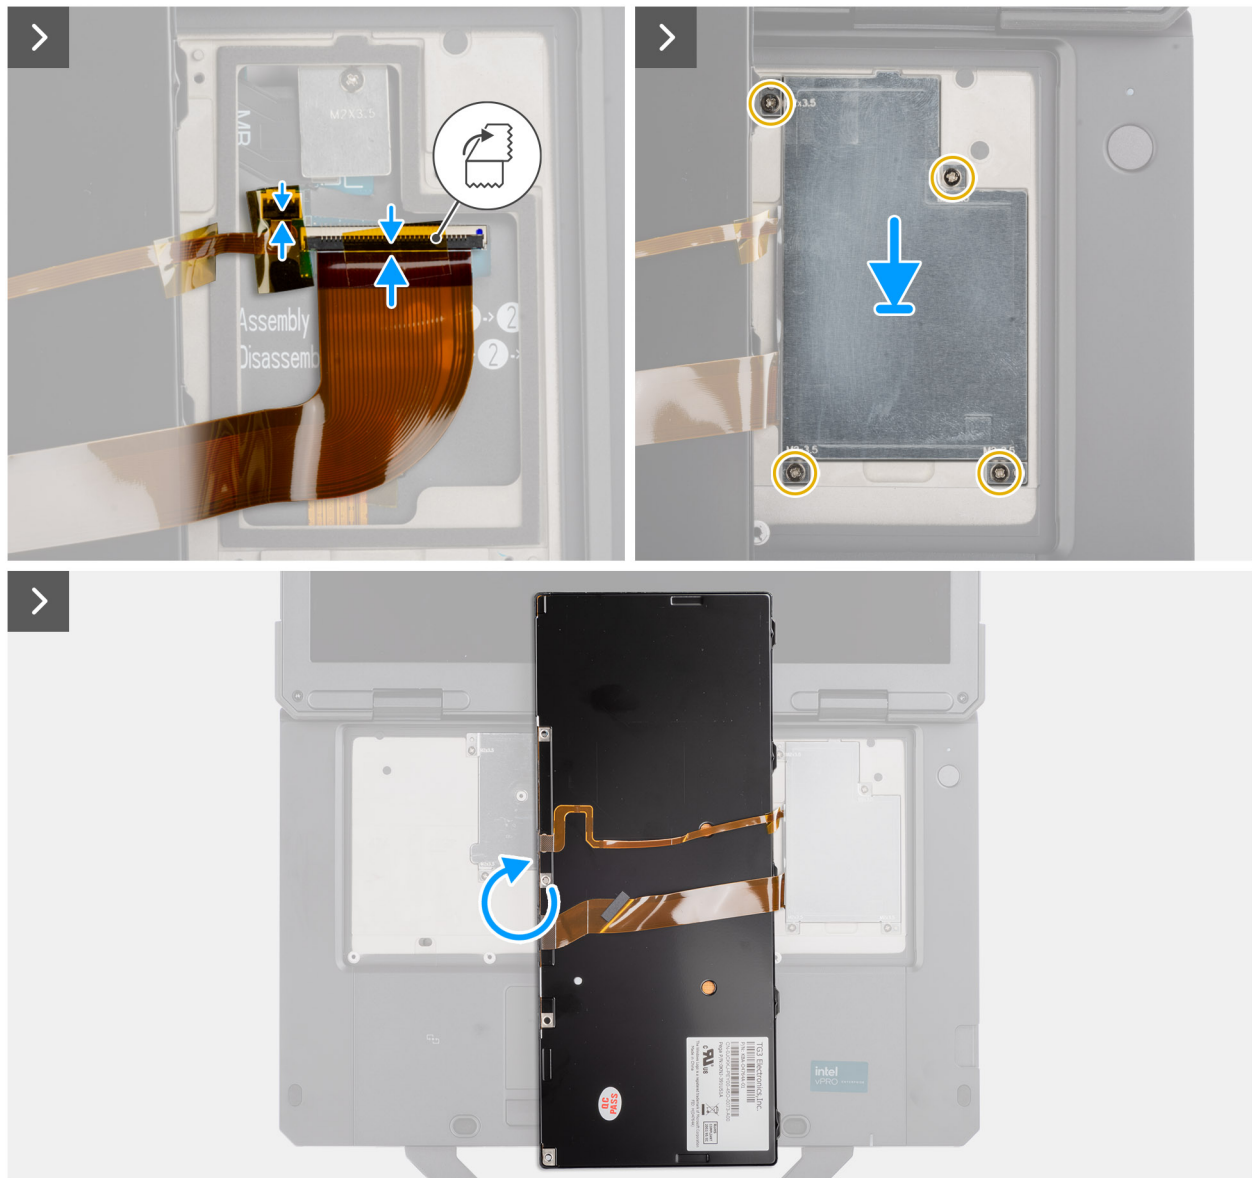


Figure 34. Installing the keyboard (rubberized)



Figure 35. Installing the keyboard (rubberized)



Figure 36. Installing the keyboard (rubberized)

Steps

1. Place the keyboard on the computer chassis.
2. Connect the keyboard and backlight flexible printed cables to the connectors on the system board.
NOTE: Adhere the keyboard and backlight flexible printed cable with kapton tapes to the connectors.
3. Replace the four (M2x3.5) screws that secure the keyboard-cable cover to the computer chassis.
4. Flip the keyboard on the chassis and slide it towards the display to align with the screw holes.
5. Replace the six (M2.5x4) screws to secure the keyboard.

Next steps

1. Install the [batteries](#).
2. Follow the procedure in [after working inside your computer](#).

Solid state drive carrier

Removing the solid state drive carrier

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).

About this task

The following images indicate the location of the solid state drive carrier and provide a visual representation of the removal procedure.

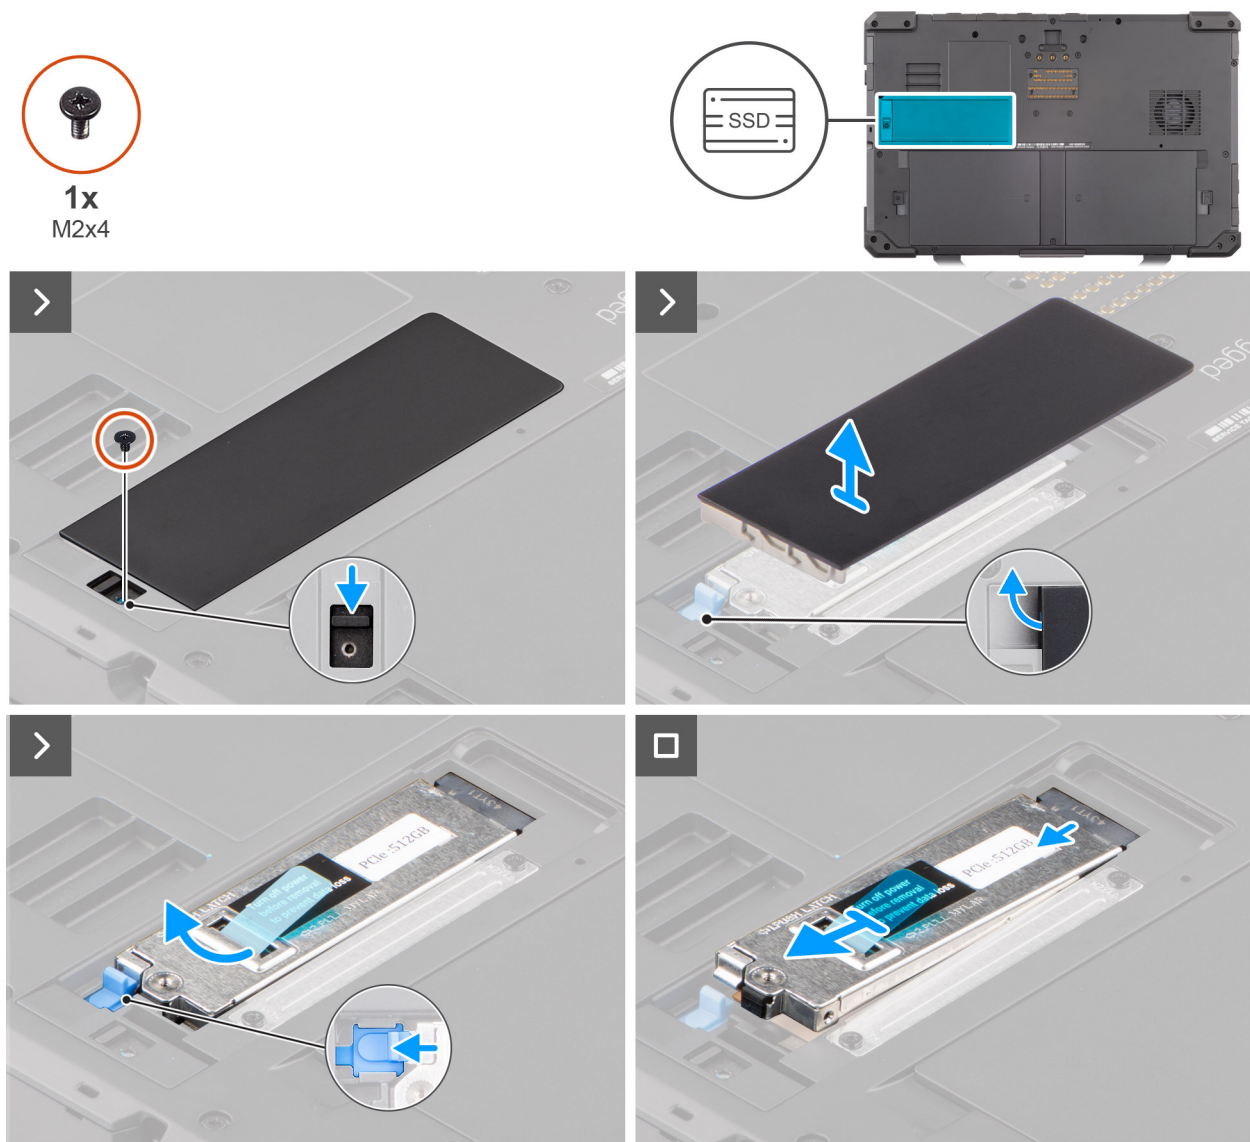


Figure 37. Removing the solid state drive carrier

Steps

1. Remove the (M2x4) screw on the SSD door-latch cover.
2. Push the SSD latch and lift the SSD door.

3. Push the carrier latch to release the SSD carrier.
4. Pull the mylar tape to lift the SSD carrier off the computer.

Installing the solid state drive carrier

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the solid state drive carrier and provides a visual representation of the installation procedure.

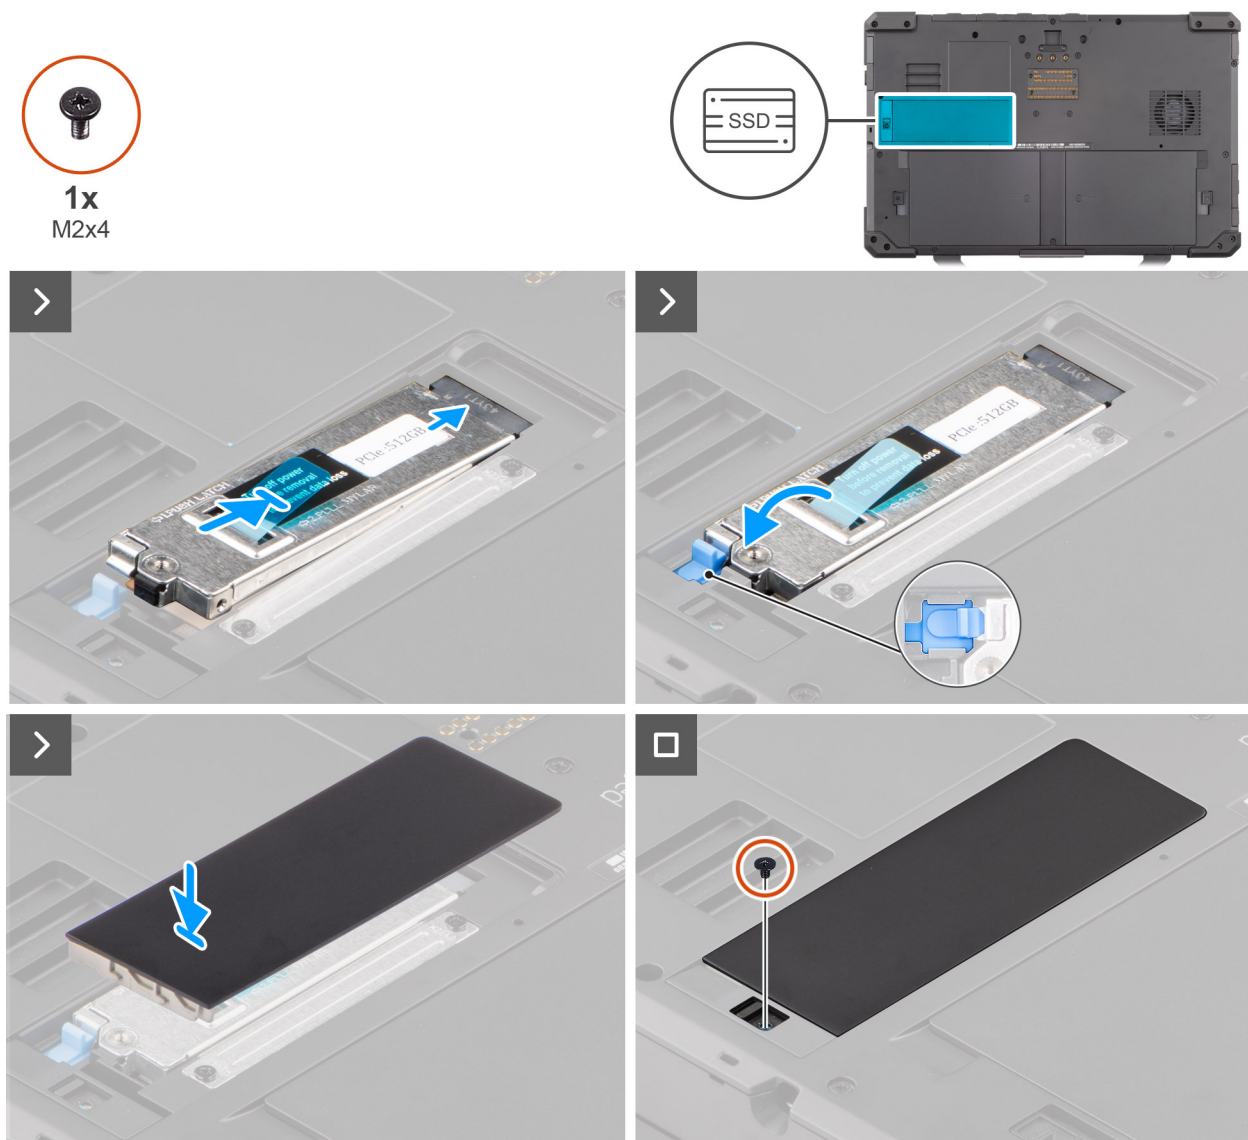


Figure 38. Installing the solid state drive carrier

Steps

1. Align the notch on the SSD carrier with the tab on the M.2 slot and slide the SSD carrier into the slot on the chassis.
2. Pull the carrier latch to lock the SSD carrier.

3. Place the SSD door on the SSD carrier.
4. Replace the (M2x4) screw on the SSD door latch cover.

Next steps

1. Follow the procedure in [after working inside your computer](#).

M.2 solid state drive

Removing the M.2 2230 solid state drive from the carrier

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [solid state drive carrier](#).

About this task

The following image indicates the location of the solid state drive and provides a visual representation of the removal procedure.

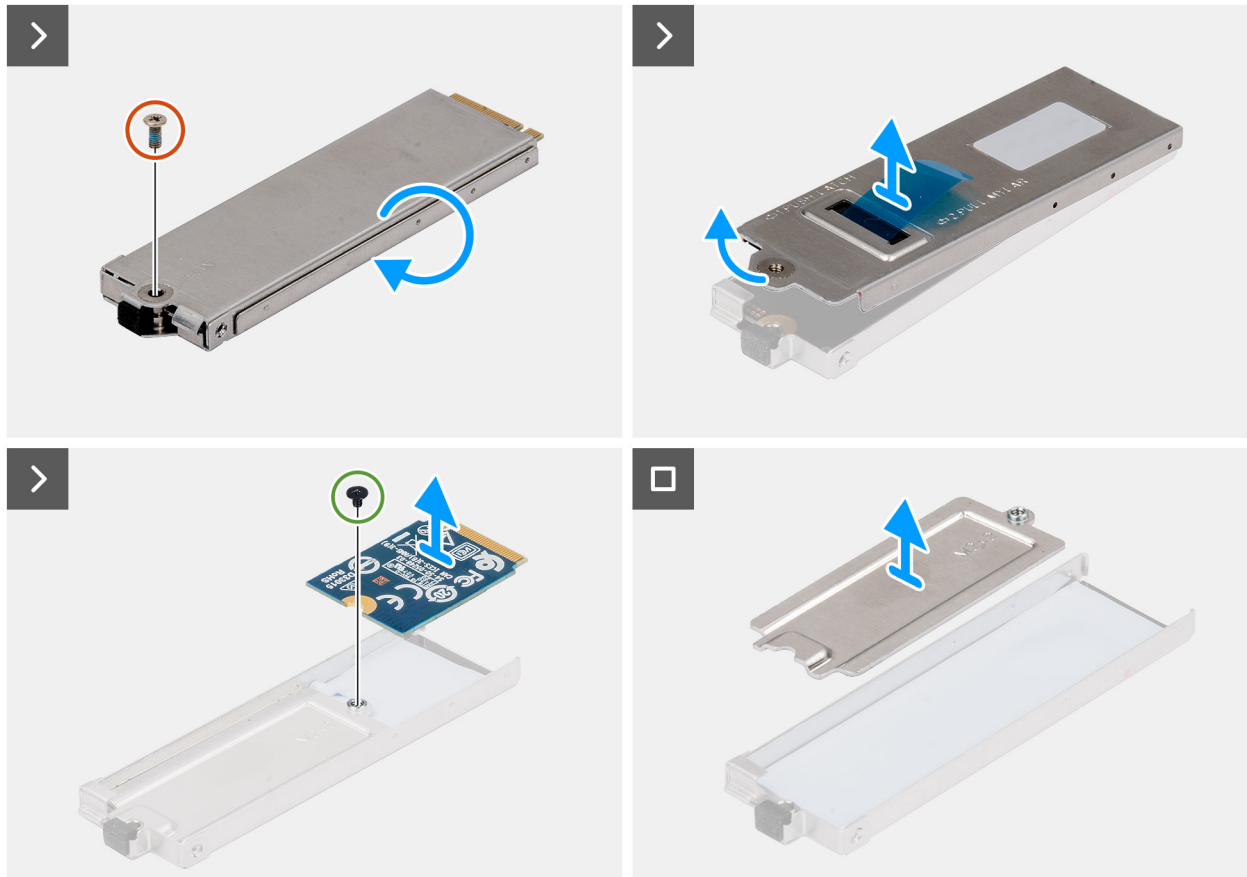
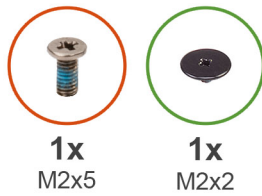


Figure 39. Removing the M.2 2230 solid state drive from the carrier

Steps

1. Flip the SSD carrier and remove the (M2x5) screw that secures the SSD carrier cover to the SSD carrier.
2. Flip the SSD carrier and pull the mylar tape to lift the SSD carrier cover.
3. Remove the (M2x2) screw that secures the M.2 2230 solid state drive to the SSD carrier.
4. Lift and remove the M.2 2230 solid state drive.
5. Lift and remove the SSD extender off the SSD carrier.

Installing the M.2 2230 solid state drive into the carrier

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the solid state drive and provides a visual representation of the installation procedure.

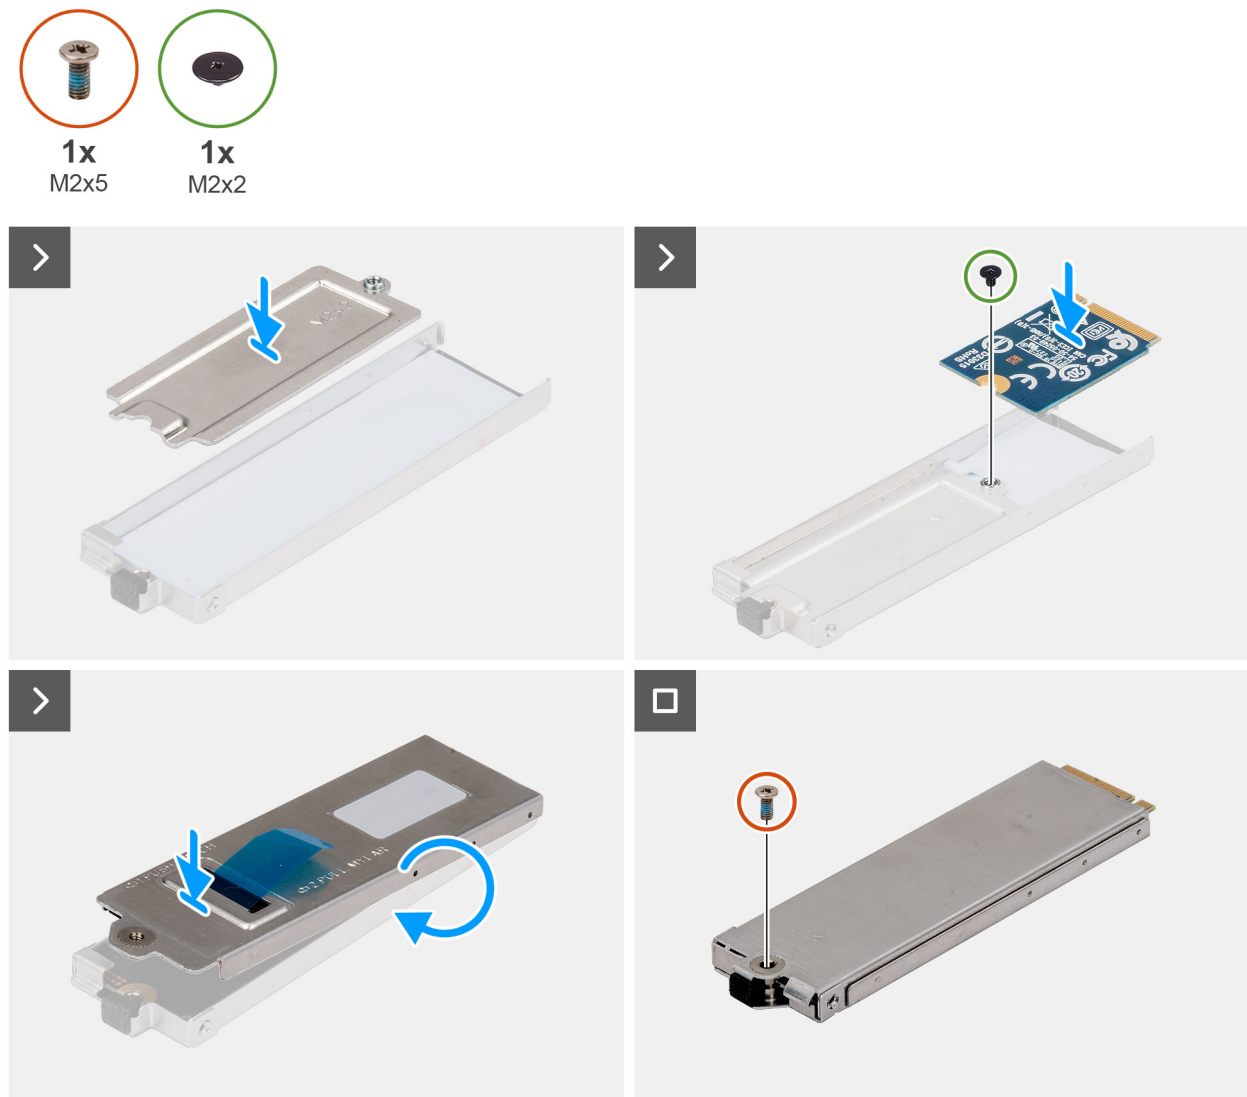


Figure 40. Installing the M.2 2230 solid state drive into the carrier

Steps

1. Place the SSD extender on the SSD carrier.
2. Replace the (M2x2) screw to secure the M.2 2230 solid state drive into the SSD carrier.
3. Place the SSD carrier cover and flip the SSD carrier.
4. Replace the (M2x5) screw to secure the SSD carrier cover to the SSD carrier.

Next steps

1. Install the [solid state drive carrier](#).
2. Follow the procedure in [after working inside your computer](#).

Removing the M.2 2280 solid state drive from the carrier

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [solid state drive carrier](#).

About this task

The following image indicates the location of the solid state drive and provides a visual representation of the removal procedure.

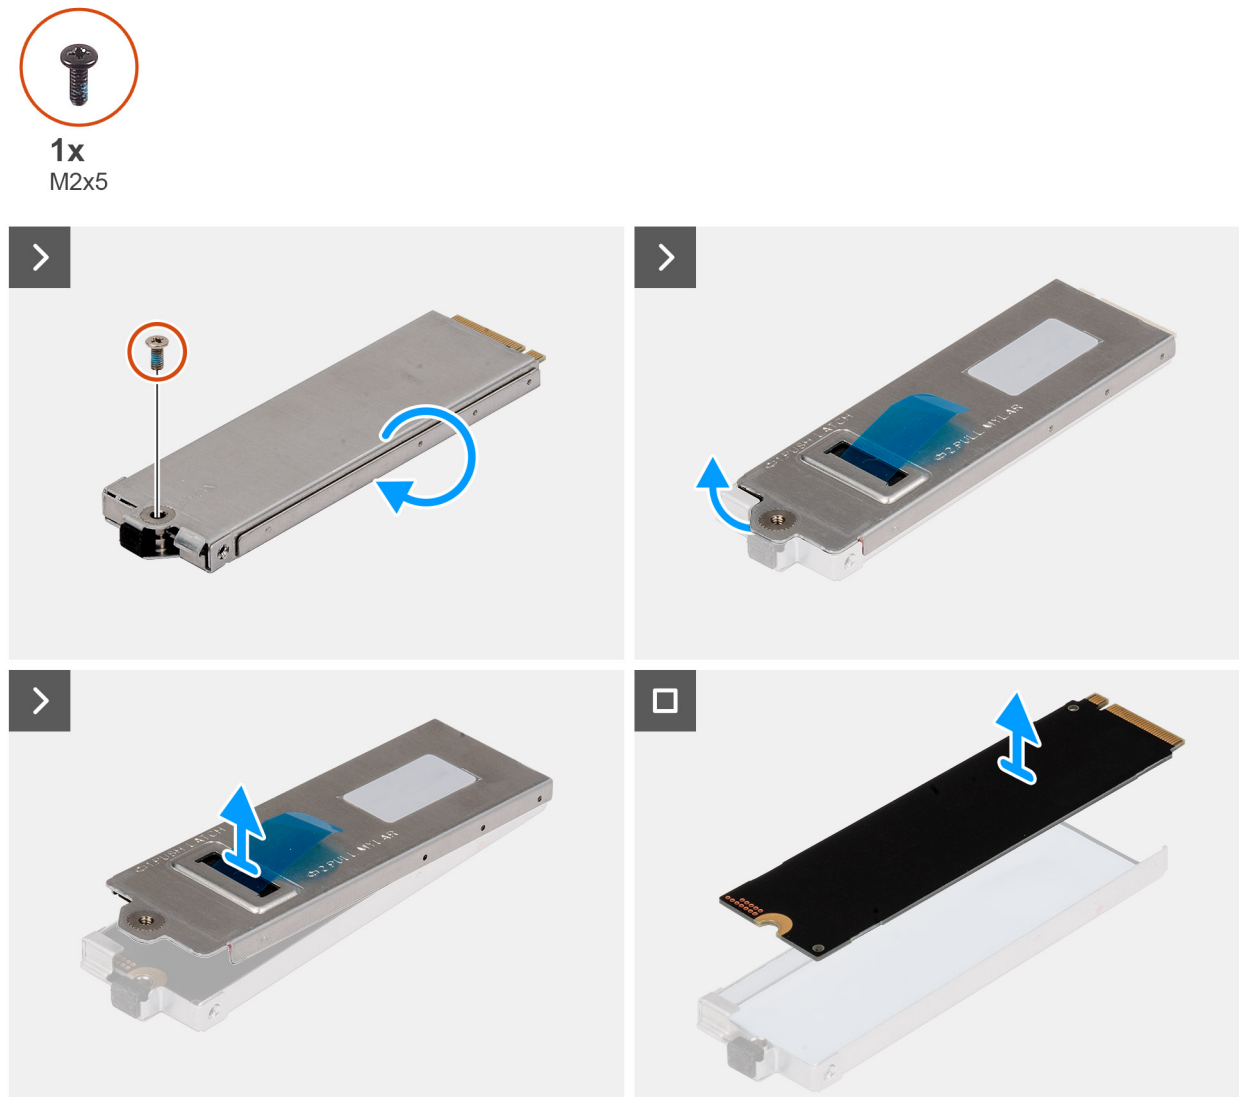


Figure 41. Removing the M.2 2280 solid state drive from the carrier

Steps

1. Flip the SSD carrier and remove the (M2x5) screw that secures the SSD carrier cover to the SSD carrier.
2. Flip the SSD carrier and pull the mylar tape to lift the SSD carrier cover.
3. Lift and remove the M.2 2280 solid state drive from the SSD carrier.

Installing the M.2 2280 solid state drive into the carrier

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the solid state drive and provides a visual representation of the installation procedure.

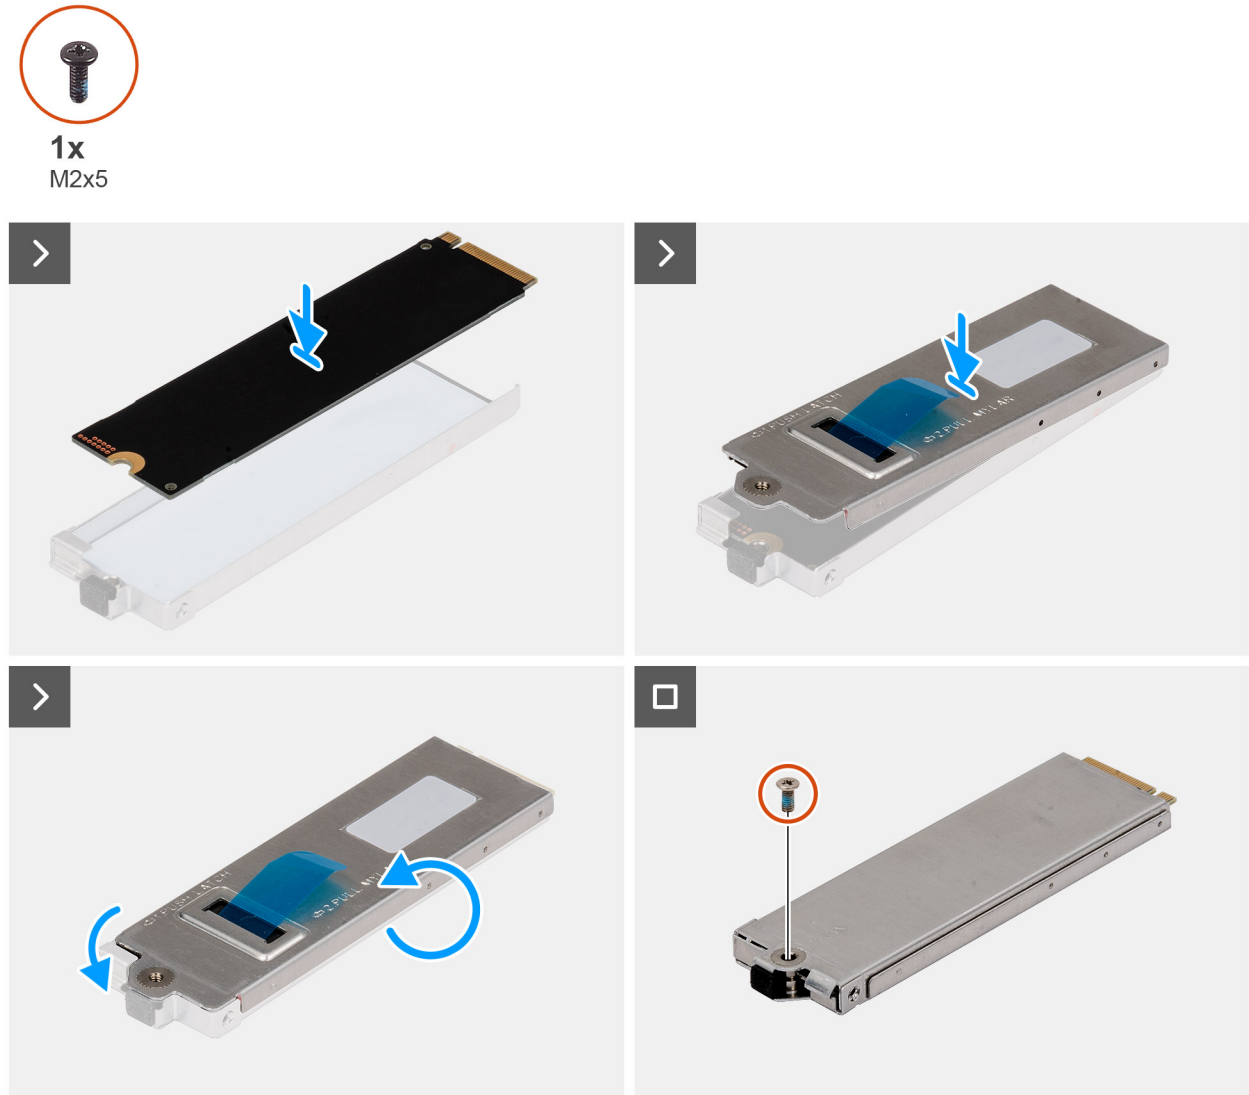


Figure 42. Installing the M.2 2280 solid state drive into the carrier

Steps

1. Place the M.2 2280 solid state drive into the SSD carrier.
2. Place the SSD carrier cover.
3. Flip the SSD carrier.
4. Replace the (M2x5) screw to secure the SSD carrier cover to the SSD carrier.

Next steps

1. Install the [solid state drive carrier](#).
2. Follow the procedure in [after working inside your computer](#).

Base cover

Removing the base cover

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).

About this task

The following images indicate the location of the base cover and provide a visual representation of the removal procedure.

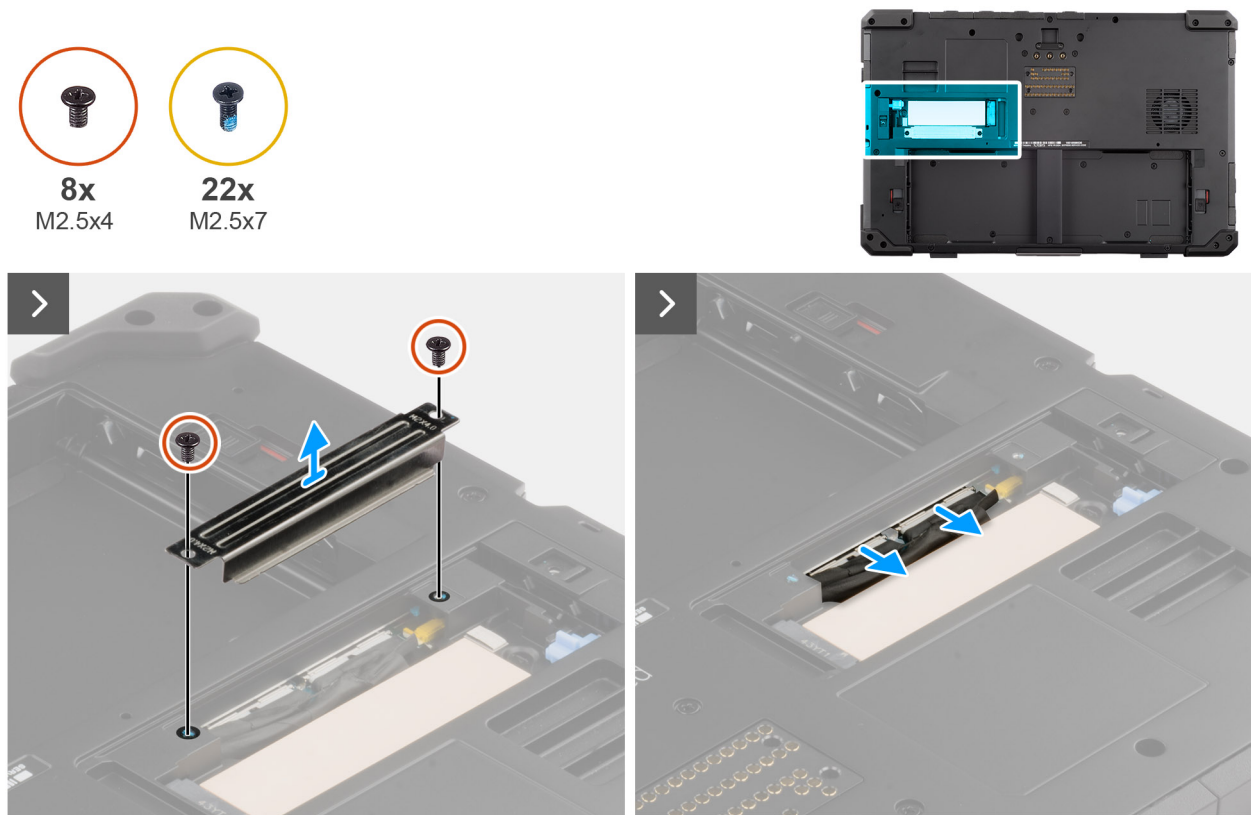


Figure 43. Removing the base cover

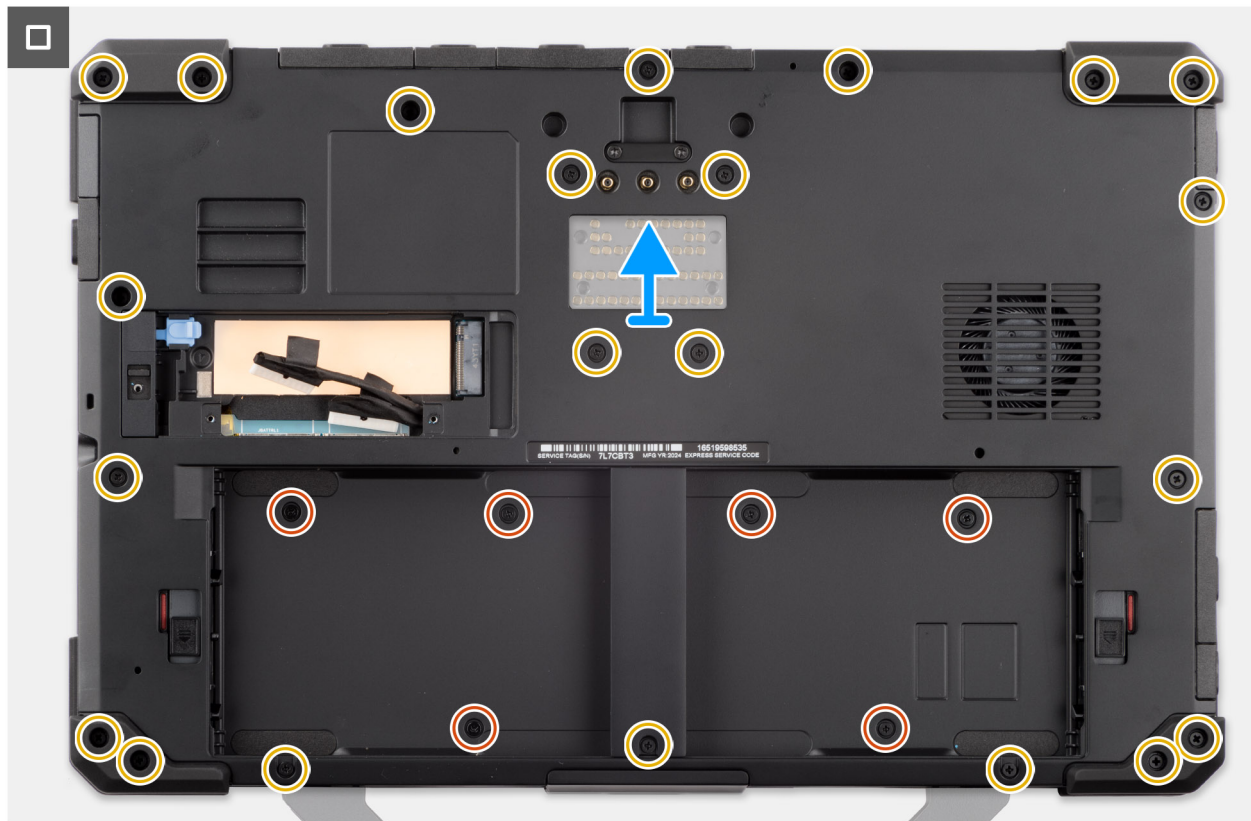


Figure 44. Removing the base cover

Steps

1. Remove the two (M2.5x4) screws that secure the battery-cable cover to the computer chassis and lift it from the computer.
2. Disconnect the left and right battery cables from the connectors on the system board.
3. Remove the 22 (M2.5x7) and six (M2.5x4) screws that secure the base cover to the computer chassis.
4. Lift the base cover from the computer chassis.

Installing the base cover

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the base cover and provides a visual representation of the installation procedure.

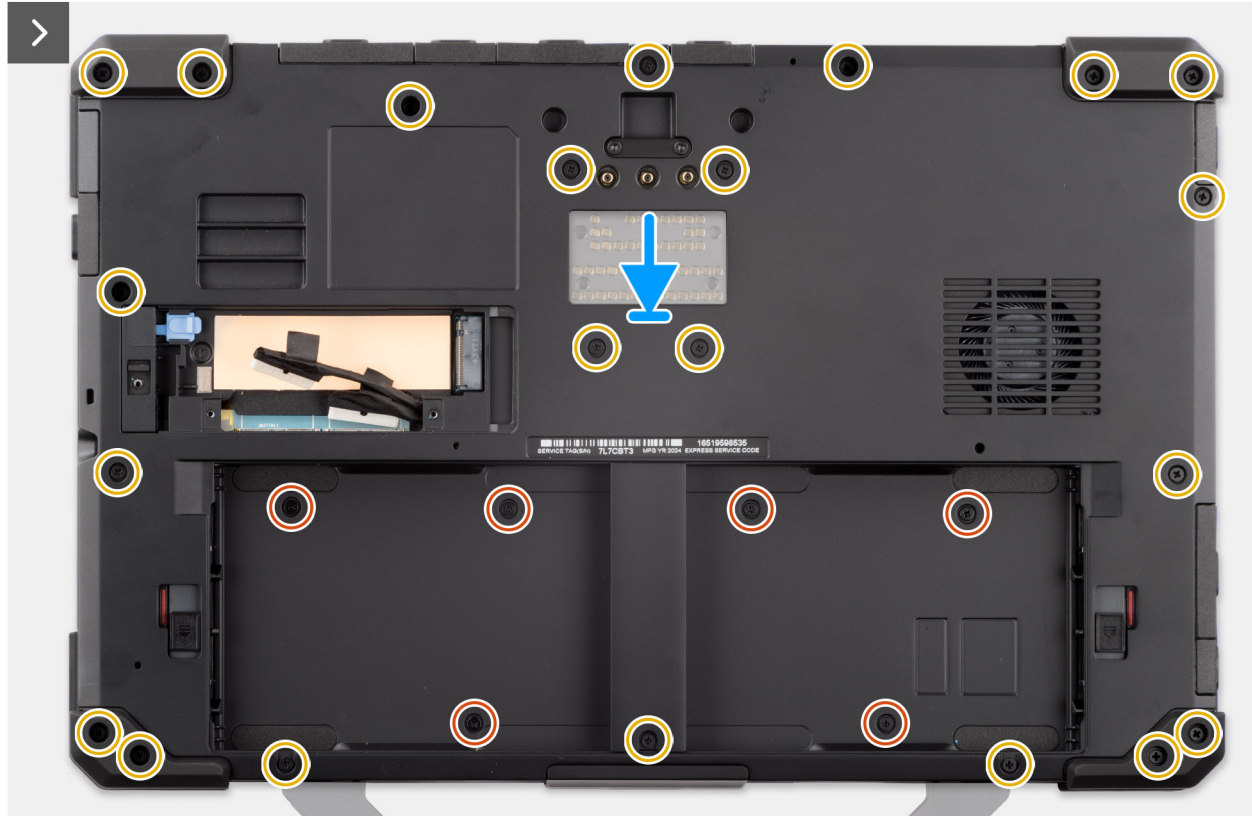
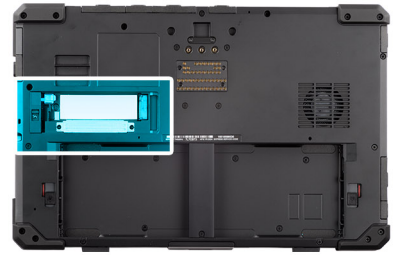
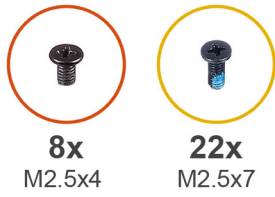


Figure 45. Installing the base cover

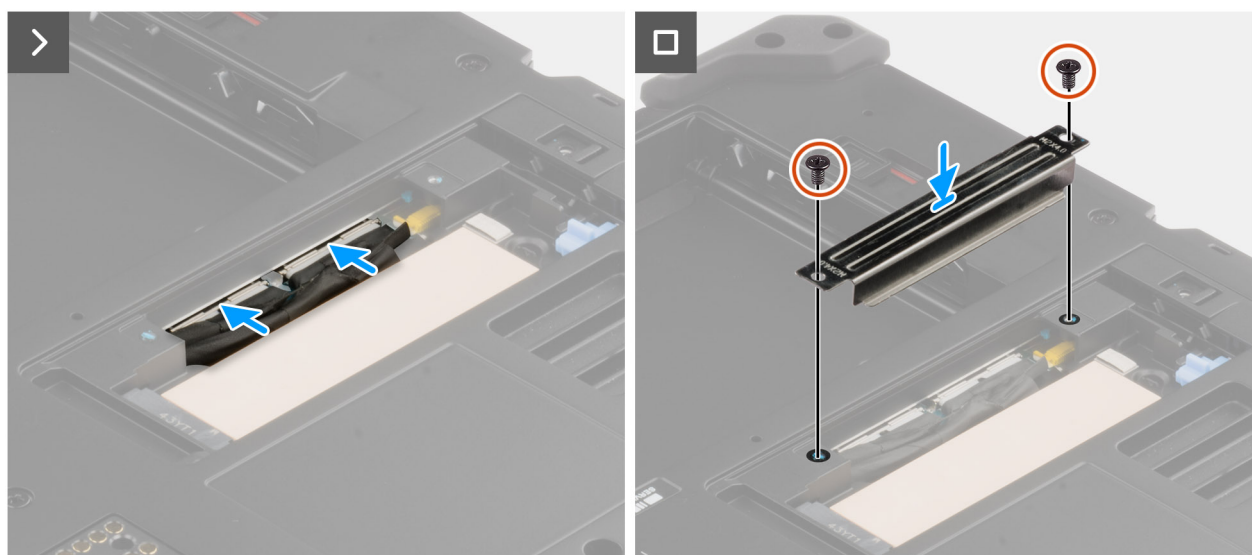


Figure 46. Installing the base cover

Steps

1. Place the base cover on the computer chassis.
2. Replace the 22 (M2.5x7) and six (M2.5x4) screws that secure the base cover to the computer chassis.
3. Connect the left and right battery cables to the connectors on the system board.
4. Replace the two (M2x4) screws that secure the battery-cable cover to the computer chassis.

Next steps

1. Install the [solid state drive carrier](#).
2. Install the [batteries](#).
3. Follow the procedure in [after working inside your computer](#).


Coin-cell battery

Removing the coin-cell battery

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).

 **CAUTION:** Removing the coin-cell battery resets the BIOS setup program settings to default. It is recommended that you note the BIOS setup program settings before removing the coin-cell battery.

2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following images indicate the location of the coin-cell battery and provide a visual representation of the removal procedure.

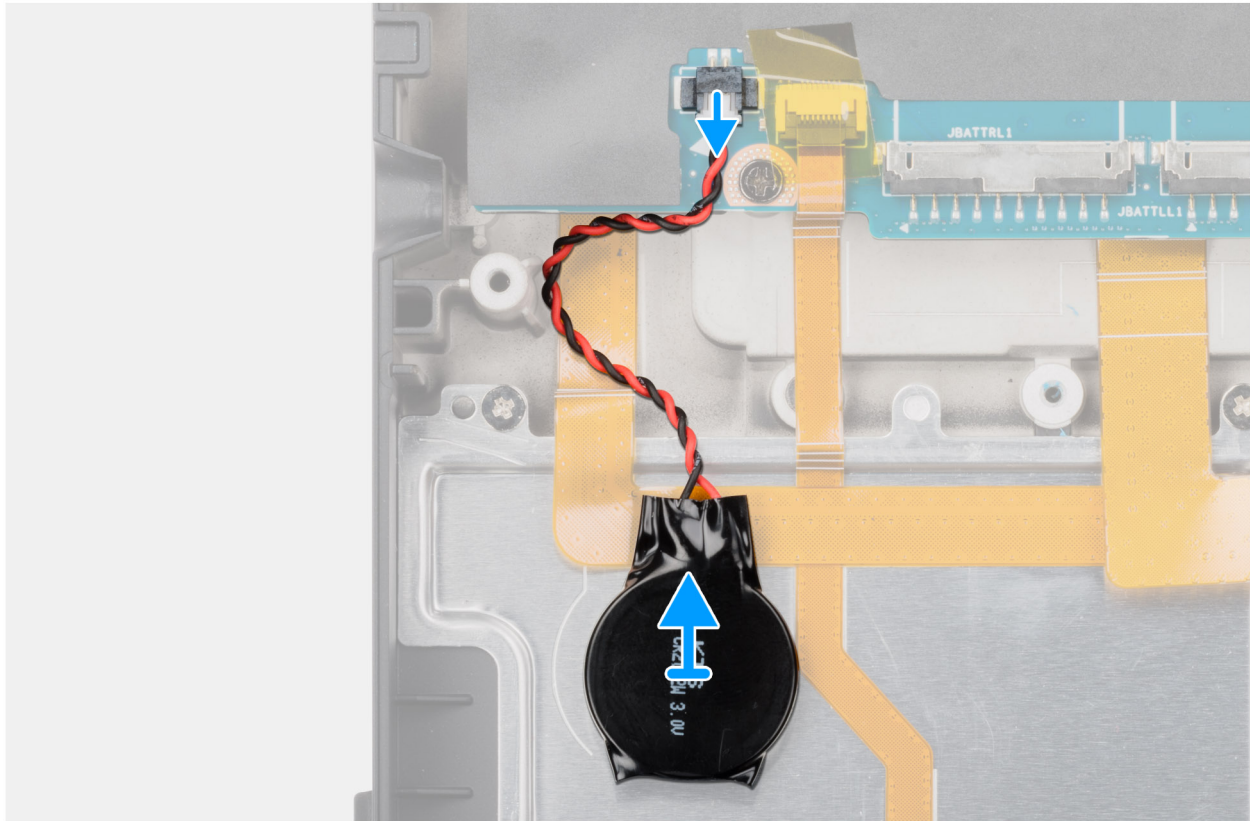
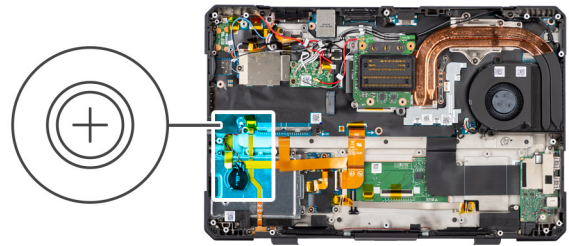


Figure 47. Removing the coin-cell battery

Steps

1. Disconnect the coin-cell battery cable from the system board.
2. Peel the coin-cell battery off the computer chassis.

Installing the coin-cell battery

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the coin-cell battery and provides a visual representation of the installation procedure.

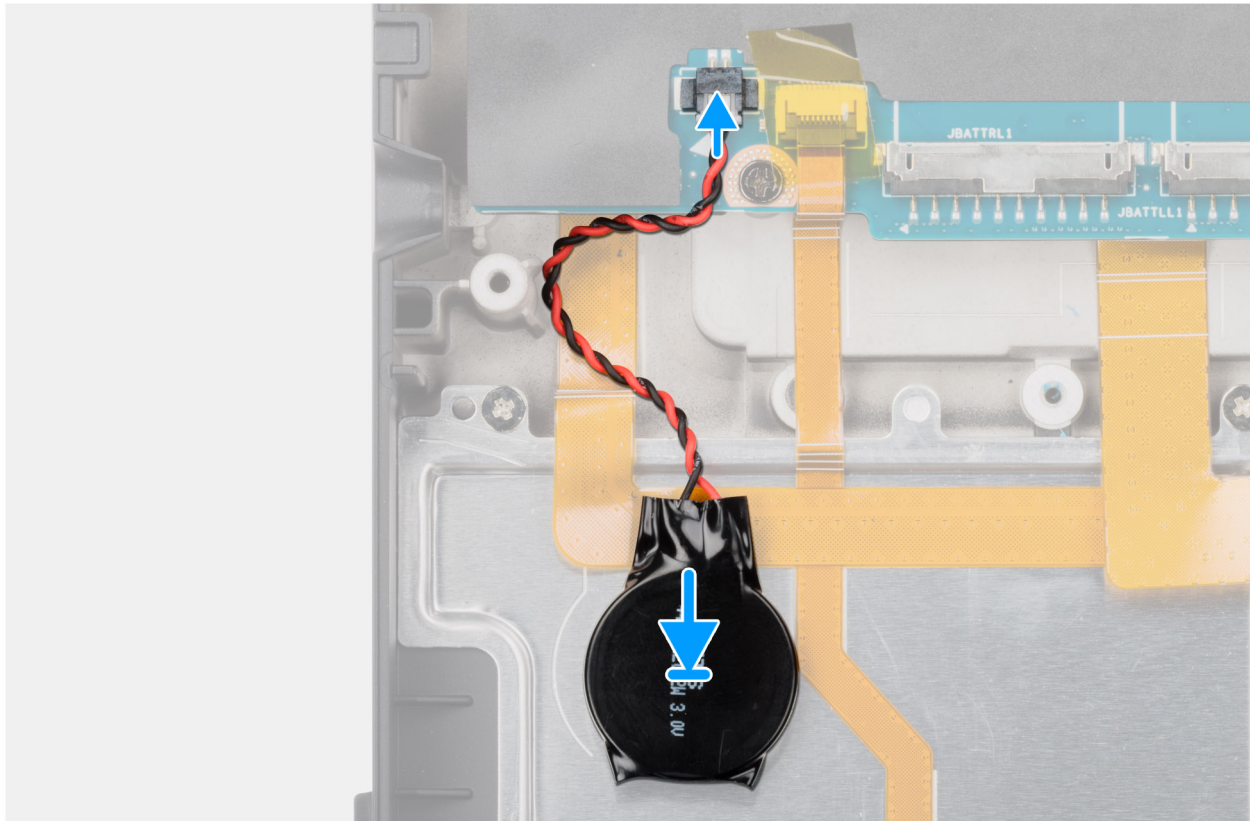
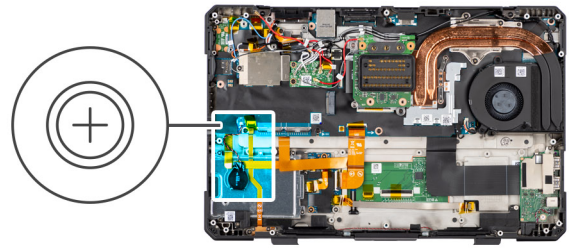


Figure 48. Installing the coin-cell battery

Steps

1. Adhere the coin-cell battery to the slot on the computer chassis.
2. Connect the coin-cell battery cable to the connector on the system board.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Fan

Removing the fan

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the fan and provides a visual representation of the removal procedure.

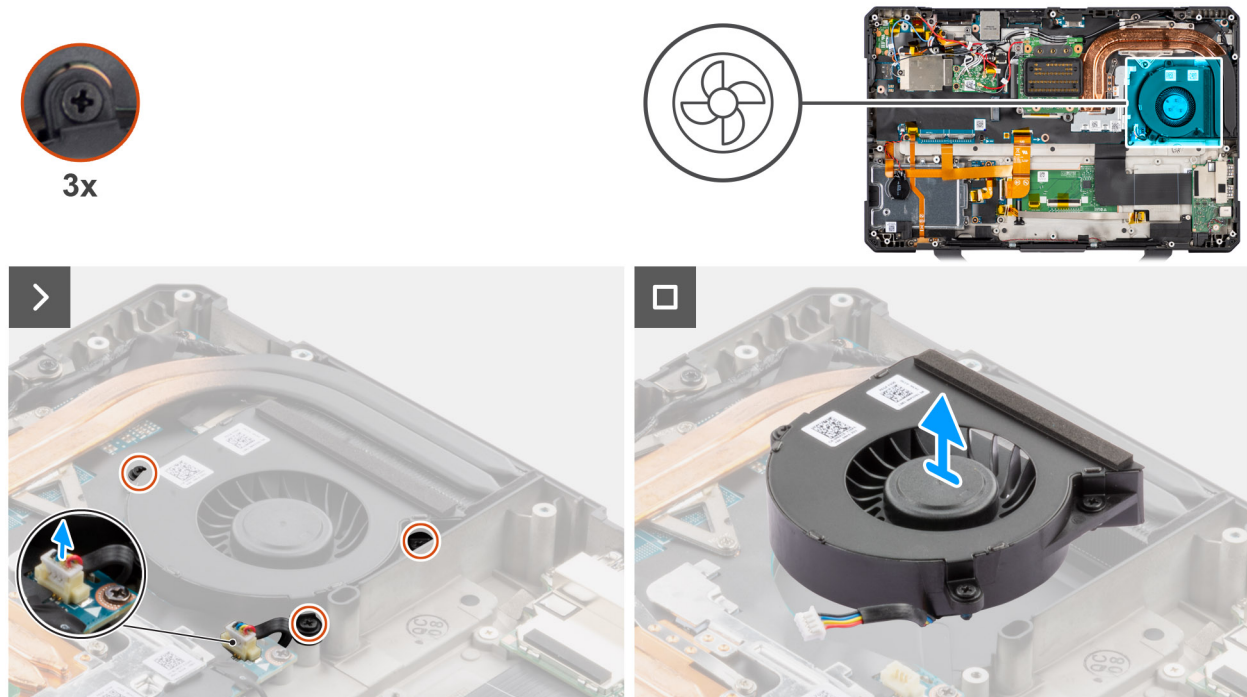


Figure 49. Removing the fan

Steps

1. Disconnect the fan cable from its connector on the system board.
2. Remove the three captive screws that secure the fan to the computer chassis.
3. Lift the fan from the computer chassis.

Installing the fan

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the fan and provides a visual representation of the installation procedure.

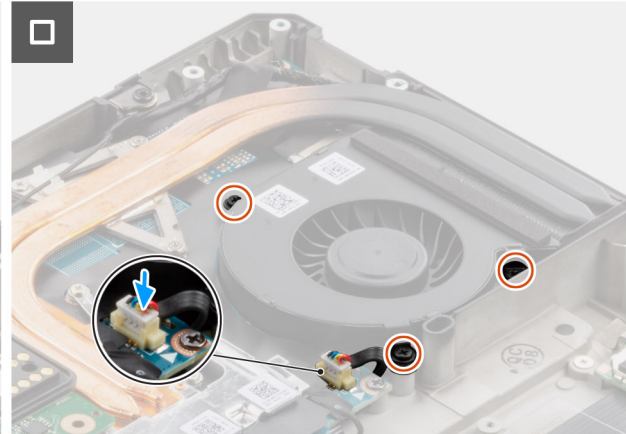
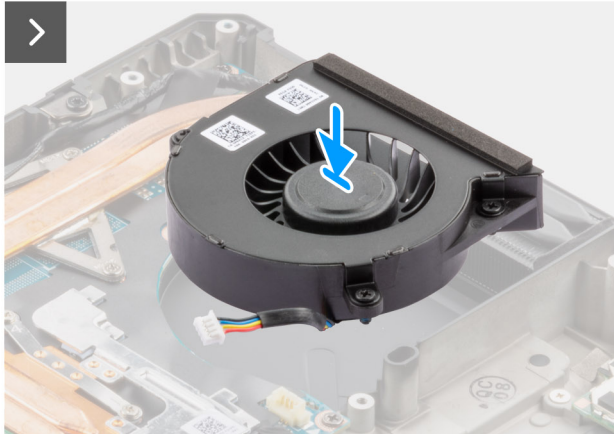
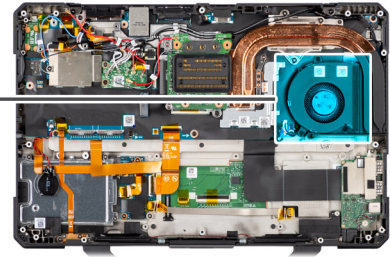
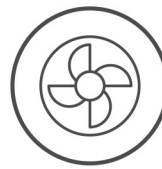


Figure 50. Installing the fan

Steps

1. Place the fan on the computer chassis.
2. Connect the fan cable connector clip to the chassis.
3. Connect the fan cable to its connector on the system board.
4. Replace the three captive screws that secure the fan to the computer chassis.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Global Positioning System (GPS) board

Removing the GPS board

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the GPS board and provides a visual representation of the removal procedure.

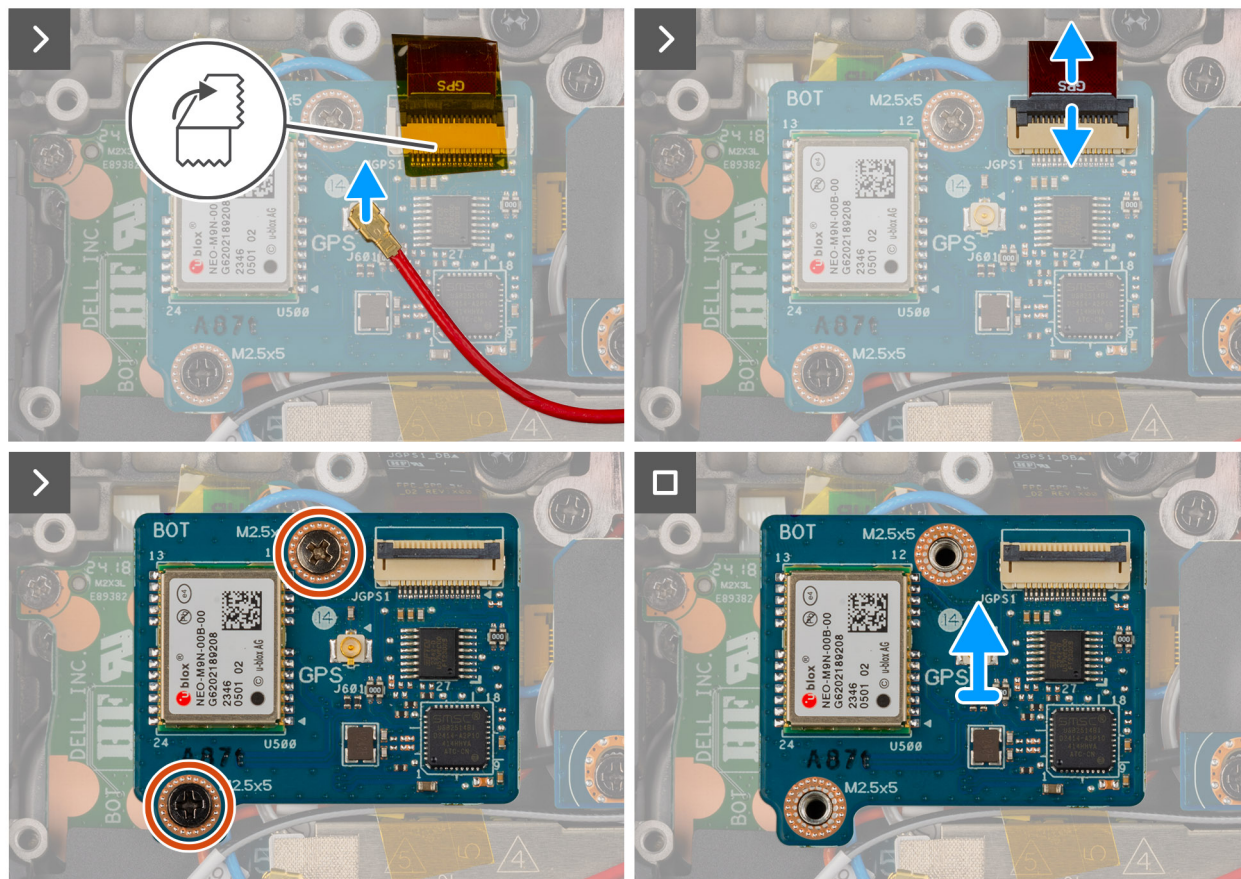
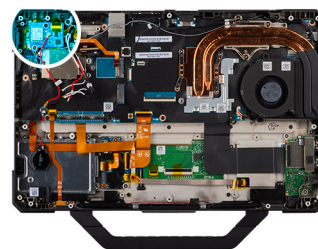


Figure 51. Removing the GPS board

Steps

1. Disconnect the GPS antenna cable on the GPS board.
2. Disconnect the GPS flat-printed cable from the connector on the GPS board.
3. Remove the two (M2.5x5) screws that secure the GPS board to the computer chassis.
4. Lift the GPS board from the computer chassis.

Installing the GPS board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the GPS board and provides a visual representation of the installation procedure.

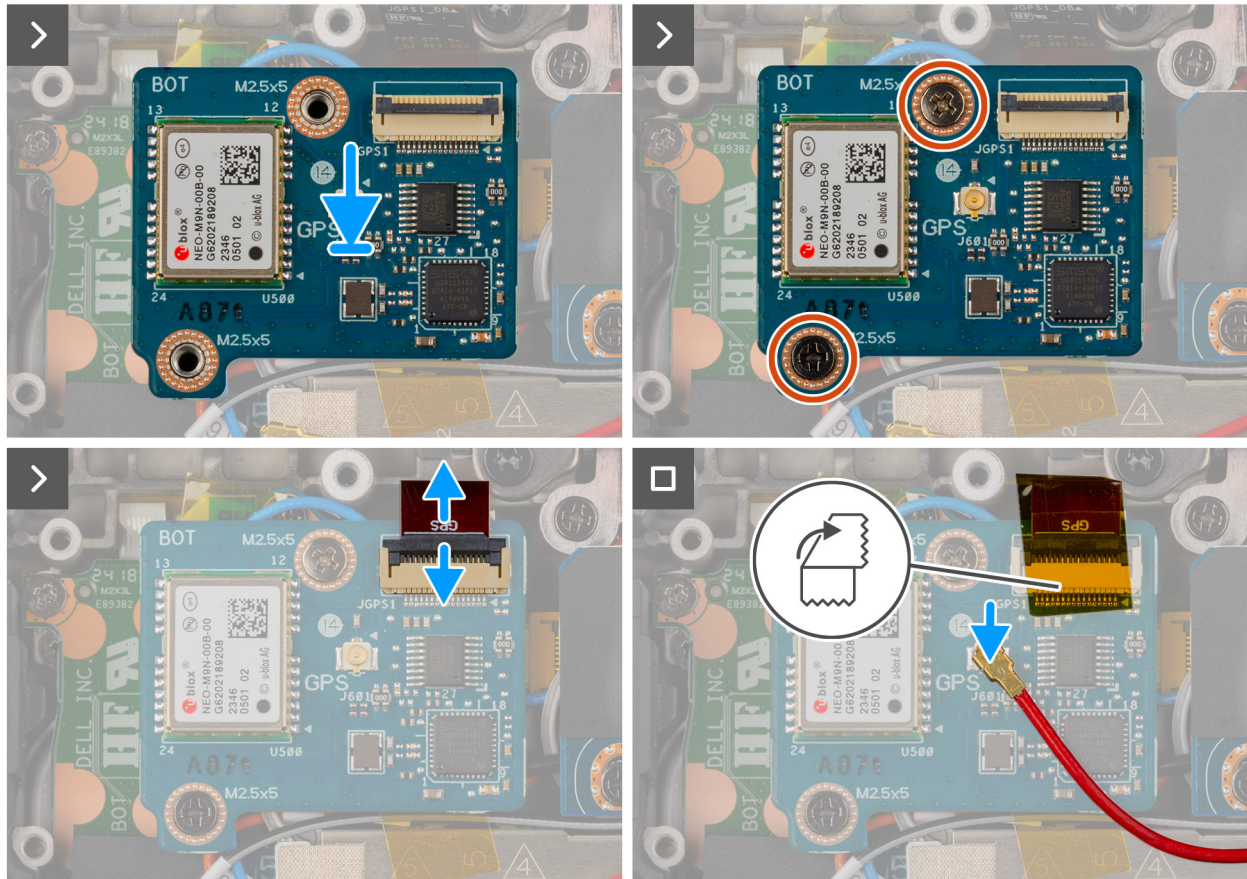
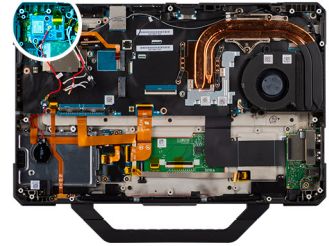


Figure 52. Installing the GPS board

Steps

1. Align the screw holes on the GPS board with the screw holes on the system board.
2. Replace the two (M2.5x5) screws that secure the GPS board with the computer chassis.
3. Connect the GPS flat-printed cable to the connector on the GPS board.
4. Connect the GPS antenna cable on the GPS board.

NOTE: Adhere the GPS flat printed cable with kapton tapes to the connector.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Rear I/O-board

Removing the rear I/O-board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

- 1. Follow the procedure in [before working inside your computer](#).
- 2. Remove the [batteries](#).
- 3. Remove the [solid state drive carrier](#).
- 4. Remove the [base cover](#).

About this task

The following image indicates the location of the rear I/O-board and provides a visual representation of the removal procedure.

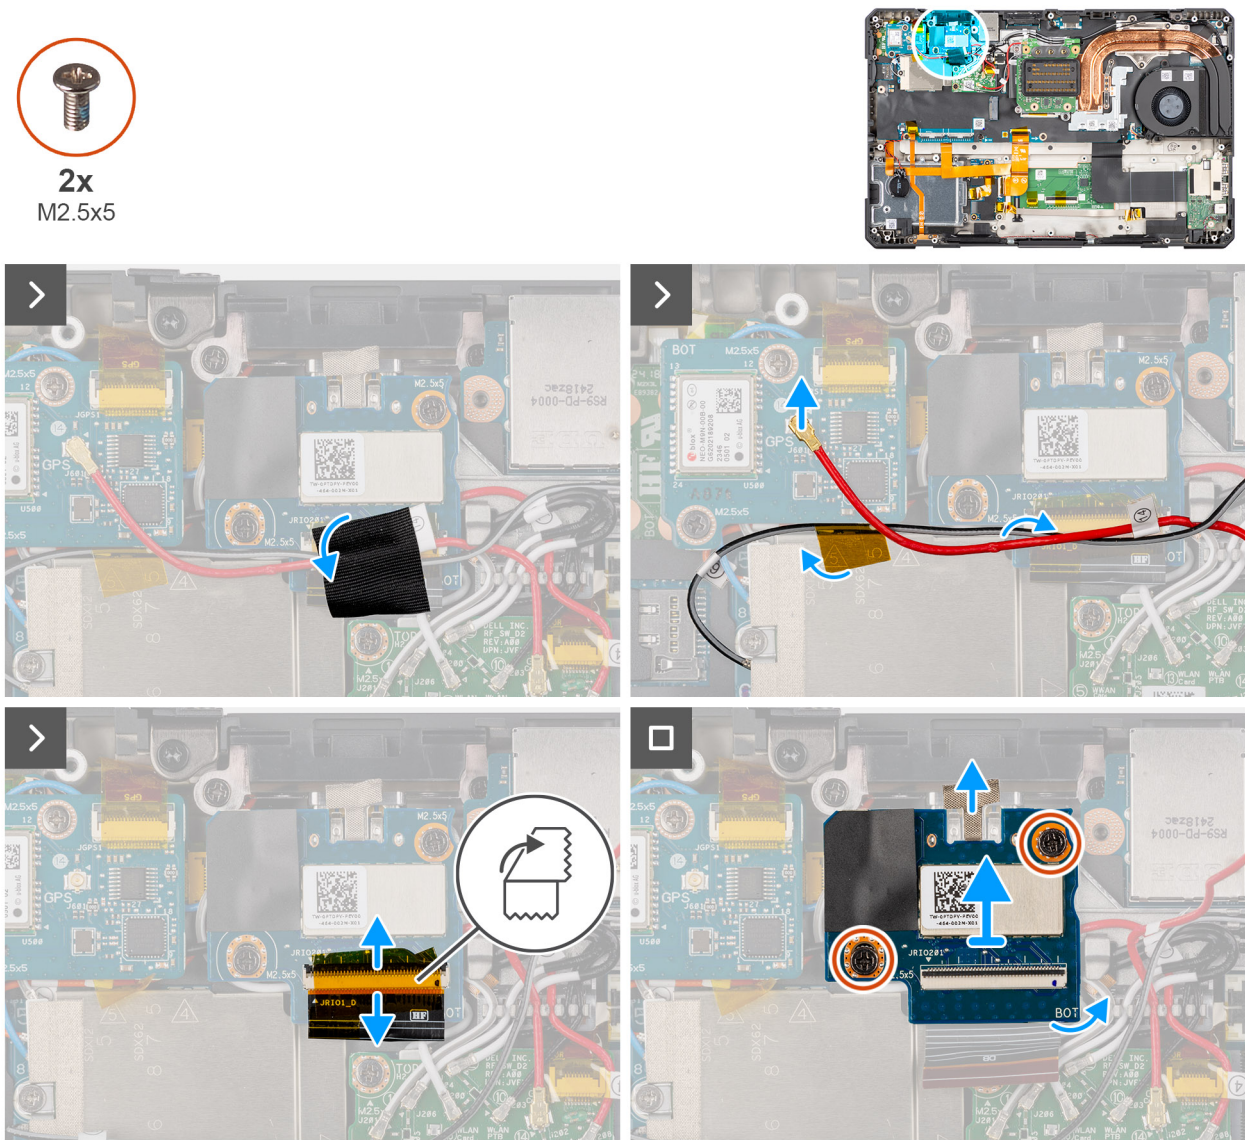


Figure 53. Removing the rear I/O-board

Steps

1. Peel off the adhesive tape and unroute the cables from the routing channels on the computer chassis.
2. Disconnect the GPS antenna cable from the GPS board.
3. Disconnect the rear I/O flat printed cable and remove the two (M2.5x5) screws that secure the rear I/O-board to the system board.
4. Tilt the rear I/O-board at an angle to remove it from the computer chassis.

Installing the rear I/O-board

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the rear I/O-board and provides a visual representation of the installation procedure.

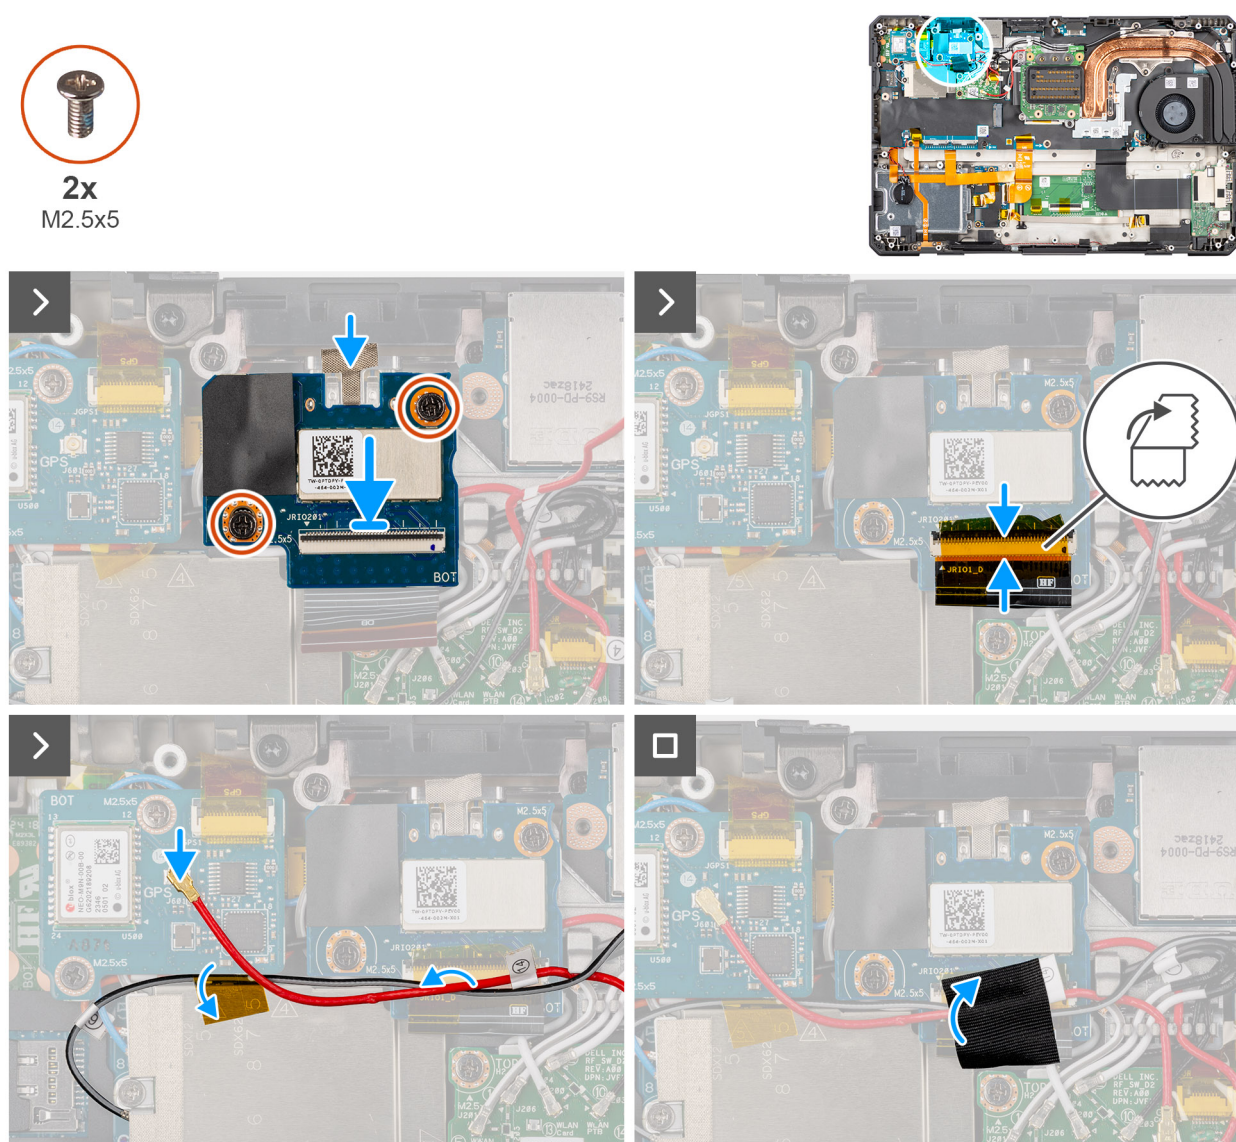




Figure 54. Installing the rear I/O-board

Steps

1. Align the screw holes on the rear I/O-board with the screw holes on the system board.
2. Replace the two (M2.5x5) screws to secure the rear I/O-board to the system board.
3. Connect the rear I/O flat printed cable on the rear I/O-board.
 **NOTE:** Adhere the rear I/O flat printed cable with kapton tapes to the connector.
4. Route the cables using the routing channels and connect the GPS antenna cable to the GPS board.
 **NOTE:** Adhere the adhesive tapes on the rear I/O-board.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

RF switch board

Removing the RF switch board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the RF switch board and provides a visual representation of the removal procedure.

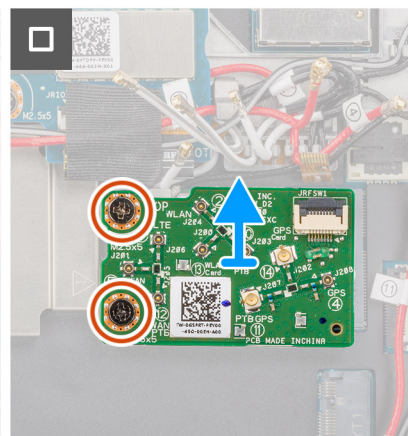
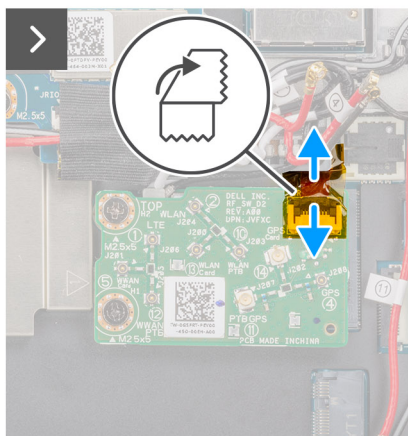
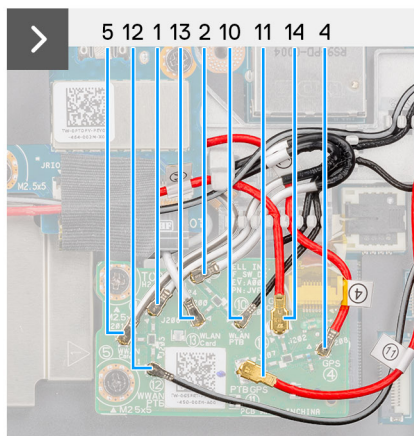
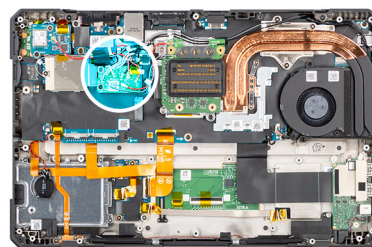


Figure 55. Removing the RF switch board

Steps

1. Disconnect the WLAN, WWAN, and GPS antennas from the RF switch board.

Table 42. Cable connectors on Dell Pro Rugged 14 RB14250

Cable number	Antenna
5	WWAN antenna
1	WWAN antenna
12	WWAN antenna
2	WLAN antenna
13	WLAN antenna
10	WLAN antenna
11	GPS antenna
14	GPS antenna
4	GPS antenna

2. Peel the adhesive tape and disconnect the flexible printed cable from the RF switch board.
3. Remove the two (M2.5x5) screws that secure the RF switch board to the system board.
4. Lift the RF switch board from the system board.

Installing the RF switch board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the RF switch board and provides a visual representation of the installation procedure.

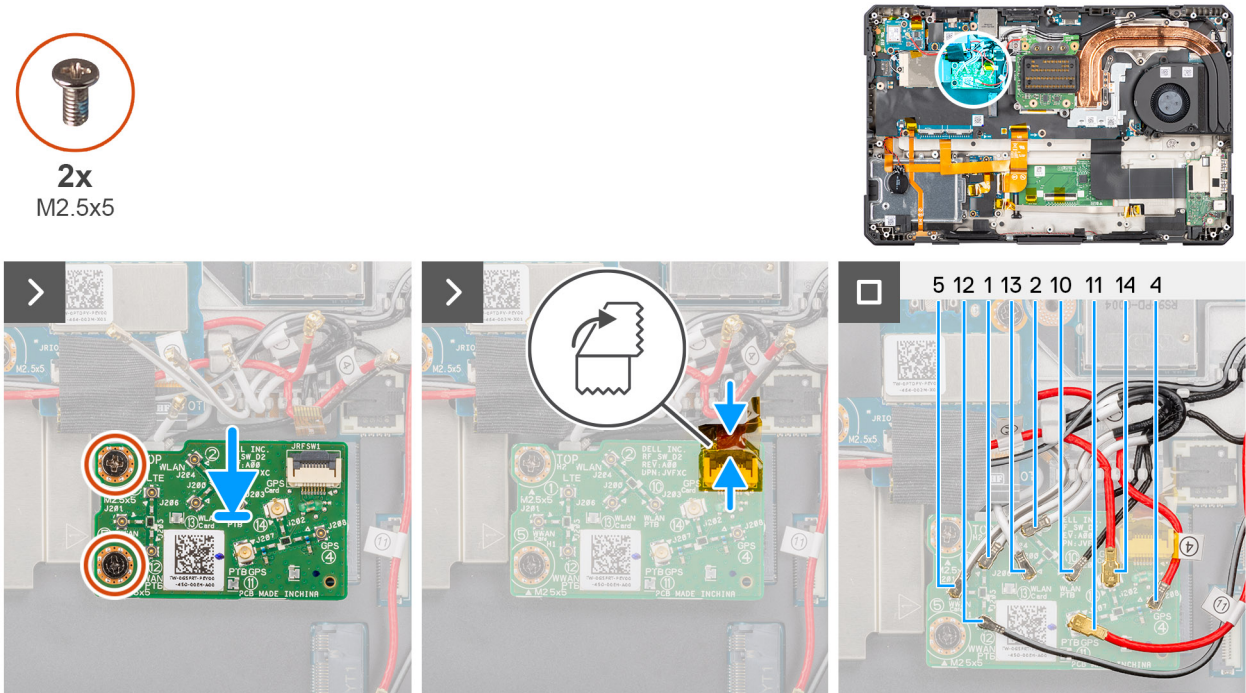


Figure 56. Installing the RF switch board

Steps

- 1. Place and align the RF switch board with the screw holes on the system board.
- 2. Replace the two (M2.5x5) screws that secure the RF switch board to the system board.
- 3. Connect the flexible printed cable to the RF switch board.

NOTE: Adhere the flexible printed cable with kapton tape to the connector.

- 4. Connect the WLAN, WWAN, and GPS antennas to the RF switch board.

Table 43. Cable connectors on Dell Pro Rugged 14 RB14250

Cable number	Antenna
5	WWAN antenna
1	WWAN antenna
12	WWAN antenna
2	WLAN antenna
13	WLAN antenna
10	WLAN antenna
11	GPS antenna
14	GPS antenna
4	GPS antenna

Next steps

- 1. Install the [base cover](#).

2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Wireless Local Area Network (WLAN) card

Removing the WLAN card

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).
5. Remove the [RF switch board](#).

About this task

The following image indicates the location of the WLAN card and provides a visual representation of the removal procedure.

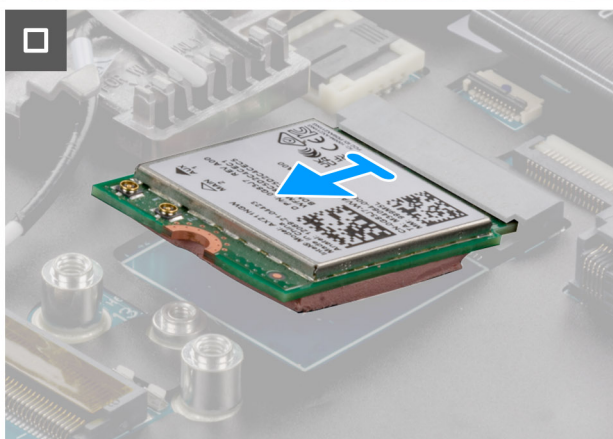
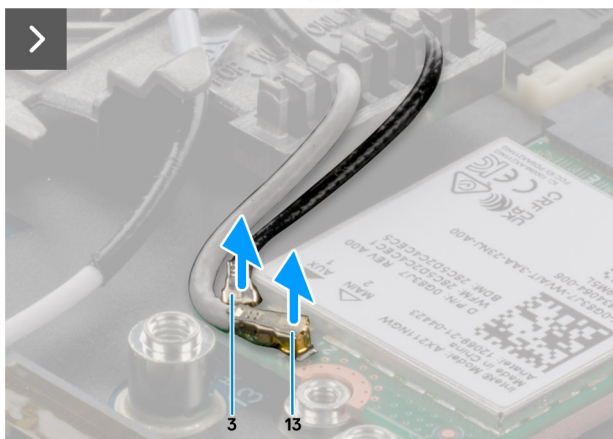
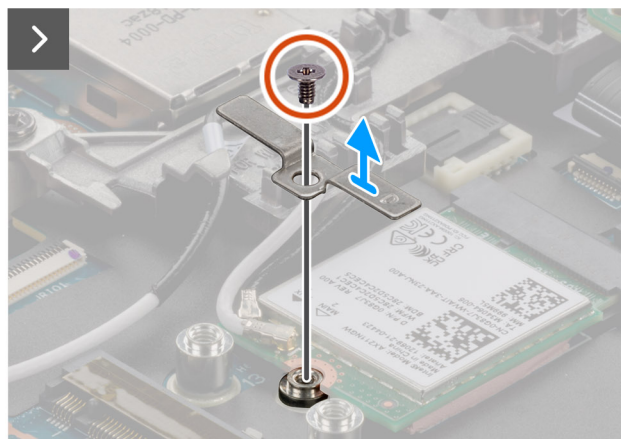
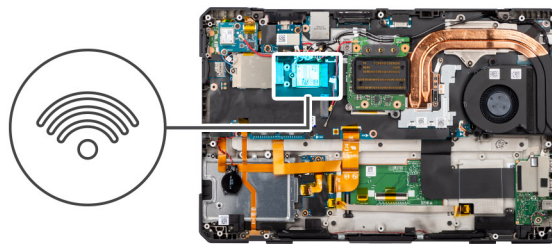


Figure 57. Removing the WLAN card

Steps

1. Remove the (M2x3.5) screw that secures the WLAN card holder to the system board.
2. Remove the WLAN card holder.
3. Disconnect the antenna cables from the WLAN card.

Table 44. Connectors on the wireless card

Antenna	Cable Color
Main (white triangle)	White (cable number 13)
Auxiliary (black triangle)	Black (cable number 3)

4. Slide and remove the WLAN card from the WLAN card slot.

Installing the WLAN card

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the WLAN card and provides a visual representation of the installation procedure.

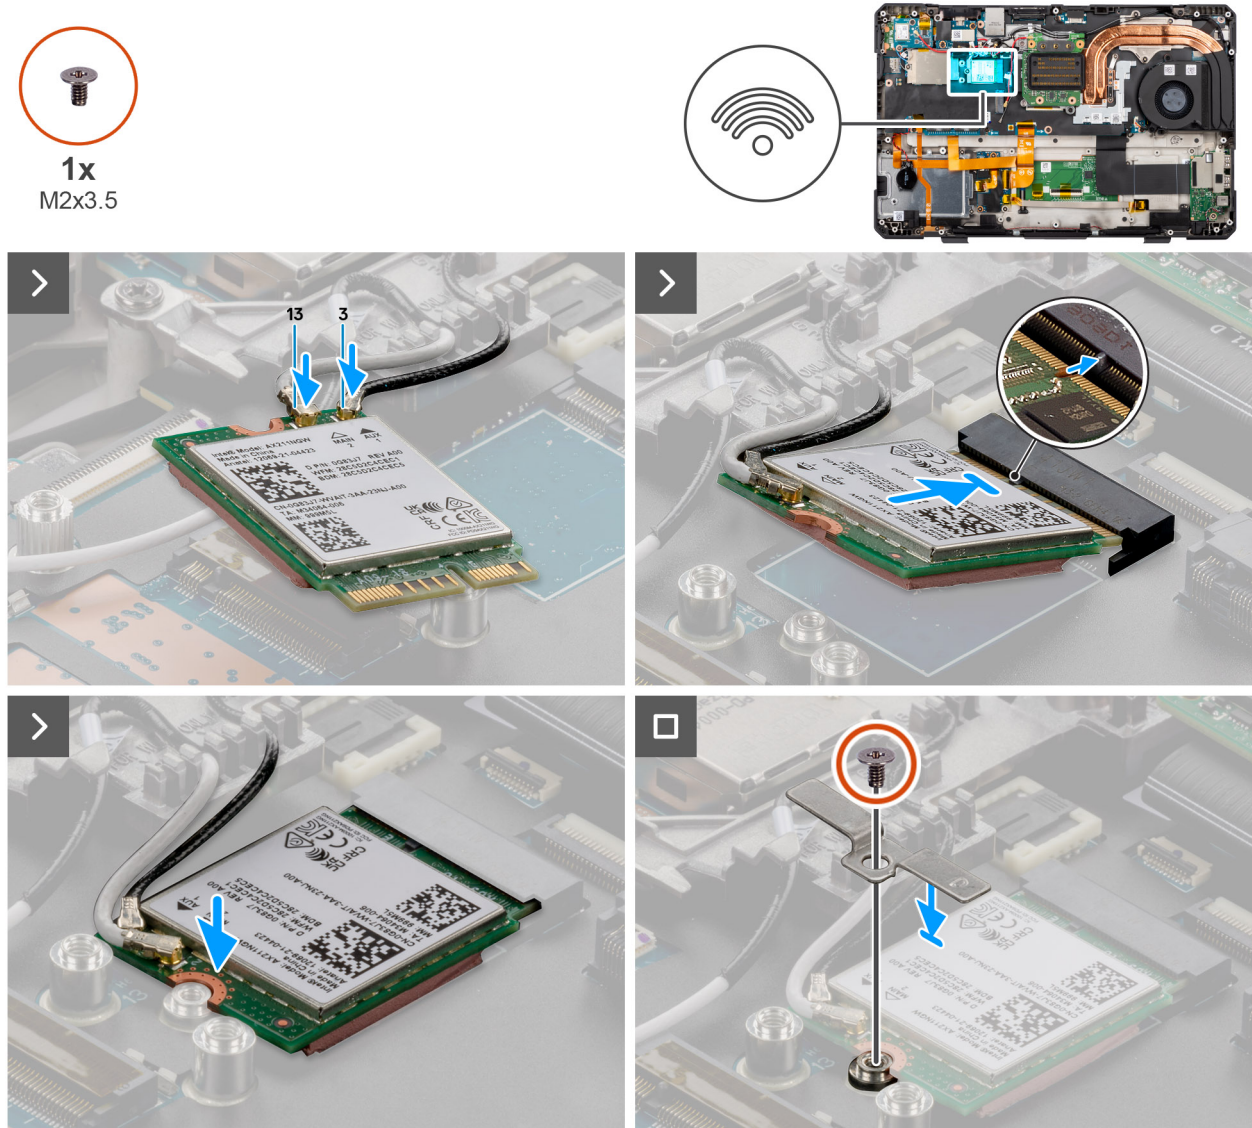


Figure 58. Installing the WLAN card

Steps

- 1. Connect the antenna cables to the WLAN card.

Table 45. Connectors on the wireless card

Antenna	Cable Color
Main (white triangle)	White (cable number 13)
Auxiliary (black triangle)	Black (cable number 3)

- 2. Slide the WLAN card at an angle into the WLAN card slot.
- 3. Place the WLAN card holder on the WLAN card.
- 4. Replace the (M2x3.5) screw to secure the WLAN card holder to the WLAN card.

Next steps

1. Install the [RF switch board](#).
2. Install the [base cover](#).
3. Install the [solid state drive carrier](#).
4. Install the [batteries](#).
5. Follow the procedure in [after working inside your computer](#).

Wireless Wide Area Network (WWAN) card

Removing the WWAN card

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).
5. Remove the [RF switch board](#).
6. Remove the [rear I/O-board](#).
7. Remove the [GPS board](#).

About this task

The following images indicate the location of the WWAN card and provide a visual representation of the removal procedure.



1x
M2x3.5

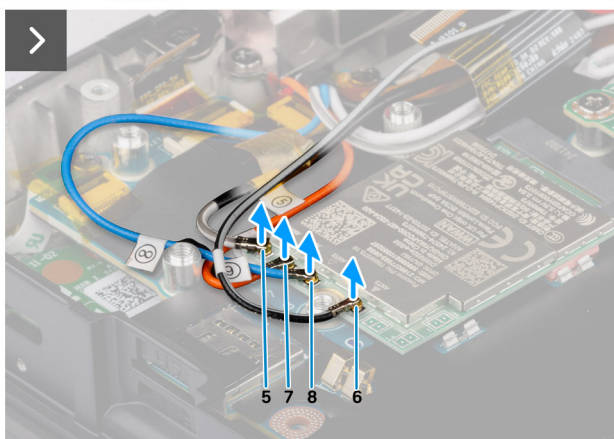
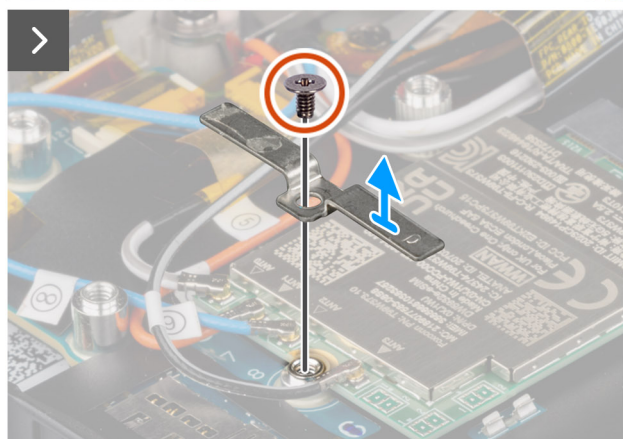
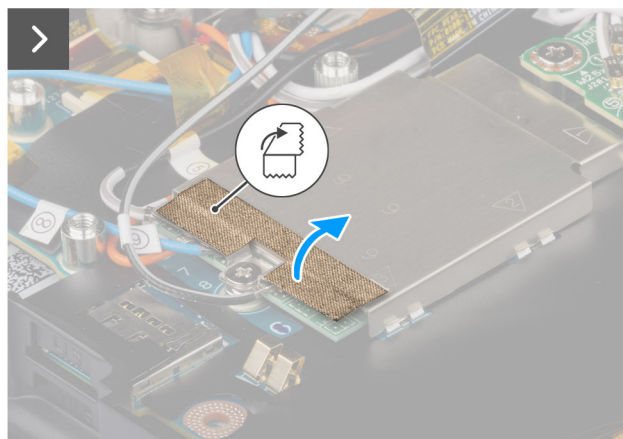
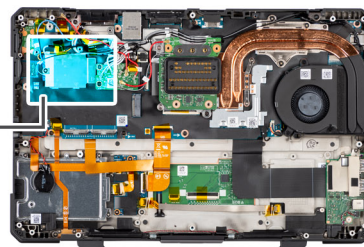


Figure 59. Removing the WWAN card

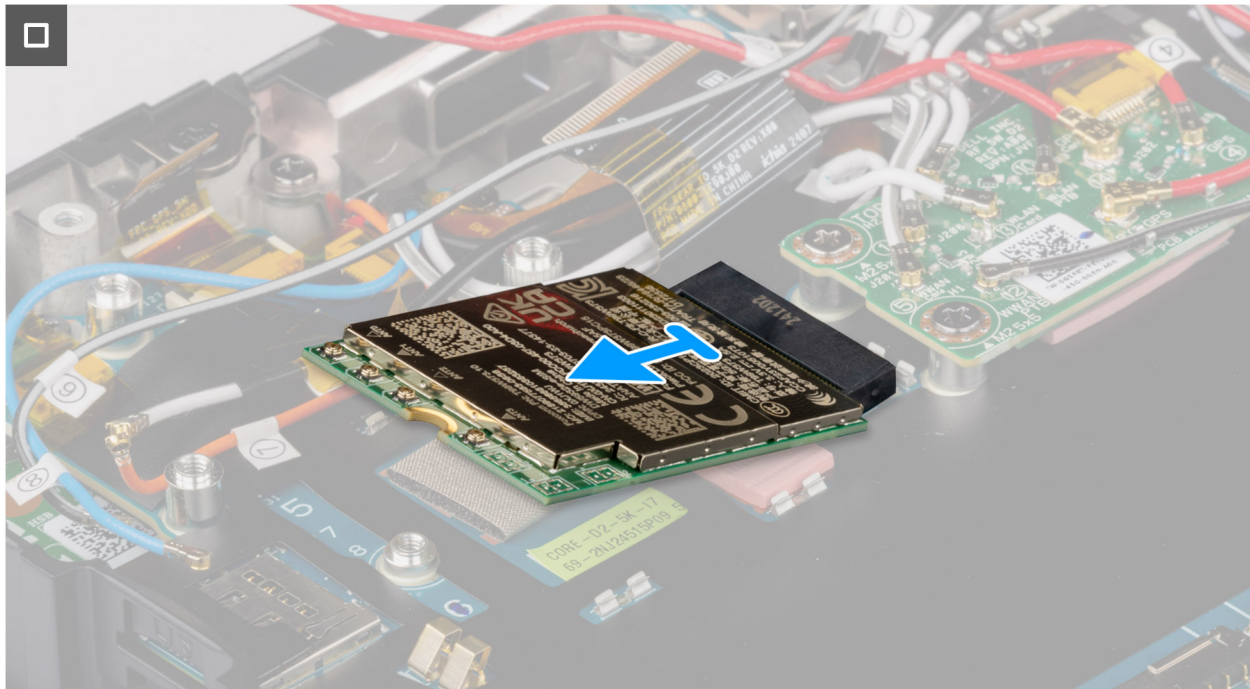


Figure 60. Removing the WWAN card

Steps

1. Peel back the anti-static fabric tape slightly and remove the WWAN shield.
2. Remove the (M2x3.5) screw that secures the WWAN card holder to the system board.
3. Remove the WWAN card holder.
4. Disconnect all the antenna cables from the WWAN card.

Table 46. Connectors on the WWAN card

Antenna	Cable Color
Main (white triangle) - ANT1	Orange (cable number 7)
Main (white triangle) - ANT3	White and Black (cable number 6)
Auxiliary (black triangle) - ANT0	White and Grey (cable number 5)
Auxiliary (black triangle) - ANT2	Blue (cable number 8)

5. Slide and remove the WWAN card from the WWAN card slot.

Installing the WWAN card

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the WWAN card and provides a visual representation of the installation procedure.



1x
M2x3.5

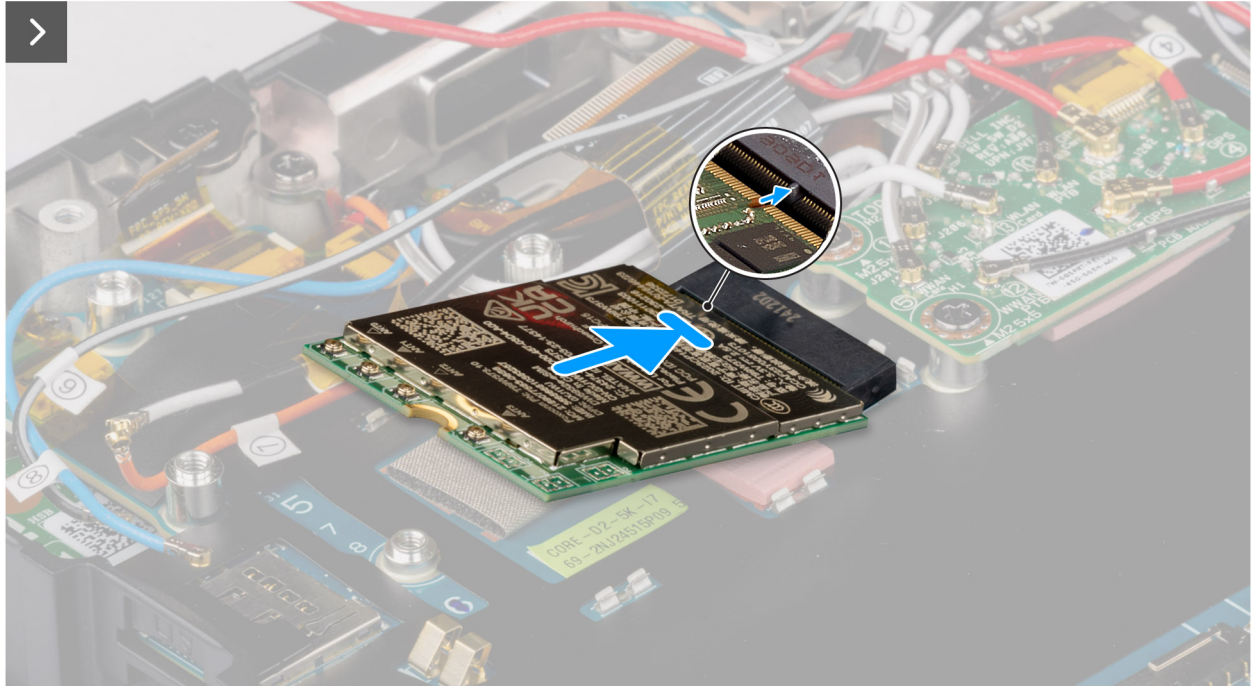
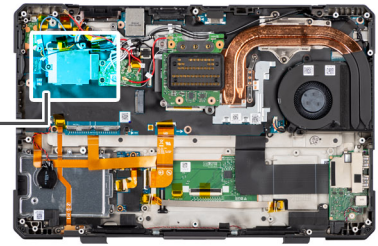


Figure 61. Installing the WWAN card

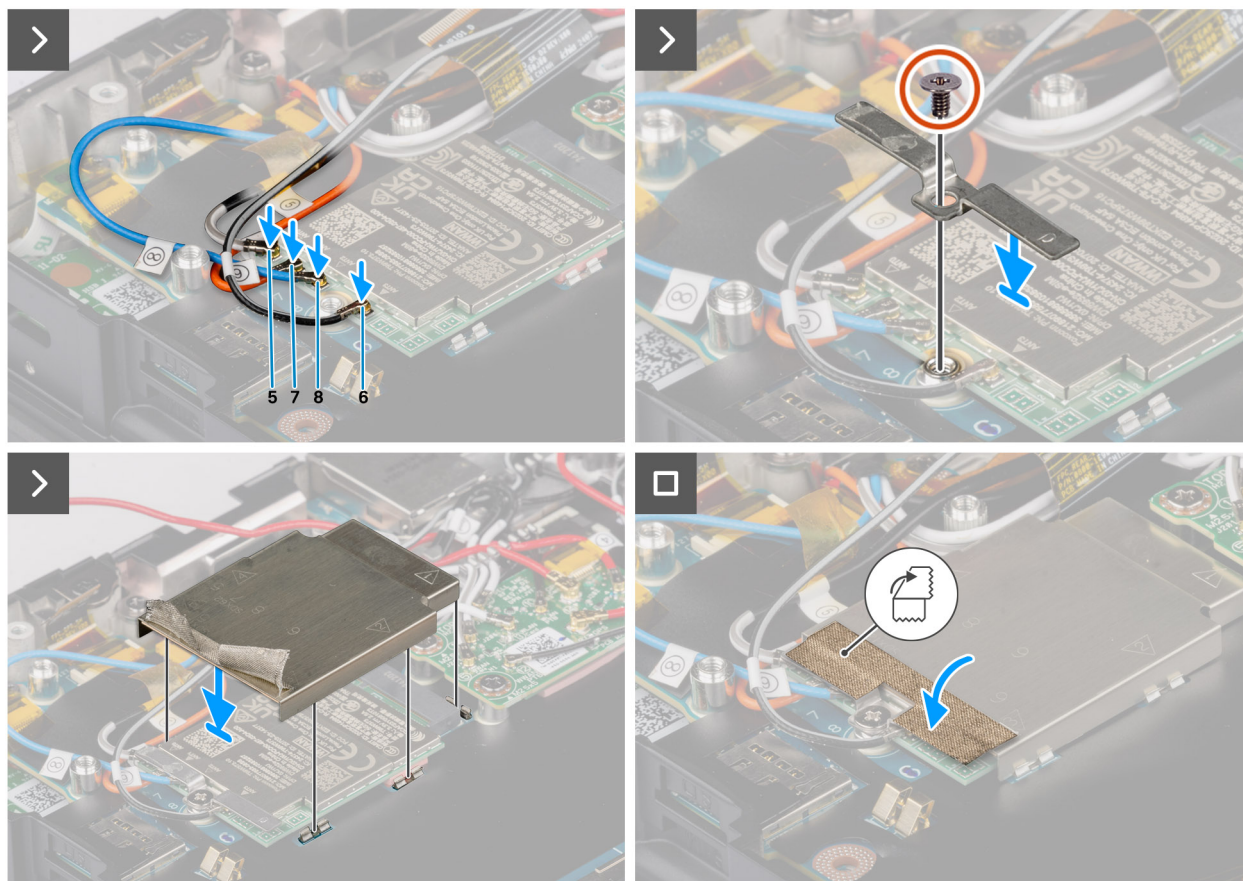


Figure 62. Installing the WWAN card

Steps

1. Slide the WWAN card at an angle into the WWAN card slot.
2. Connect the antenna cables to the WWAN card.

Table 47. Connectors on the WWAN card

Antenna	Cable Color
Main (white triangle) - ANT1	Orange (cable number 7)
Main (white triangle) - ANT3	White and Black (cable number 6)
Auxiliary (black triangle) - ANT0	White and Grey (cable number 5)
Auxiliary (black triangle) - ANT2	Blue (cable number 8)

3. Place the WWAN card holder on the WWAN card and replace the (M2x3.5) screw that secures the WWAN card holder to the system board.
4. Place the WWAN shield and press the anti-static fabric tape back into place.

NOTE: For instructions on how to find your computer's IMEI (International Mobile Station Equipment Identity) number, see the knowledge base article [000143678](#) at [Dell Support Site](#).

Next steps

1. Install the [GPS board](#).
2. Install the [rear I/O-board](#).
3. Install the [RF switch board](#).
4. Install the [base cover](#).
5. Install the [solid state drive carrier](#).

6. Install the [batteries](#).
7. Follow the procedure in [after working inside your computer](#).

Dock I/O-module

Removing the dock I/O-module

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).
5. Remove the [RF switch board](#).
6. Remove the [WLAN card](#).
7. Remove the [rear I/O-board](#).

About this task

The following image indicates the location of the dock I/O-module and provides a visual representation of the removal procedure.



2x
M2x3.5

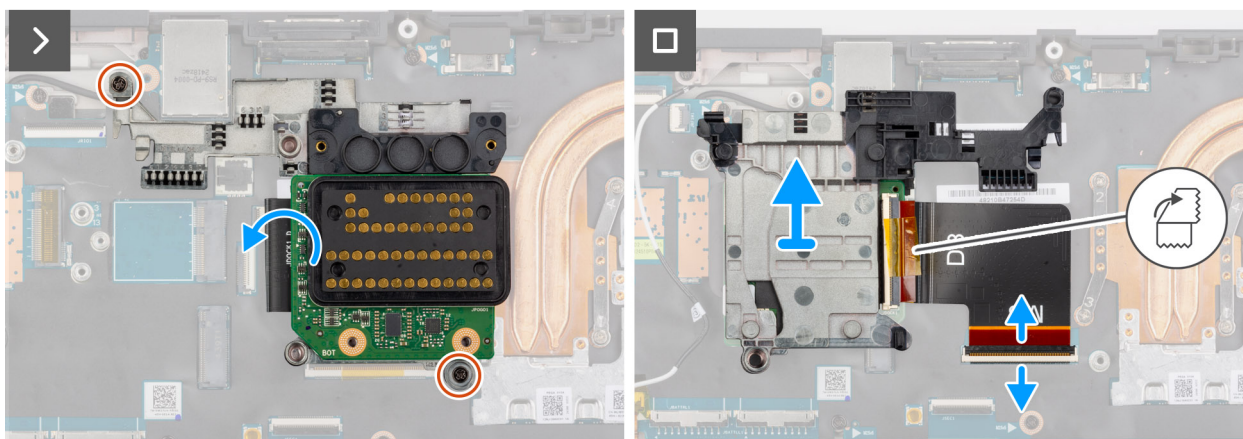
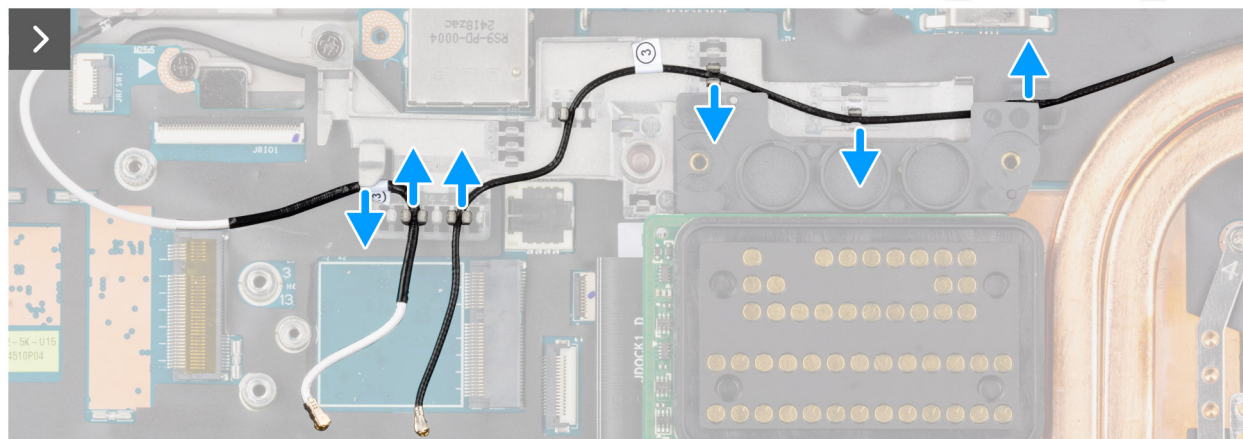
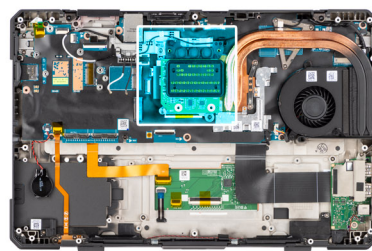


Figure 63. Removing the dock I/O-module

Steps

1. Unroute the antenna cables from the routing channels on the computer chassis.
2. Remove the two (M2x3.5) screws that secure the dock I/O-module to the system board.
3. Flip the dock I/O-module and disconnect the dock I/O flexible printed cable from the system board.
4. Lift the dock I/O-module from the system board.

Installing the dock I/O-module

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the dock I/O-module and provides a visual representation of the installation procedure.



2x
M2x3.5

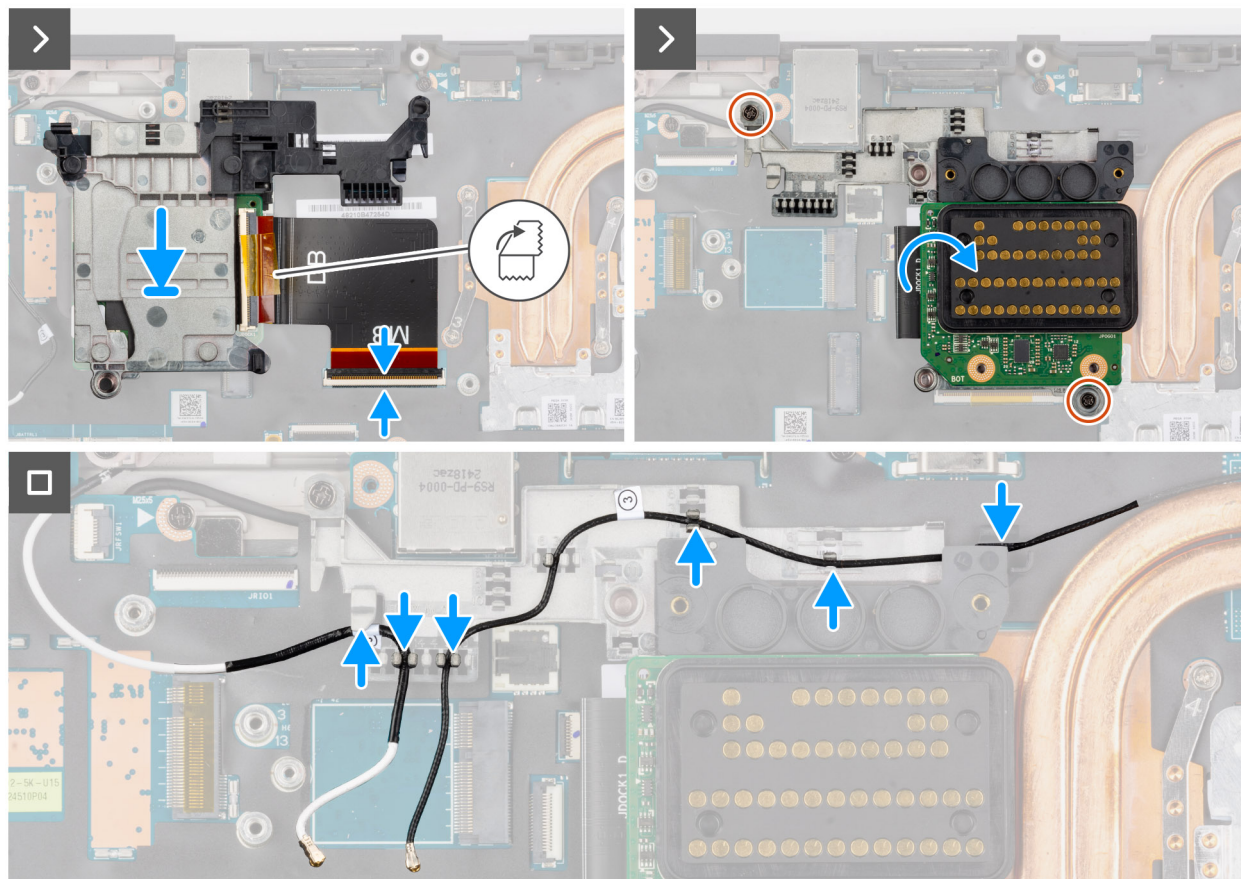
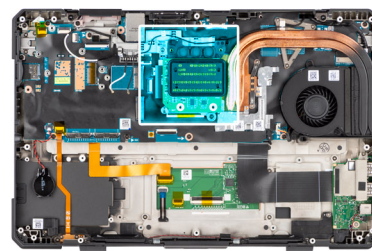


Figure 64. Installing the dock I/O-module

Steps

1. Place the dock I/O-module and connect the dock I/O flexible printed cable to the system board.
NOTE: Adhere the dock I/O flexible printed cable with kapton tapes to the connector.
2. Flip the dock I/O-module and replace the two (M2x3.5) screws that secure it to the system board.
3. Route the antenna cables using the routing channels on the computer chassis.

Next steps

1. Install the [rear I/O-board](#).
2. Install the [WLAN card](#).
3. Install the [RF switch board](#).
4. Install the [base cover](#).
5. Install the [solid state drive carrier](#).
6. Install the [batteries](#).
7. Follow the procedure in [after working inside your computer](#).

Dock Wi-Fi board

Removing the dock Wi-Fi board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).
5. Remove the [RF switch board](#).
6. Remove the [WLAN card](#).
7. Remove the [rear I/O-board](#).

About this task

The following image indicates the location of the dock Wi-Fi board and provides a visual representation of the removal procedure.



1x
M2x3.5

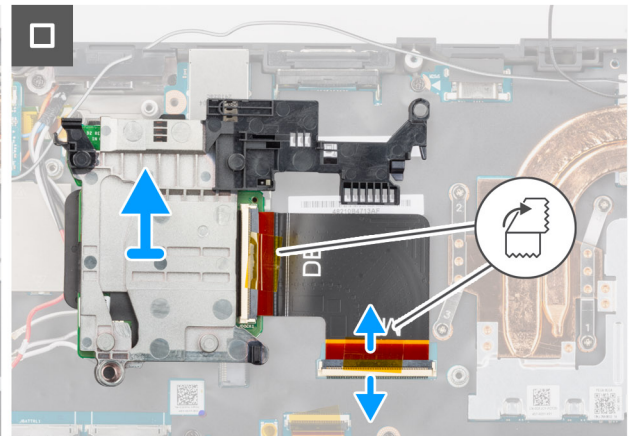
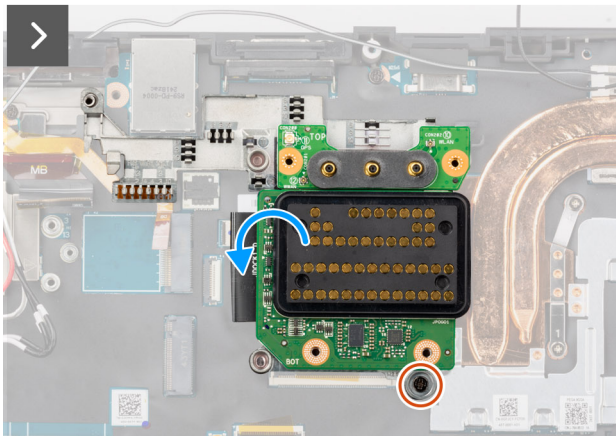
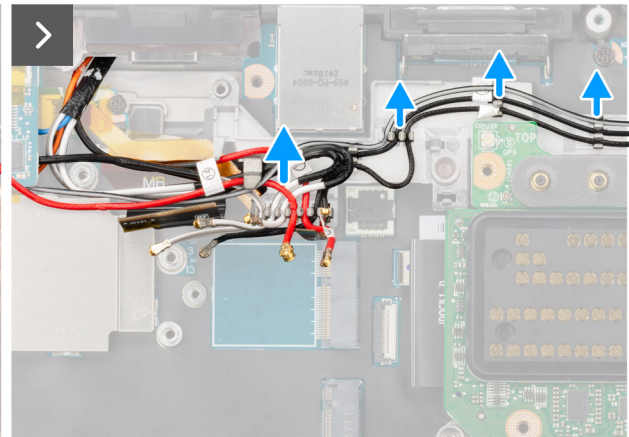
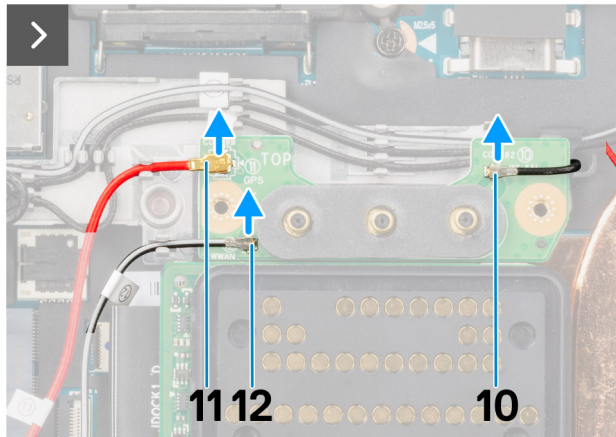
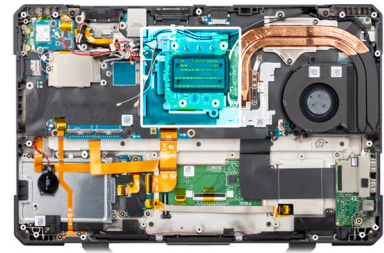


Figure 65. Removing the dock Wi-Fi board

Steps

1. Disconnect the GPS, WWAN, and WLAN antennas from the dock I/O-module.

Table 48. Connectors on the dock Wi-Fi board

Cable number	Antenna
11	GPS antenna
12	WWAN antenna
10	WLAN antenna

2. Unroute the antenna cables from the routing channels on the computer chassis.
3. Flip the dock Wi-Fi board and disconnect the dock I/O flexible printed cable from the system board.
4. Lift the dock Wi-Fi board from the system board.

Installing the dock Wi-Fi board

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the dock Wi-Fi board and provides a visual representation of the installation procedure.

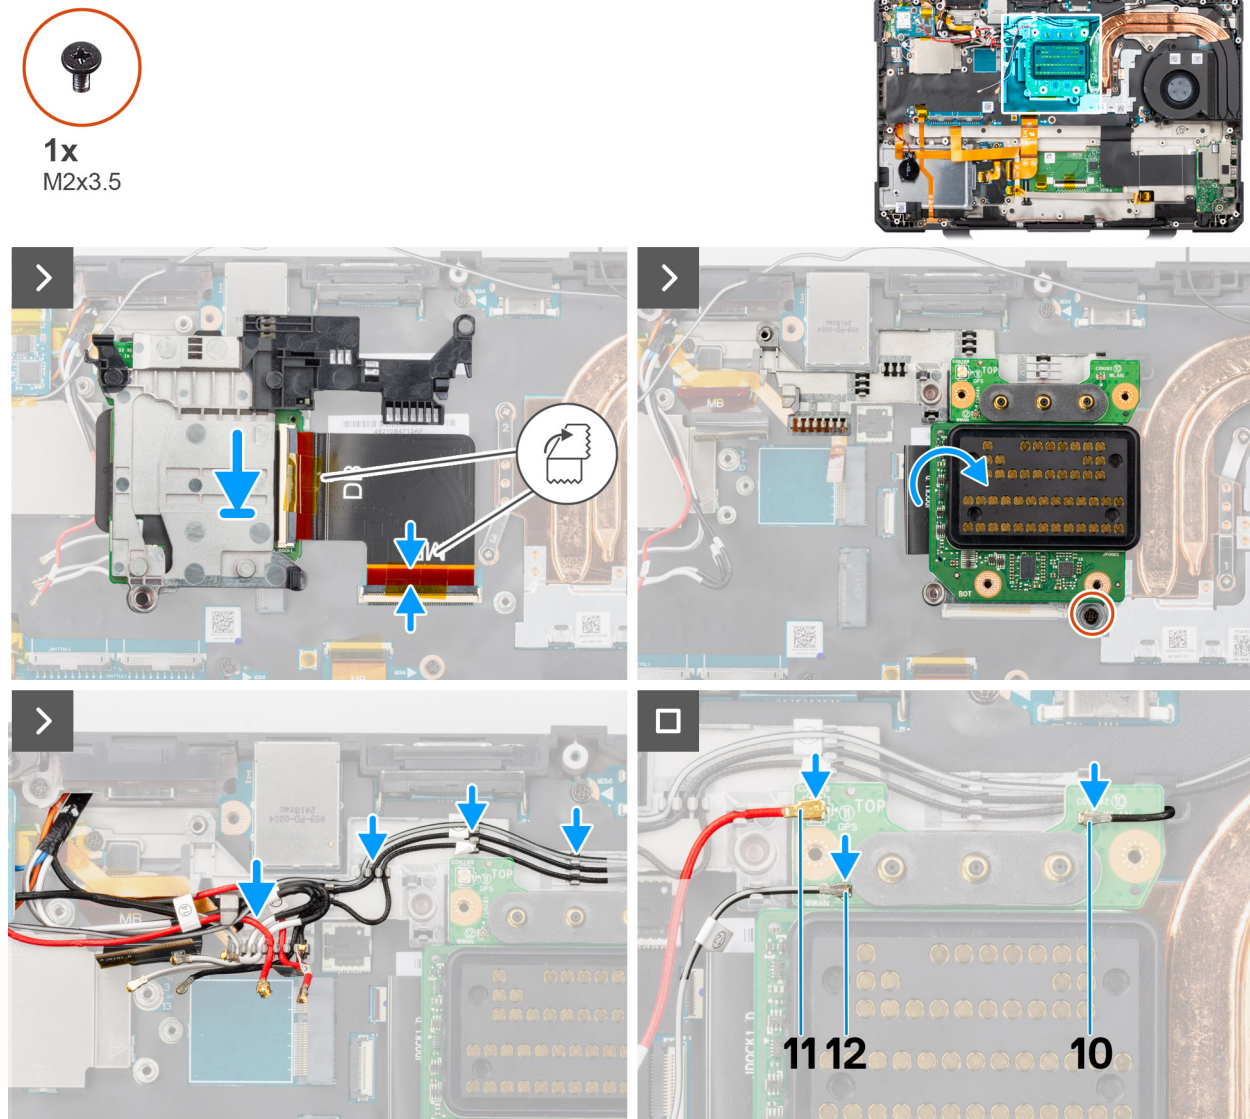


Figure 66. Installing the dock Wi-Fi board

Steps

1. Place the dock Wi-Fi board and connect the dock I/O flexible printed cable to the system board.

 **NOTE:** Adhere the dock I/O flexible printed cable with kapton tapes to the connector.

2. Flip the dock Wi-Fi board and replace the (M2x3.5) screw that secures it to the system board.
3. Route the antenna cables using the routing channels on the computer chassis.

4. Connect the GPS, WWAN, and WLAN antennas to the dock I/O-module.

Table 49. Connectors on the dock I/O-module (discrete graphics)

Cable number	Antenna
11	GPS antenna on dock Wi-Fi board
12	WWAN antenna on dock Wi-Fi board
10	WLAN antenna on dock Wi-Fi board

Next steps

1. Install the [rear I/O-board](#).
2. Install the [WLAN card](#).
3. Install the [RF switch board](#).
4. Install the [base cover](#).
5. Install the [solid state drive carrier](#).
6. Install the [batteries](#).
7. Follow the procedure in [after working inside your computer](#).

Heat sink

Removing the heat sink (for computers shipped with integrated graphics)

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).
5. Remove the [RF switch board](#).
6. Remove the [WLAN card](#).
7. Remove the [rear I/O-board](#).
8. Remove the [dock I/O-module](#).

About this task

The following image indicates the location of the heat sink and provides a visual representation of the removal procedure.

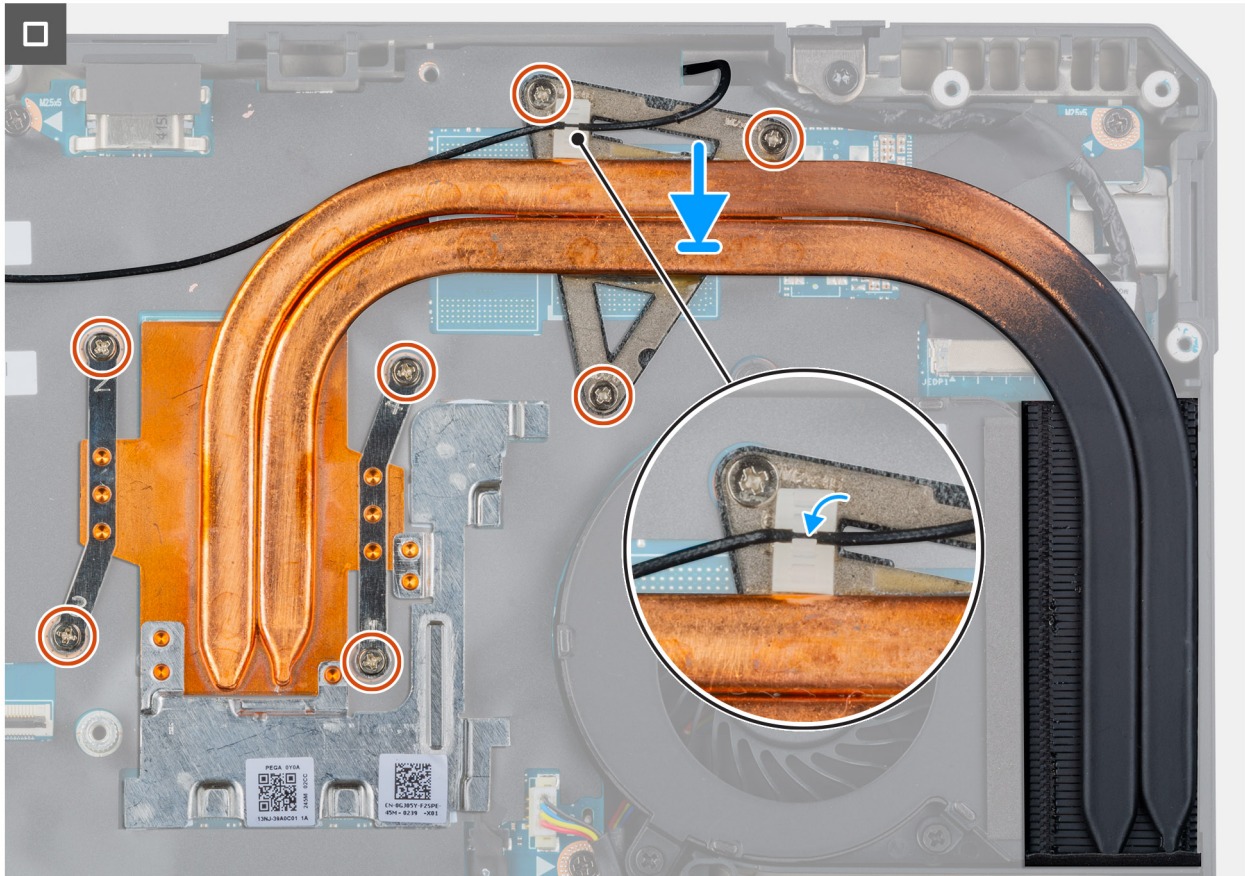
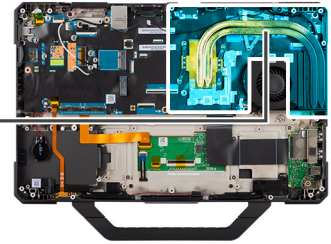


Figure 67. Removing the heat sink (for computers shipped with integrated graphics)

Steps

1. Pull the antenna cable from the heat sink cable slot and remove the seven (captive) screws that secure the heat sink to the system board.
2. Lift the heat sink from the computer chassis.

Installing the heat sink (for computers shipped with integrated graphics)

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the heat sink and provides a visual representation of the installation procedure.

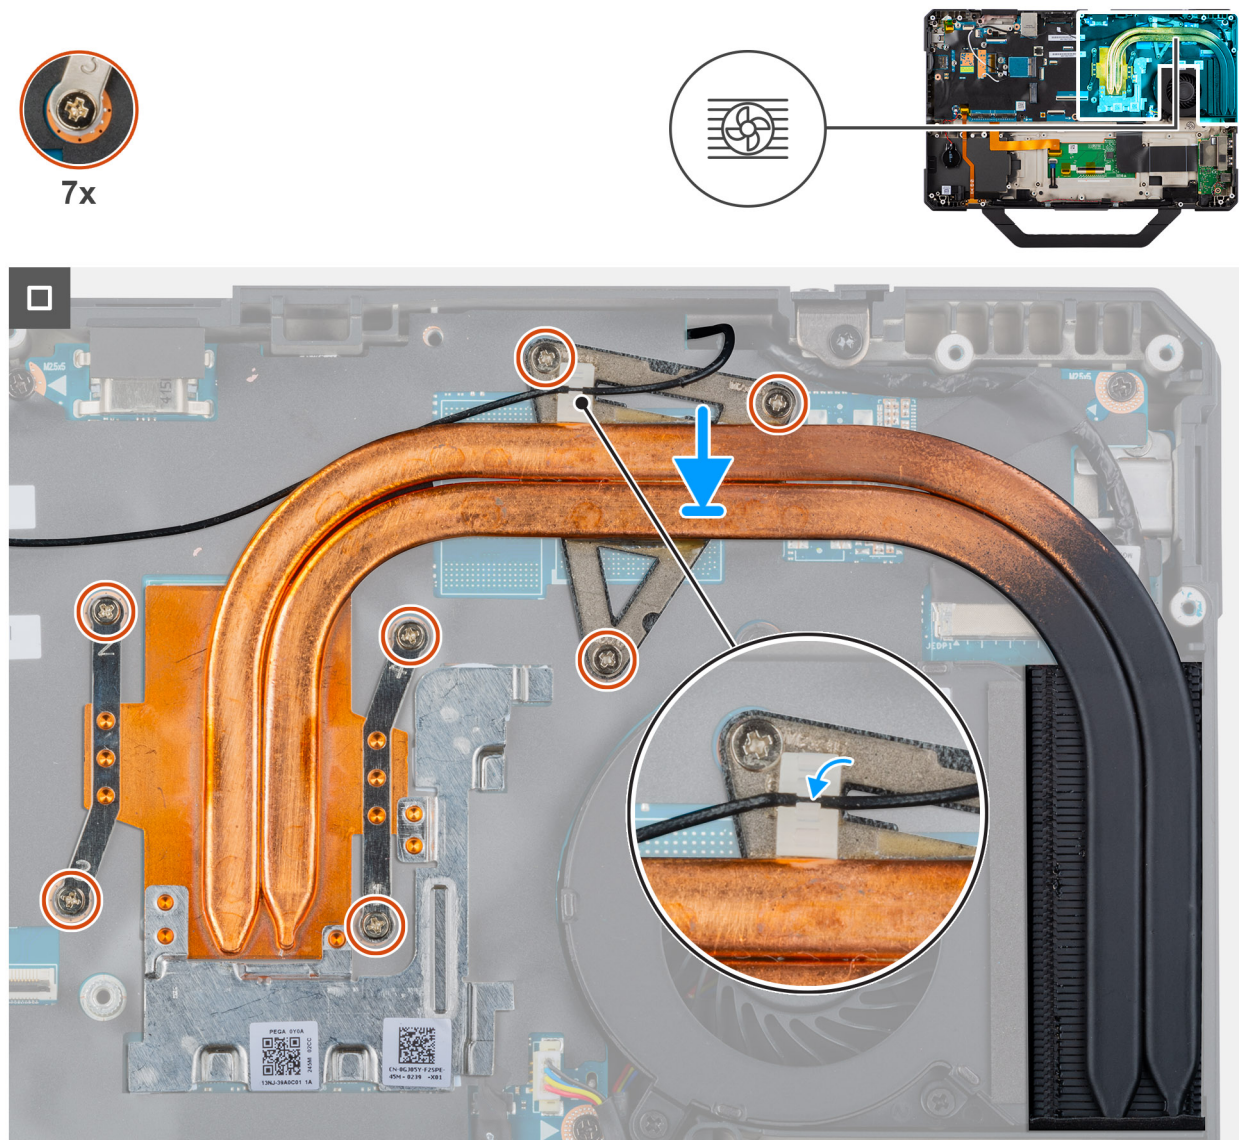


Figure 68. Installing the heat sink (for computers shipped with integrated graphics)

Steps

1. Align the heat sink screw holes with the system board and place it on the computer chassis.
2. Route the antenna cable through the heat sink cable slot.
3. Replace the seven (captive) screws to secure the heat sink to the system board.

Next steps

1. Install the [dock I/O-module](#).
2. Install the [rear I/O-board](#).
3. Install the [WLAN card](#).
4. Install the [RF switch board](#).
5. Install the [base cover](#).
6. Install the [solid state drive carrier](#).
7. Install the [batteries](#).
8. Follow the procedure in [after working inside your computer](#).

Removing the heat sink (for computers shipped with discrete graphics)

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).
5. Remove the [RF switch board](#).
6. Remove the [WLAN card](#).
7. Remove the [rear I/O-board](#).
8. Remove the [dock I/O-module](#).

About this task

The following image indicates the location of the heat sink and provides a visual representation of the removal procedure.

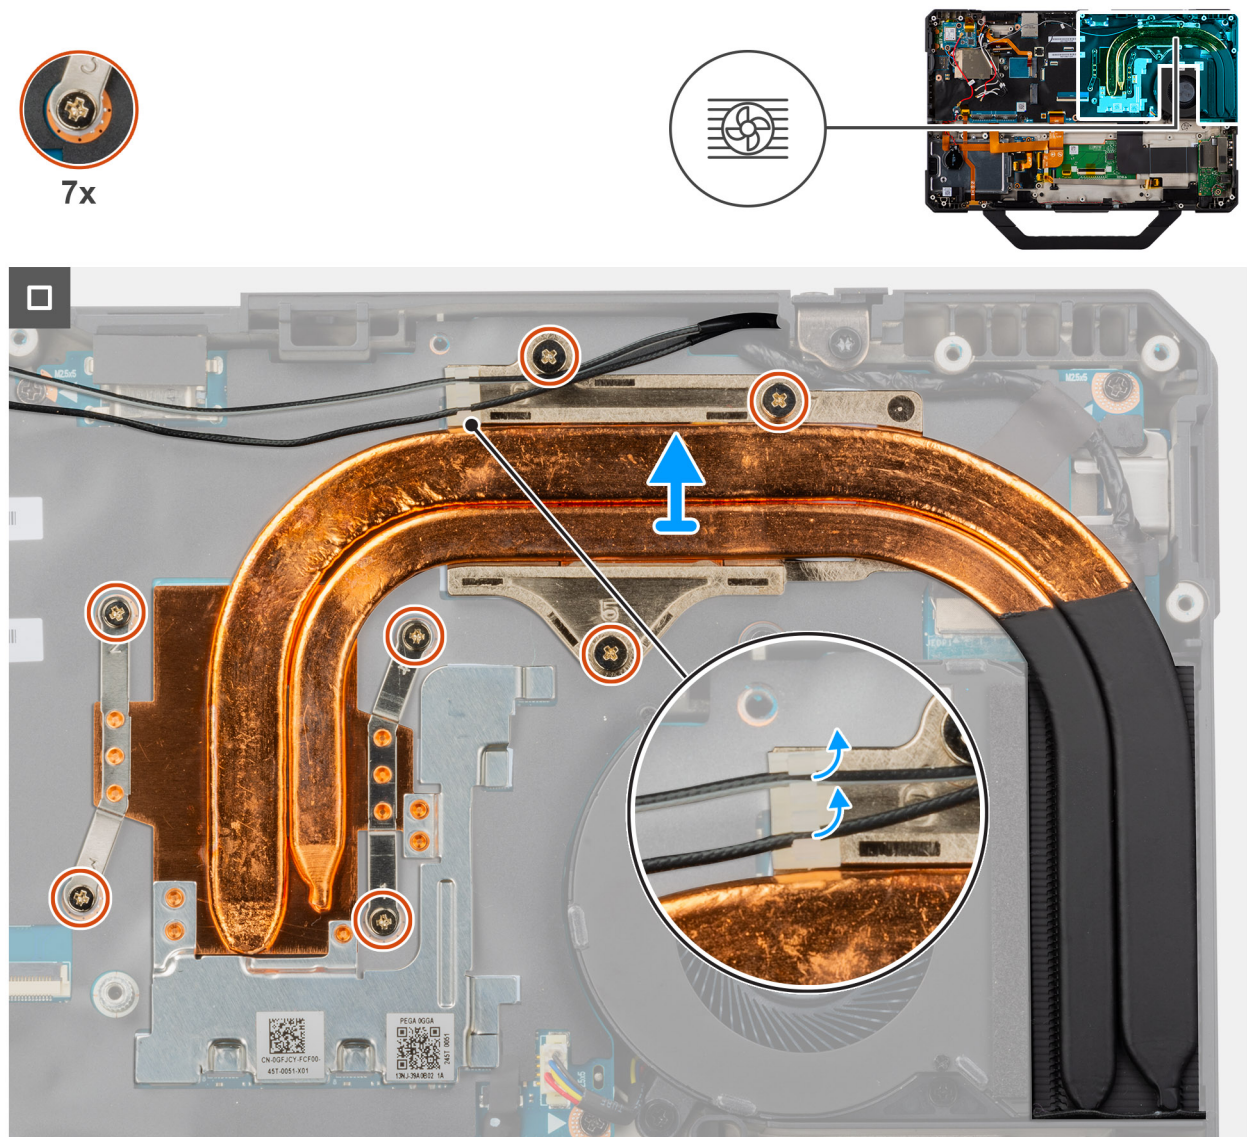


Figure 69. Removing the heat sink (for computers shipped with discrete graphics)

Steps

1. Remove the seven (captive) screws that secure the heat sink to the system board.
2. Disconnect the antenna cables from the heat sink cable slot.
3. Lift the heat sink from the computer chassis.

Installing the heat sink (for computers shipped with discrete graphics)

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the heat-sink and provides a visual representation of the installation procedure.



Figure 70. Installing the heat sink (for computers shipped with discrete graphics)

Steps

1. Align the heat sink screw holes with the system board and place it on the computer chassis.
2. Route the antenna cables through the heat sink cable slot.
3. Replace the seven (captive) screws to secure the heat sink to the system board.

Next steps

1. Install the [dock I/O-module](#).
2. Install the [rear I/O-board](#).
3. Install the [WLAN card](#).
4. Install the [RF switch board](#).
5. Install the [base cover](#).
6. Install the [solid state drive carrier](#).
7. Install the [batteries](#).
8. Follow the procedure in [after working inside your computer](#).

System board

Removing the system board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
4. Remove the [solid state drive carrier](#).
5. Remove the [base cover](#).
6. Remove the [GPS board](#).
7. Remove the [rear I/O-board](#).
8. Remove the [RF switch board](#).
9. Remove the [WLAN card](#).
10. Remove the [WWAN card](#).
11. Remove the [dock I/O-module](#).
12. Remove the [fan](#).
13. Remove the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).

About this task

The following images indicate the connectors on your system board.

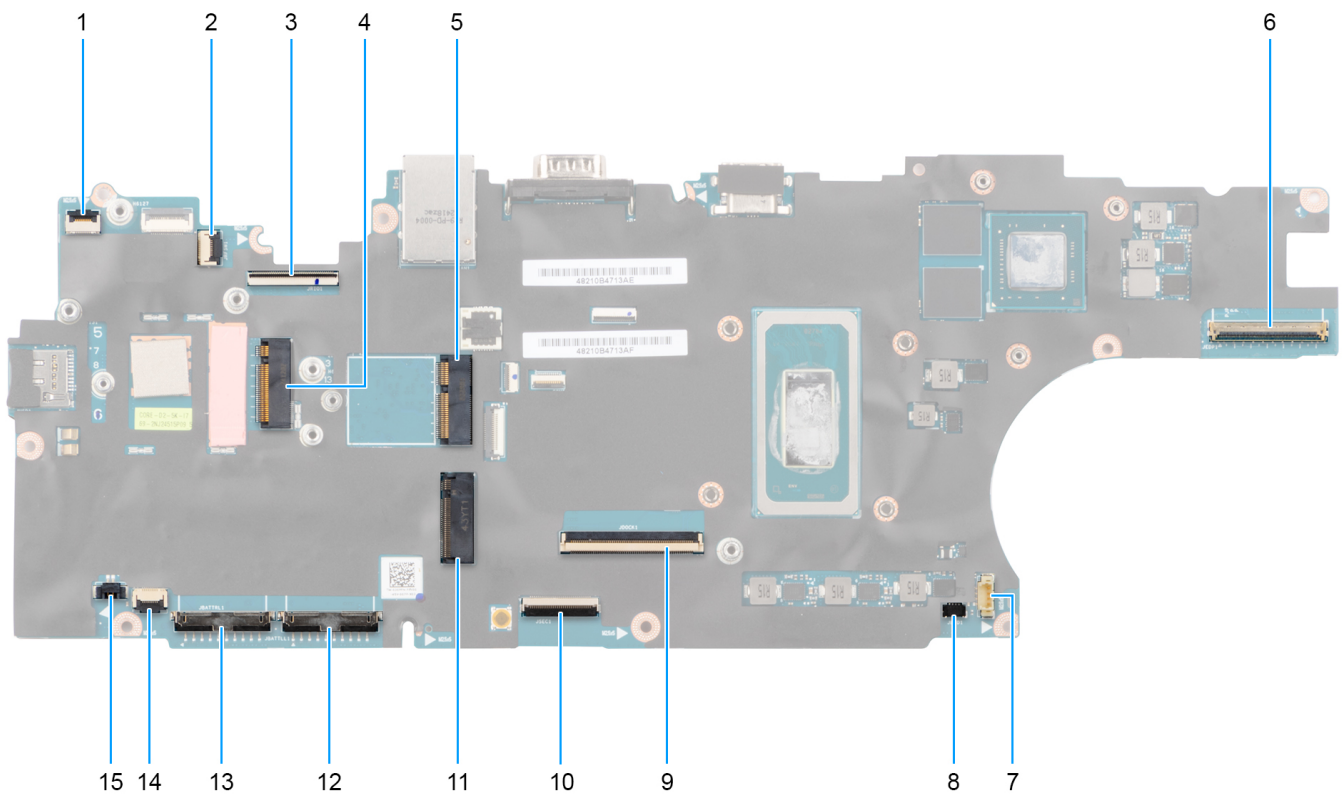


Figure 71. System board connectors

1. Power-button board cable connector
2. Wi-Fi I/O board connector
3. Rear I/O-board connector
4. WWAN card connector
5. WLAN card connector
6. eDP cable connector
7. Fan cable connector
8. Lid cable connector
9. Dock I/O flat printed cable connector
10. USH board connector
11. M.2 2230/2280 solid state drive connector
12. Right battery cable connector
13. Left battery cable connector
14. LED board cable connector
15. Coin-cell battery cable connector

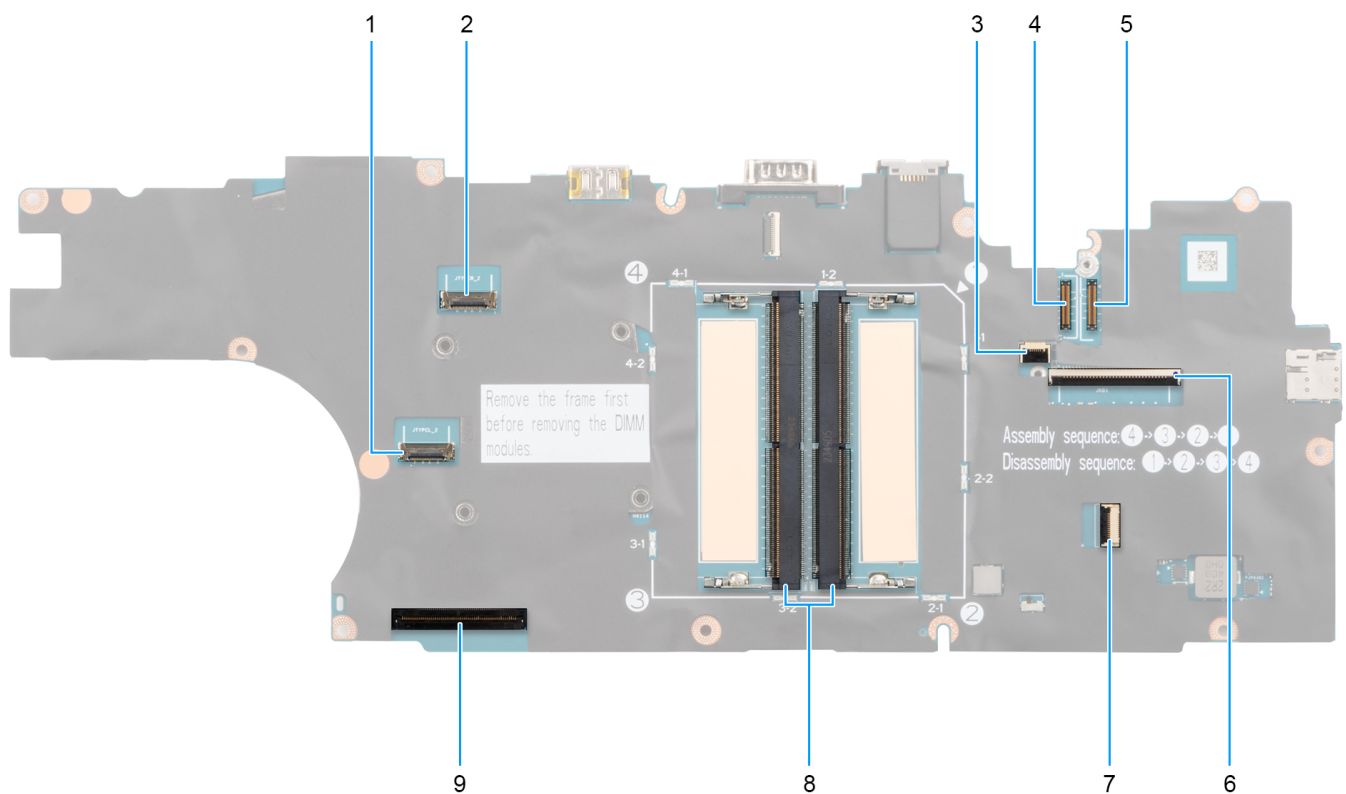


Figure 72. System board connectors

1. Left Type-C cable connector
2. Right Type-C cable connector
3. Backlight flat printed cable connector
4. Left Type-C flat printed cable connector
5. Right Type-C flat printed cable connector
6. Keyboard cable connector
7. Touchpad cable connector
8. Memory module connector
9. Left I/O flat printed cable connector

The following images indicate the location of the system board and provide a visual representation of the removal procedure.

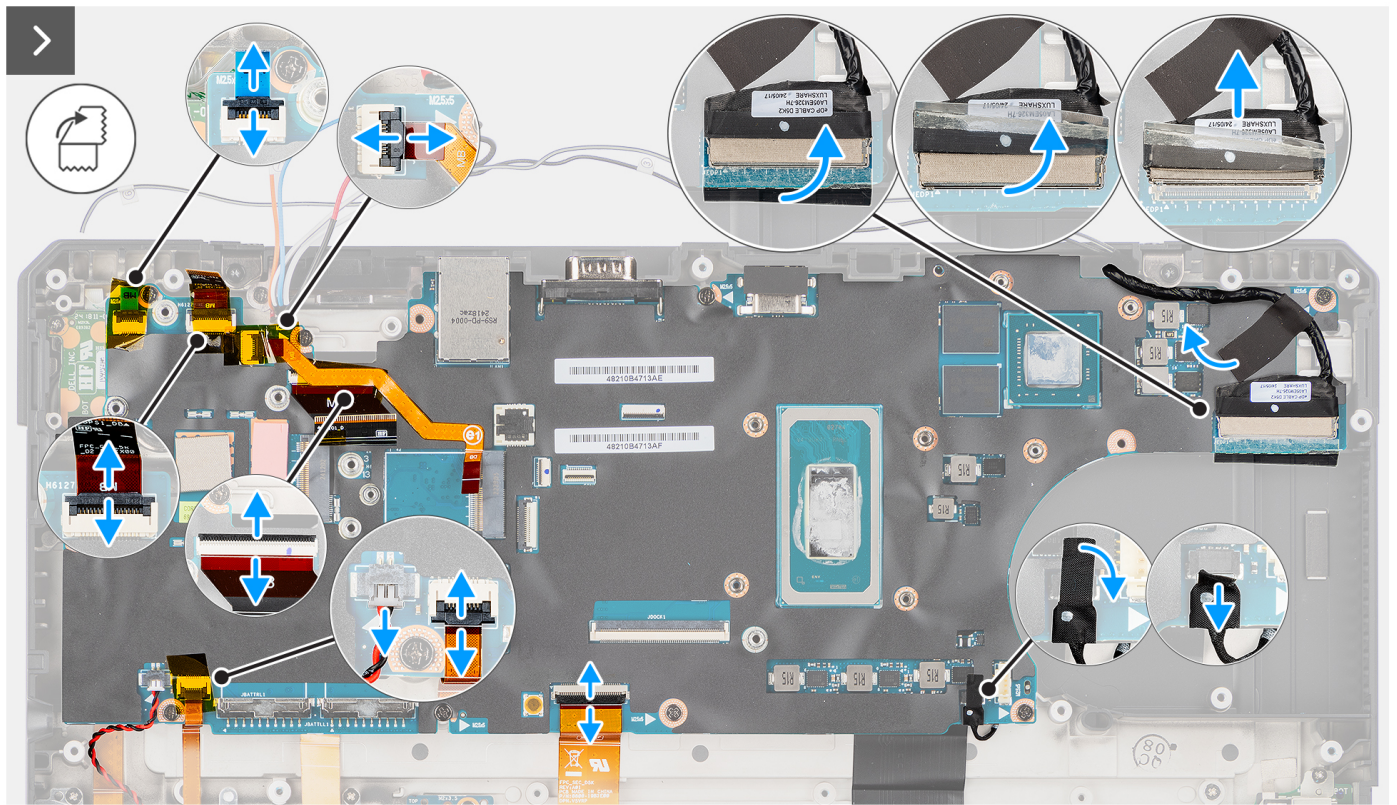


Figure 74. Removing the system board

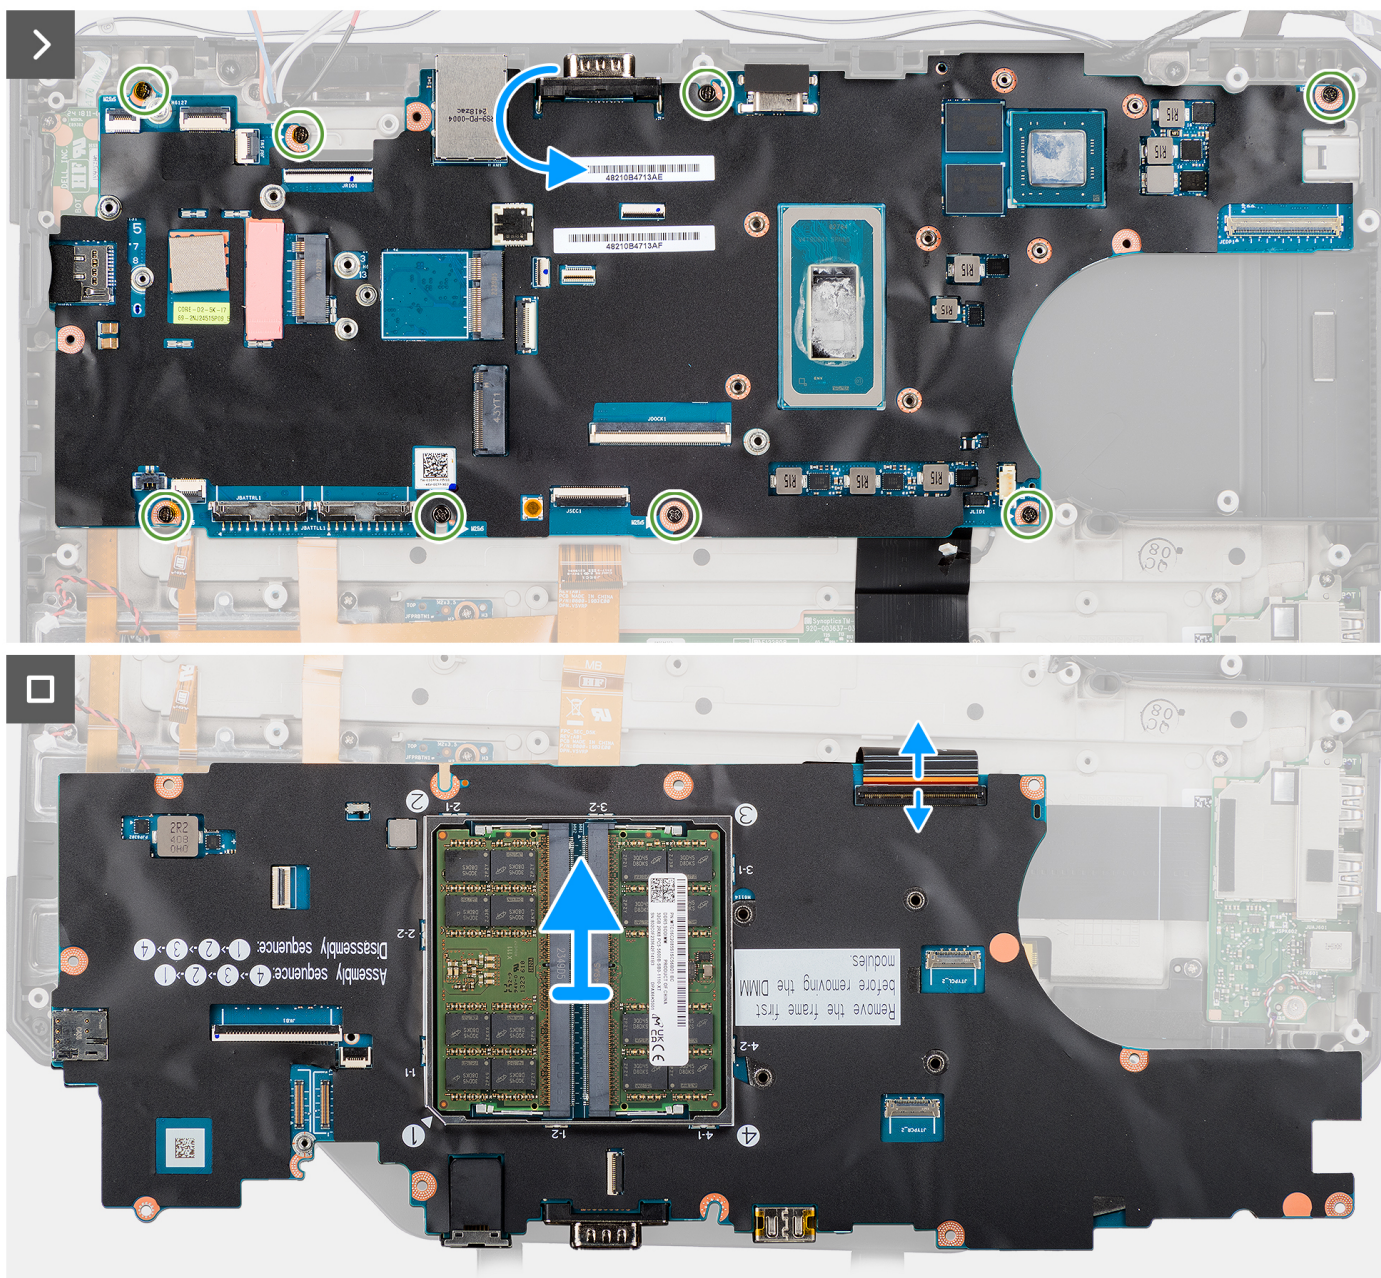


Figure 75. Removing the system board

Steps

1. Remove the two epoxy cap (4-40x6.5) screws that secure the serial RS-232 port to the computer chassis and then remove the serial RS-232 port from the computer chassis.
 - NOTE:** The epoxy screw locations require additional focus. These screws are difficult to remove, and damage might occur during the removal process. To prevent damage to the screws and surrounding plastics, use the correct screwdriver for each screw type.
 - NOTE:** To remove the epoxy cap screws, use a 5.5 mm hex socket wrench.
2. Remove the four (M2x3.5) screws that secure the keyboard cable cover to the system board.
3. Remove the screw (M2x3.5) that secures the Type-C cable cover to the system board.
4. Disconnect the right and left Type-C cables from their connectors on the system board.
5. Disconnect the touchpad flat printed cable from the touchpad connector on the system board.

6. Disconnect and remove the power button cable, fingerprint reader cable, Wi-Fi board cable from its connector on the system board.
7. Disconnect and remove the LAN flat printed cable from its connector on the system board.
8. Disconnect and remove the eDP cable from its connector on the system board.
9. Disconnect the following cables from their connector on the system board: coin-cell battery, LED board, touchpad, USH board from the system board.
10. Remove the eight (M2.5x5) screws that secure the system board to the computer chassis and flip the system board.
11. Disconnect the left I/O flat printed cable connector from the system board.

Installing the system board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the connectors on your system board.

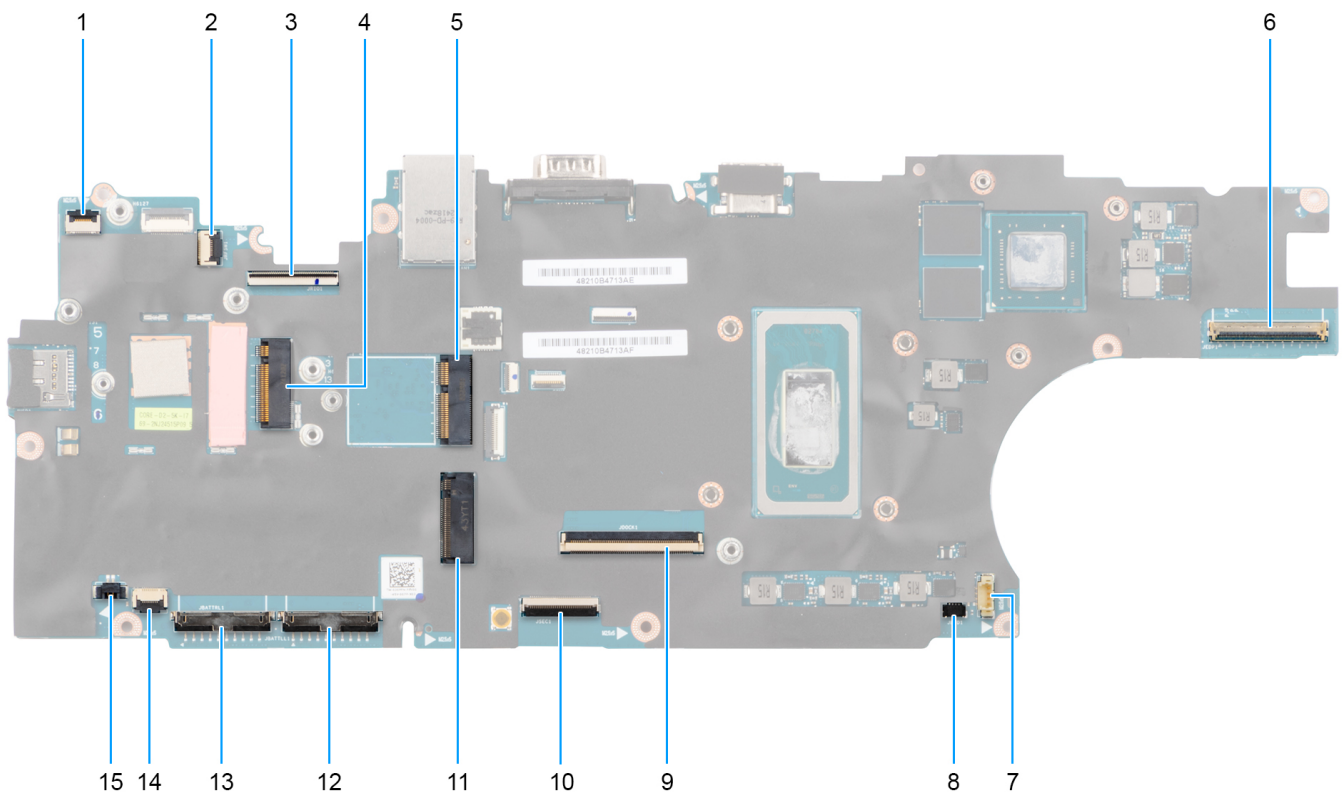


Figure 76. System board connectors

1. Power-button board cable connector
2. Wi-Fi I/O board connector
3. Rear I/O-board connector
4. WWAN card connector

5. WLAN card connector
6. eDP cable connector
7. Fan cable connector
8. Lid cable connector
9. Dock I/O flat printed cable connector
10. USh board connector
11. M.2 2230/2280 solid state drive connector
12. Right battery cable connector
13. Left battery cable connector
14. LED board cable connector
15. Coin-cell battery cable connector

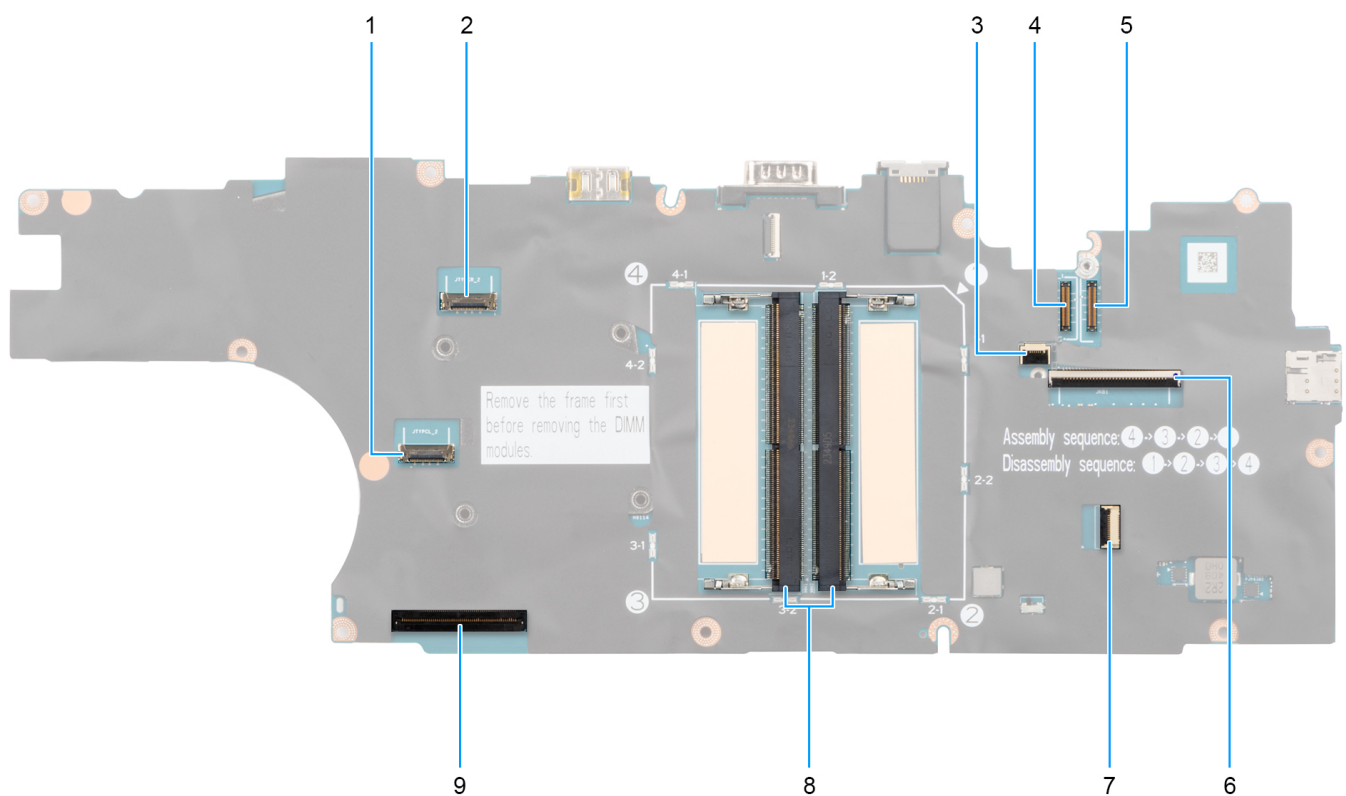


Figure 77. System board connectors

1. Left Type-C cable connector
2. Right Type-C cable connector
3. Backlight flat printed cable connector
4. Left Type-C flat printed cable connector
5. Right Type-C flat printed cable connector
6. Keyboard cable connector
7. Touchpad cable connector
8. Memory module connector
9. Left I/O flat printed cable connector

The following images indicate the location of the system board and provide a visual representation of the removal procedure.

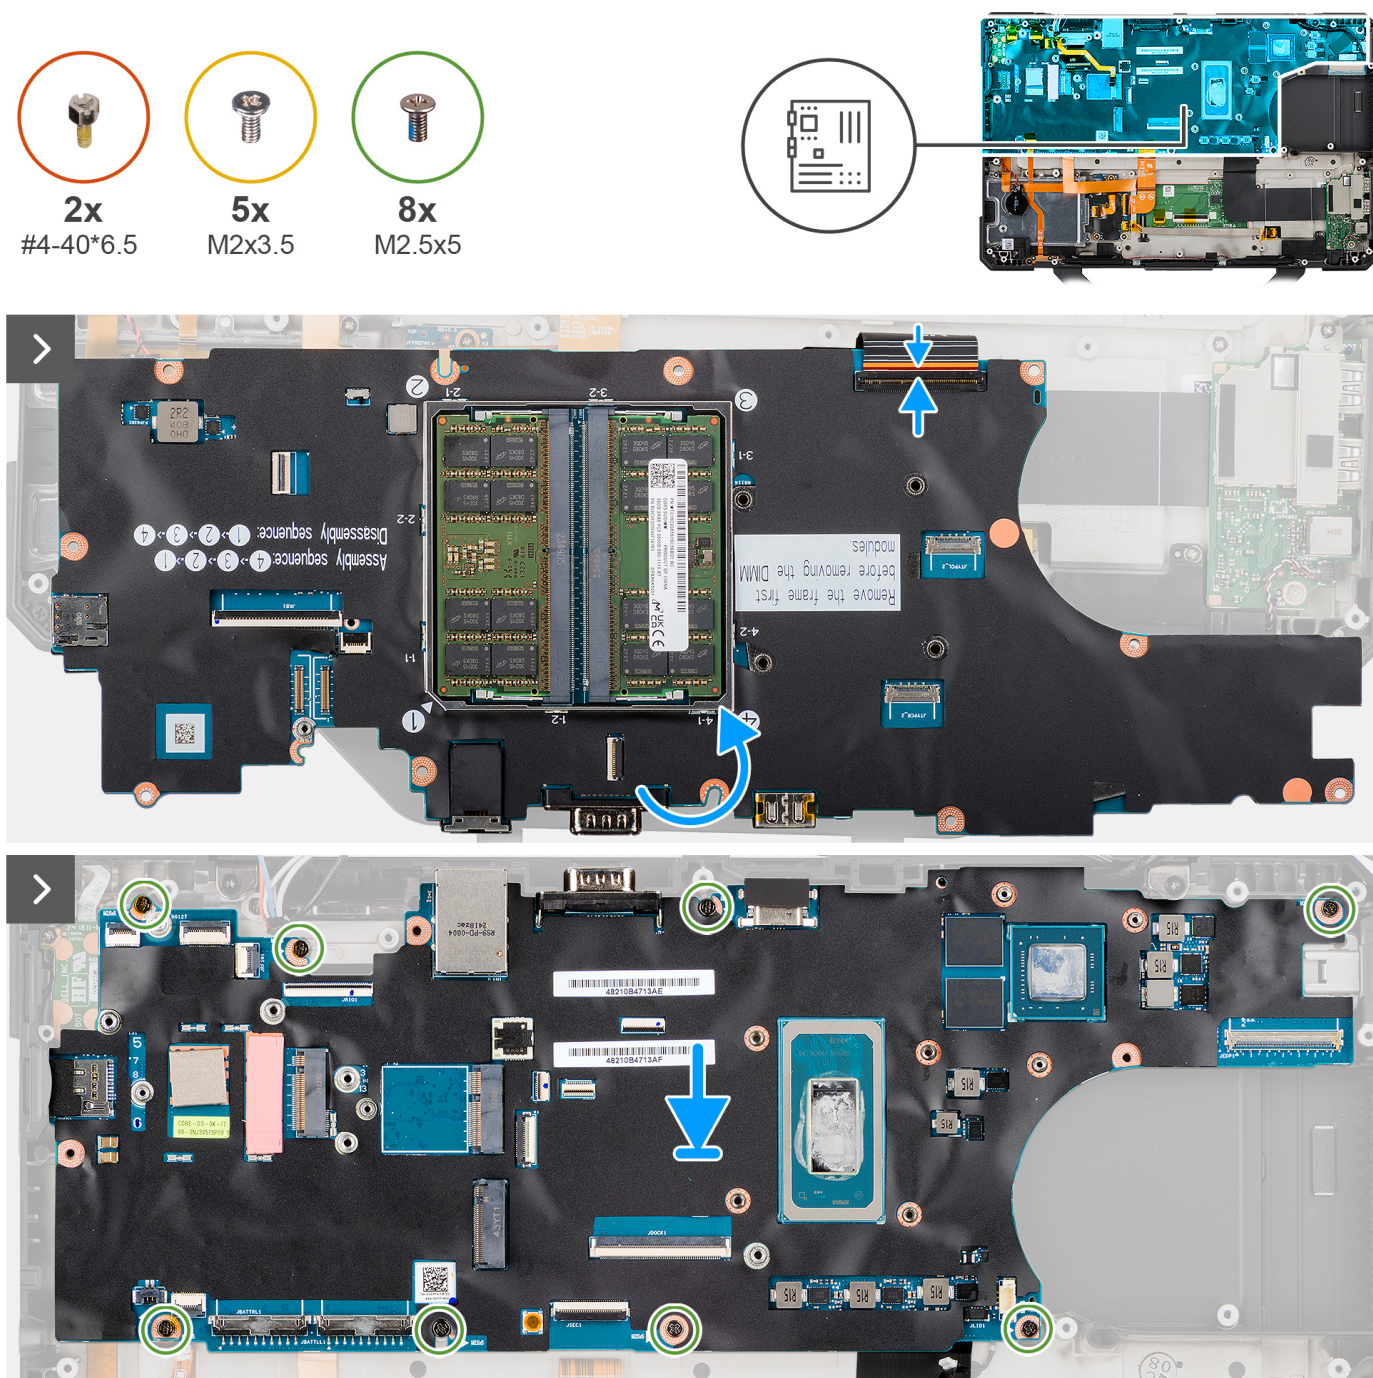


Figure 78. Installing the system board

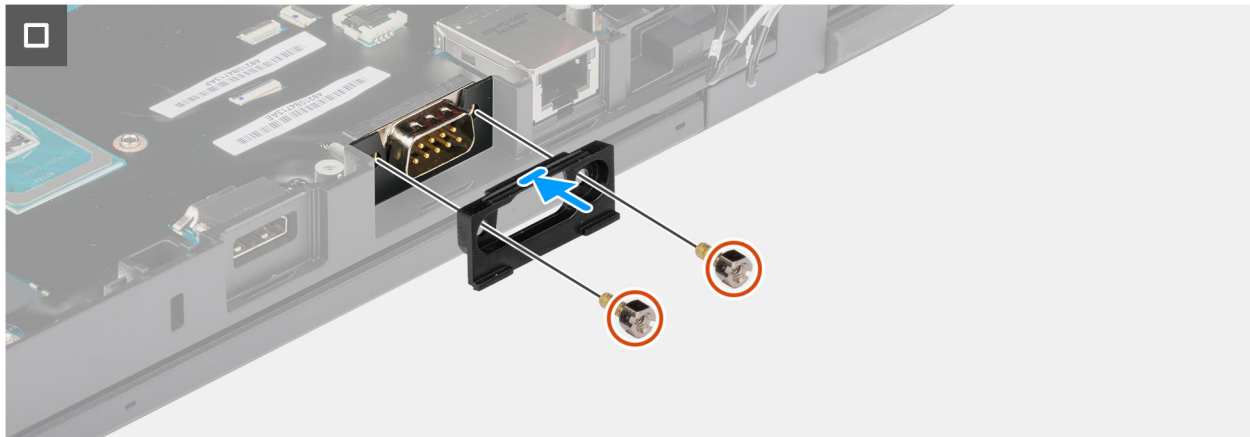


Figure 81. Installing the system board

Steps

1. Connect the left I/O flat printed cable connector to the system board.

CAUTION: Ensure the I/O flat printed cable is connected to the system board before proceeding to the next step.

2. Flip the system board and replace the eight (M2.5x5) screws that secure the system board to the computer chassis.
3. Connect the following cables to their connector on the system board : coin-cell battery, LED board, Touchpad, and USH board.
4. Connect the following cables to their connector on the system board: eDP, LAN, Wi-Fi, fingerprint, and power button.
5. Connect the right Type-C, left Type-C and touchpad flat printed cables to their connectors on the system board.

NOTE: Adhere the touchpad flat printed cable with kapton tape to the connector.
6. Connect the right and left Type-C cables to their connectors on the system board.
7. Replace the screw (M2x3.5) that secures the Type-C cable cover to the system board.
8. Replace the four (M2x3.5) screws that secure the cable cover to the system board.
9. Align and insert the serial RS-232 port to the computer chassis.
10. Replace the two epoxy cap (4-40x6.5) screws that secure the serial RS-232 port to the computer chassis.

Next steps

1. Install the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
2. Install the [fan](#).
3. Install the [dock I/O-module](#).
4. Install the [WWAN card](#).
5. Install the [WLAN card](#).
6. Install the [RF switch board](#).
7. Install the [rear I/O-board](#).
8. Install the [GPS board](#).
9. Install the [base cover](#).
10. Install the [solid state drive carrier](#).
11. Install the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
12. Install the [batteries](#).
13. Follow the procedure in [after working inside your computer](#).

Memory module

Removing the memory modules

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
5. Remove the [base cover](#).
6. Remove the [fan](#).
7. Remove the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
8. Remove the [RF switch board](#).
9. Remove the [WLAN card](#).
10. Remove the [WWAN card](#).
11. Remove the [dock I/O-module](#).
12. Remove the [rear I/O-board](#).
13. Remove the [system board](#).

About this task

The following image indicates the location of the memory modules and provides a visual representation of the removal procedure.

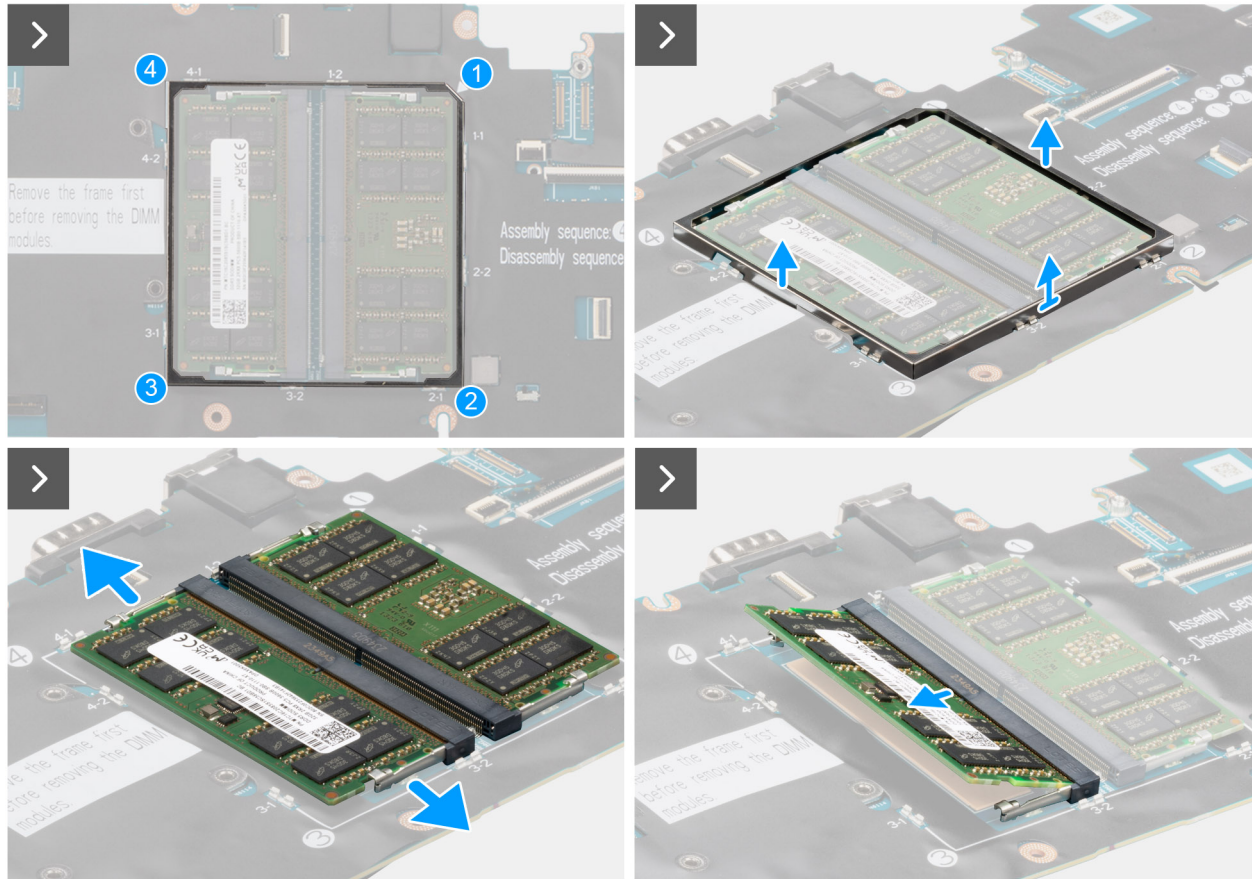


Figure 82. Removing the memory modules

Steps

1. **NOTE:** Remove the memory frame before removing the memory module.

Follow the disassembly sequence 1 > 2 > 3 > 4 to remove the memory frame from the memory module slots.

2. Using your fingertips and spread apart the securing clips on the memory-module slot until the memory module pops up.
3. Slide and remove the memory module from the memory-module slot on the system board.

NOTE: Repeat step 1 and step 2 if there is more than one memory module installed on your computer.

CAUTION: To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components or metallic contacts on the memory module as electrostatic discharge (ESD) can inflict severe damage on the components. To read more about ESD protection, see [ESD protection](#).

Installing the memory modules

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the memory modules and provides a visual representation of the installation procedure.

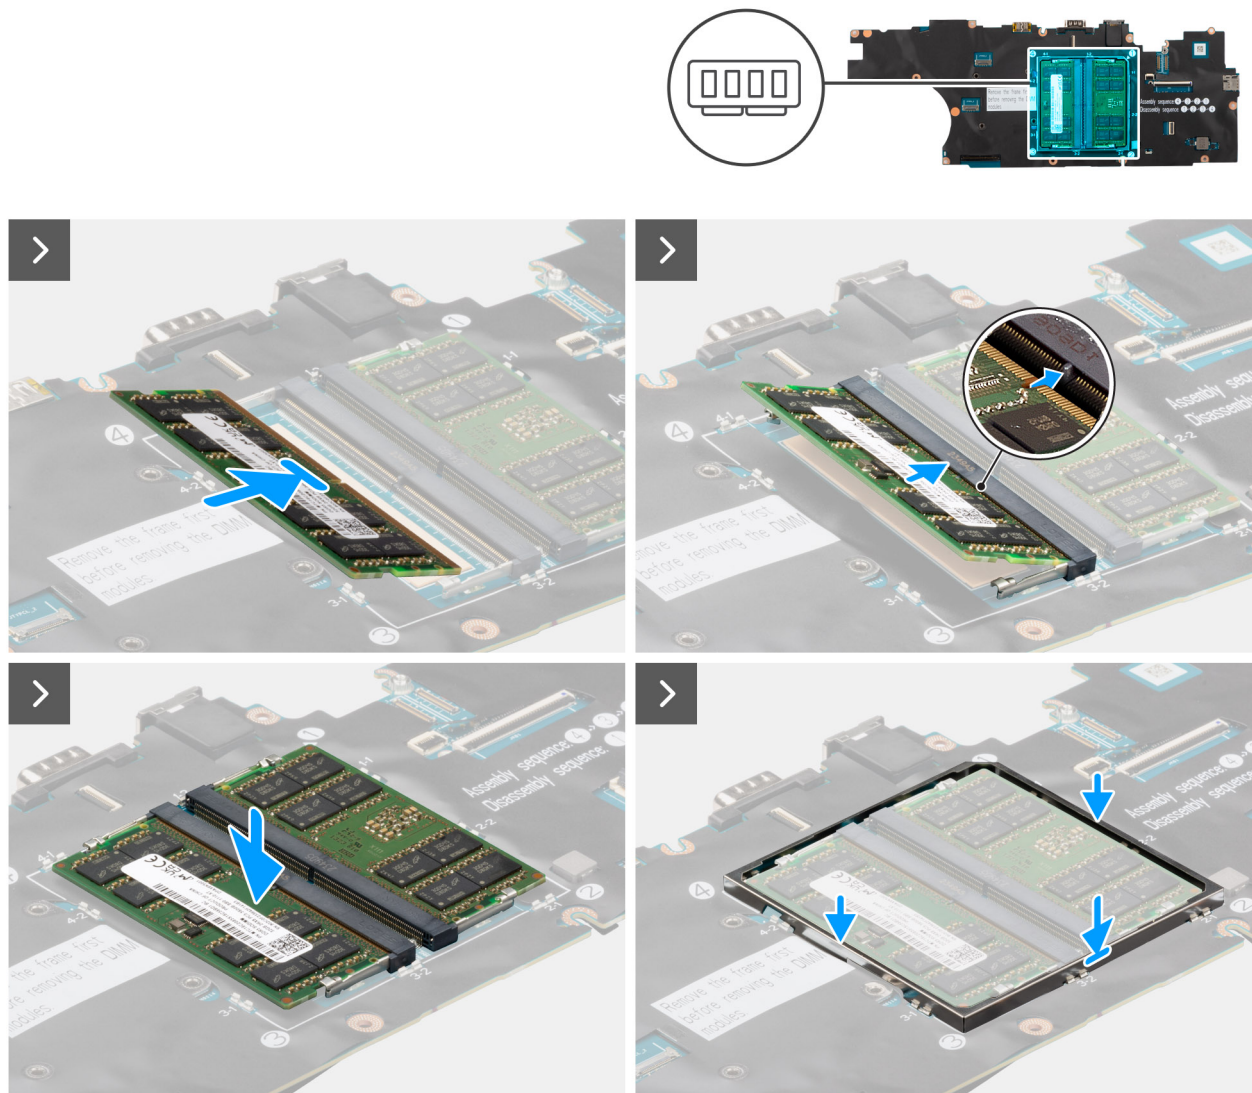


Figure 83. Installing the memory modules

Steps

1. Align the notch on the memory module with the tab on the memory-module slot.
2. Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.

NOTE: If you do not hear or feel the click, remove the memory module and reinstall it.

CAUTION: To prevent damage to the memory module, hold the memory module by the edges. Do not touch the components or metallic contacts on the memory module as electrostatic discharge (ESD) can inflict severe damage on the components. To read more about ESD protection, see [ESD protection](#).

3. Place the memory frame on the memory-module slot.



NOTE: Align the upper right cut-out notch on the memory frame with the corresponding number (1) printed on the motherboard, then place the memory frame onto the memory module slot.

Next steps

1. Install the [system board](#).
2. Install the [rear I/O-board](#).
3. Install the [dock I/O-module](#).
4. Install the [WWAN card](#).
5. Install the [WLAN card](#).
6. Install the [RF switch board](#).
7. Install the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
8. Install the [fan](#).
9. Install the [base cover](#).
10. Install the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
11. Install the [solid state drive carrier](#).
12. Install the [batteries](#).
13. Follow the procedure in [after working inside your computer](#).

Right Type-C board

Removing the right Type-C board



CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
5. Remove the [base cover](#).
6. Remove the [GPS board](#).
7. Remove the [rear I/O-board](#).
8. Remove the [RF switch board](#).
9. Remove the [WLAN card](#).
10. Remove the [WWAN card](#).
11. Remove the [dock I/O-module](#).
12. Remove the [fan](#).
13. Remove the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
14. Remove the [system board](#).

About this task

The following image indicates the location of the right Type-C board and provides a visual representation of the removal procedure.



5x
M2x3.5

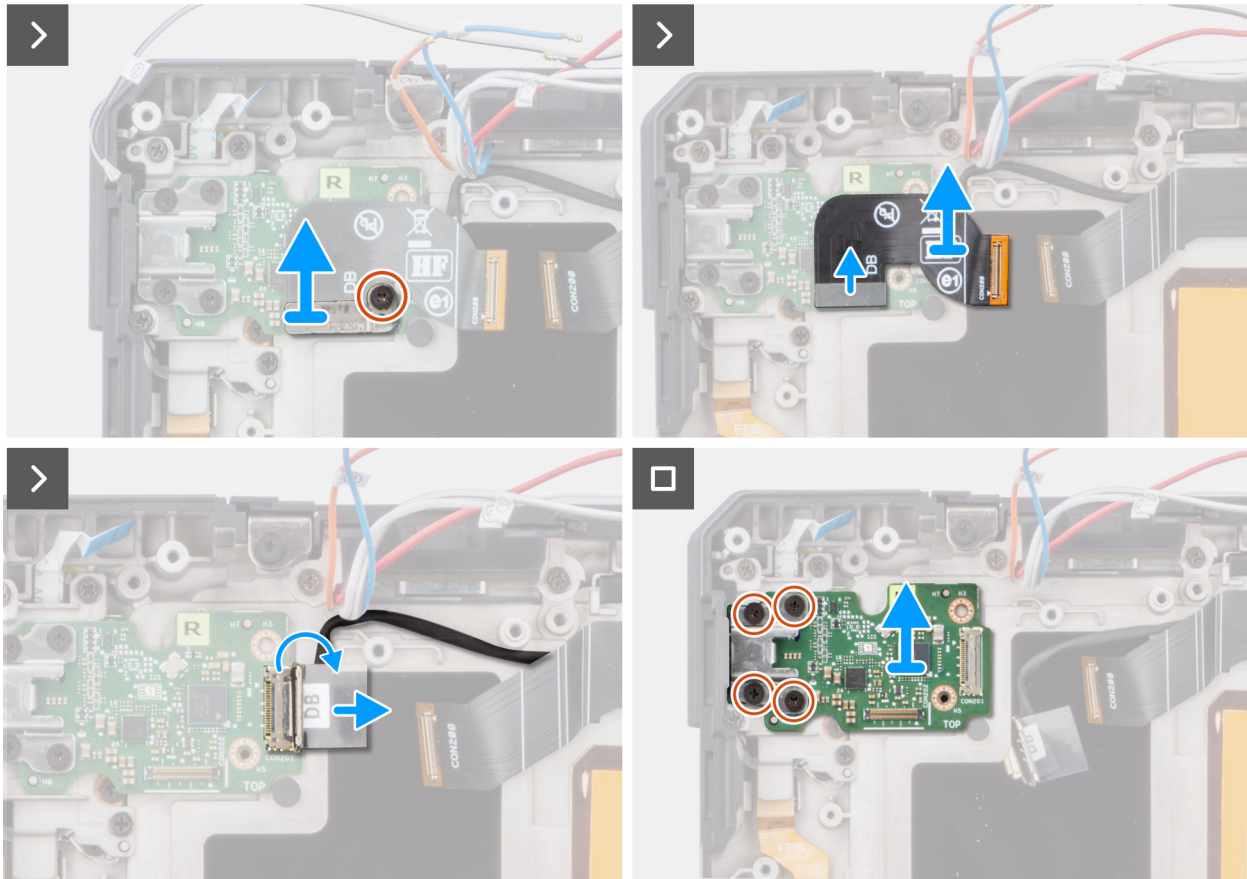
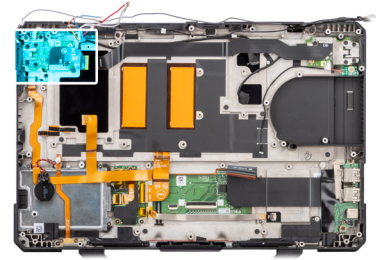


Figure 84. Removing the right Type-C board

Steps

1. Remove the (M2x3.5) screw that secures the flat printed cable holder to the right Type-C board.
2. Disconnect the flat printed cable from its connector on the right Type-C board.
3. Disconnect the right Type-C cable from its connector on the right Type-C board.
4. Remove the four (M2x3.5) screws that secure the right Type-C board to the computer chassis.
5. Lift the right Type-C board from the computer chassis.

Installing the right Type-C board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the right Type-C board and provides a visual representation of the installation procedure.

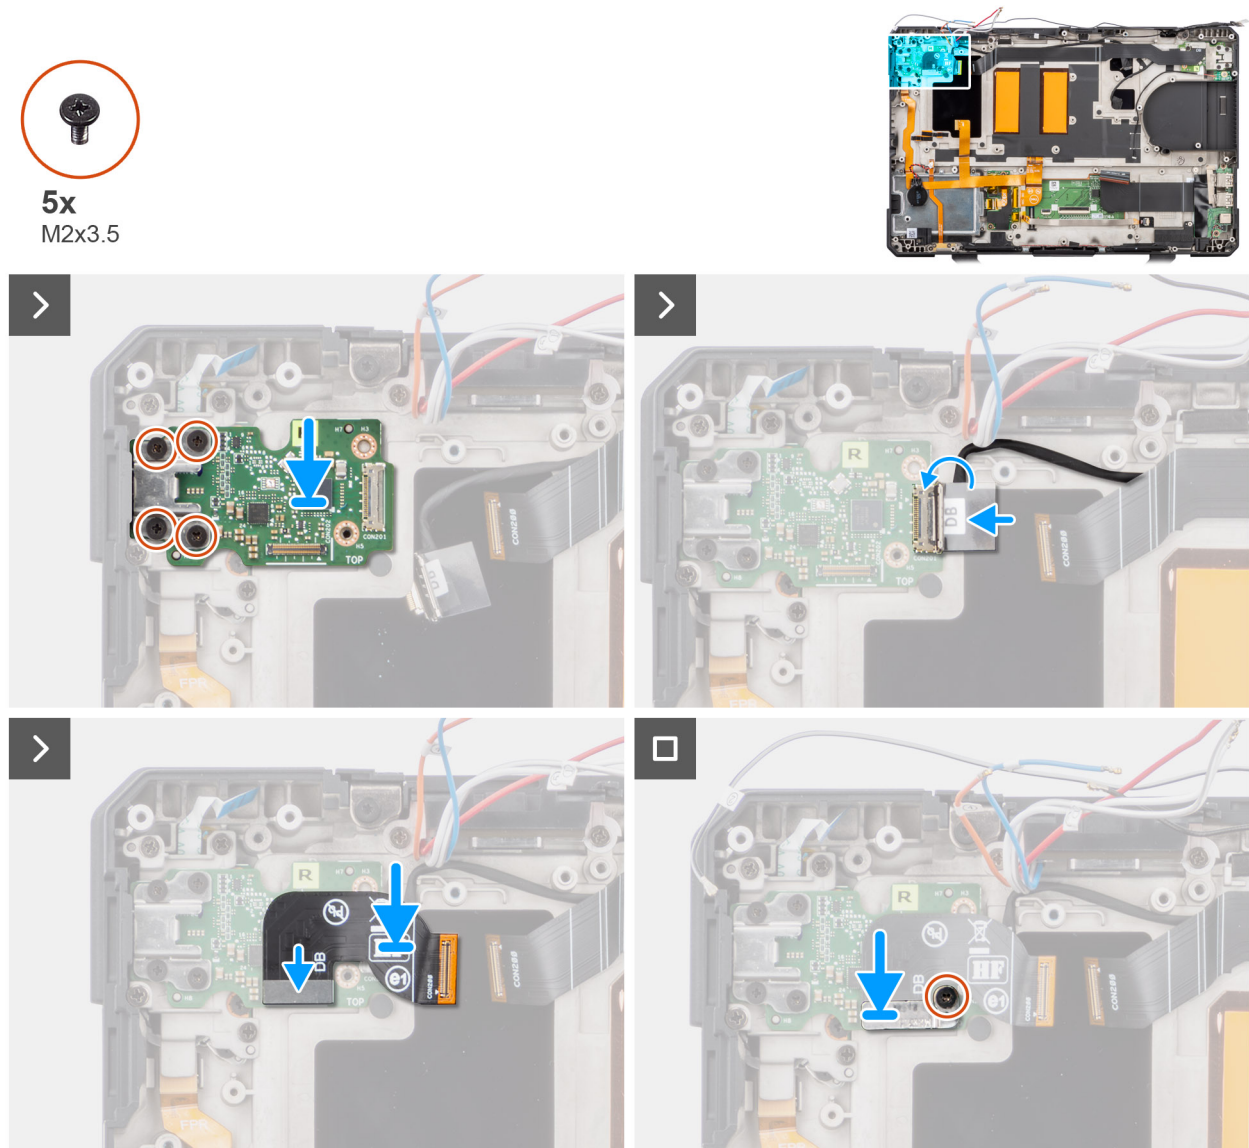


Figure 85. Installing the right Type-C board

Steps

1. Place the right Type-C board on the computer chassis.
2. Replace the four (M2x3.5) screws to secure the right Type-C board to the computer chassis.
3. Connect the right Type-C cable connector to its connector on the right Type-C board.
4. Connect the flat printed cable to its connector on the right Type-C board.
5. Replace the (M2x3.5) screw that secures the flat printed cable holder to the right Type-C board.

Next steps

1. Install the [system board](#).
2. Install the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
3. Install the [fan](#).
4. Install the [dock I/O-module](#).
5. Install the [WWAN card](#).
6. Install the [WLAN card](#).

7. Install the [RF switch board](#).
8. Install the [rear I/O-board](#).
9. Install the [GPS board](#).
10. Install the [base cover](#).
11. Install the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
12. Install the [solid state drive carrier](#).
13. Install the [batteries](#).
14. Follow the procedure in [after working inside your computer](#).

Left Type-C board

Removing the left Type-C board

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
5. Remove the [base cover](#).
6. Remove the [GPS board](#).
7. Remove the [rear I/O-board](#).
8. Remove the [RF switch board](#).
9. Remove the [WLAN card](#).
10. Remove the [WWAN card](#).
11. Remove the [dock I/O-module](#).
12. Remove the [fan](#).
13. Remove the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
14. Remove the [system board](#).

About this task

The following image indicates the location of the left Type-C board and provides a visual representation of the removal procedure.



5x
M2x3.5

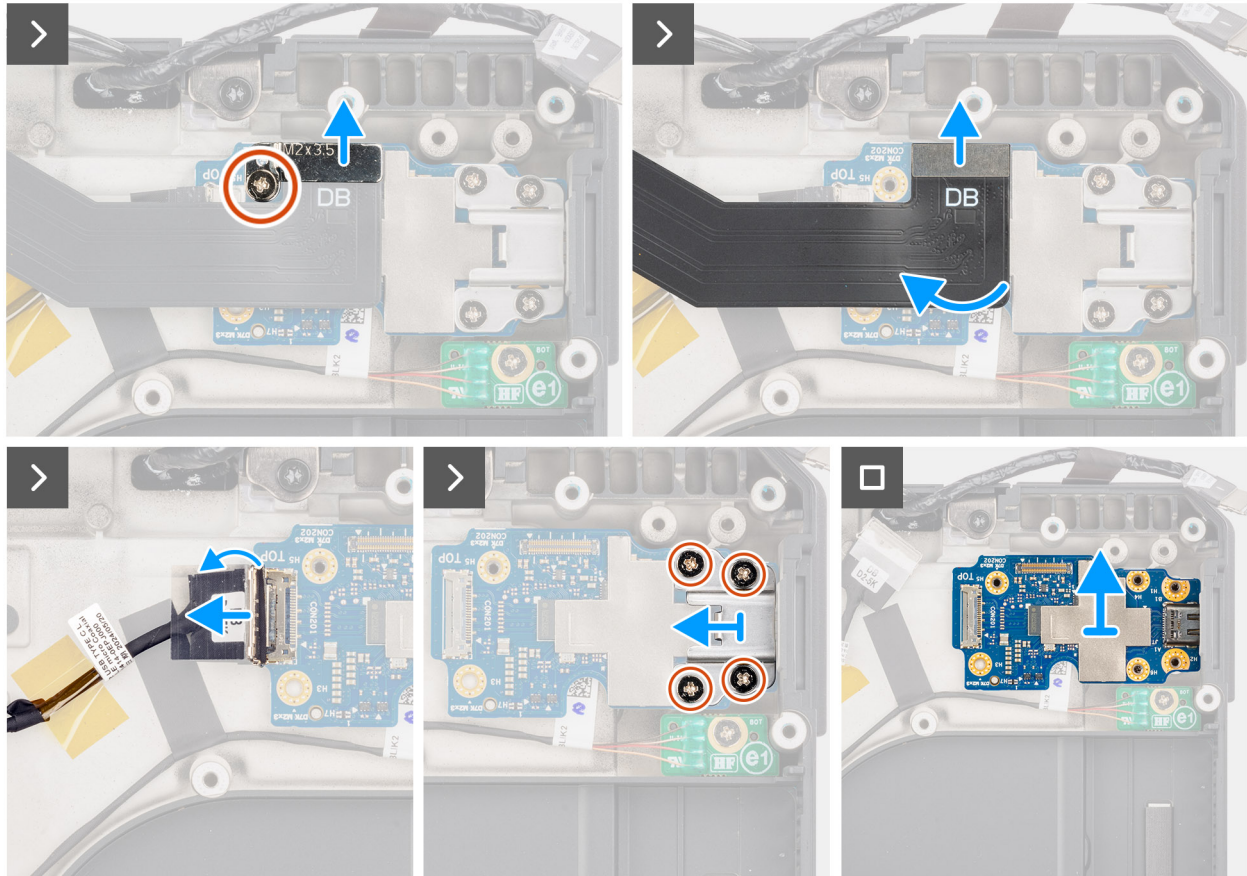
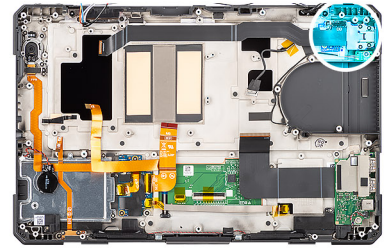


Figure 86. Removing the left Type-C board

Steps

1. Remove the (M2x3.5) screw that secures the flat printed cable holder to the left Type-C board.
2. Disconnect the flat printed cable from its connector on the left Type-C board.
3. Disconnect the left Type-C cable from its connector on the left Type-C board.
4. Remove the four (M2x3.5) screws that secure the left Type-C board holder to the computer chassis.
5. Slide and remove the left Type-C board from the computer chassis.

Installing the left Type-C board

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the left Type-C board and provides a visual representation of the installation procedure.

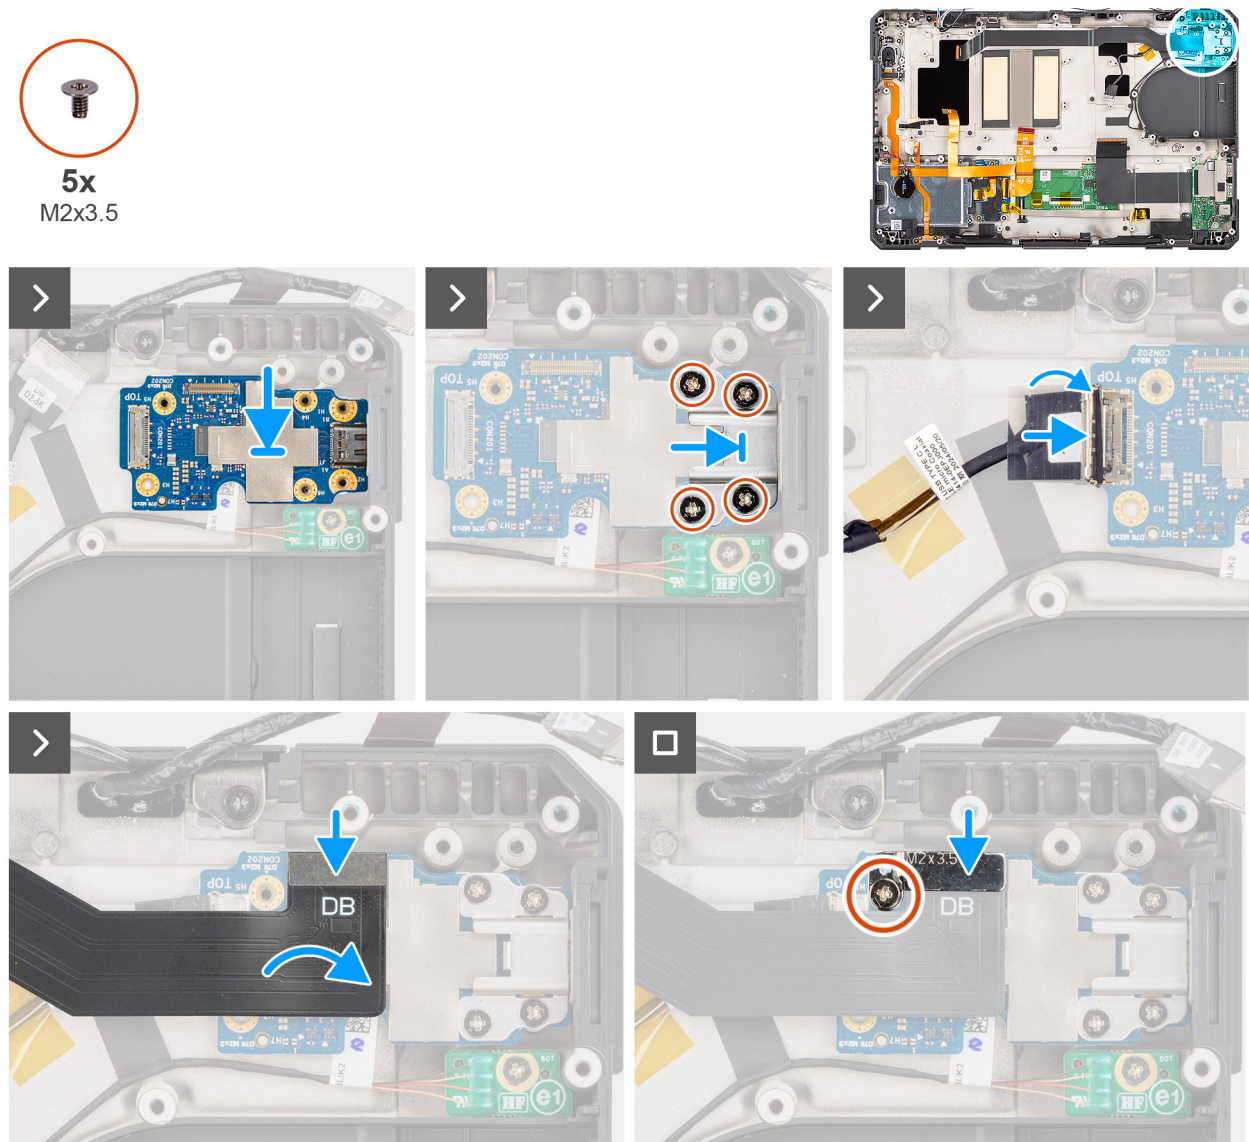


Figure 87. Installing the left Type-C board

Steps

1. Place the left Type-C board on the computer chassis.
2. Replace the four (M2x3.5) screws to secure the left Type-C board to the computer chassis.
3. Connect the flat printed cable to its connector on the left Type-C board.
4. Connect the left Type-C cable to its connector on the left Type-C board.
5. Replace the (M2x3.5) screw that secures the flat printed cable holder to the left Type-C board.

Next steps

1. Install the [system board](#).
2. Install the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
3. Install the [fan](#).
4. Install the [dock I/O-module](#).
5. Install the [WWAN card](#).
6. Install the [WLAN card](#).

7. Install the [RF switch board](#).
8. Install the [rear I/O-board](#).
9. Install the [GPS board](#).
10. Install the [base cover](#).
11. Install the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
12. Install the [solid state drive carrier](#).
13. Install the [batteries](#).
14. Follow the procedure in [after working inside your computer](#).

Latch doors

Removing the right Type-C port latch-door

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the right Type-C port latch-door and provides a visual representation of the removal procedure.

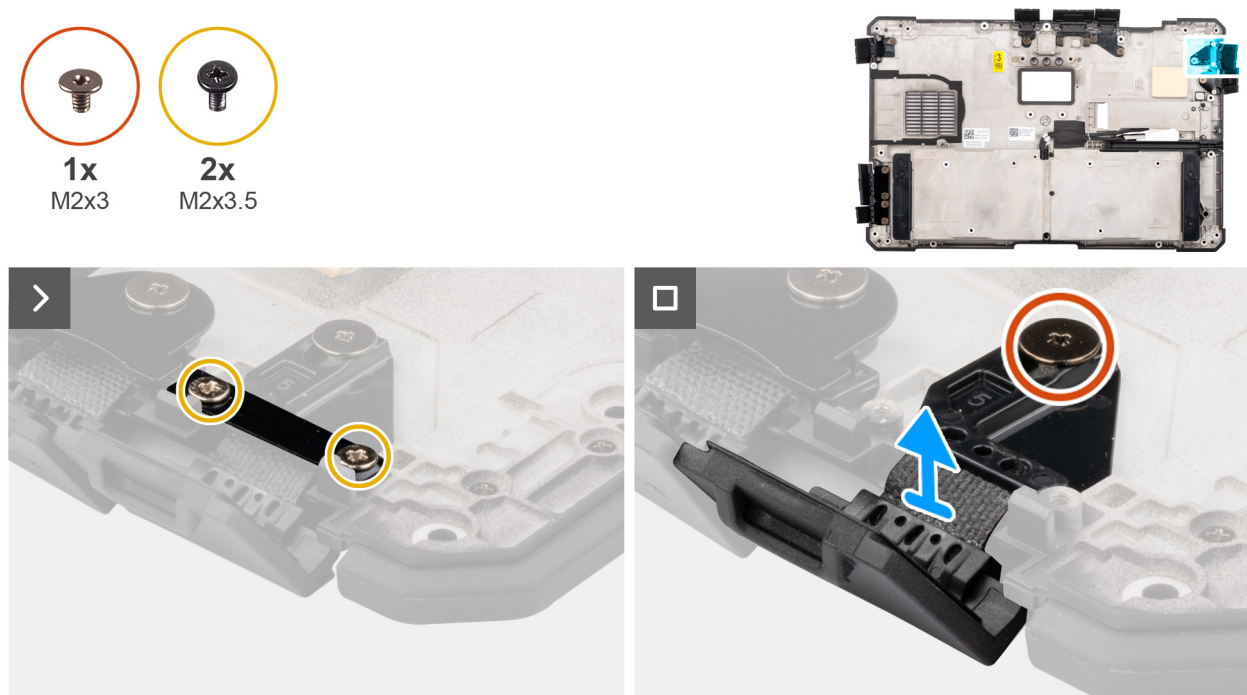


Figure 88. Removing the right Type-C port latch-door

Steps

1. Remove the two (M2x3.5) screws that secure the bracket on the right Type-C port latch-door.
2. Remove the (M2x3) screw that secures the right Type-C port latch-door to the computer chassis.
3. Remove the right Type-C port latch-door from the computer chassis.

Installing the right Type-C port latch-door

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the right Type-C port latch-door and provides a visual representation of the installation procedure.



Figure 89. Installing the right Type-C port latch-door

Steps

1. Align the right Type-C port latch-door with the screw hole on the computer chassis.
2. Replace the (M2x3) screw that secures the right Type-C port latch-door to the computer chassis.
3. Replace the two (M2x3.5) screws that secure the bracket on the right Type-C port latch-door.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Removing the rear Ethernet port latch-door

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).

3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the rear Ethernet port latch-door and provides a visual representation of the removal procedure.

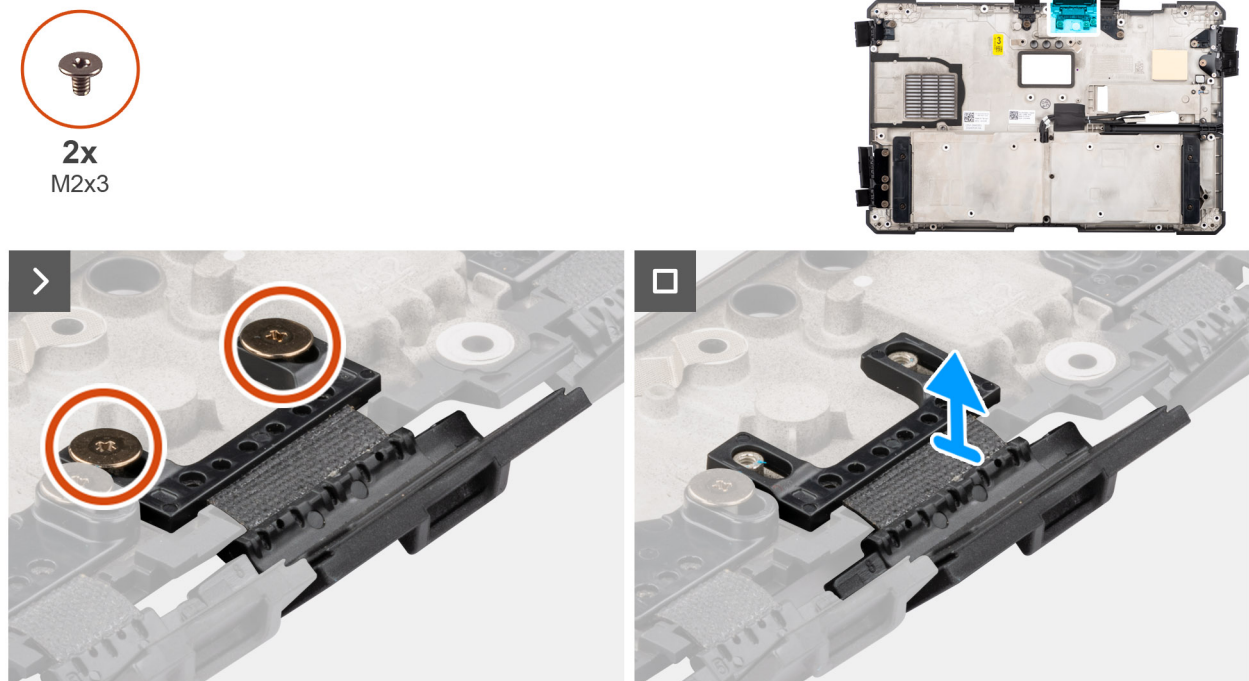


Figure 90. Removing the rear Ethernet port latch-door

Steps

1. Remove the two (M2x3) screws that secure the rear Ethernet port latch-door to the computer chassis.
2. Lift the rear Ethernet port latch-door from the computer chassis.

Installing the rear Ethernet port latch-door

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the rear Ethernet port latch-door and provides a visual representation of the installation procedure.



2x
M2x3

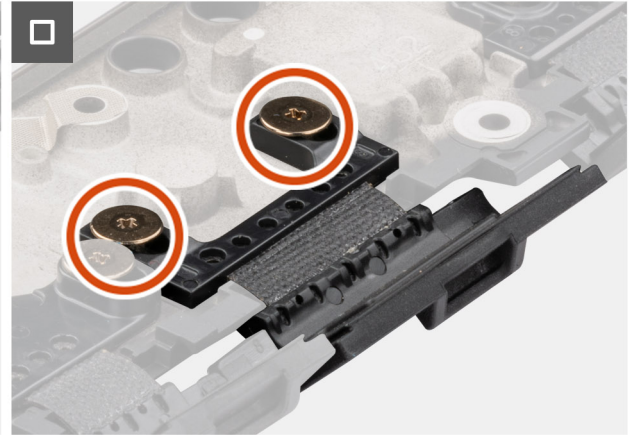
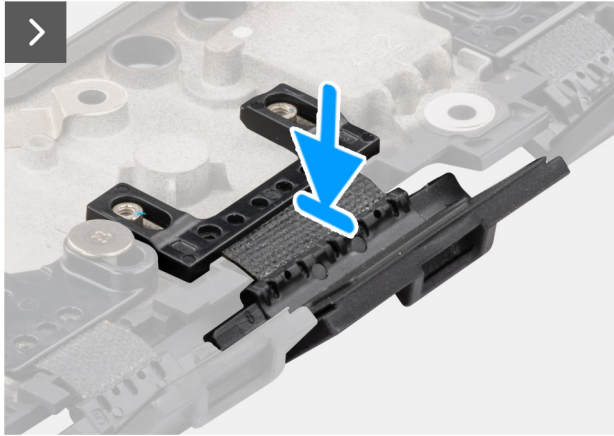
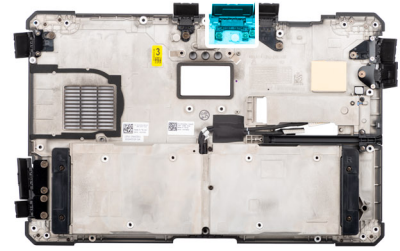


Figure 91. Installing the rear Ethernet port latch-door

Steps

1. Align the rear Ethernet port latch-door with the screw hole on the computer chassis.
2. Replace the two (M2x3) screws that secure the rear Ethernet port latch-door to the computer chassis.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Removing the rear HDMI port latch-door

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the rear HDMI port latch-door and provides a visual representation of the removal procedure.



1x
M2x3

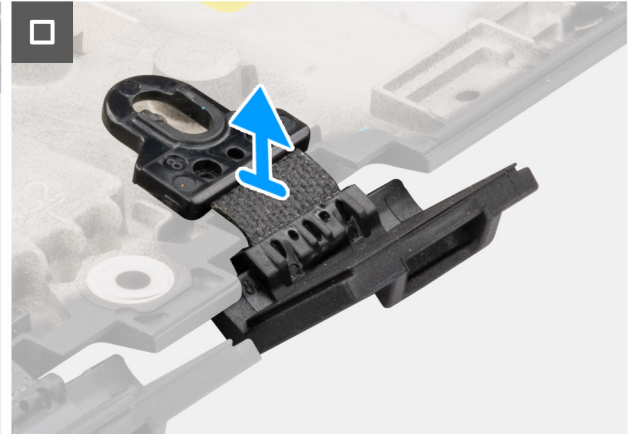
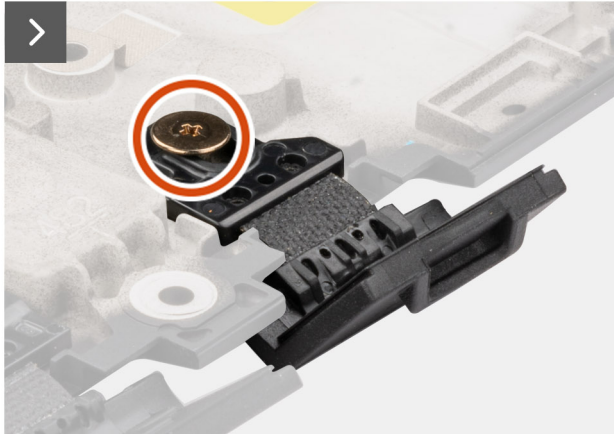
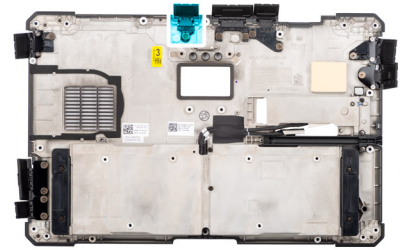


Figure 92. Removing the rear HDMI port latch-door

Steps

1. Remove the (M2x3) screw that secures the rear HDMI port latch-door to the computer chassis.
2. Remove the rear HDMI port latch-door from the computer chassis.

Installing the rear HDMI port latch-door

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the rear HDMI port latch-door and provides a visual representation of the installation procedure.



1x
M2x3

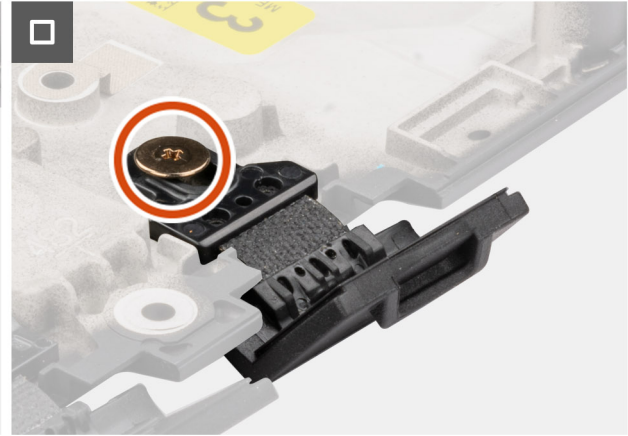
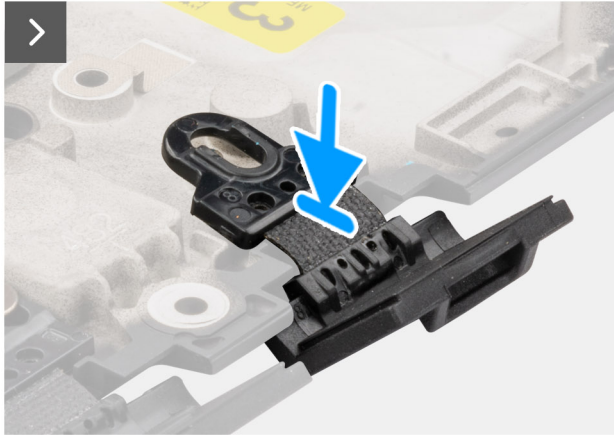
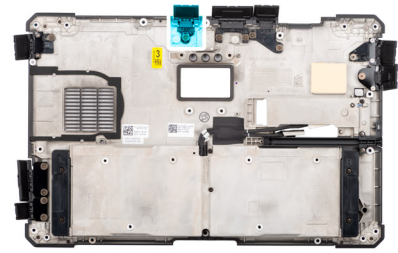


Figure 93. Installing the rear HDMI port latch-door

Steps

1. Align the rear HDMI port latch-door with the screw hole on the computer chassis.
2. Replace the (M2x3) screw that secures the rear HDMI port latch-door to the computer chassis.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Removing the rear serial port latch-door

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the rear serial port latch-door and provides a visual representation of the removal procedure.

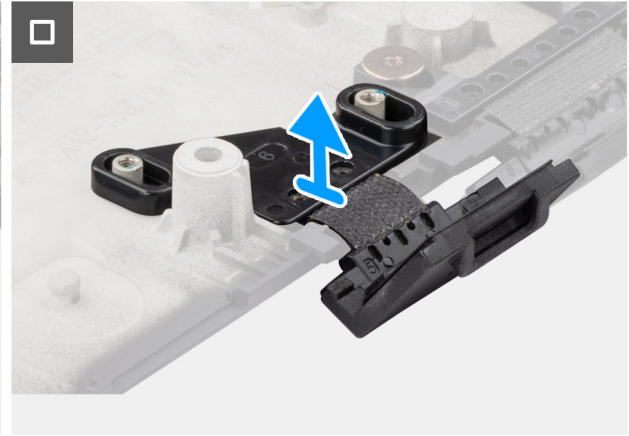
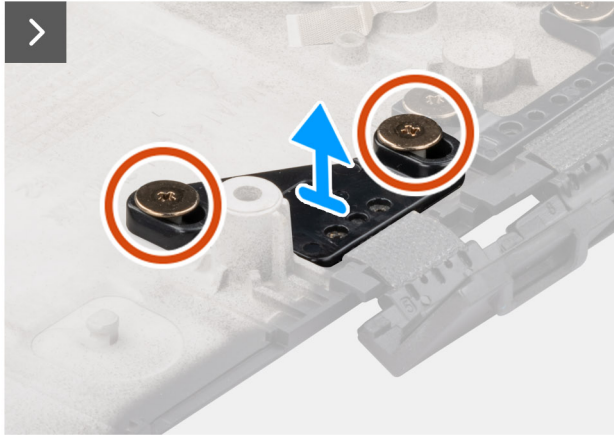
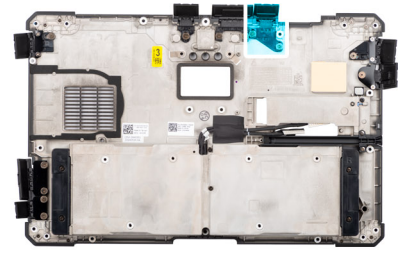


Figure 94. Removing the rear serial port latch-door

Steps

1. Remove the two (M2x3) screws that secure the rear serial port latch-door to the computer chassis.
2. Remove the rear serial port latch-door from the computer chassis.

Installing the rear serial port latch-door

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the rear serial port latch-door and provides a visual representation of the installation procedure.



2x
M2x3

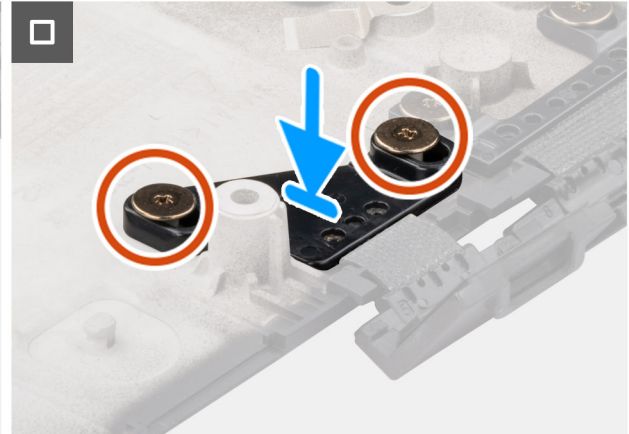
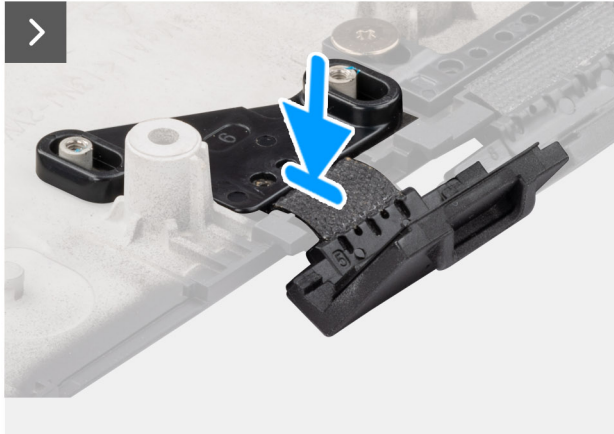
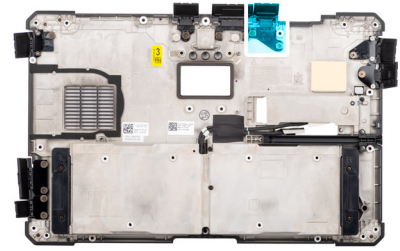


Figure 95. Installing the rear serial port latch-door

Steps

1. Align the rear serial port latch-door with the screw hole on the computer chassis.
2. Replace the (M2x3) screw that secures the rear serial port latch-door to the computer chassis.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Removing the left audio port latch-door

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the left audio port latch-door and provides a visual representation of the removal procedure.



2x
M2x3

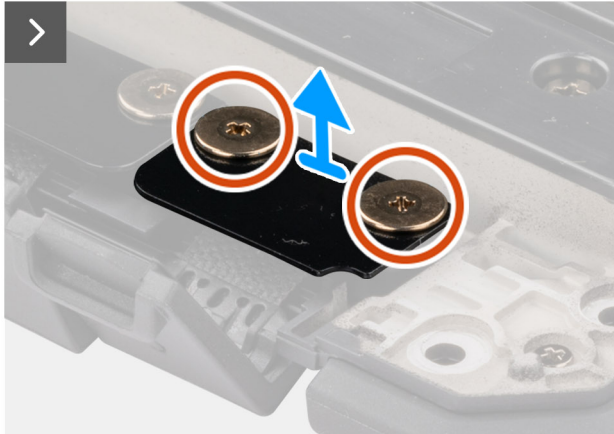
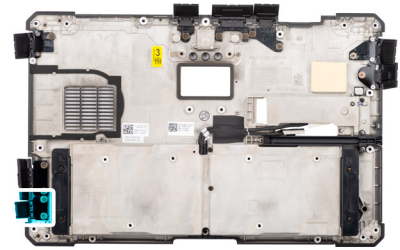


Figure 96. Removing the left audio port latch-door

Steps

1. Remove the two (M2x3) screws that secure the bracket on the left audio port latch-door.
2. Lift and remove the left audio port latch-door from the computer chassis.

Installing the left audio port latch-door

 **CAUTION:** The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the left audio port latch-door and provides a visual representation of the installation procedure.

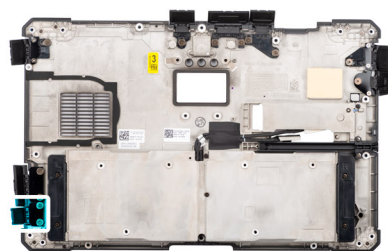


Figure 97. Installing the left audio port latch-door

Steps

1. Align the left audio port latch-door with the screw holes on the computer chassis.
2. Replace the two (M2x3) screws that secure the bracket on the left audio port latch-door.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Removing the left USB port latch-door

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the left USB port latch-door and provides a visual representation of the removal procedure.

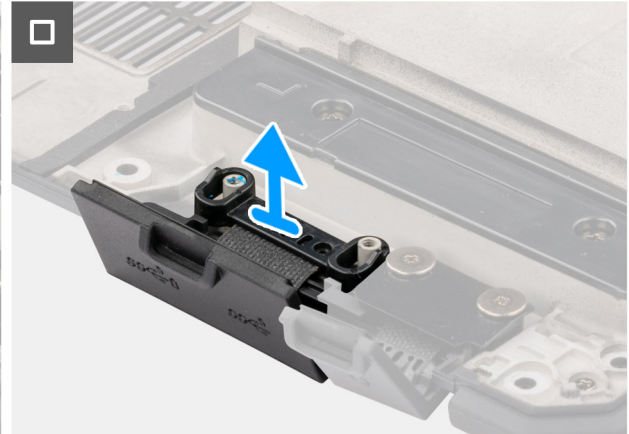
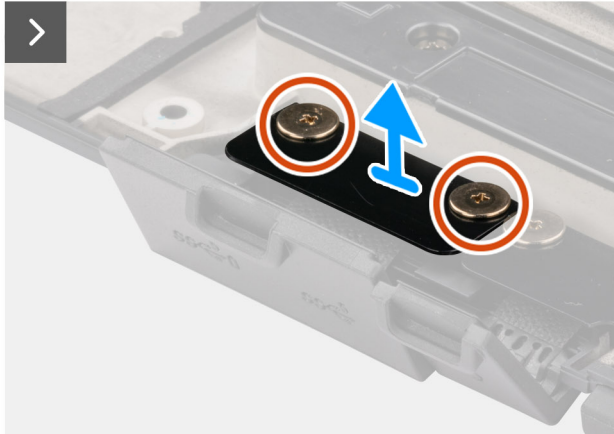
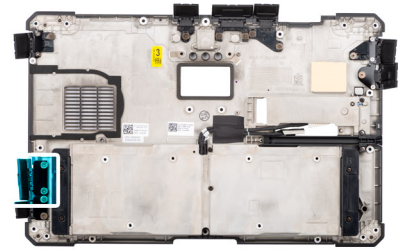


Figure 98. Removing the left USB port latch-door

Steps

1. Remove the two (M2x3) screws that secure the bracket on the left USB port latch-door.
2. Remove the left USB port latch-door from the computer chassis.

Installing the left USB port latch-door

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the left USB port latch-door and provides a visual representation of the installation procedure.



2x
M2x3

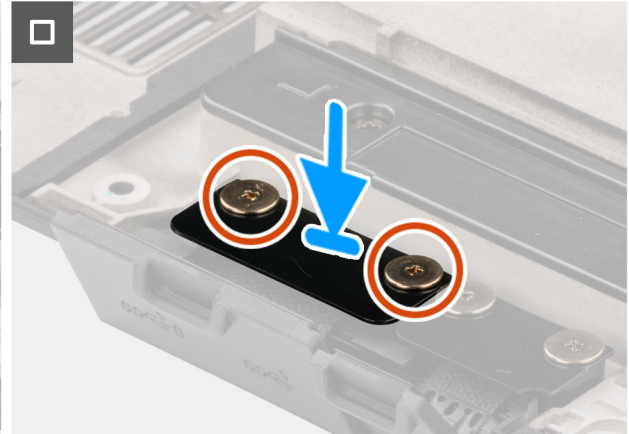
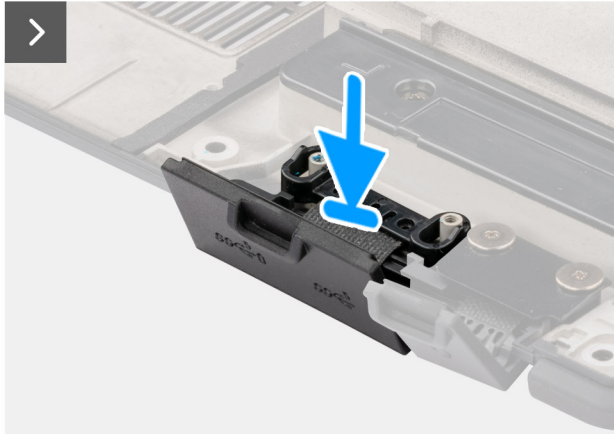
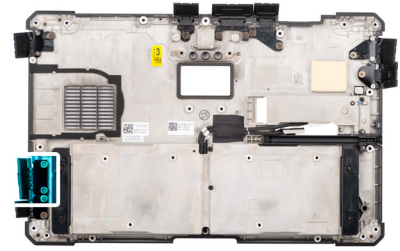


Figure 99. Installing the left USB port latch-door

Steps

1. Align the left USB port latch-door with the screw holes on the computer chassis.
2. Replace the two (M2x3) screws that secure the bracket on the left USB port latch-door.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Removing the left Type-C port latch-door

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [base cover](#).

About this task

The following image indicates the location of the left Type-C port latch-door and provides a visual representation of the removal procedure.

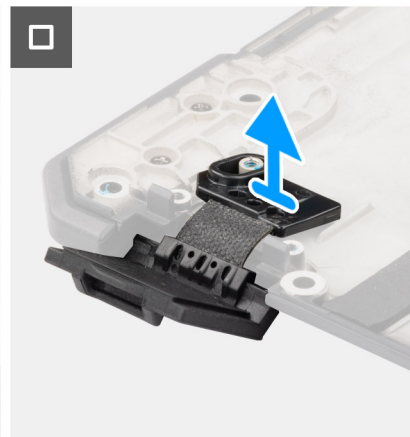
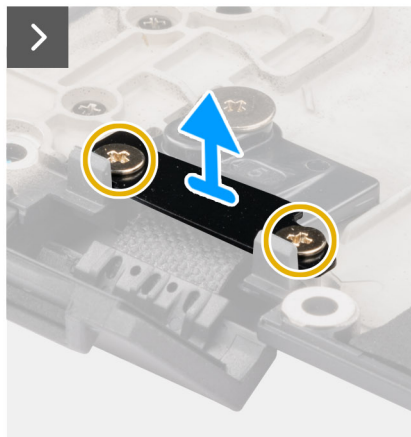
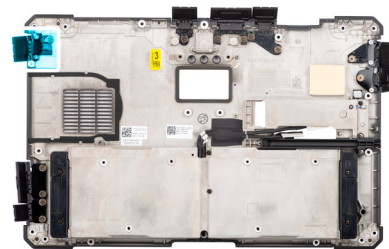
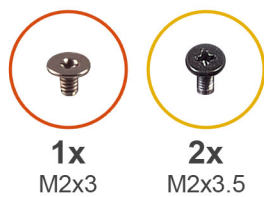


Figure 100. Removing the left Type-C port latch-door

Steps

1. Remove the two (M2x3.5) screws that secure the bracket on the left Type-C port latch-door.
2. Remove the (M2x3) screw that secures the left Type-C port latch-door to the computer chassis.
3. Remove the left Type-C port latch-door from the computer chassis.

Installing the left Type-C port latch-door

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the left Type-C port latch-door and provides a visual representation of the installation procedure.

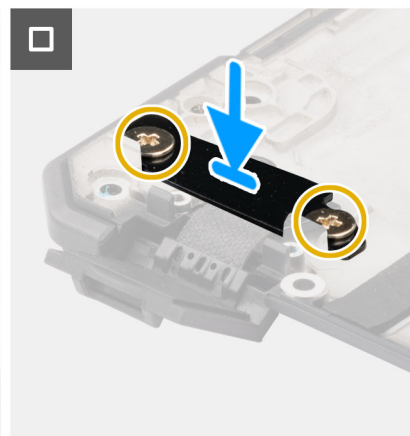
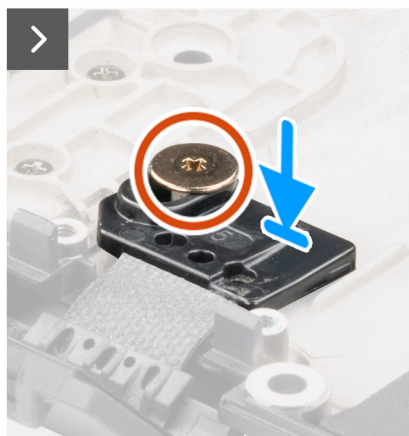
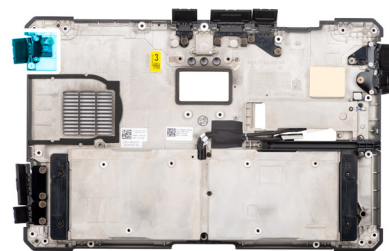
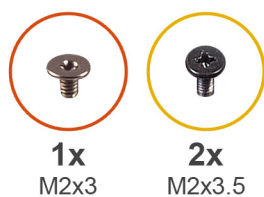


Figure 101. Installing the left Type-C port latch-door

Steps

1. Align the left Type-C port latch-door with the screw hole on the computer chassis.
2. Replace the (M2x3) screw that secures the left Type-C port latch-door to the computer chassis.
3. Replace the two (M2x3.5) screws that secure the bracket on the left Type-C port latch-door.

Next steps

1. Install the [base cover](#).
2. Install the [solid state drive carrier](#).
3. Install the [batteries](#).
4. Follow the procedure in [after working inside your computer](#).

Display assembly

Removing the display assembly

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
5. Remove the [base cover](#).
6. Remove the [RF swich board](#).
7. Remove the [WLAN card](#).
8. Remove the [WWAN card](#).
9. Remove the [dock I/O-module](#).
10. Remove the [rear I/O-board](#).

11. Remove the fan.
12. Remove the heat sink (UMA) or heat sink (discrete).
13. Remove the system board.

About this task

The following images indicate the location of the display assembly and provide a visual representation of the removal procedure.

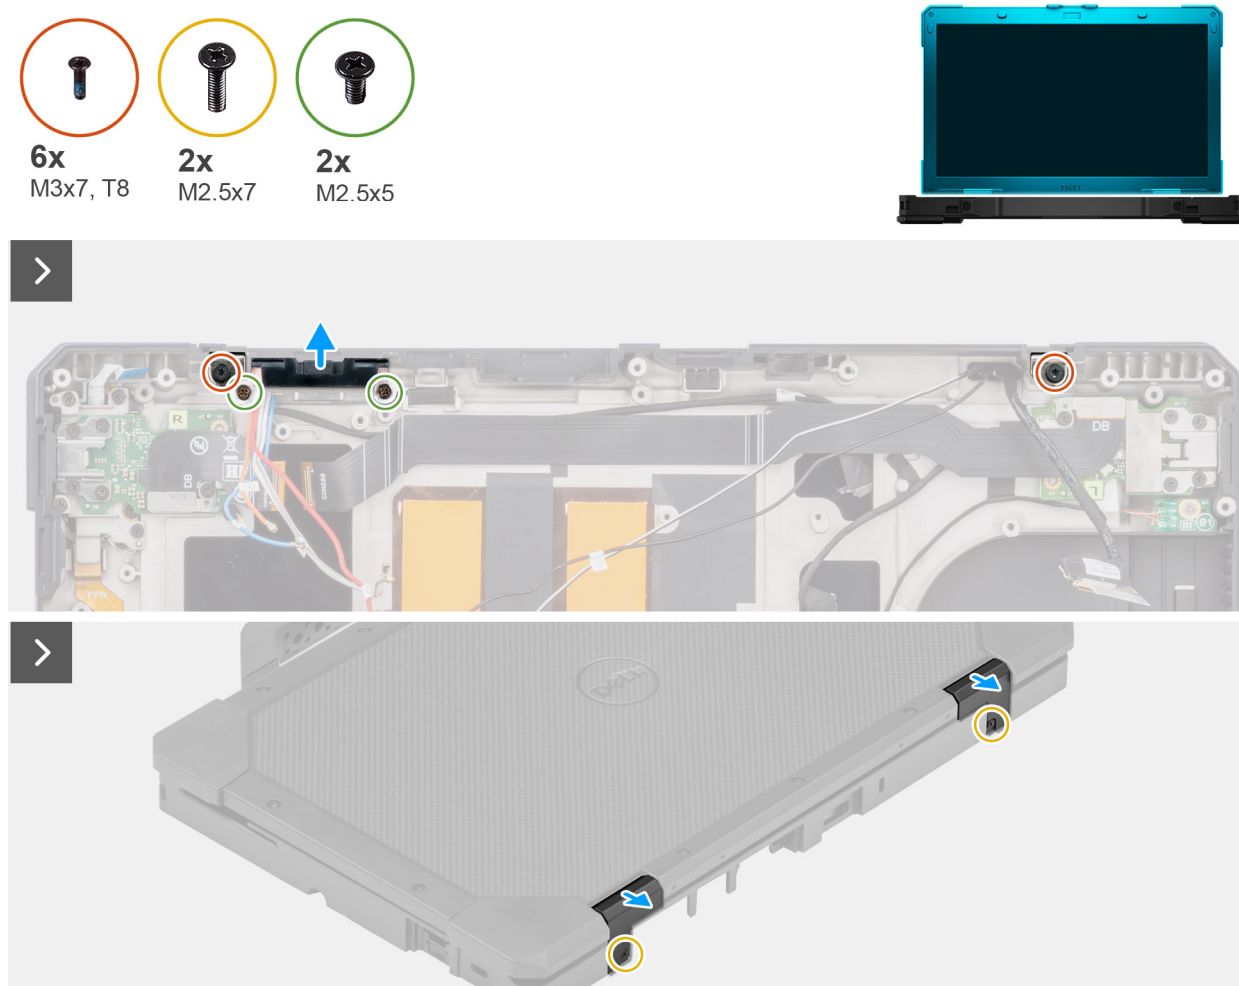


Figure 102. Removing the display assembly

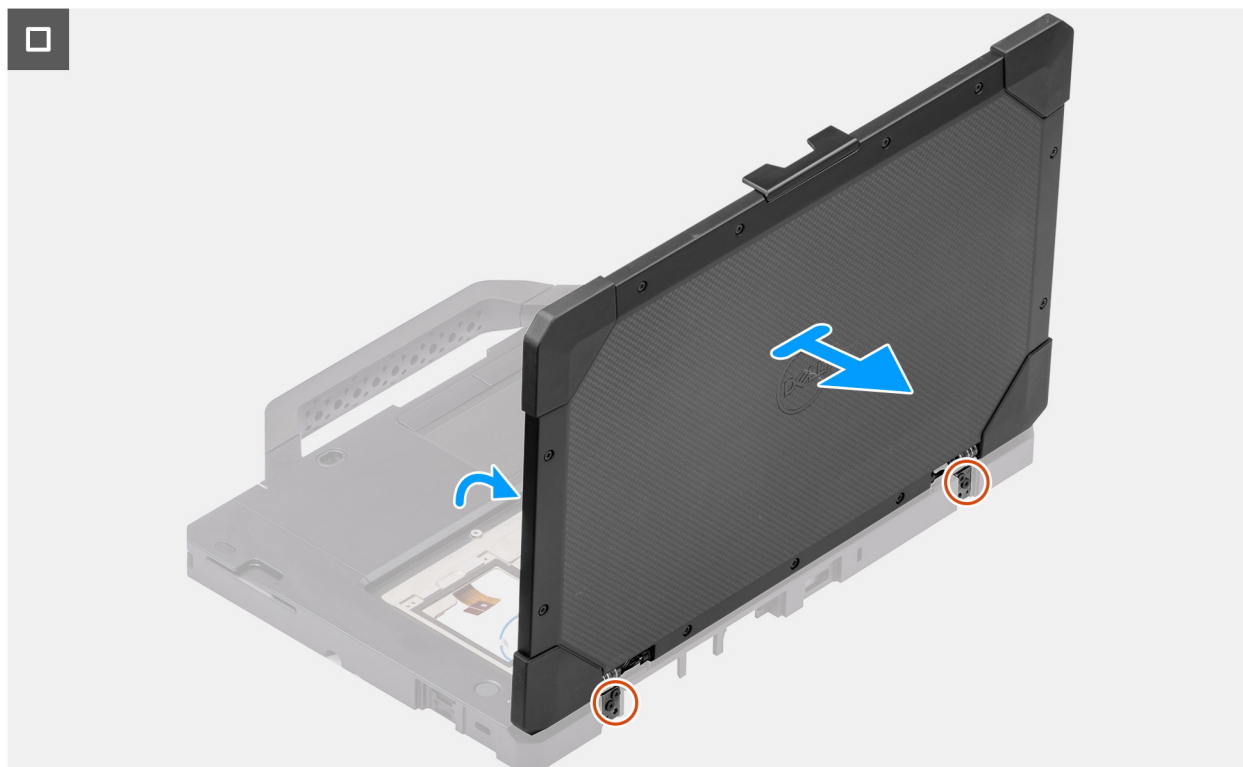


Figure 103. Removing the display assembly

Steps

1. Remove the two (M3x7, T8) epoxy screws and two (M2.5x5) screws that secure the hinge covers to the computer chassis and open the display.
2. Remove the two (M2.5x7) screws that secure the left/right hinge covers to the computer chassis.
3. Remove the four (M3x7, T8) epoxy screws that secure the display assembly to the computer chassis.
4. Lift and remove the display assembly from the computer chassis.

Installing the display assembly

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the display assembly and provide a visual representation of the installation procedure.

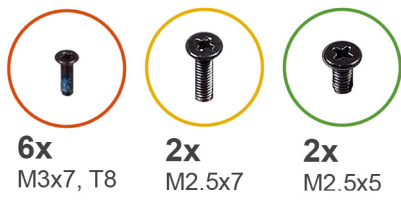


Figure 104. Installing the display assembly



Figure 105. Installing the display assembly

Steps

1. Align and place the display assembly on the computer chassis.
2. Replace the four (M3x7, T8) epoxy screws that secure the display assembly to the computer chassis and close the lid.
 - NOTE:** The epoxy screws are designed for single use. When replacing the display assembly, ensure to use the epoxy screws shipped with the replacement package.
3. Replace the two (M2.5x7) screws that secure the left/right hinge covers to the computer chassis.
4. Replace the two (M3x7, T8) epoxy screws and two (M2.5x5) screws that secure the hinge covers to the computer chassis.

Next steps

1. Install the [system board](#).
2. Install the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
3. Install the [fan](#).
4. Install the [rear I/O-board](#).
5. Install the [dock I/O-module](#).
6. Install the [WWAN card](#).
7. Install the [WLAN card](#).
8. Install the [RF switch board](#).
9. Install the [base cover](#).
10. Install the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
11. Install the [solid state drive carrier](#).
12. Install the [batteries](#).
13. Follow the procedure in [after working inside your computer](#).

Display-panel assembly

Removing the display-panel assembly

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [display assembly](#).

About this task

The following image indicates the location of the display bezel and provides a visual representation of the removal procedure.

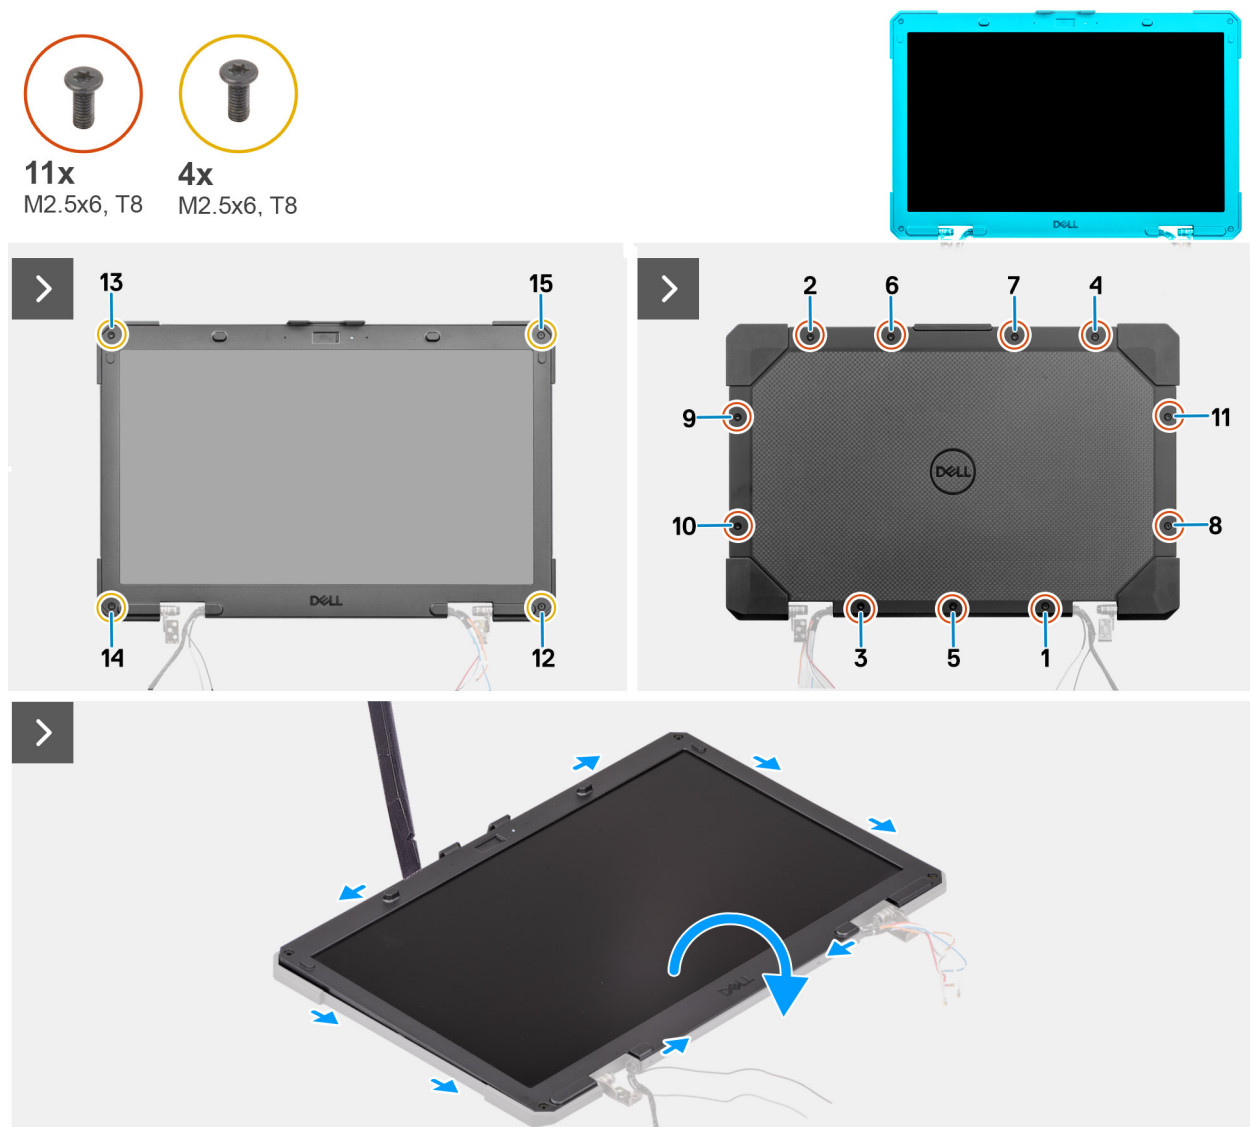


Figure 106. Removing the display-panel assembly



Figure 107. Removing the display-panel assembly

Steps

1. Remove the four (M2.5x6, T8) epoxy screws that secure the display-panel assembly to the display back-cover assembly.
NOTE: These screws are coated with epoxy and are secured firmly, requiring more torque to remove them. To prevent damage to the screws and surrounding plastics, use the correct screwdriver for each screw type.
2. Close the lid and remove the 11 (M2.5x6, T8) screws that secure the display-panel assembly to the display back-cover assembly.
3. Use a plastic scribe to carefully pry open the top, left, and right sides of the display-panel assembly.
NOTE: When prying open the display-panel assembly, ensure to pry along the outside edge of the display bezel using your hand or a plastic scribe. Using a screw driver or any sharp object may damage the display cover.
4. Flip the display-panel assembly and disconnect the eDP cable from its connector on the display-panel.
5. Disconnect the touch cable from its connector on the touch screen board.

Installing the display-panel assembly

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following images indicate the location of the display-panel assembly and provide a visual representation of the installation procedure.



11x
M2.5x6, T8



4x
M2.5x6, T8



Figure 108. Installing the display-panel assembly

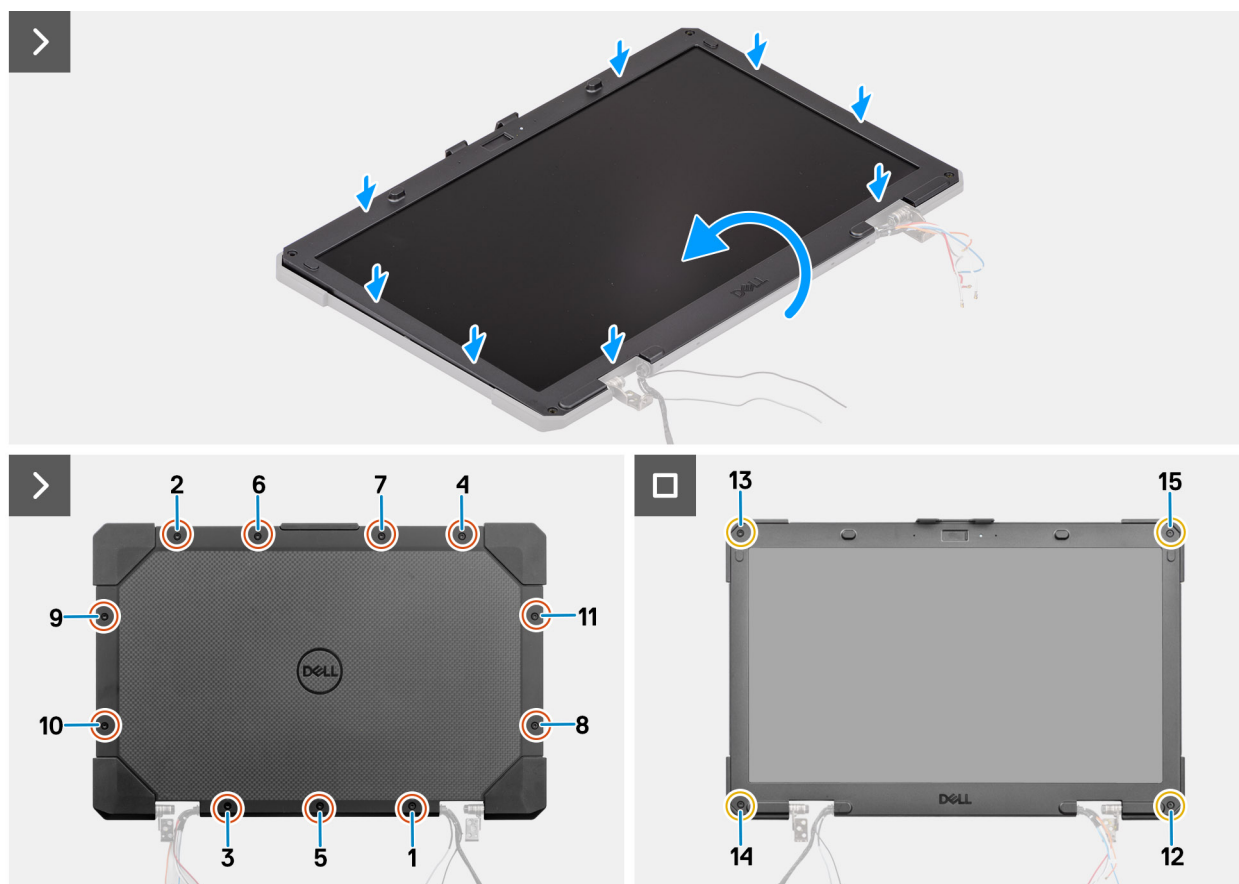


Figure 109. Installing the display-panel assembly

Steps

1. Connect the touch cable to its connector on the touch screen board.
2. Connect the eDP cable to its connector on the display-panel assembly and flip the display-panel assembly on the display back-cover assembly.
3. Align the display-panel assembly with the display back-cover assembly. Gently snap the display-panel assembly into place.
4. Replace the 11 (M2.5x6, T8) epoxy screws that secure the display-panel assembly to the display assembly.
 - NOTE:** Ensure that the display-panel assembly is placed on a flat surface when replacing the screws to avoid light leakage from the LCD.
- NOTE:** The epoxy screws are designed for single use. When replacing the display-panel assembly, ensure to use the epoxy screws shipped with the replacement package.
5. Replace the four (M2.5x6, T8) epoxy screws to secure the display-panel assembly to the display back-cover assembly.
 - NOTE:** The epoxy screws are designed for single use. When replacing the display-panel assembly, ensure to use the epoxy screws shipped with the replacement package.

Next steps

1. Install the [display assembly](#).
2. Follow the procedure in [after working inside your computer](#).

Display back-cover assembly

Removing the display back-cover assembly

 **CAUTION:** The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
5. Remove the [base cover](#).
6. Remove the [GPS board](#).
7. Remove the [rear I/O-board](#).
8. Remove the [RF switch board](#).
9. Remove the [WLAN card](#).
10. Remove the [WWAN card](#).
11. Remove the [dock I/O-module](#).
12. Remove the [fan](#).
13. Remove the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
14. Remove the [system board](#).
15. Remove the [display assembly](#).
16. Remove the [display-panel assembly](#).

About this task

The following image indicates the location of the display back-cover assembly and provides a visual representation of the removal procedure.

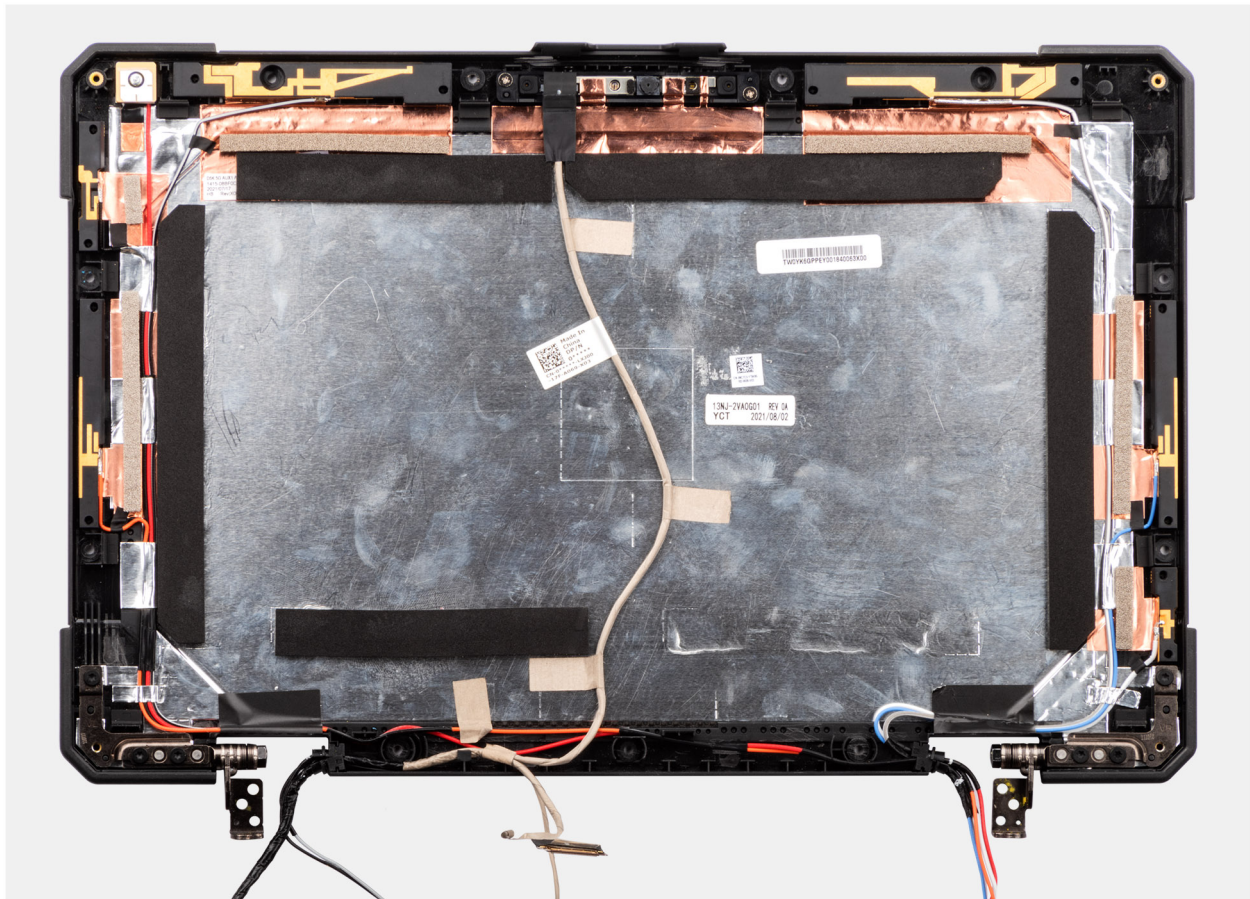


Figure 110. Removing the display back-cover assembly

Steps

After performing the preceding steps, you are left with the display back-cover assembly.

Installing the display back-cover assembly

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the display back-cover assembly and provides a visual representation of the installation procedure.

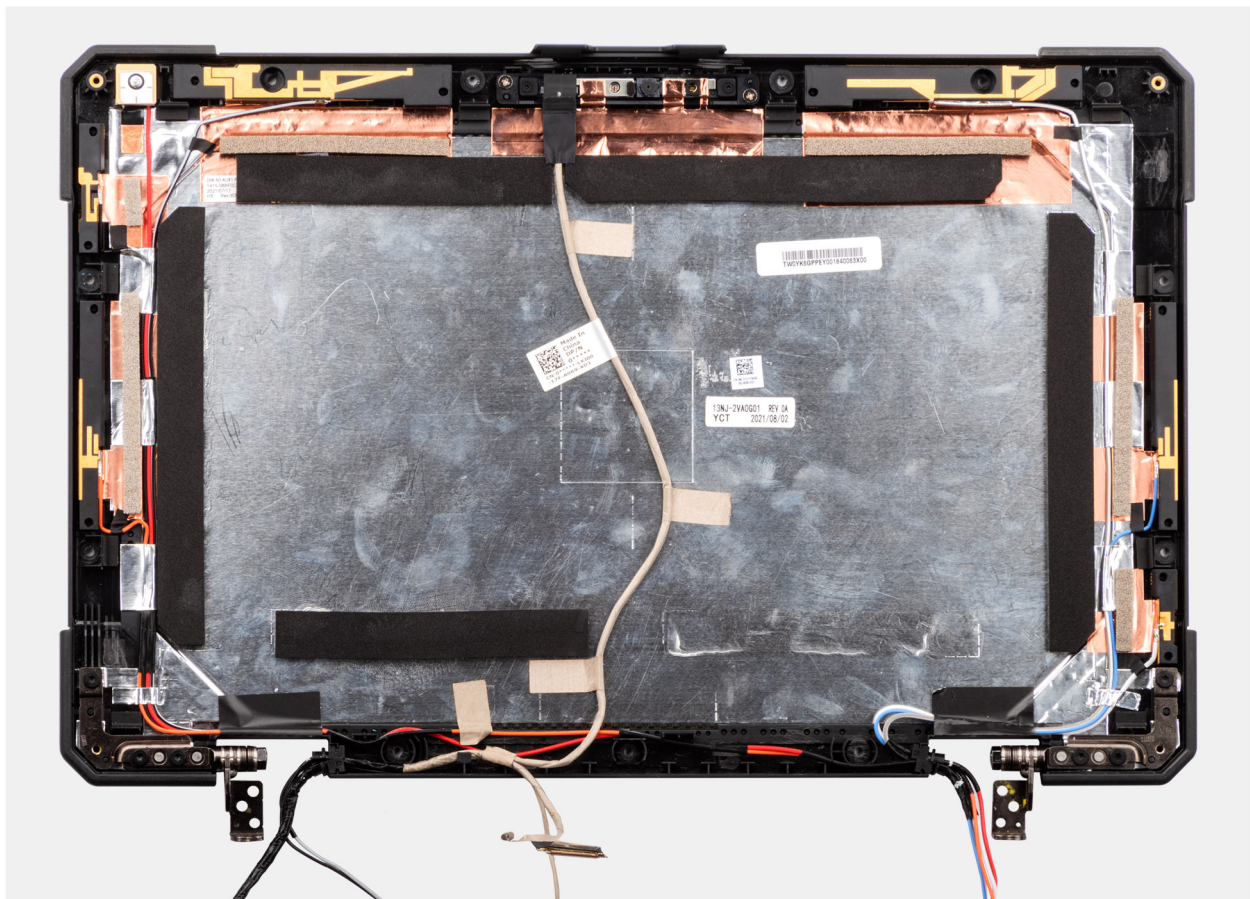


Figure 111. Installing the display back-cover assembly

Steps

After performing the succeeding steps, you are left with the display back-cover assembly.

Next steps

1. Install the [display-panel assembly](#).
2. Install the [display assembly](#).
3. Install the [system board](#).
4. Install the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
5. Install the [fan](#).
6. Install the [dock I/O-module](#).
7. Install the [WWAN card](#).
8. Install the [WLAN card](#).
9. Install the [RF switch board](#).
10. Install the [rear I/O-board](#).
11. Install the [GPS board](#).
12. Install the [base cover](#).
13. Install the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
14. Install the [solid state drive carrier](#).
15. Install the [batteries](#).
16. Follow the procedure in [after working inside your computer](#).

Palm-rest assembly

Removing the palm-rest assembly

CAUTION: The information in this removal section is intended for authorized service technicians only.

Prerequisites

1. Follow the procedure in [before working inside your computer](#).
2. Remove the [batteries](#).
3. Remove the [solid state drive carrier](#).
4. Remove the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
5. Remove the [base cover](#).
6. Remove the [RF swith board](#).
7. Remove the [WLAN card](#).
8. Remove the [WWAN card](#).
9. Remove the [dock I/O-module](#).
10. Remove the [rear I/O-board](#).
11. Remove the [fan](#).
12. Remove the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
13. Remove the [system board](#).
14. Remove the [display assembly](#).

About this task

The following image indicates the location of the palm-rest assembly and provides a visual representation of the removal procedure.

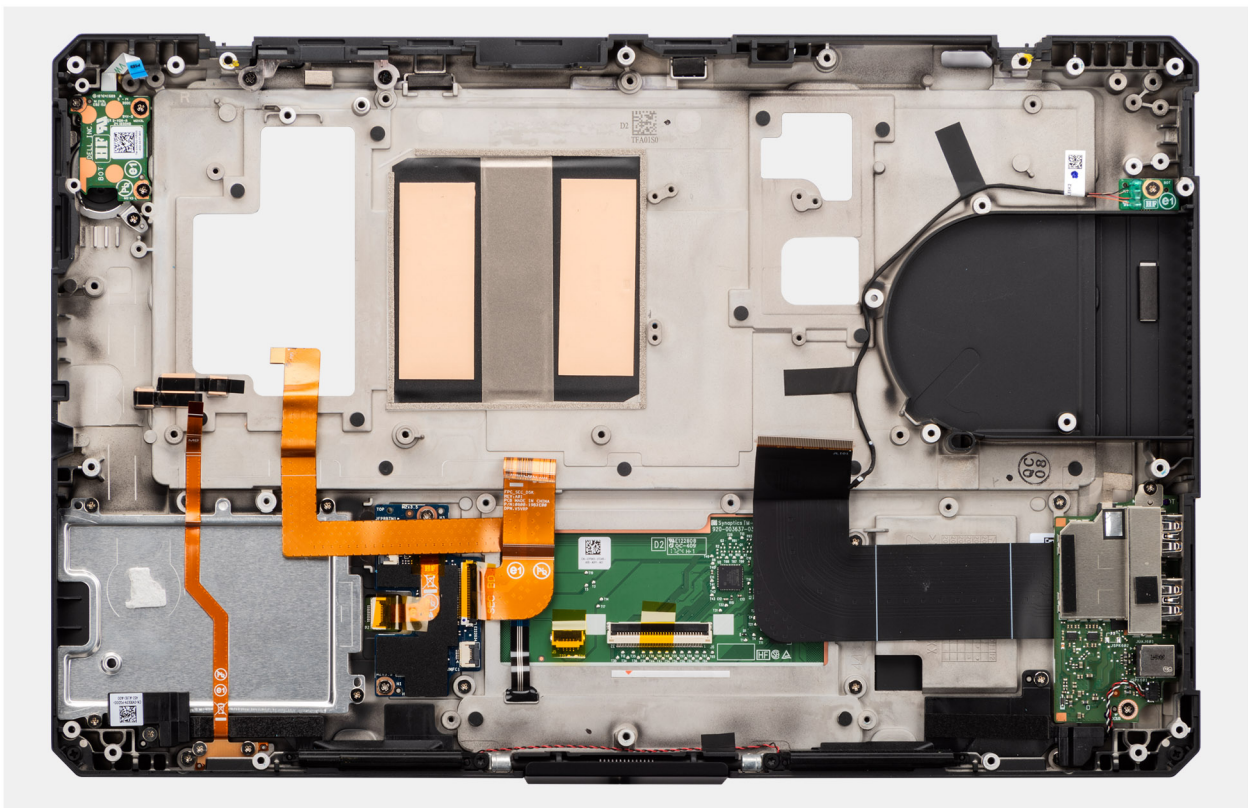


Figure 112. Removing the palm-rest assembly

Steps

After performing the preceding steps, you are left with the palm-rest assembly.

NOTE: The palm-rest assembly is preassembled with the touchpad, power button board, power button with fingerprint reader, LED board, USH board, left I/O-board, and speakers.

NOTE: Depending on the configuration of the computer, the optional rear I/O-board and the port cover must be transferred over to the new replacement palm-rest assembly.

Installing the palm-rest assembly

CAUTION: The information in this installation section is intended for authorized service technicians only.

Prerequisites

If you are replacing a component, remove the existing component before performing the installation procedure.

About this task

The following image indicates the location of the palm-rest assembly and provides a visual representation of the installation procedure.

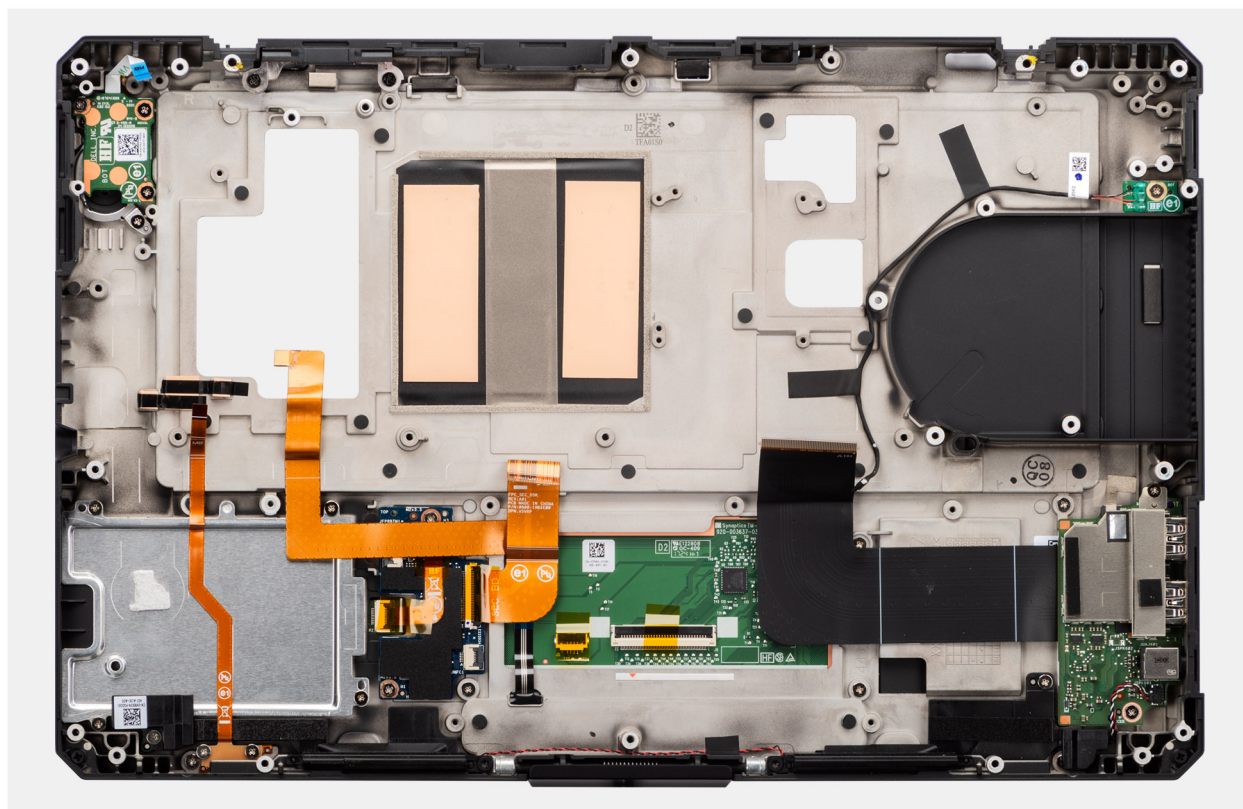


Figure 113. Installing the palm-rest assembly

Steps

After performing the succeeding steps, you are left with the palm-rest assembly.

NOTE: The palm-rest assembly is preassembled with the touchpad, power button board, power button with fingerprint reader, LED board, USH board, left I/O-board, and speakers.

NOTE: Depending on the configuration of the computer, the optional rear I/O-board and the port cover must be transferred over to the new replacement palm-rest assembly.

Next steps

1. Install the [display assembly](#).
2. Install the [system board](#).
3. Install the [heat sink \(UMA\)](#) or [heat sink \(discrete\)](#).
4. Install the [fan](#).
5. Install the [rear I/O-board](#).
6. Install the [dock I/O-module](#).
7. Install the [WWAN card](#).
8. Install the [WLAN card](#).
9. Install the [RF switch board](#).
10. Install the [base cover](#).
11. Install the [keyboard \(rubberized\)](#) or [keyboard \(standard\)](#).
12. Install the [solid state drive carrier](#).
13. Install the [batteries](#).
14. Follow the procedure in [after working inside your computer](#).

Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

Operating system


Your Dell Pro Rugged 14 RB14250 supports the following operating systems:

- Windows 11 Home
- Windows 11 Pro

Drivers and downloads

When troubleshooting, downloading, or installing drivers, it is recommended that you read the Dell Knowledge Base article Drivers and Downloads FAQs [000123347](#).

Technology and components

 **NOTE:** Instructions that are provided in the following section are applicable on computers that are shipped with the Windows operating system. Windows is factory-installed with this computer.

Rugged Control Center

Dell Rugged Control Center brings mission-critical tasks to the forefront of your rugged device, making them accessible. Some of the tasks include configuring programmable buttons and edge menus, operating the barcode scanner, enabling and disabling your WiFi and Bluetooth services, and so on.

Using Dell Rugged Control Center, you can also configure a range of settings on your rugged device such as application settings, keyboard backlight, night mode, stealth mode, GPS configuration, and antenna switch.

Dell Rugged Control Center is preinstalled on Latitude Rugged, and Latitude Rugged Extreme Notebooks and Tablets. To launch the application, open the Windows Start menu, and search for Dell Rugged Control Center.

Dell Rugged Control Center consists of five main parts-Dashboard, Program, Feature List, Settings, and Policy.

For more information about Rugged Control Center, refer *Rugged Control Center User's Guide and Quick Start Guide* at [Rugged Control Center](#).

BIOS Setup

CAUTION: Unless you are an expert computer user, do not change the settings in the BIOS Setup. Certain changes can make your computer work incorrectly.

NOTE: Depending on the computer and the installed devices, the options that are listed in this section may or may not be displayed.

NOTE: Before you change the settings in BIOS Setup, it is recommended that you note down the original settings for future reference.

Use BIOS Setup for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the storage device.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enable or disable base devices.

Entering BIOS Setup program

About this task

Turn on (or restart) your computer and press F2 immediately.

Navigation keys

NOTE: For most of the BIOS Setup options, changes that you make are recorded but do not take effect until you restart the computer.

Table 50. Navigation keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follows the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restart the computer.


F12 One Time Boot menu

To enter the One Time Boot menu, turn on your computer, and then press F12 immediately.

NOTE: If you are unable to enter the One Time Boot menu, repeat the above action.

The One Time Boot menu displays the devices that you can boot from and also display the options to start diagnostics. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

 **NOTE:** XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

The One Time Boot menu screen also displays the option to access BIOS Setup.

View Advanced Setup options

About this task

Some BIOS Setup options are only visible by enabling **Advanced Setup** mode, which is disabled by default.

 **NOTE:** BIOS Setup options, including **Advanced Setup** options, are described in [BIOS setup options](#).

To enable Advanced Setup:


Steps

1. Enter BIOS Setup.
The Overview menu appears.
2. Click the **Advanced Setup** option to move it to the **ON** mode.
Advanced BIOS Setup options are displayed.

View Service options

About this task

Service options are hidden by default and only visible by entering a hotkey command.


 **NOTE:** Service options are described in [BIOS Setup options](#).

To view Service options:

Steps

1. Enter BIOS Setup.
The Overview menu appears.
2. Enter the hotkey combination **Ctrl + Alt + s** to view the **Service** options.
Service options are displayed.

System Setup options

 **NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the computer.

 **NOTE:** Depending on your computer and its installed devices, the items that are listed in this section may differ.

Table 51. System Setup options—Overview menu

Overview
Dell Pro Rugged 14 RB14250

Table 51. System Setup options—Overview menu (continued)






Overview	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the Express Service Code of the computer.
Ownership Tag	Displays the Ownership Tag of the computer.
Signed Firmware Update	<p>Displays whether the Signed Firmware Update is enabled on your computer. By default, the Signed Firmware Update option is enabled.</p> <p> NOTE: To view this option, enable Service options as described in View Service options.</p>
BATTERY Information	
Battery 1 Type	Displays the battery health of the computer.
Battery 1 Level	Displays the battery level of the computer.
Battery 1 State	Displays the battery state of the computer.
Battery 1 Health	Displays the battery health of the computer.
Battery 2 Type	Displays the battery health of the computer.
Battery 2 Level	Displays the battery level of the computer.
Battery 2 State	Displays the battery state of the computer.
Battery 2 Health	Displays the battery health of the computer.
AC Adapter	Displays whether an AC adapter is connected. If connected, displays the type of AC adapter that is connected.
PROCESSOR Information	
Processor Type	Displays the processor type.
Maximum Clock Speed	<p>Displays the maximum processor clock speed.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Minimum Clock Speed	<p>Displays the minimum processor clock speed.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Current Clock Speed	<p>Displays the current processor clock speed.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Core Count	Displays the number of cores on the processor.
Processor ID	Displays the processor identification code.
Microcode Version	<p>Displays the microcode version.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Intel Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable.

Table 51. System Setup options—Overview menu (continued)





Overview	
	 NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .
MEMORY Information	
Memory Installed	Displays the total memory installed on the computer.
Memory Available	Displays the total memory available on the computer.
Memory Speed	Displays the memory speed.  NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .
Memory Channel Mode	Displays single or dual channel mode.  NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .
Memory Technology	Displays the technology that is used for the memory.
DEVICES Information	
Panel Type	Displays the type of display panel available on the computer.
Panel Revision	Displays the Panel Revision of the computer.
Video Controller	Displays the type of video controller available on the computer.
Video Memory	Displays the video memory information of the computer.
Wi-Fi Device	Displays the wireless device information of the computer.
Native Resolution	Displays the native resolution of the computer.
Video BIOS Version	Displays the video BIOS version of the computer.  NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .
Audio Controller	Displays the audio controller information of the computer.
Bluetooth Device	Displays the Bluetooth device information of the computer.
LOM MAC Address	Displays the LAN On Motherboard (LOM) MAC address of the system.
Pass Through MAC Address	Displays the MAC address of the video pass-through.
Cellular Device	Displays the cellular device of the computer.

Table 52. System Setup options—Boot Configuration menu


Boot Configuration	
Boot Sequence	
Boot Mode: UEFI only	Displays the boot mode of the computer.  NOTE: To view this option, enable Service options as described in View Service options .
Boot Sequence	Displays the boot sequence.
Enable PXE Boot Priority	Enables or disables the new PXE boot option. Allows loading an operating system over a network connection. By default, the Enable PXE Boot Priority option is disabled.
Secure Digital (SD) Card Boot	Enables or disables read-only boot from Secure Digital (SD) card. By default, the Secure Digital (SD) Card Boot option is disabled.

Table 52. System Setup options—Boot Configuration menu (continued)








Boot Configuration	
	<p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Secure Boot	<p>Secure Boot is a method of guaranteeing the integrity of the boot path by performing additional validation of the operating system and PCI add-in cards. The computer stops booting to the operating system when a component is not authenticated during the boot process. Secure Boot can be enabled in BIOS setup or using management interfaces like Dell Command Configure, but can only be disabled from BIOS setup.</p>
Enable Secure Boot	<p>Enables the computer to boot using only validated boot software.</p> <p>By default, this Enable Secure Boot option is disabled. For additional security, Dell Technologies recommends keeping the Secure Boot option enabled to ensure that the UEFI firmware validates the operating system during the boot process.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p> <p> NOTE: To enable Secure Boot, the computer must be in UEFI boot mode and the Enable Legacy Option ROMs option must be turned off.</p>
Enable Microsoft UEFI CA	<p>When disabled, the UEFI CA is removed from the BIOS UEFI Secure Boot database.</p> <p> CAUTION: If you disable Microsoft UEFI CA, the computer may not boot, computer graphics may not function, some devices may not function properly, and the computer could become unrecoverable.</p> <p>By default, the Enable Microsoft UEFI CA option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Enable Microsoft UEFI CA option enabled to ensure the broadest compatibility with devices and operating systems.</p>
Secure Boot Mode	<p>Enables or disables the Secure Boot operation mode.</p> <p>By default, the Deployed Mode is selected. Deployed Mode should be selected for normal operation of Secure Boot.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Expert Key Management	
Enable Custom Mode	<p>Enables or disables the keys in the PK, KEK, db, and dbx security key databases to be modified.</p> <p>By default, the Enable Custom Mode option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Custom Mode Key Management	<p>Selects the custom values for expert key management.</p> <p>By default, the PK option is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 53. System Setup options—Integrated Devices menu

Integrated Devices
Date/Time

Table 53. System Setup options—Integrated Devices menu (continued)






Integrated Devices	
Date	Sets the computer date in MM/DD/YYYY format. Changes to the date format take effect immediately.
Time	Sets the computer time in HH/MM/SS 24-hour format. You can select between a 12-hour or 24-hour clock. Changes to the time format take effect immediately.
Camera	
Enable Camera	<p>Enables the camera.</p> <p>By default, the Enable Camera option is enabled.</p> <p> NOTE: Depending on the configuration ordered, the camera setup option may not be available.</p>
Audio	
Enable Audio	<p>Enables all integrated audio controller.</p> <p>By default, all the options are enabled.</p>
Enable Microphone	<p>Enables the microphone.</p> <p>By default, the Enable Microphone option is enabled.</p> <p> NOTE: Depending on the configuration ordered, the microphone setup option may not be available.</p>
Enable Internal Speaker	<p>Enables the internal speaker.</p> <p>By default, the Enable Internal Speaker option is enabled.</p>
Serial port	
Serial Port 1 Configuration	By default, the COM1: Port is configured at 3F8h with IRQ 4 option is selected
USB/Thunderbolt Configuration	
Enable USB Boot Support	<p>Enables booting from USB mass storage devices that are connected to external USB ports.</p> <p>By default, the Enable USB Boot Support option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable External USB Ports	<p>Enables the external USB ports.</p> <p>By default, the Enable External USB Ports option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable Thunderbolt Technology Support	
Enable Thunderbolt Technology Support	<p>Enables the associated ports and adapters for Thunderbolt Technology support.</p> <p>By default, the Enable Thunderbolt Technology Support option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable Thunderbolt Boot Support	
Enable Thunderbolt Boot Support	<p>Enables the Thunderbolt adapter-peripheral device and USB devices that are connected to the Thunderbolt adapter to be used during BIOS Preboot.</p> <p>By default, the Enable Thunderbolt Boot Support option is disabled.</p>

Table 53. System Setup options—Integrated Devices menu (continued)

Integrated Devices	
	<p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable Thunderbolt (and PCIe behind TBT) pre-boot modules	<p>Enables the PCIe devices that are connected through a Thunderbolt adapter to run the PCIe devices UEFI Option ROM (if present) during preboot.</p> <p>By default, the Enable Thunderbolt (and PCIe behind TBT) pre-boot modules option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Disable USB4 PCIe Tunneling	<p>Disables the USB4 PCIe Tunneling option.</p> <p>By default, the Disable USB4 PCIe Tunneling option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in Entering BIOS Setup program.</p>
Video/Power only on Type-C Ports	<p>Enables or disables the Type-C port functionality to video or only power.</p> <p>By default, the Video/Power only on Type-C Ports option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Type-C Dock	
Type-C Dock Override	<p>Enables or disables to use connected Type-C Dell Dock to provide data stream with external USB ports disabled. When Type-C Dock override is enabled, the Video/Audio/LAN submenu is activated.</p> <p>By default, the Type-C Dock Override option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in Entering BIOS Setup program.</p>
Type-C Dock Audio	<p>Enables or disables the usage of audio inputs and outputs from the connected Type-C Dell docking station.</p> <p>By default, the Type-C Dock Audio option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Type-C Dock LAN	<p>Enables or disables the usage of LAN on the external ports of the connected Type-C Dell docking station.</p> <p>By default, the Type-C Dock LAN option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Miscellaneous Devices	
Enable Dedicated GPS Radio	<p>Enables or disables the Dedicated GPS Radio option.</p> <p>By default, the Dedicated GPS Radio option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Unobtrusive Mode	<p>Enables or disables the unobtrusive mode. When enabled, all system LEDs, LCD panel backlight and audio devices of the computer are turned off.</p> <p>By default, the Unobtrusive Mode option is disabled.</p>

Table 53. System Setup options—Integrated Devices menu (continued)





Integrated Devices	
	<p> NOTE: On computers with collaboration touchpad, the Collaboration Touchpad is disabled when the Unobtrusive Mode option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Stealth Mode	
Enable Stealth Mode	<p>Enables or disables the stealth mode. When enabled, all system light and sound are turned off. Toggling <Fn>+Shift+ enters and exits unobtrusive mode. If this option is grayed out and needs to be enabled, please ensure Collaboration Touchpad (Go to Pre-Boot Behavior) is disabled first. Then turn on the stealth mode.</p> <p>By default, the Enable Stealth Mode option is enabled.</p> <p> NOTE: On computers with collaboration touchpad, the Collaboration Touchpad is disabled when the Stealth Mode option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Disable onboard LEDs	Configures the Dell Stealth Mode feature. Checking Enable Stealth Mode enables this feature. All other controls on this page may only be configured when stealth mode is enabled.
Disable onboard LCD Screen	Enables or disables the onboard LCD Screen.
Disable onboard speakers	Enables or disables the onboard speakers.
Disable onboard fans	Enables or disables the onboard fans.
Disable Bluetooth radio	Enables or disables the Bluetooth radio.
Disable GPS Receiver	Enables or disables the GPS Receiver.
Disable WLAN radio	Enables or disables the WLAN radio.
Disable WWAN radio	Enables or disables the WAN radio.

Table 54. System Setup options—Storage menu


Storage	
SATA/NVMe Operation	
SATA/NVMe Operation	<p>Sets the operating mode of the integrated SATA hard drive controller.</p> <p>By default, the Raid On option is selected.</p>
Storage Interface	
Port Enablement	<p>Enables or disables the M.2 PCIe SSD option.</p> <p>By default, the M.2 PCIe SSD option is enabled.</p>
Smart Reporting	<p>Enables or disables the Smart reporting option.</p> <p>By default, the Smart Reporting option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Drive Information	
Enable MediaCard	
Secure Digital (SD) Card	Enables or disables the SD card.

Table 54. System Setup options—Storage menu (continued)

Storage	
	<p>By default, the Secure Digital (SD) Card option is enabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Secure Digital (SD) Card Read-Only Mode	<p>Enables or disables the SD card read-only mode.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p> <p>By default, the Secure Digital (SD) Card Read-Only Mode option is disabled.</p>

Table 55. System Setup options—Display menu

Display	
Display Brightness	
Brightness on battery power	<p>By default, the screen brightness is set to 50 when the computer is running on battery power. Set the screen brightness when the computer is running on battery power.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Brightness on AC power	<p>By default, the screen brightness is set to 100 when the computer is running on AC power. Set the screen brightness when the computer is running on AC power.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Touchscreen	<p>Enables or disables the touch screen option.</p> <p>By default, the Touchscreen option is enabled.</p> <p>NOTE: Only available on computers with touch screen displays.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Full Screen Logo	<p>Enables or disables the computer to display full screen logo, if the image matches screen resolution.</p> <p>By default, the Full Screen Logo option is disabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Limit Panel Brightness to 50%	<p>Allows you to limit the panel brightness to 50%.</p> <p>By default, the Limit Panel Brightness to 50% option is turned is off.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 56. System Setup options—Connection menu

Connection	
Wireless Device Enable	
WWAN/GPS	<p>Enables or disables the internal WWAN device.</p> <p>By default, the WWAN/GPS option is enabled.</p>
WLAN	<p>Enables or disables the internal WLAN device.</p> <p>By default, the WLAN option is enabled.</p>

Table 56. System Setup options—Connection menu (continued)


Connection	
Bluetooth	<p>Enables or disables the internal Bluetooth device.</p> <p>By default, the Bluetooth option is enabled.</p>
Contactless Smartcard/NFC	<p>Enables or disables the smartcard device.</p> <p>By default, the Contactless Smartcard/NFC option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable UEFI Network Stack	<p>Enables or disables the UEFI Network Stack and controls the onboard LAN Controller.</p> <p>By default, the Enable UEFI Network Stack option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Wireless Radio Control	
Control WLAN Radio	<p>Enable to sense the connection of the computer to a wired network and then disables the selected WLAN radio. Upon disconnection from the wired network, the selected wireless radios are reenabled.</p> <p>By default, the Control WLAN Radio option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Control WWAN Radio	<p>Enables to sense the connection of the computer to a wired network and then disables the selected WWAN radios.</p> <p>By default, the Control WWAN Radio option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable UEFI Bluetooth Stack	<p>Enables or disables the UEFI Bluetooth Stack.</p> <p>By default, the Enable UEFI Bluetooth Stack option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Dynamic Wireless Transmit Power	<p>When enabled, the computer increases the transmit power of the WLAN device to improve performance in certain computer configurations.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
HTTP(s) Boot Feature	
HTTP(s) Boot	<p>When enabled, supports HTTP(s) boot on the client BIOS, which offers wired or wireless and HTTP/HTTPS connection options.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
HTTP(s) Boot Modes	<p>In Auto Mode, the boot URL is obtained from the DHCP response; the boot URL specifies the HTTP Boot Server and location of the Network Boot Program (NBP) file. In Manual mode, the user enters the URL in the text box, which must start with <code>http://</code> or <code>https://</code> and end with the NBP file name.</p> <p>By default, Auto Mode is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
CA Certificate	<p>Upload or delete the CA certificate.</p>

Table 56. System Setup options—Connection menu (continued)




Connection	
	<p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Antenna Switch	<p>This setting configures, on a radio-by-radio basis, which antenna to use when docked: docking station or system. If set to Dock antenna, the default, then the radio will be switched to use the external docking station antenna when docked. If set to System, the radio will continue using the internal system antenna, even when docked. When the system is undocked, the system antennas are used and this option has no effect.</p> <p> NOTE: This setting applies to Rugged docking stations and does not apply to USB Type-C docking stations.</p> <p> NOTE: For radios having more than one antenna, the setting will apply to both antennas.</p>
WLAN Antenna	<p>Enable or disable the Dock Antenna or System Antenna option</p> <p>By default, the Dock Antenna option is enabled.</p>
WWAN Antenna	<p>Enable or disable the Dock Antenna or System Antenna option</p> <p>By default, the Dock Antenna option is enabled.</p>
GPS Antenna	<p>Enable or disable the Dock Antenna or System Antenna option</p> <p>By default, the Dock Antenna option is enabled.</p>

Table 57. System Setup options—Power menu


Power	
Battery Configuration	
Battery 1 Configuration	<p>Enables or disables the computer to run on battery during peak power usage hours. Use the table Custom Charge Start and Custom Charge Stop, to prevent AC power usage between certain times of each day.</p> <p>By default, the Adaptive option is selected. Battery settings are adaptively optimized based on your typical battery usage pattern.</p>
Battery 2 Configuration	<p>Enables or disables the computer to run on battery during peak power usage hours. Use the table Custom Charge Start and Custom Charge Stop, to prevent AC power usage between certain times of each day.</p> <p>By default, the Adaptive option is selected. Battery settings are adaptively optimized based on your typical battery usage pattern.</p>
Advanced Configuration	
Enable Advanced Battery Charge Configuration	<p>Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. When enabled, Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day.</p> <p>By default, the Enable Advanced Battery Charge Configuration option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Peak Shift	
Enable Peak Shift	<p>Enables or disables the computer to run on battery during peak power usage hours.</p> <p>By default, the Enable Peak Shift option is disabled.</p>

Table 57. System Setup options—Power menu (continued)




Power	
	<p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Type-C Connector Power	<p>This option allows to select the maximum power that can be drawn from the Type-C connector.</p> <p>By default, the 7.5 watts option is enabled.</p>
USB PowerShare	<p>Enables or disables the USB PowerShare on the computer.</p> <p>By default, the USB Powershare option is disabled.</p>
Thermal Management	<p>This setting allows for cooling of fan and processor heat management to adjust system performance, noise and temperature.</p> <p>By default, the Optimized option is selected.</p>
USB Wake Support	
Wake on Dell USB-C Dock	<p>When enabled, connecting a Dell USB-C Dock wakes the computer from Standby, Hibernate, and Power Off.</p> <p>By default, the Wake on Dell USB-C Dock option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Block Sleep	<p>Enables or disables the computer from entering Sleep (S3) mode in the operating system.</p> <p>By default, the Block Sleep option is disabled.</p> <p> NOTE: When enabled, the computer does not go to Sleep, Intel Rapid Start is disabled automatically, and the operating system power option is blank if it was set to Sleep.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Lid Switch	
Enable Lid Switch	<p>Enables or disables the Lid Switch.</p> <p>By default, the Enable Lid Switch option is enabled.</p>
Power On Lid Open	<p>When enabled, allows the computer to turn on from the off state whenever the lid is opened.</p> <p>By default, the Power On Lid Open option is enabled.</p>
Intel Speed Shift Technology	<p>Enables or disables the Intel Speed Shift Technology support. When enabled, the operating system selects the appropriate processor performance automatically.</p> <p>By default, the Intel Speed Shift Technology option is enabled.</p> <p> NOTE: To view this option, enable Service options as described in View Service options.</p>

Table 58. System Setup options—Security menu

Security	
TPM 2.0 Security	<p>Trusted Platform Module (TPM) is a security device that stores computer-generated keys for encryption and features such as BitLocker, Virtual Secure Mode, remote Attestation.</p> <p>By default, the TPM 2.0 Security option is enabled.</p>

Table 58. System Setup options—Security menu (continued)

Security	
	<p>For additional security, Dell Technologies recommends keeping the Trusted Platform Module (TPM) enabled to allow these security technologies to fully function.</p>
TPM 2.0 Security On	<p>Enables or disables the TPM.</p> <p>By default, the TPM 2.0 Security On option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping TPM enabled to allow these security technologies to fully function.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Attestation Enable	<p>The Attestation Enable option controls the endorsement hierarchy of TPM. Disabling the Attestation Enable option prevents TPM from being used to digitally sign certificates.</p> <p>By default, the Attestation Enable option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Attestation Enable option enabled.</p> <p>NOTE: When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Key Storage Enable	<p>The Key Storage Enable option controls the storage hierarchy of TPM, which is used to store digital keys. Disabling the Key Storage Enable option restricts the ability of TPM to store owner's data.</p> <p>By default, the Key Storage Enable option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Key Storage Enable option enabled.</p> <p>NOTE: When disabled, this feature may cause compatibility issues or loss of functionality in some operating systems.</p> <p>NOTE: To view this option, enable Service options as described in View Service options.</p>
Clear	<p>When enabled, the Clear option clears information that is stored in the TPM after exiting the system's BIOS. This option returns to the disabled state when the computer restarts.</p> <p>By default, the Clear option is disabled.</p> <p>Dell Technologies recommends enabling the Clear option only when TPM data is required to be cleared.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Physical Presence Interface (PPI) Bypass for Clear Commands	<p>The PPI Bypass for Clear Commands option allows the operating system to manage certain aspects of PTT. When enabled, you are not prompted to confirm changes to the PTT configuration.</p> <p>By default, the PPI Bypass for Clear Commands option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the PPI Bypass for Clear Commands option disabled.</p>
Intel Total Memory Encryption	<p>Enables or disables the processor's memory encryption feature.</p> <p>By default, the Intel Total Memory Encryption option is disabled.</p>

Table 58. System Setup options—Security menu (continued)








Security	
 NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .	
Chassis Intrusion	
Chassis Intrusion	<p>Enables or disables the detection of chassis intrusion events. This feature notifies the user when the base cover has been removed from the computer.</p> <p>When set to Enabled, a notification is displayed on the next boot and the event is logged in the BIOS Events log.</p> <p>When set to Disabled, no notification is displayed and no event is logged in the BIOS Events log.</p> <p>When set to On-Silent, the event is logged in the BIOS Events log, but no notification is displayed.</p> <p>By default, the Chassis Intrusion Detection option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Chassis Intrusion option enabled.</p>  NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .
Block Boot Until Cleared	<p>The Block Boot Until Clear option is enabled when Chassis Intrusion is enabled. When enabled, the computer does not boot until the chassis intrusion is cleared.</p>  NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .
SMM Security Mitigation	<p>Enables or disables additional UEFI SMM Security Mitigation protections. This option uses the Windows SMM Security Mitigations Table (WSMT) to confirm to the operating system that security best practices have been implemented by the UEFI firmware.</p> <p>By default, the SMM Security Mitigation option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the SMM Security Mitigation option enabled unless you have a specific application which is not compatible.</p>  NOTE: This feature may cause compatibility issues or loss of functionality with some legacy tools and applications.
	 NOTE: To view this option, enable Service options as described in View Service options .
Data Wipe on Next Boot	
Start Data Wipe	<p>Data Wipe is a secure wipe operation that deletes information from a storage device.</p>  CAUTION: The secure Data Wipe operation deletes information in a way that it cannot be reconstructed. <p>Commands such as delete and format in the operating system may remove files from showing up in the file system. However, they can be reconstructed through forensic means as they are still represented on the physical media. Data Wipe prevents this reconstruction and the data can no longer be recovered.</p> <p>When enabled, the data wipe option provides prompts to wipe any storage devices that are connected to the computer on the next boot.</p> <p>By default, the Start Data Wipe option is disabled.</p>  NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options .

Table 58. System Setup options—Security menu (continued)







Security	
Absolute	<p>Absolute Software provides various cyber security solutions, some requiring software preloaded on Dell computers and integrated into the BIOS. To use these features, you must enable the Absolute BIOS setting and contact Absolute for configuration and activation.</p> <p>By default, the Absolute option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Absolute option enabled.</p> <p> WARNING: The Permanently Disabled option can only be selected once. When Permanently Disabled is selected, Absolute Persistence cannot be reenabled. No further changes to the Enable/Disable states are allowed.</p> <p> NOTE: The Enable/Disable options are unavailable while the computer is in the activated state.</p> <p> NOTE: When the Absolute features are activated, the Absolute integration cannot be disabled from the BIOS Setup screen.</p>
UEFI Boot Path Security	<p>Enables or disables the computer to prompt the user to enter the Administrator password (if set) when booting to a UEFI boot path device from the F12 boot menu.</p> <p>By default, the Always Except Internal HDD option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Firmware Device Tamper Detection	<p>Allows you to control the firmware device tamper detection feature. This feature notifies the user when the firmware device is tampered. When enabled, a screen warning message is displayed on the computer and a tamper detection event is logged in the BIOS Events log. The computer fails to reboot until the event is cleared.</p> <p>By default, the Firmware Device Tamper Detection option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Firmware Device Tamper Detection option enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Clear Firmware Device Tamper Detection	<p>Allows you to clear the events that are logged when tampering of firmware device is detected.</p> <p>By default, the Clear Firmware Device Tamper Detection option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 59. System Setup options—Passwords menu

Passwords	
Administrator Password	<p>The Administrator Password prevents unauthorized access to the BIOS Setup options. Once the administrator password is set, the BIOS Setup options can only be modified after providing the correct password.</p> <p>The following rules and dependencies apply to the Administrator Password -</p> <ul style="list-style-type: none"> • The administrator password cannot be set if system and/or internal storage passwords are previously set. • The administrator password can be used in place of the system and/or internal storage passwords.

Table 59. System Setup options—Passwords menu (continued)

Passwords	<ul style="list-style-type: none"> • When set, the administrator password must be provided during a firmware update. • Clearing the administrator password also clears the system password (if set). <p>Dell Technologies recommends using an administrator password to prevent unauthorized changes to BIOS Setup options.</p>
System Password	<p>The System Password prevents the computer from booting to an operating system without entering the correct password.</p> <p>The following rules and dependencies apply when the System Password is used -</p> <ul style="list-style-type: none"> • The computer shuts down when idle for approximately 10 minutes at the system password prompt. • The computer shuts down after three incorrect attempts to enter the system password. • The computer shuts down when the Esc key is pressed at the System Password prompt. • The system password is not prompted when the computer resumes from standby mode. <p>Dell Technologies recommends using the system password in situations where it is likely that a computer may be lost or stolen.</p>
M.2 PCIe SSD-0 Password	<p>The hard drive password can be set to prevent unauthorized access of the data stored on the solid-state drive. The computer prompts for the hard drive password during boot in order to unlock the drive. A password-secured hard drive stays locked even when removed from the computer or placed into another computer. It prevents an attacker from accessing data on the drive without authorization.</p> <p>The following rules and dependencies apply when the M.2 PCIe SSD-0 Password option is used.</p> <ul style="list-style-type: none"> • The hard drive password option cannot be accessed when the hard drive is disabled in the BIOS Setup. • The computer shuts down when idle for approximately 10 minutes at the hard drive password prompt. • The computer shuts down after three incorrect attempts to enter the hard drive password and treats the hard drive as not available. • The hard drive does not accept password unlock attempts after five incorrect attempts to enter the hard drive password from the BIOS Setup. The hard drive password must be reset for the new password unlock attempts. • The computer treats the hard drive as not available when the Esc key is pressed at the hard drive password prompt. • The hard drive password is not prompted when the computer resumes from standby mode. When the hard drive is unlocked by the user before the computer goes into standby mode, it remains unlocked after the computer resumes from standby mode. • If the system and hard drive passwords are set to the same value, the hard drive unlocks after the correct system password is entered. <p>Dell Technologies recommends using a hard drive password to protect unauthorized data access.</p>
Password Configuration	<p>The Password configuration page includes several options for changing the requirements of BIOS passwords. You can modify the minimum and maximum length of the passwords as well as require passwords to contain certain character classes (upper case, lower case, digit, special character).</p> <p>When the Lower Case Letter option is enabled, the password requires at least one lower case letter.</p> <p>When the Upper Case Letter option is enabled, the password requires at least one upper case letter.</p>

Table 59. System Setup options—Passwords menu (continued)

Passwords	
	<p>When the Digit option is enabled, the password requires at least one numeric digit.</p> <p>When the Special Character option is enabled, the password requires at least one special character from the set: !"#\$%&'()*+,-./:;<=>?@[\\]^_`{ }~.</p> <p>When setting Minimum Characters for password length, Dell Technologies recommends setting the minimum password length to at least eight characters.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Password Bypass	<p>The Password Bypass option allows the computer to reboot from the operating system without entering the system or hard drive password. If the computer has already booted to the operating system, it is presumed that the user has already entered the correct system or hard drive password.</p> <p>NOTE: This option does not remove the requirement to enter the password after shutting down.</p> <p>By default, the Password Bypass option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Password Bypass option enabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Password Changes	
Allow Non-Admin Password Changes	<p>The Allow Non-Admin Password Changes option in BIOS Setup allows an end user to set or change the system or hard drive passwords without entering the administrator password. This gives an administrator control over the BIOS settings but enables an end user to provide their own password.</p> <p>By default, the Allow Non-Admin Password Changes option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Allow Non-Admin Password Changes option disabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Non-Admin Setup Changes	<p>The Non-Admin Setup Changes option allows an end user to configure the wireless devices without requiring the administrator password.</p> <p>By default, the Non-Admin Setup Changes option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Non-Admin Setup Changes option disabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable Admin Setup Lockout	<p>The Admin Setup Lockout option prevents an end user from even viewing the BIOS Setup configuration without first entering the administrator password (if set).</p> <p>By default, the Enable Admin Setup Lockout option is disabled.</p> <p>For additional security, Dell Technologies recommends keeping the Admin Setup Lockout option disabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable Master Password Lockout	<p>The Master Password Lockout option allows you to disable the Recovery Password feature. If the system, administrator, or hard drive password is forgotten, the computer becomes unusable.</p>

Table 59. System Setup options—Passwords menu (continued)

Passwords	
	<p>NOTE: When the owner password is set, the Master Password Lockout option is not available.</p> <p>NOTE: When an internal hard drive password is set, it must first be cleared before Master Password Lockout can be changed.</p> <p>By default, the Enable Master Password Lockout option is disabled.</p> <p>Dell Technologies does not recommend enabling the Master Password Lockout unless you have implemented your own password recovery system.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable Allow Non-Admin PSID Revert	<p>The Allow Non-Admin PSID Revert option allows a user to clear the hard drive password without entering the BIOS Admin Password. When an Admin Password is set, the ability to enter the PSID is protected by requiring authentication with the Admin Password. If this option is enabled, any user can clear the drive without entering the Admin Password.</p> <p>By default, the Enable Allow Non-Admin PSID Revert option is disabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 60. System Setup options—Update, Recovery menu

Update, Recovery	
UEFI Capsule Firmware Updates	
Enable UEFI Capsule Firmware Updates	<p>Enables or disables BIOS updates through UEFI capsule update packages.</p> <p>NOTE: Disabling this option blocks the BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS).</p> <p>By default, the Enable UEFI Capsule Firmware Updates option is enabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
BIOS Recovery from Hard Drive	<p>Enables or disables the user to recover from certain corrupted BIOS conditions from a recovery file on the user primary hard drive or an external USB drive.</p> <p>By default, the BIOS Recovery from Hard Drive option is enabled.</p> <p>NOTE: BIOS Recovery from Hard Drive is not available for self-encrypting drives (SED).</p> <p>NOTE: BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
BIOS Downgrade	
Allow BIOS Downgrade	<p>Allows downgrading of the system firmware to previous revisions.</p> <p>By default, the Allow BIOS Downgrade option is enabled.</p>
SupportAssist OS Recovery	<p>Enables or disables the boot flow for SupportAssist OS Recovery tool if certain system errors occur.</p> <p>By default, the SupportAssist OS Recovery option is enabled.</p>

Table 60. System Setup options—Update, Recovery menu (continued)


Update, Recovery	
BIOSConnect	<p>Enables or disables cloud service operating system recovery if the main operating system fails to boot with the number of failures equal to or greater than the value specified by the Auto OS Recovery Threshold setup option and local service operating system does not boot or is not installed.</p> <p>By default, the BIOSConnect option is enabled.</p>
Dell Auto OS Recovery Threshold	<p>Allows the control of the automatic boot flow for the SupportAssist System Resolution Console and the Dell OS Recovery Tool.</p> <p>By default, the Dell Auto OS Recovery Threshold value is set to 2.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 61. System Setup options—System Management menu







System Management	
Service Tag	Displays the Service Tag of the computer.
Asset Tag	<p>Creates a computer Asset Tag that an IT administrator can use to uniquely identify a particular computer.</p> <p> NOTE: Once set in the BIOS, the Asset Tag cannot be changed.</p>
AC Behavior	
Wake on AC	<p>Enables or disables the computer to turn on and go to boot when AC power is supplied to the computer.</p> <p>By default, the Wake on AC option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Wake on LAN	<p>Enables or disables the computer to turn on by a special LAN signal.</p> <p>By default, the Wake on LAN option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Auto On Time	<p>Enable to set the computer to turn on automatically every day or on a preselected date and time. This option can be configured only if the Auto On Time is set to Everyday, Weekdays, or Selected Days.</p> <p>By default, the Auto On Time option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Intel AMT capability	<p>Configure Intel Active Management Technology (AMT) options, which can be enabled, disabled, or restricted.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
First Power On Date	
Set Ownership Date	<p>This options allows to set the Ownership date.</p> <p>By default, the Set Ownership Date option is OFF.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Diagnostics	

Table 61. System Setup options—System Management menu (continued)

System Management	
OS agent requests	<p>Enable or disable the option for applications running in the operating system to run with preboot diagnostics on subsequent boots.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Power-On-Self-Test Automatic Recovery	<p>Enable or disable the automatic recovery of the computer from no power or no-POST failure by applying mitigation steps.</p> <p>By default, the Power-On-Self-Test Automatic Recovery option is enabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 62. System Setup options—Keyboard menu

Keyboard	
Fn Lock Options	<p>Enables or disables the Fn Lock option.</p> <p>By default, the Fn Lock option is enabled.</p>
Lock Mode	<p>By default, the Lock Mode Secondary option is enabled. With this option, the F1-F12 keys scan the code for their secondary functions.</p>
Device Configuration HotKey Access	<p>Allows you to control whether you can access device configuration screens through hotkeys during system startup.</p> <p>By default, the Device Configuration HotKey Access option is enabled.</p> <p>NOTE: This setting controls only the Intel RAID (CTRL+I), MEBX (CTRL+P), and LSI RAID (CTRL+C) Option ROMs. Other preboot Option ROMs, which support entry using a key sequence, are not affected by this setting.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 63. System Setup options—Pre-boot Behavior menu

Pre-boot Behavior	
Adapter Warnings	
Enable Dock Warning Messages	<p>Enables the warning messages during boot when the adapters with less power capacity are detected.</p> <p>By default, the Enable Dock Warning Messages option is enabled.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Warnings and Errors	<p>Enables or disables the action to be taken when a warning or error is encountered.</p> <p>By default, the Prompt on Warnings and Errors option is selected.</p> <p>NOTE: Errors deemed critical to the operation of the computer hardware stop the functioning of the computer.</p> <p>NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
USB-C Warnings	
Enable Dock Warning Messages	<p>Enables the warning messages during boot when the USB-C adapters with less power capacity are detected.</p> <p>By default, the Enable Dock Warning Messages option is enabled.</p>

Table 63. System Setup options—Pre-boot Behavior menu (continued)




Pre-boot Behavior	
	<p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Fastboot	<p>Configure the speed of the UEFI boot process.</p> <p>By default, the Thorough option is selected. Performs complete hardware and configuration initialization during boot.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Extend BIOS POST Time	<p>Sets the BIOS POST (Power-On Self-Test) load time.</p> <p>By default, the 0 seconds option is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
MAC Address Pass-Through	<p>Replaces the external NIC MAC address (in a supported dock or dongle) with the selected MAC address from the computer.</p> <p>By default, the System Unique MAC Address option is selected.</p>

Table 64. System Setup options—Virtualization menu




Virtualization Support	
Intel Virtualization Technology	
Enable Intel Virtualization Technology (VT)	<p>When enabled, the computer can run a Virtual Machine Monitor (VMM).</p> <p>By default, the Enable Intel Virtualization Technology (VT) option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
VT for Direct I/O	
Enable Intel VT for Direct I/O	<p>When enabled, the computer can perform Virtualization Technology for Direct I/O (VT-d). VT-d is an Intel method that provides virtualization for memory map I/O.</p> <p>By default, the Enable Intel VT for Direct I/O option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Intel Trusted Execution Technology (TXT)	<p>Specifies whether a measured Virtual Machine Monitor (MVMM) can use the additional hardware capabilities provided by Intel Trusted Execution Technology. The following must be enabled in order to enable Intel TXT -</p> <ul style="list-style-type: none"> • Trusted Platform Module (TPM) • Intel Hyper-Threading • All CPU cores (Multi-Core Support) • Intel Virtualization Technology • Intel VT for Direct I/O <p>By default, the Intel Trusted Execution Technology (TXT) option is disabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
DMA Protection	
Enable Pre-Boot DMA Support	<p>Allows you to control the Pre-Boot DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system.</p>

Table 64. System Setup options—Virtualization menu (continued)







Virtualization Support	
	<p> NOTE: This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the Enable Pre-Boot DMA Support option is enabled.</p> <p>For additional security, Dell Technologies recommends keeping the Enable Pre-Boot DMA Support option enabled.</p> <p> NOTE: This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Enable OS Kernel DMA Support	<p>Allows you to control the Kernel DMA protection for both internal and external ports. This option does not directly enable DMA protection in the operating system. For operating systems that support DMA protection, this setting indicates to the operating system that the BIOS supports the feature.</p> <p> NOTE: This option is not available when the virtualization setting for IOMMU is disabled (VT-d/AMD Vi).</p> <p>By default, the Enable OS Kernel DMA Support option is enabled.</p> <p> NOTE: This option is provided only for compatibility purposes, since some older hardware is not DMA capable.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>

Table 65. System Setup options—Performance menu




Performance	
Multi-Core Support	
Multiple Atom Cores	<p>Allows to change the number of Atom cores available to the operating system. The default value is set to the maximum number of cores.</p> <p>By default, the All Cores option is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Intel SpeedStep	
Enable Intel SpeedStep Technology	<p>Enables the computer to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production.</p> <p>By default, the Enable Intel SpeedStep Technology option is enabled.</p> <p> NOTE: To view this option, enable Service options as described in View Service options.</p>
C-State Control	
Enable C-State Control	<p>Enables or disables the ability of the CPU to enter and exit low-power state. When disabled, it disables all C-states. When enabled, it enables all C-states that the chipset or platform allows.</p> <p>By default, the Enable C-State Control option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Intel Turbo Boost Technology	

Table 65. System Setup options—Performance menu (continued)






Performance	
Enable Intel Turbo Boost Technology	<p>Enables or disables the Intel TurboBoost mode of the processor. When enabled, the Intel TurboBoost driver increases the performance of the CPU or graphics processor.</p> <p>By default, the Enable Intel Turbo Boost Technology option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Intel Hyper-Threading Technology	
Enable Intel Hyper-Threading Technology	<p>Enables or disables the Intel Hyper-Threading mode of the processor. When enabled, the Intel Hyper-Threading increases the efficiency of the processor resources when multiple threads run on each core.</p> <p>By default, the Intel Hyper-Threading Technology option is enabled.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>


Table 66. System Setup options—System Logs menu

System Logs	
BIOS Event Log	
Clear BIOS Event Log	<p>Select the option to keep or clear BIOS events logs.</p> <p>By default, the Keep Log option is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Thermal Event Log	
Clear Thermal Event Log	<p>Select the option to keep or clear thermal events logs.</p> <p>By default, the Keep Log option is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>
Power Event Log	
Clear Power Event Log	<p>Select the option to keep or clear power events logs.</p> <p>By default, the Keep Log option is selected.</p> <p> NOTE: To view this option, enable Advanced Setup mode as described in View Advanced Setup options.</p>


Updating the BIOS

Updating the BIOS in Windows

About this task


 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [Dell Support Site](#).

Steps

1. Go to [Dell Support Site](#).
2. Click **Product support**. In the **Search support** box, enter the Service Tag of your computer, and then click **Search**.
 **NOTE:** If you do not have the Service Tag, use the SupportAssist to automatically identify your computer. You can also use the product ID or manually browse for your computer model.
3. Click **Drivers & Downloads**. Expand **Find drivers**.
4. Select the operating system installed on your computer.
5. In the **Category** drop-down list, select **BIOS**.
6. Select the latest version of BIOS, and click **Download** to download the BIOS file for your computer.
7. After the download is complete, browse the folder where you saved the BIOS update file.
8. Double-click the BIOS update file icon and follow the on-screen instructions.
For more information, search in the Knowledge Base Resource at [Dell Support Site](#).

Updating the BIOS using the USB drive in Windows

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [Dell Support Site](#).


Steps

1. Follow the procedure from step 1 to step 6 in [Updating the BIOS in Windows](#) to download the latest BIOS setup program file.
2. Create a bootable USB drive. For more information, search in the Knowledge Base Resource at [Dell Support Site](#).
3. Copy the BIOS setup program file to the bootable USB drive.
4. Connect the bootable USB drive to the computer that needs the BIOS update.
5. Restart the computer and press **F12**.
6. Select the USB drive from the **One Time Boot Menu**.
7. Type the BIOS setup program filename and press **Enter**.
The **BIOS Update Utility** appears.
8. Follow the on-screen instructions to complete the BIOS update.

Updating the BIOS from the One-Time boot menu

Update your computer BIOS using the BIOS XXXX.exe file that is copied to a FAT32 USB drive and booting from the One-Time boot menu.

About this task

 **CAUTION:** If BitLocker is not suspended before updating the BIOS, the next time you reboot the computer it will not recognize the BitLocker key. You will then be prompted to enter the recovery key to progress, and the computer will ask for this on each reboot. If the recovery key is not known this can result in data loss or an unnecessary operating system reinstall. For more information about this subject, search in the Knowledge Base Resource at [Dell Support Site](#).

BIOS Update

You can run the BIOS flash update file from Windows using a bootable USB drive or you can also update the BIOS from the One-Time boot menu on the computer.

You can confirm by booting your computer to the **One Time Boot** Menu to see if BIOS FLASH UPDATE is listed as a boot option. If the option is listed, then the BIOS can be updated using this method..

Updating from the One-Time boot menu

To update your BIOS from the One-Time boot menu, you need the following:

- USB drive formatted to the FAT32 file system (the drive does not have to be bootable)
- BIOS executable file that you downloaded from the Dell Support website and copied to the root of the USB drive
- AC power adapter must be connected to the computer
- Functional computer battery to flash the BIOS

Perform the following steps to perform the BIOS flash update process from the One-Time boot menu:

 **CAUTION:** Do not turn off the computer during the BIOS flash update process. The computer may not boot if you turn off your computer.

Steps

1. Turn off your computer, insert the USB drive where you copied the BIOS flash update file into a USB port of the computer.
2. Turn on the computer and press to access the **One Time Boot** Menu. Select BIOS Update using the mouse or arrow keys then press Enter.
The flash BIOS menu is displayed.
3. Click **Flash from file**.
4. Select the external USB device.
5. Select the file and double-click the flash target file, and then click **Submit**.
6. Click **Update BIOS**. The computer restarts to flash the BIOS.
7. The computer will restart after the BIOS flash update is completed.

System and setup password


Table 67. System and setup password

Password type	Description
System password	Password that you must enter to log in to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data that is stored on your computer, when left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a System Setup password

Prerequisites

You can assign a new System or Admin Password only when the status is in **Not Set**.

About this task

To enter BIOS System Setup, press F2 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press Enter.
The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field.
Use the following guidelines to assign the system password:

- A password can have up to 32 characters.
 - At least one special character: "(! " # \$ % & ' * + , - . / : ; < = > ? @ [\] ^ _ ` { | })"
 - Numbers 0 to 9.
 - Upper case letters from A to Z.
 - Lower case letters from a to z.
3. **Confirm new password** type the system password that you entered earlier in the field and click **OK**.
 4. Press Esc and save the changes as prompted by the message.
 5. Press Y to save the changes.
The computer restarts.

Deleting or changing an existing system password or setup password


Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing system password and/or setup password. You cannot delete or change an existing system password or setup password if the **Password Status** is Locked.

About this task

To enter the System Setup, press F2 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press Enter.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that the **Password Status** is Unlocked.
3. Select **System Password**. Update or delete the existing system password, and press Enter or Tab.
4. Select **Setup Password**. Update or delete the existing setup password, and press Enter or Tab.
 **NOTE:** If you change the system password and/or setup password, reenter the new password when prompted. If you delete the system password and/or setup password, confirm the deletion when prompted.
5. Press Esc. A message prompts you to save the changes.
6. Press Y to save the changes and exit from **System Setup**.
The computer restarts.

Clearing CMOS settings

About this task

 **CAUTION:** Clearing CMOS settings resets the BIOS settings on your computer.


Steps

1. Remove the [base cover](#).
2. Disconnect the battery cable from the system board.
3. Remove the [coin-cell battery](#).
4. Wait for one minute.
5. Replace the [coin-cell battery](#).
6. Connect the battery cable to the system board.
7. Replace the [base cover](#).

Clearing BIOS (System Setup) and System passwords

About this task

To clear the computer or BIOS passwords, contact Dell technical support as described at [Contact Support](#). For more information, go to [Dell Support Site](#).

 **NOTE:** For information about how to reset Windows or application passwords, see the documentation accompanying Windows or your application.

Troubleshooting

Handling swollen rechargeable Li-ion batteries

Like most laptops, Dell laptops use Lithium-ion batteries. One type of Lithium-ion battery is the rechargeable Li-ion battery. Rechargeable Li-ion batteries have increased in popularity in recent years and have become a standard in the electronics industry due to customer preferences for a slim form factor (especially with newer ultra-thin laptops) and long battery life. Inherent to rechargeable Li-ion battery technology is the potential for swelling of the battery cells.

A swollen battery may impact the performance of the laptop. To prevent possible further damage to the device enclosure or internal components leading to malfunction, discontinue the use of the laptop and discharge it by disconnecting the AC adapter and letting the battery drain.

Swollen batteries should not be used and must be replaced and disposed of properly. We recommend contacting Dell Support for options to replace a swollen battery under the terms of the applicable warranty or service contract, including options for replacement by a Dell authorized service technician.

The guidelines for handling and replacing rechargeable Li-ion batteries are as follows:

- Exercise caution when handling rechargeable Li-ion batteries.
- Discharge the battery before removing it from the computer. To discharge the battery, unplug the AC adapter from the computer and operate the computer only on battery power. The battery is fully discharged when the computer no longer turns on when the power button is pressed.
- Do not crush, drop, mutilate, or penetrate the battery with foreign objects.
- Do not expose the battery to high temperatures, or disassemble battery packs and cells.
- Do not apply pressure to the surface of the battery.
- Do not bend the battery.
- Do not use tools of any type to pry on or against the battery.
- If a battery gets stuck in a device as a result of swelling, do not try to free it as puncturing, bending, or crushing a battery can be dangerous.
- Do not attempt to reassemble a damaged or swollen battery into a laptop.
- Swollen batteries that are covered under warranty should be returned to Dell in an approved shipping container (provided by Dell)—this is to comply with transportation regulations. Swollen batteries that are not covered under warranty should be disposed of at an approved recycling center. Contact Dell Support at [Dell Support Site](#) for assistance and further instructions.
- Using a non-Dell or incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell that is designed to work with your Dell computer. Do not use a battery from other computers with your computer. Always purchase genuine batteries from [Dell Site](#) or otherwise directly from Dell.

Rechargeable Li-ion batteries can swell for various reasons such as age, number of charge cycles, or exposure to high heat. For more information about how to improve the performance and lifespan of the laptop battery and to minimize the possibility of occurrence of the issue, search Dell laptop battery in the Knowledge Base Resource at [Dell Support Site](#).

Locating the Service Tag or Express Service Code of your Dell computer

Your Dell computer is uniquely identified with a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, we recommend entering the Service Tag or Express Service Code at [Dell Support Site](#).


For more information about how to find the Service Tag for your computer, see [Instructions on how to find your Service Tag or Serial Number](#).

Dell SupportAssist Pre-boot System Performance Check diagnostics

About this task

SupportAssist diagnostics (also known as system diagnostics) performs a complete check of your hardware. The Dell SupportAssist Pre-boot System Performance Check diagnostics is embedded with the BIOS and launched by the BIOS internally. The embedded system diagnostics provides options for particular devices or device groups allowing you to:

- Run tests automatically or in an interactive mode.
- Repeat the tests.
- Display or save test results.
- Run thorough tests to introduce additional test options to provide extra information about one or more failed devices.
- View status messages that inform you the tests are completed successfully.
- View error messages that inform you of problems encountered during testing.

 **NOTE:** Some tests for specific devices require user interaction. Always ensure that you are present at the computer when the diagnostic tests are performed.

For more information, see the knowledge base article [000180971](#).

Running the SupportAssist Pre-Boot System Performance Check


Steps

1. Turn on your computer.
2. As the computer boots, press the F12 key as the Dell logo appears.
3. On the boot menu screen, select the **Diagnostics** option.
4. Click the arrow at the bottom left corner.
Diagnostics page is displayed.
5. Click the arrow in the lower-right corner to go to the page listing.
The items that are detected are listed.
6. To run a diagnostic test on a specific device, press Esc and click **Yes** to stop the diagnostic test.
7. Select the device from the left pane and click **Run Tests**.
8. If there are any issues, error codes are displayed.
Note the error code and validation number and contact Dell.


Built-in self-test (BIST)

M-BIST

M-BIST (Built In Self-Test) is the system board built-in self-test diagnostics tool that improves the diagnostics accuracy of system board Embedded Controller (EC) failures.

 **NOTE:** M-BIST can be manually initiated before Power On Self-Test (POST).

How to run M-BIST

 **NOTE:** Before initiating M-BIST, ensure that the computer is in a power-off state.

1. Press and hold both the **M** key on the keyboard and the power button to initiate M-BIST.
2. The battery indicator LED may exhibit two states:
 - a. OFF: No fault was detected with the system board.
 - b. AMBER: Amber indicates a problem with the system board.
3. If there is a failure with the system board, the battery status LED flashes one of the following error codes for 30 seconds:


Table 68. LED error codes

Blinking Pattern		Possible Problem
Amber	Green	
2	1	CPU Failure
2	8	LCD Power Rail Failure
1	1	TPM Detection Failure
2	4	Memory/RAM failure

- If there is no failure with the system board, the LCD cycles through the solid color screens that are described in the LCD-BIST section for 30 seconds and then turn off.

LCD Power rail test (L-BIST)

L-BIST is an enhancement to the single LED error code diagnostics and is automatically initiated during POST. L-BIST will check the LCD power rail. If there is no power being supplied to the LCD (that is if the L-BIST circuit fails), the battery status LED flashes either an error code [2,8] or an error code [2,7].

 **NOTE:** If L-BIST fails, LCD-BIST cannot function as no power will be supplied to the LCD.

How to invoke the L-BIST

- Turn on your computer.
- If the computer does not start up normally, look at the battery status LED:
 - If the battery status LED flashes an error code [2,7], the display cable may not be connected properly.
 - If the battery status LED flashes an error code [2,8], there is a failure on the LCD power rail of the system board, hence there is no power that is supplied to the LCD.
- For cases, when a [2,7] error code is shown, check to see if the display cable is properly connected.
- For cases when a [2,8] error code is shown, replace the system board.


LCD Built-in Self-Test (BIST)

Dell laptops have a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with the LCD (screen) of the Dell laptop or with the video card (GPU) and computer settings.

When you notice screen abnormalities like flickering, distortion, clarity issues, fuzzy or blurry image, horizontal or vertical lines, color fade and so on, it is always a good practice to isolate the LCD (screen) by running the Built-In Self-Test (BIST).

How to invoke the LCD BIST

- Turn off your computer.
- Disconnect any peripherals that are connected to the computer. Connect only the AC adapter (charger) to the computer.
- Ensure that the LCD (screen) is clean (no dust particles on the surface of the screen).
- Press and hold the **D** key and press the power button to enter LCD built-in self-test (BIST) mode. Continue to hold the **D** key until the computer boots up.
- The screen displays solid colors and change colors on the entire screen to white, black, red, green, and blue twice.
- Then it displays the colors white, black, and red.
- Carefully inspect the screen for abnormalities (any lines, fuzzy color, or distortion on the screen).
- At the end of the last solid color (red), the computer shuts down.

 **NOTE:** Dell SupportAssist Preboot diagnostics upon launch initiates an LCD BIST first, expecting a user intervention to confirm functionality of the LCD.

System-diagnostic lights

This section lists the system-diagnostic lights of your Dell Pro Rugged 14 RB14250.

The Service LED is used for system diagnostics, and it emits amber or green light. A Dell service representative uses the LED light patterns to troubleshoot your device.

The following table shows different Service LED light patterns and associated problems.

Table 69. System-diagnostic lights

Blinking pattern		Problem description
Amber	Green	
1	1	TPM detection failure
1	2	Unrecoverable SPI flash failure
1	3	Short in hinge cable tripped OCP1
1	4	Short in hinge cable tripped OCP2
1	5	EC unable to program i-Fuse
1	6	EC internal failure
2	1	Processor failure
2	2	System board: BIOS or ROM (Read-Only Memory) failure
2	3	No memory or RAM (Random-Access Memory) detected
2	4	Memory or RAM (Random-Access Memory) failure
2	5	Invalid memory module installed
2	6	System-board or chipset error
2	7	Display failure - SBIOS message
2	8	Display failure - EC detection of power rail failure
3	1	CMOS battery failure
3	2	PCI of video card/chip failure
3	3	BIOS recovery image not found
3	4	BIOS recovery image found but invalid
3	5	Power-rail failure
3	6	System BIOS Flash corruption.
3	7	Management Engine (ME) error

NOTE: Blinking 3-3-3 LEDs on Lock LED (Caps-Lock or Num Lock), Power button LED (without Fingerprint reader), and Diagnostic LED indicates failure to provide input during LCD panel test on Dell SupportAssist Preboot System Performance Check diagnostics.

Recovering the operating system

When your computer is unable to boot to the operating system even after repeated attempts, it automatically starts Dell SupportAssist OS Recovery.

Dell SupportAssist OS Recovery is a stand-alone tool that is preinstalled in Dell computers running Windows operating system. It consists of tools to diagnose and troubleshoot issues that may occur before your computer boots to the operating system. It enables you to diagnose hardware issues, repair your computer, back up your files, or restore your computer to its factory state.

You can also download it from the Dell Support website to troubleshoot and fix your computer when it fails to boot into the primary operating system due to software or hardware failures.

For more information about the Dell SupportAssist OS Recovery, see *Dell SupportAssist OS Recovery User's Guide* at [Serviceability Tools at the Dell Support Site](#). Click **SupportAssist** and then, click **SupportAssist OS Recovery**.

Real-Time Clock (RTC Reset)

The Real-Time Clock (RTC) reset function enables you or the service technician to recover Dell computers from No POST/No Power/No Boot situations. The legacy jumper enabled RTC reset has been retired on these models.

Start the RTC reset with the computer powered off and connected to AC power. Press and hold the power button for twenty seconds . The computer RTC Reset occurs after you release the power button.

Backup media and recovery options


It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows. Dell provides multiple options for recovering the Windows operating system on your Dell computer. For more information, see [Dell Windows Backup Media and Recovery Options](#).

Wi-Fi power cycle

About this task

If your computer is unable to access the Internet due to Wi-Fi connectivity issues, reset your Wi-Fi device by performing the following steps:

Steps

1. Turn off the computer.
2. Turn off the modem.
 **NOTE:** Some Internet service providers (ISPs) provide a modem and router combo device.
3. Turn off the wireless router.
4. Wait for 30 seconds.
5. Turn on the wireless router.
6. Turn on the modem.
7. Turn on the computer.

Drain residual flea power (perform hard reset)

About this task

Flea power is the residual static electricity that remains in the computer even after it has been powered off and the battery is removed.

For your safety, and to protect the sensitive electronic components in your computer, you must drain residual flea power before removing or replacing any components in your computer.

Draining residual flea power, also known as a performing a "hard reset," is also a common troubleshooting step if your computer does not turn on or boot into the operating system.

Perform the following steps to drain the residual flea power:

Steps

1. Turn off the computer.
2. Disconnect the power adapter from the computer.
3. Remove the base cover.
4. Remove the battery.



CAUTION: The battery is a Field Replaceable Unit (FRU) and the removal and installation procedures are intended for authorized service technicians only.

5. Press and hold the power button for 20 seconds to drain the flea power.
6. Install the battery.
7. Install the base cover.
8. Connect the power adapter to the computer.
9. Turn on the computer.




NOTE: For more information about performing a hard reset, search in the Knowledge Base Resource at the [Dell Support Site](#).

Getting help and contacting Dell

Self-help resources


You can get information and help on Dell products and services using these self-help resources:


Table 70. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	Dell Site
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	Windows Support Site
Access top solutions, diagnostics, drivers and downloads, and learn more about your computer through videos, manuals, and documents.	<p>Your Dell computer is uniquely identified by a Service Tag or Express Service Code. To view relevant support resources for your Dell computer, enter the Service Tag or Express Service Code at Dell Support Site.</p> <p>For more information about how to find the Service Tag for your computer, see Instructions on how to find your Service Tag or Serial Number.</p>
Dell knowledge base articles	<ol style="list-style-type: none"> 1. Go to Dell Support Site. 2. On the menu bar at the top of the Support page, select Support > Support Library. 3. In the Search field on the Support Library page, type the keyword, topic, or model number, and then click or tap the search icon to view the related articles.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see [Contact Support at Dell Support Site](#).

 **NOTE:** Availability of the services may vary depending on the country or region, and product.

 **NOTE:** If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.