

ALTUSCN™

Enterprise Solutions by ATEN

KN1000 KVM Over the NET™ Quick Start Guide

© Copyright 2011 ATEN International Co., Ltd. www.aten.com
 Altusen and the Altusen logo are trademarks of ATEN International Co., Ltd.
 All rights reserved. All other trademarks are the property of their respective owners.
 This product is RoHS compliant PAPE-1215-800G Printing Date: 11/2011

Patent No.
 TW 1273415 US 7142721 US 7340556 JP 4651633
 TW 199673 US 7350091 US 6957287 CN ZL 02129894.7
 TW 203183 US 7472217 JP 4558319 CN ZL 02824593.8

Online Registration
 International:
 • http://support.aten.com
 North America:
 • http://www.aten-usa.com/product_registration
Technical Phone Support
 International:
 • 886-2-8692-6959
 China:
 • 86-10-5255-0110
 Japan:
 • 81-3-5615-5811
 Korea:
 • 82-2-467-6789
 North America:
 • 1-888-999-ATEN Ext: 4988
 United Kingdom:
 • 44-8-4481-58923



All information, documentation, and specifications contained in this media are subject to change without prior notification by the manufacturer. Please visit our website to find the most up to date version.

1 Package Contents

The KN1000 package consists of:


- | | |
|-------------------------------|---------------------|
| 1 KN1000 | 1 Rack Mount Kit |
| 2 Custom KVM Cable Sets | 1 Software CD |
| 1 Custom Console Cable Set | 1 User Instructions |
| 1 USB 2.0 Virtual Media Cable | |
| 1 Power Adapter | |
| 1 Grounding Wire | |
| 1 Outlet Power Cord | |

2 Hardware Review (Front View)



- | | |
|------------------------------------|---------------------|
| 1. LAN Port | 4. Link LED |
| 2. Firmware Upgrade / Reset Switch | 5. Power LED |
| 3. 10/100Mbps LED | 6. Power Outlet LED |

3 Hardware Review (Rear View)

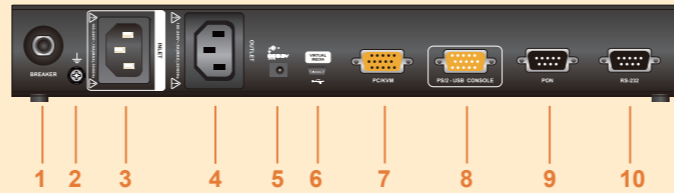

- | | |
|-----------------------|-----------------------|
| 1. Circuit Breaker | 6. Virtual Media Port |
| 2. Grounding Terminal | 7. PC/KVM Port |
| 3. Power Inlet | 8. Console Port |
| 4. Power Outlet | 9. PON Port |
| 5. Power Jack | 10. RS-232 Port |

4 Requirements

Remote User Computers

- For best results we recommend that the computers used to access the switch have at least a P III 1 GHz processor, with their screen resolution set to 1024 x 768.
- Browsers must support 128 bit SSL encryption.
- For best results, a network transfer speed of at least 128 kbps is recommended.
- For the Windows Client AP, at least 25 MB of memory must be available after installation.
- For the Java Client AP, the latest version of Sun's Java Runtime Environment (JRE) must be installed, and at least 55 MB of memory must be available after installation.
- For the browser-based WinClient Viewer, at least 60 MB of memory must be available after installation.
- For the browser-based Java Applet Viewer the latest version of Sun's Java Runtime Environment (JRE) must be installed, and at least 130 MB of memory must be available after installation.
- For the Log Server, you must have the Microsoft Jet OLEDB 4.0 or higher driver installed.

Servers

The following equipment must be installed on these servers:

- A VGA, SVGA or multisync port
- For USB KVM Cable Connections: a Type A USB port and USB host controller
- For PS/2 KVM Cable Connections: 6-pin Mini-DIN keyboard and mouse ports

Cables

- Two custom KVM cable sets (1 USB; 1 PS/2) to link the KN1000 to a server or KVM switch are provided with this package.
- One custom Console cable set to link the KN1000 to a local console is provided with this package.
- **Note:** This cable set has been designed to operate with either PS/2 or USB consoles.
- A USB 2.0 cable for use with the Virtual Media function is provided with this package.
- Cat 5e or higher Ethernet cable (not provided with this package), should be used to connect the KN1000 to the LAN, WAN, or Internet.
- One power cables to connect the KN1000 to the server for power management functionality is provided with this package.

5 Hardware Installation


Rack Mounting

For convenience and flexibility, the KN1000 can be mounted on a system rack.

To rack mount the unit do the following:


1. Remove the two original screws from the bottom of the unit (near the rear of the unit).
2. Using the screws provided with the rack mount kit, screw the mounting bracket into the KN1000 – as shown in the diagram.

Note: The illustrations show the mounting bracket attached to the bottom of the unit; it can also be attached to the top.

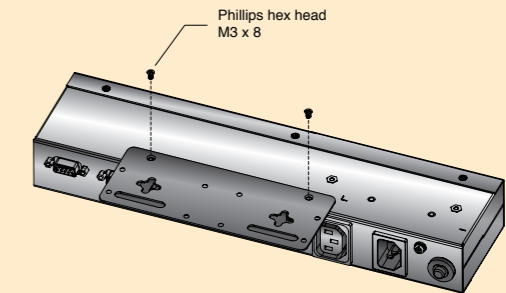

3. Screw the bracket into any convenient location on the rack.


Note: Rack screws are not provided. Use screws that are appropriate for your rack.

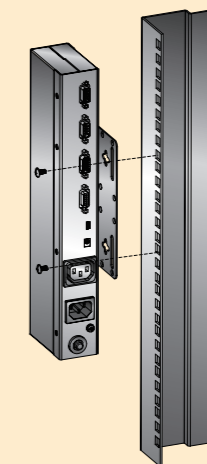

DIN Rail Mounting

To mount the KN1000 on a DIN rail:

1. Screw the mounting bracket to the back of the KN1000 as described in steps 1 and 2 of the wall mounting procedure.
2. Use the larger screws supplied with the Rack Mount Kit to screw the DIN rail brackets to the mounting bracket – as shown in the diagram.
3. Hang the unit on the DIN rail.

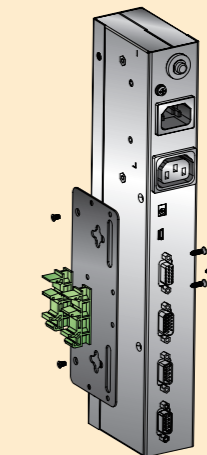

6

Installation


To install the KN1000, refer to the installation diagrams (the numbers correspond to the numbers of the steps), and do the following:

1. Ground the unit using the grounding wire provided with the KN1000 package.
2. Use the Console cable provided with this package to connect the KN1000's Console port, to the local console keyboard, monitor and mouse.

Note: 1. The Console cable comes with connectors for both PS/2 and USB mice and keyboards – use the ones appropriate for your installation.
2. You can use any combination of keyboard and mouse connections. For example, you can use a PS/2 keyboard with a USB mouse.
3. Use the KVM cable provided with this package to connect the KN1000's PC/KVM port, to the keyboard, video and mouse ports of the server or KVM switch that you are installing
4. (Optional) If you want to use the virtual media function, use the USB 2.0 Virtual Media Cable provided with this package to connect a USB port on the server to the KN1000's Virtual Media port.
5. (Optional) If you want to connect a PON device for remote power management, plug its cable into the PON port.
6. (Optional) If you want to connect a serial console device or modem, plug its cable into the RS-232 port.
7. Plug the LAN or WAN cable into the KN1000's LAN port.
8. Use the outlet power cord provided with the KN1000 package to connect the KN1000's Power Outlet to the attached server for power management.
9. Use the power cord from the server to connect the KN1000's Power Inlet to an AC power source.
10. Plug the power adapter cable into the KN1000's power jack, then plug the power adapter into an AC power source.

This completes the hardware installation, and you are ready to start up.

Note: When starting up, be sure to first power on the KN1000, then power on the server or KVM switch.

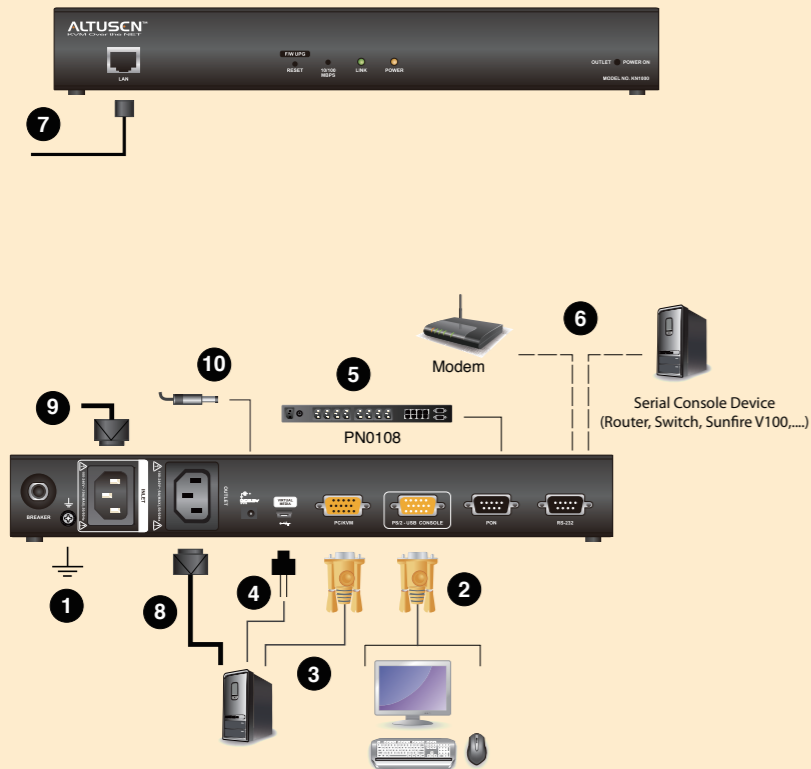

7-1

Operation


The KN1000 can be accessed either from an internet type browser, via Windows and Java application (AP) program, or by PPP modem dial-in.

Logging In


To operate the KN1000 from an Internet browser, begin by logging in:

1. Open your browser and specify the IP address of the KN1000 you want to access in the browser's URL location bar.

Note: For security purposes, a login string may have been set by the administrator. If so, you must include a forward slash and the login string along with the IP address when you log in. For example: 192.168.0.100/KN1000 If you don't know the IP address and login string, ask your Administrator. The default IP address is 192.168.0.60
2. A Security Alert dialog box appears. Accept the certificate – it can be trusted. If a second certificate appears, accept it as well.

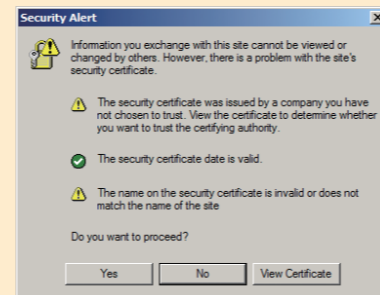


The KN1000 login page appears:

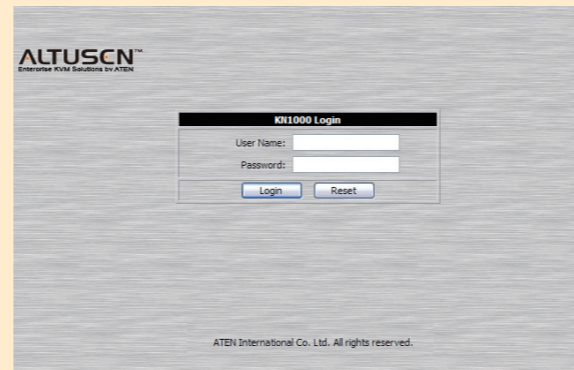

3. Provide a valid Username and Password (set by the KN1000 administrator), then click Login to continue.

Note: 1. If you are the administrator, and are logging in for the first time, use the default Username: administrator; and the default Password: password. For security purposes, we strongly recommend you remove these and give yourself a unique Username and Password.
2. If you supplied an invalid login, the authentication routine will return this message: Invalid Username or Password. Please try again. If you see this message, log in again being careful with the Username and Password.

After you have successfully logged in, the KN1000 Main Screen appears

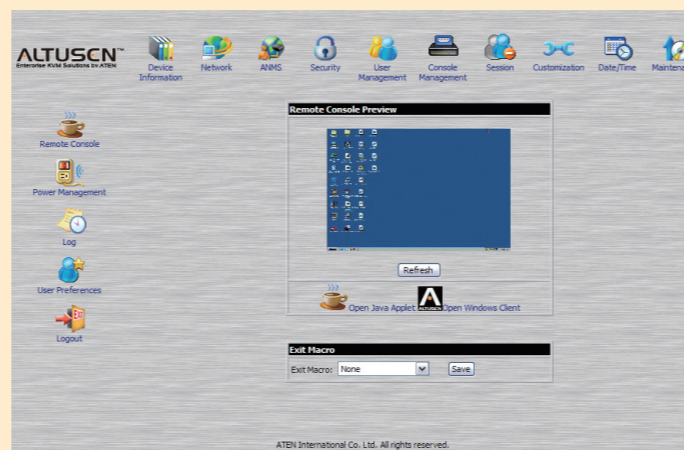

7-2

Operation

Mouse Setup

If you use a PS/2 custom KVM cable to connect to the server, perform the following mouse setting procedures.

Windows Systems:

Note: You must use the generic mouse driver supplied with Windows.

- XP / Server 2003 -- middle position; Enhance pointer precision: off
- 2000 / ME -- Mouse motion: middle position; Acceleration: off
- NT / 98 / 95 -- Mouse speed: slowest

Sun / Linux Systems:

Open a terminal session and issue the following command:

- Sun: xset m 1
- Linux: xset m 0 or xset m 1 (if one doesn't work try the other.)

8

Specifications

	Function	KN1000
Connectors	Console	1 x SPHD-18 Male (Yellow)
	KVM (Computer)	1 x SPHD-17 Female (Yellow)
	PON ¹	1 x DB-9 Male (Black)
	RS-232	1 x DB-9 Male (Black)
	LAN	1 x RJ-45 Female
	Power Inlet	1 x IEC320 C14
	Power Outlet	1 x IEC320 C13
	Power	1 x DC Jack
	Virtual Media	1 x USB Mini-B Female (Black)
Switches	Reset	1 x Semi-recessed pushbutton
LEDs	Power	1 (Orange)
	Power Outlet	1 (Orange)
	Link	1 (Green)
	10/100 Mbps	1 (Orange/Green)
Emulation	Keyboard/Mouse	USB; PS/2
Video		1600 x 1200 @ 60 Hz; DDC2B
I/P Rating		100-240 VAC; 50/60 Hz, 10A
Load Capacity		120V/1200W; 230V/2300W
O/P Rating		100-240 VAC; 50/60 Hz; 9A
DC Input Rating		DC5.3V;2.4A
Power Consumption		DC5.3V; 6.3W
Environment	Operating Temp.	0-40°C
	Storage Temp.	-20-60°C
	Humidity	0-80% RH Non-condensing
Physical Properties	Housing	Metal
	Weight	0.86 kg
	Dimensions (L x W x H)	30.85 x 8.15 x 4.20 cm

¹ Power Over the NET™