



msi™

H55M-E32/ H55M-E23/ H55M-E21 series

MS-7636 (v3.x) Mainboard

Copyright Notice

The material in this document is the intellectual property of **MICRO-STAR INTERNATIONAL**. We take every care in the preparation of this document, but no guarantee is given as to the correctness of its contents. Our products are under continual improvement and we reserve the right to make changes without notice.

Trademarks

All trademarks are the properties of their respective owners.

- MSI® is registered trademark of Micro-Star Int'l Co.,Ltd.
- NVIDIA® is registered trademark of NVIDIA Corporation.
- ATI® is registered trademark of ATI Technologies, Inc.
- AMD® is registered trademarks of AMD Corporation.
- Intel® is registered trademarks of Intel Corporation.
- Windows® is registered trademarks of Microsoft Corporation.
- AMI® is registered trademark of American Megatrends Inc.
- Award® is a registered trademark of Phoenix Technologies Ltd.
- Sound Blaster® is registered trademark of Creative Technology Ltd.
- Realtek® is registered trademark of Realtek Semiconductor Corporation.
- JMicron® is registered trademark of JMicron Technology Corporation.
- Netware® is a registered trademark of Novell, Inc.
- Lucid® is trademarks of LucidLogix Technologies, Ltd.

Revision History

Revision	Revision History	Date
V3.0	First release for PCB 3.X	August 2010

Technical Support

If a problem arises with your system and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please try the following help resources for further guidance.

- Visit the MSI website for FAQ, technical guide, BIOS updates, driver updates, and other information: <http://www.msi.com/index.php?func=service>
- Contact our technical staff at: <http://ocss.msi.com>

Safety Instructions

- Always read the safety instructions carefully.
- Keep this User's Manual for future reference.
- Keep this equipment away from humidity.
- Lay this equipment on a reliable flat surface before setting it up.
- The openings on the enclosure are for air convection hence protects the equipment from overheating. DO NOT COVER THE OPENINGS.
- Make sure the voltage of the power source is at 110/220V before connecting the equipment to the power inlet.
- Place the power cord such a way that people can not step on it. Do not place anything over the power cord.
- Always Unplug the Power Cord before inserting any add-on card or module.
- All cautions and warnings on the equipment should be noted.
- Never pour any liquid into the opening that can cause damage or cause electrical shock.
- If any of the following situations arises, get the equipment checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the equipment.
 - The equipment has been exposed to moisture.
 - The equipment does not work well or you can not get it work according to User's Manual.
 - The equipment has been dropped and damaged.
 - The equipment has obvious sign of breakage.

DO NOT LEAVE THIS EQUIPMENT IN AN ENVIRONMENT ABOVE 60°C (140°F),
IT MAY DAMAGE THE EQUIPMENT.

CAUTION: There is a risk of explosion, if battery is incorrectly replaced.

Replace only with the same or equivalent type recommended by the manufacturer.

警告使用者:

這是甲類資訊產品，在居住的環境中使用時，可能會造成無線電干擾，在這種情況下，使用者會被要求採取某些適當的對策。



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling special disposal.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and A.C. power cord, if any, must be used in order to comply with the emission limits.

VOIR LA NOTICE D'INSTALLATION AVANT DE RACCORDER AU RESEAU.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

WEEE (Waste Electrical and Electronic Equipment) Statement

ENGLISH

To protect the global environment and as an environmentalist, MSI must remind you that...

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2002/96/EC, which takes effect on August 13, 2005, products of "electrical and electronic equipment" cannot be discarded as municipal wastes anymore, and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life. MSI will comply with the product take back requirements at the end of life of MSI-branded products that are sold into the EU. You can return these products to local collection points.



DEUTSCH

Hinweis von MSI zur Erhaltung und Schutz unserer Umwelt

Gemäß der Richtlinie 2002/96/EG über Elektro- und Elektronik-Altgeräte dürfen Elektro- und Elektronik-Altgeräte nicht mehr als kommunale Abfälle entsorgt werden. MSI hat europaweit verschiedene Sammel- und Recyclingunternehmen beauftragt, die in die Europäische Union in Verkehr gebrachten Produkte, am Ende seines Lebenszyklus zurückzunehmen. Bitte entsorgen Sie dieses Produkt zum gegebenen Zeitpunkt ausschliesslich an einer lokalen Altgerätesammelstelle in Ihrer Nähe.

FRANÇAIS

En tant qu'écologiste et afin de protéger l'environnement, MSI tient à rappeler ceci...

Au sujet de la directive européenne (EU) relative aux déchets des équipement électriques et électroniques, directive 2002/96/EC, prenant effet le 13 août 2005, que les produits électriques et électroniques ne peuvent être déposés dans les décharges ou tout simplement mis à la poubelle. Les fabricants de ces équipements seront obligés de récupérer certains produits en fin de vie. MSI prendra en compte cette exigence relative au retour des produits en fin de vie au sein de la communauté européenne. Par conséquent vous pouvez retourner localement ces matériels dans les points de collecte.

РУССКИЙ

Компания MSI предпринимает активные действия по защите окружающей среды, поэтому напоминаем вам, что...

В соответствии с директивой Европейского Союза (ЕС) по предотвращению загрязнения окружающей среды использованным электрическим и электронным оборудованием (директива WEEE 2002/96/EC), вступающей в силу 13 августа 2005 года, изделия, относящиеся к электрическому и электронному оборудованию, не могут рассматриваться как бытовой мусор, поэтому производители вышеперечисленного электронного оборудования обязаны принимать его для переработки по окончании срока службы. MSI обязуется соблюдать требования по приему продукции, проданной под маркой MSI на территории ЕС, в переработку по окончании срока службы. Вы можете вернуть эти изделия в специализированные пункты приема.

ESPAÑOL

MSI como empresa comprometida con la protección del medio ambiente, recomienda: Bajo la directiva 2002/96/EC de la Unión Europea en materia de desechos y/o equipos electrónicos, con fecha de rigor desde el 13 de agosto de 2005, los productos clasificados como "eléctricos y equipos electrónicos" no pueden ser depositados en los contenedores habituales de su municipio, los fabricantes de equipos electrónicos, están obligados a hacerse cargo de dichos productos al término de su período de vida. MSI estará comprometido con los términos de recogida de sus productos vendidos en la Unión Europea al final de su período de vida. Usted debe depositar estos productos en el punto limpio establecido por el ayuntamiento de su localidad o entregar a una empresa autorizada para la recogida de estos residuos.

NEDERLANDS

Om het milieu te beschermen, wil MSI u eraan herinneren dat....

De richtlijn van de Europese Unie (EU) met betrekking tot Vervuiling van Electrische en Electronische producten (2002/96/EC), die op 13 Augustus 2005 in zal gaan kunnen niet meer beschouwd worden als vervuiling. Fabrikanten van dit soort producten worden verplicht om producten retour te nemen aan het eind van hun levenscyclus. MSI zal overeenkomstig de richtlijn handelen voor de producten die de merknaam MSI dragen en verkocht zijn in de EU. Deze goederen kunnen gereturneerd worden op lokale inzamelingspunten.

SRPSKI

Da bi zaštitili prirodnu sredinu, i kao preduzeće koje vodi računa o okolini i prirodnoj sredini, MSI mora da vas podesti da...

Po Direktivi Evropske unije ("EU") o odbačenoj elektronskoj i električnoj opremi, Direktiva 2002/96/EC, koja stupa na snagu od 13. Avgusta 2005, proizvodi koji spadaju pod "elektronsku i električnu opremu" ne mogu više biti odbačeni kao običan otpad i proizvođači ove opreme biće prinuđeni da uzmu natrag ove proizvode na kraju njihovog uobičajenog veka trajanja. MSI će poštovati zahtev o preuzimanju ovakvih proizvoda kojima je istekao vek trajanja, koji imaju MSI oznaku i koji su prodati u EU. Ove proizvode možete vratiti na lokalnim mestima za prikupljanje.

POLSKI

Aby chronić nasze środowisko naturalne oraz jako firma dbająca o ekologię, MSI przypomina, że...

Zgodnie z Dyrektywą Unii Europejskiej ("UE") dotyczącą odpadów produktów elektrycznych i elektronicznych (Dyrektywa 2002/96/EC), która wchodzi w życie 13 sierpnia 2005, tzw. "produkty oraz wyposażenie elektryczne i elektroniczne" nie mogą być traktowane jako śmieci komunalne, tak więc producenci tych produktów będą zobowiązani do odbierania ich w momencie gdy produkt jest wycofywany z użycia. MSI wypełni wymagania UE, przyjmując produkty (sprzedawane na terenie Unii Europejskiej) wycofywane z użycia. Produkty MSI będzie można zwracać w wyznaczonych punktach zbiorczych.

TÜRKÇE

Çevreci özelliğiyle bilinen MSI dünyada çevreyi korumak için hatırlatır:

Avrupa Birliği (AB) Kararnamesi Elektrik ve Elektronik Malzeme Atığı, 2002/96/EC Kararnamesi altında 13 Ağustos 2005 tarihinden itibaren geçerli olmak üzere, elektrik ve elektronik malzemeler diğer atıklar gibi çöpe atılamayacak ve bu elektronik cihazların üreticileri, cihazların kullanım süreleri bittiğten sonra ürünleri geri toplamakla yükümlü olacaktır. Avrupa Birliği'ne satılan MSI markalı ürünlerin kullanım süreleri bittiğinde MSI ürünlerin geri alınması isteği ile işbirliği içerisinde olacaktır. Ürünlerinizi yerel toplama noktalarına bırakabilirsiniz.

ČESKÝ

Záleží nám na ochraně životního prostředí - společnost MSI upozorňuje...

Podle směrnice Evropské unie („EU“) o likvidaci elektrických a elektronických výrobků 2002/96/EC platné od 13. srpna 2005 je zakázáno likvidovat „elektrické a elektronické výrobky“ v běžném komunálním odpadu a výrobci elektronických výrobků, na které se tato směrnice vztahuje, budou povinni odebírat takové výrobky zpět po skončení jejich životnosti. Společnost MSI splní požadavky na odebírání výrobků značky MSI, prodávaných v zemích EU, po skončení jejich životnosti. Tyto výrobky můžete odevzdát v místních sběrnách.

MAGYAR

Annak érdekében, hogy környezetünket megvédjük, illetve környezetvédelöként fellépve az MSI emlékezeti Önt, hogy ...

Az Európai Unió („EU“) 2005. augusztus 13-án hatályba lépő, az elektromos és elektronikus berendezések hulladékairól szóló 2002/96/EK irányelv szerint az elektromos és elektronikus berendezések többé nem kezelhetőek lakossági hulladékként, és az ilyen elektronikus berendezések gyártói kötelessé válnak az ilyen termékek visszavezetére azok hasznos élettartama végén. Az MSI betartja a termékvisszavétellel kapcsolatos követelményeket az MSI márkanév alatt az EU-n belül értékesített termékek esetében, azok élettartamának végén. Az ilyen termékeket a legközelebbi gyűjtőhelyre viheti.

ITALIANO


Per proteggere l'ambiente, MSI, da sempre amica della natura, ti ricorda che....

In base alla Direttiva dell'Unione Europea (EU) sullo Smaltimento dei Materiali Elettrici ed Elettronici, Direttiva 2002/96/EC in vigore dal 13 Agosto 2005, prodotti appartenenti alla categoria dei Materiali Elettrici ed Elettronici non possono più essere eliminati come rifiuti municipali: i produttori di detti materiali saranno obbligati a ritirare ogni prodotto alla fine del suo ciclo di vita. MSI si adeguerà a tale Direttiva ritirando tutti i prodotti marchiati MSI che sono stati venduti all'interno dell'Unione Europea alla fine del loro ciclo di vita. È possibile portare i prodotti nel più vicino punto di raccolta

CONTENTS

Copyright Notice	ii
Trademarks	ii
Revision History.....	ii
Technical Support.....	ii
Safety Instructions.....	iii
FCC-B Radio Frequency Interference Statement.....	iv
WEEE (Waste Electrical and Electronic Equipment) Statement	v
Chapter 1 Getting Started.....	1-1
Mainboard Specifications	1-2
Mainboard Layout	1-4
Packing Checklist.....	1-5
Chapter 2 Hardware Setup.....	2-1
Quick Components Guide	2-2
Screw Holes	2-3
CPU (Central Processing Unit)	2-4
Memory	2-8
Power Supply	2-10
Back Panel.....	2-11
Connectors.....	2-13
Jumper	2-18
Slots	2-19
Chapter 3 BIOS Setup.....	3-1
Entering Setup	3-2
The Main Menu	3-4
Standard CMOS Features.....	3-6
Advanced BIOS Features	3-8
Integrated Peripherals.....	3-10
Power Management Setup.....	3-12
H/W Monitor	3-14
Green Power	3-15
BIOS Setting Password.....	3-16
Cell Menu	3-17
M-Flash	3-24
Overclocking Profile	3-27
Load Fail-Safe/ Optimized Defaults	3-28

Appendix A Realtek Audio.....	A-1
Installing the Realtek HD Audio Driver.....	A-2
Software Configuration.....	A-3

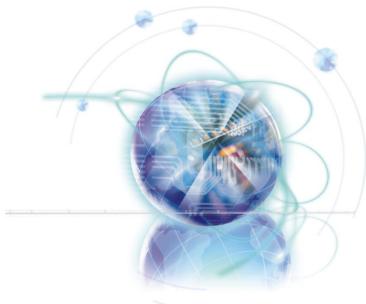

Chapter 1

Getting Started

Thank you for choosing the H55M-E32/ H55M-E23/ H55M-E21 Series (MS-7636 v3.X) Micro-ATX mainboard. The H55M-E32/ H55M-E23/ H55M-E21 Series mainboards are based on Intel® H55 chipsets for optimal system efficiency. Designed to fit the advanced Intel® LGA1156 processor, the H55M-E32/ H55M-E23/ H55M-E21 Series deliver a high performance and professional desktop platform solution.

Mainboard Specifications

Processor Support

- Intel® Core™ i7, Core™ i5 (Lynnfield & Clarkdale), Core™ i3 and Pentium® processor in the LGA1156 package
(For the latest information about CPU, please visit <http://www.msi.com/index.php?func=cpuform2>)

Base Clock

- 133 MHz

Chipset

- Intel® H55 chipset

Memory Support

- 2 DDR3 DIMMs support DDR3 2133*(OC)/ 2000*(OC) /1600*(OC)/ 1333/ 1066 DRAM (8GB Max)
- Supports Dual-Channel mode
*(For more information on compatible components, please visit <http://www.msi.com/index.php?func=testreport>)

LAN

- Supports LAN 10/100/1000 by Realtek® RTL8111E (for H55M-E32 & H55M-E23)
- Supports LAN 10/100 by Realtek® RTL8105E (for H55M-E21)

Audio

- Chip integrated by Realtek® ALC892 (for H55M-E32)/ ALC887 (for H55M-E21 & H55M-E23)
- Flexible 8-channel audio with jack sensing
- Compliant with Azalia 1.0 Spec

SATA

- 6 SATA 3Gb/s (SATA1~6) ports by Intel® H55

Connectors

- Back panel
 - 1 PS/2 keyboard port
 - 1 PS/2 mouse port
 - 6 USB 2.0 ports (for H55M-E32)/ 4 USB 2.0 ports (for H55M-E21 & H55M-E23)
 - 1 HDMI port**
 - 1 VGA port**
 - 1 DVI-D port**
 - 1 LAN port
 - 6 flexible audio ports (for H55M-E32)
 - 3 flexible audio ports (for H55M-E21 & H55M-E23)

**(The VGA, DVI-D & HDMI ports only work with Integrated Graphics Processor)

- On-Board
 - 3 USB 2.0 connectors
 - 1 Chassis Intrusion connector
 - 1 S/PDIF-Out connector
 - 1 Front Panel Audio connector
 - 1 TPM Module connector
 - 1 Parallel connector
 - 1 Serial connector

Slots

- 1 PCIE x16 slot
- 2 PCIE x1 slots
- 1 PCI slot, supports 3.3V/ 5V PCI bus Interface


Form Factor

- Micro-ATX (21.0 cm X 24.5 cm)

Mounting


- 6 mounting holes

Mainboard Layout

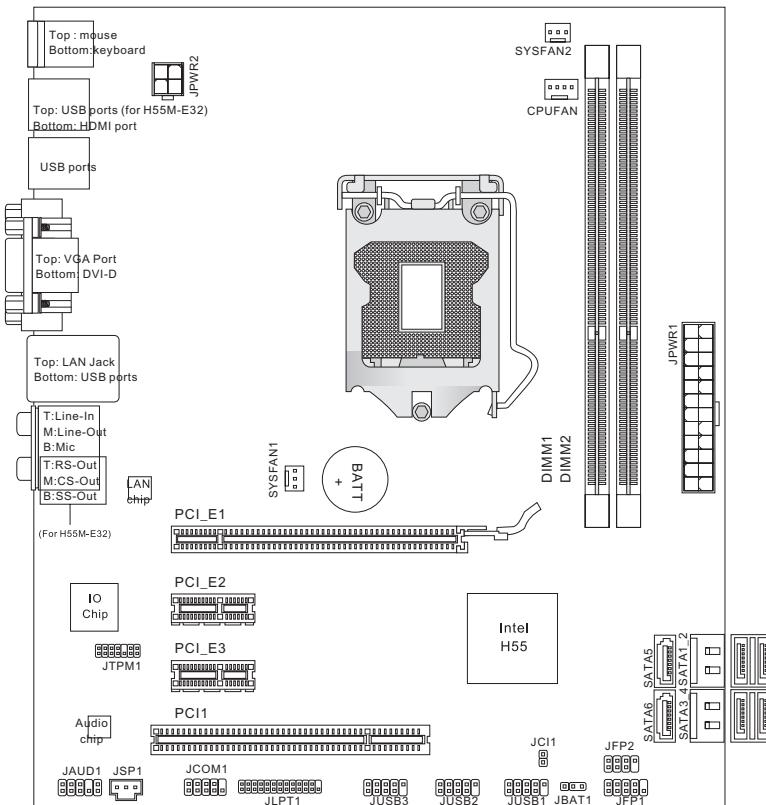

**H55M-E32/ H55M-E23/ H55M-E21 Series
(MS-7636 v3.X) Micro-ATX Mainboard**

Packing Checklist

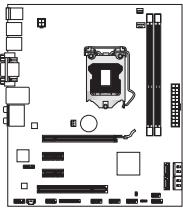

MSI mainboard



MSI Driver/Utility DVD



SATA Cable




Power Cable



USB Bracket (Optional)



User's Guide

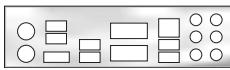


Back IO Shield

The pictures are for reference only and may vary from the packing contents of the product you purchased.

If you need to purchase accessories and request the part numbers, you could search the product web page and find details on our web address below

<http://www.msi.com/index.php>

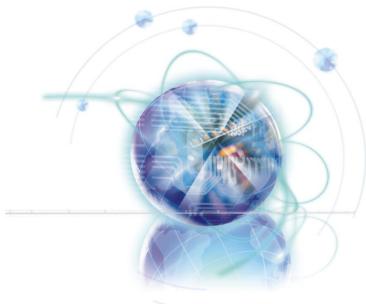


Chapter 2

Hardware Setup

This chapter provides you with the information about hardware setup procedures. While doing the installation, be careful in holding the components and follow the installation procedures. For some components, if you install in the wrong orientation, the components will not work properly.

Use a grounded wrist strap before handling computer components. Static electricity may damage the components.


Quick Components Guide

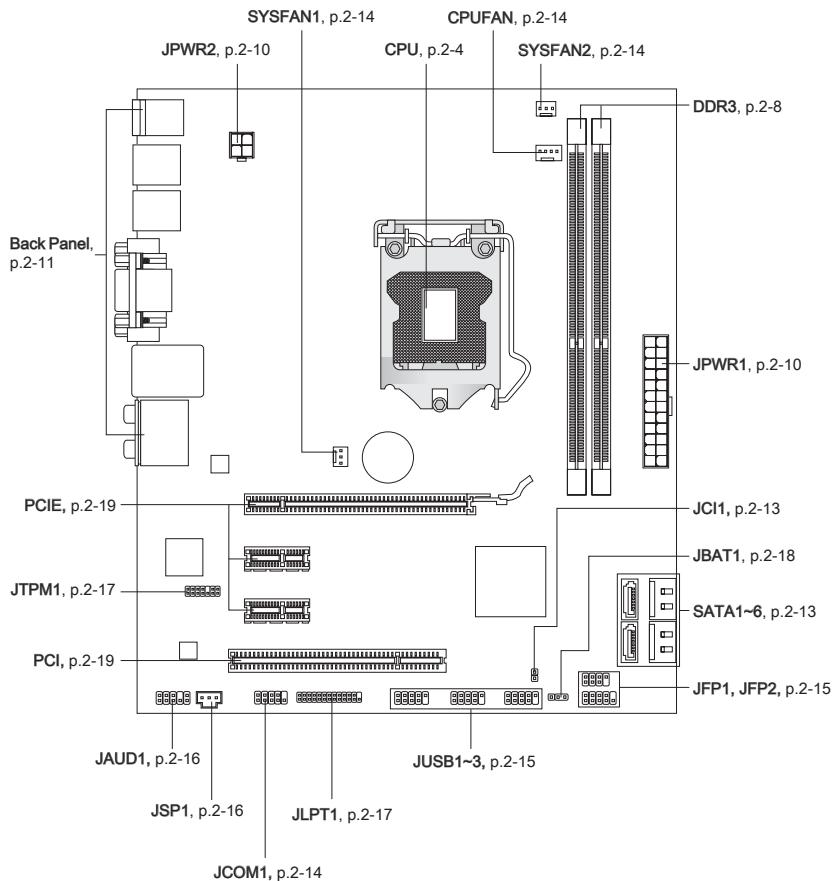

Screw Holes

When you install the mainboard, you have to place the mainboard into the chassis in the correct direction. The locations of screws holes on the mainboard are shown as below.

The side has to
toward the rear,
the position for
the I/O shield of
the chassis.

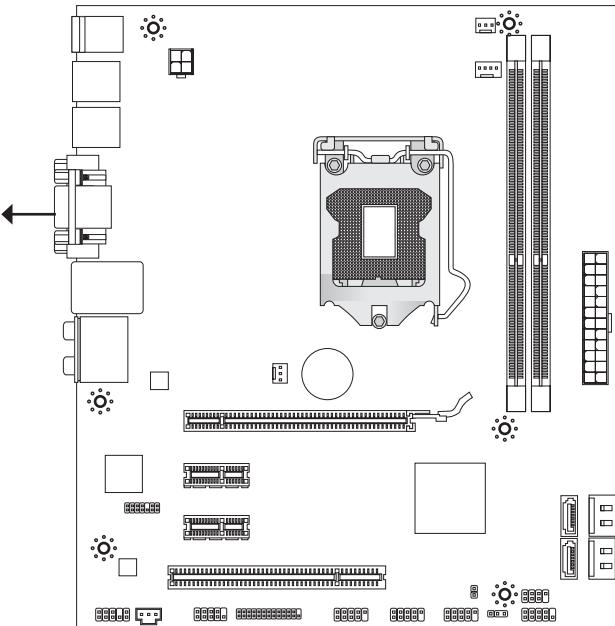

→ Screw holes

Refer above picture to install standoffs in the appropriate locations on chassis and then screw through the mainboard screw holes into the standoffs.

Important

- To prevent damage to the mainboard, any contact between the mainboard circuit and chassis or unnecessary standoffs mounted on the chassis is prohibited.
- Please make sure there is no metal components placed on the mainboard or within the chassis that may cause short circuit of the mainboard.

CPU (Central Processing Unit)

When you are installing the CPU, make sure to install the cooler to prevent overheating. If you do not have the CPU cooler, consult your dealer before turning on the computer. For the latest information about CPU, please visit <http://www.msi.com/index.php?func=cpuform2>

Important

Overheating

Overheating will seriously damage the CPU and system. Always make sure the cooling fan can work properly to protect the CPU from overheating. Make sure that you apply an even layer of thermal paste (or thermal tape) between the CPU and the heatsink to enhance heat dissipation.

Replacing the CPU


While replacing the CPU, always turn off the ATX power supply or unplug the power supply's power cord from the grounded outlet first to ensure the safety of CPU.

Overclocking

This mainboard is designed to support overclocking. However, please make sure your components are able to tolerate such abnormal setting, while doing overclocking. Any attempt to operate beyond product specifications is not recommended. We do not guarantee the damages or risks caused by inadequate operation or beyond product specifications.

Introduction to LGA 1156 CPU

The pin-pad side of LGA 1156 CPU.

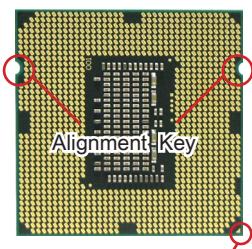

Yellow triangle is the Pin 1 indicator

The surface of LGA 1156 CPU. Remember to apply some thermal paste on it for better heat dispersion.





Yellow triangle is the Pin 1 indicator

CPU & Cooler Installation

When you are installing the CPU, make sure the CPU has a cooler attached on the top to prevent overheating. Meanwhile, do not forget to apply some thermal paste on CPU before installing the heat sink/cooler fan for better heat dispersion.

Follow the steps below to install the CPU & cooler correctly. Wrong installation will cause the damage of your CPU & mainboard.

1. Open the load lever.
2. Lift the load lever up to fully open position

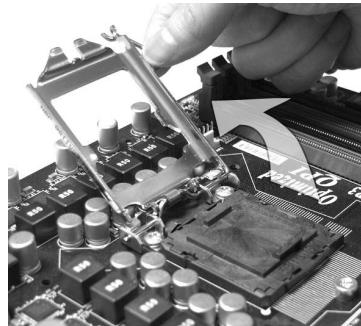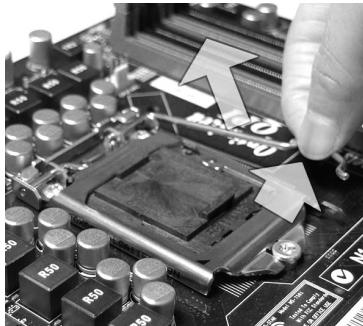


3. The CPU socket has a plastic cap on it to protect the contact from damage. Before you install CPU, always cover it to protect the socket pin. Remove the cap (as the arrow shows).
4. After confirming the CPU direction for correct mating, put down the CPU in the socket housing frame. Be sure to grasp on the edge of the CPU base. Note that the alignment keys are matched.



Hardware Setup

5. Visually inspect if the CPU is seated well into the socket. If not, take out the CPU with pure vertical motion and reinstall.

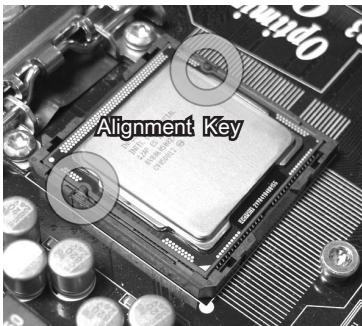


6. Engage the load lever while pressing down lightly onto the load plate.



7. Secure the lever near the hook end under the retention tab.




8. Make sure the four hooks are in proper position before you install the cooler.

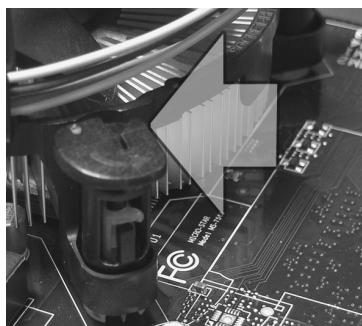


Important

- Confirm if your CPU cooler is firmly installed before turning on your system.
- Do not touch the CPU socket pins to avoid damaging.


9. Align the holes on the mainboard with the heatsink. Push down the cooler until its four clips get wedged into the holes of the mainboard.

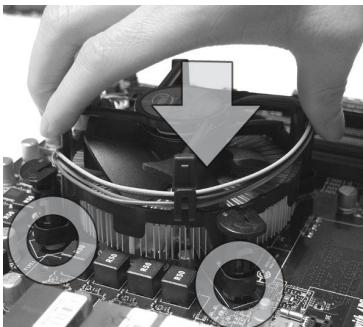


10. Press the four hooks down to fasten the cooler.

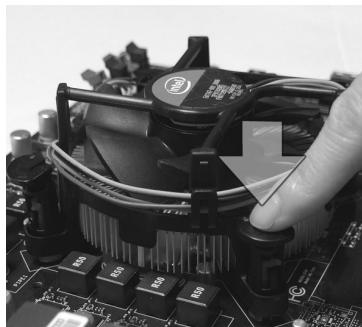

11. Turn over the mainboard to confirm that the clip-ends are correctly inserted.

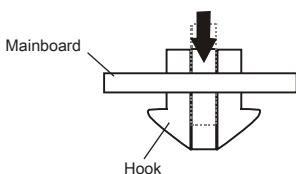

12. Finally, attach the CPU Fan cable to the CPU fan connector on the mainboard.

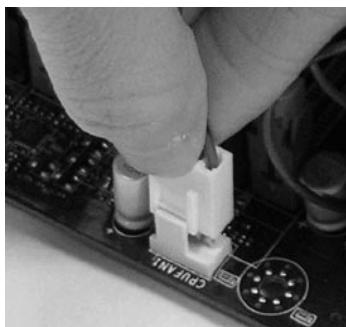


Important

- Read the CPU status in BIOS.
- Whenever CPU is not installed, always protect your CPU socket pin with the plastic cap covered (shown in Figure 1) to avoid damaging.
- Mainboard photos shown in this section are for demonstration of the CPU/ cooler installation only. The appearance of your mainboard may vary depending on the model you purchase.
- Please refer to the documentation in the CPU fan package for more details about the CPU fan installation.

Memory


These DIMM slots are used for installing memory modules. For more information on compatible components, please visit <http://www.msi.com/index.php?func=testreport>

DDR3
240-pin, 1.5V

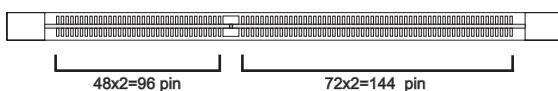

Dual-Channel mode Population Rule

In Dual-Channel mode, the memory modules can transmit and receive data with two data bus lines simultaneously. Enabling Dual-Channel mode can enhance the system performance. The following illustrations explain the population rules for Dual-Channel mode.

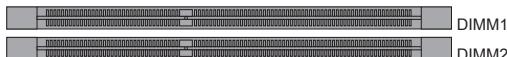


Important

- DDR3 memory modules are not interchangeable with DDR2 and the DDR3 standard is not backwards compatible. You should always install DDR3 memory modules in the DDR3 DIMM slots.
- In Dual-Channel mode, make sure that you install memory modules of the **same type and density** in different channel DIMM slots.
- To enable successful system boot-up (Lynnfield CPU especially), always insert the memory modules into the **DIMM1 first**.
- Due to the chipset resource deployment, the system density will only be detected up to 7+GB (not full 8GB) when each DIMM is installed with a 4GB memory module.

Installing Memory Modules

1. The memory module has only one notch on the center and will only fit in the right orientation.
2. Insert the memory module vertically into the DIMM slot. Then push it in until the golden finger on the memory module is deeply inserted in the DIMM slot. The plastic clip at each side of the DIMM slot will automatically close when the memory module is properly seated.
3. Manually check if the memory module has been locked in place by the DIMM slot clips at the sides.

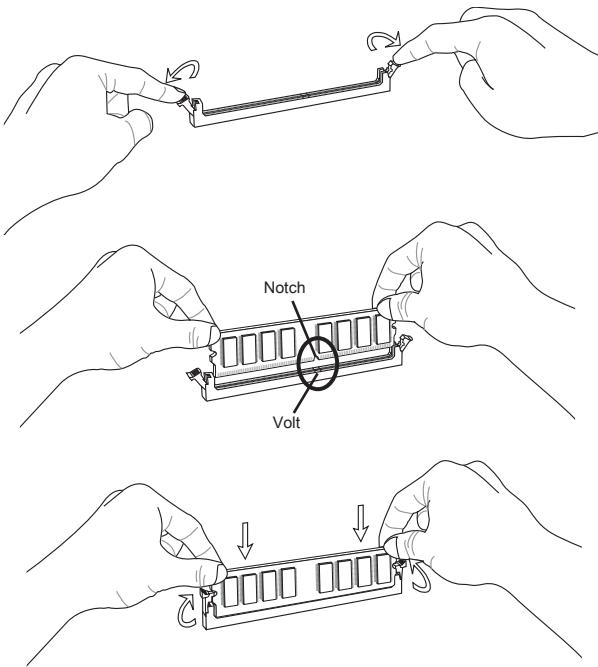

Important


You can barely see the golden finger if the memory module is properly inserted in the DIMM slot.

Power Supply

ATX 24-pin Power Connector: JPWR1


This connector allows you to connect an ATX 24-pin power supply. To connect the ATX 24-pin power supply, make sure the plug of the power supply is inserted in the proper orientation and the pins are aligned. Then push down the power supply firmly into the connector.

You may use the 20-pin ATX power supply as you like. If you'd like to use the 20-pin ATX power supply, please plug your power supply along with pin 1 & pin 13.

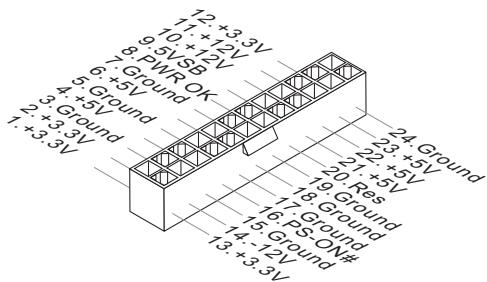

ATX 4-pin Power Connector: JPWR2


This connector is used to provide the power output to the CPU.

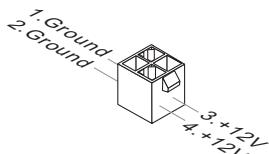

Important

- Make sure that all the connectors are connected to proper ATX power supplies to ensure stable operation of the mainboard.

Back Panel

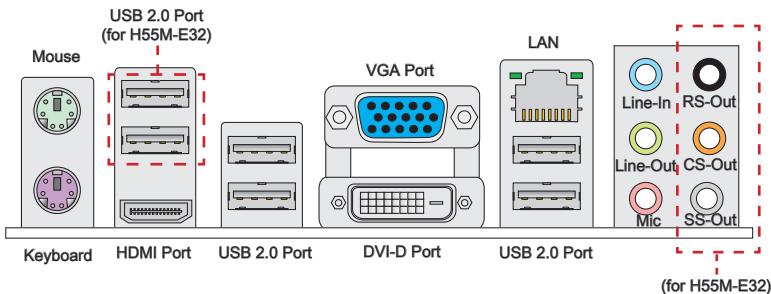

► Mouse/Keyboard

The standard PS/2® mouse/keyboard DIN connector is for a PS/2® mouse/keyboard.

► USB 2.0 Port

The USB (Universal Serial Bus) port is for attaching USB devices such as keyboard, mouse, or other USB-compatible devices.

► VGA Port

The DB15-pin female connector is provided for monitor.

► HDMI Port

The High-Definition Multimedia Interface (HDMI) is an all-digital audio/video interface capable of transmitting uncompressed streams. HDMI supports all TV format, including standard, enhanced, or high-definition video, plus multi-channel digital audio on a single cable.

► DVI-D Port


The DVI-D (Digital Visual Interface-Digital) connector allows you to connect a LCD monitor. It provides a high-speed digital interconnection between the computer and its display device. To connect an LCD monitor, simply plug your monitor cable into the DVI-D connector, and make sure that the other end of the cable is properly connected to your monitor (refer to your monitor manual for more information).

Important

The VGA, HDMI and DVI-D ports on the mainboard are designed to serve as IGP (Integrated Graphics Processor) used. If you installed a processor without integrated graphics chip, these display ports will have no effect.

► LAN

The standard RJ-45 LAN jack is for connection to the Local Area Network (LAN). You can connect a network cable to it.

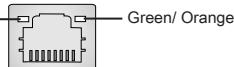

LED	Color	LED State	Condition
Left	Yellow	Off	LAN link is not established.
		On(Steady state)	LAN link is established.
		On(brighter & pulsing)	The computer is communicating with another computer on the LAN.
Right	Green	Off	10 Mbits/sec data rate is selected.
		On	100 Mbits/sec data rate is selected.
	Orange	On	1000 Mbits/sec data rate is selected.

► Audio Ports

These audio connectors are used for audio devices. It is easy to differentiate between audio effects according to the color of audio jacks.

- Line-In: Blue - Line In, is used for external CD player, tape-player or other audio devices.
- Line-Out: Green - Line Out, is a connector for speakers or headphones.
- Mic: Pink - Mic, is a connector for microphones.
- RS-Out: Black (for H55M-E32) - Rear-Surround Out in 4/ 5.1/ 7.1 channel mode.
- CS-Out: Orange (for H55M-E32)- Center/ Subwoofer Out in 5.1/ 7.1 channel mode.
- SS-Out: Gray (for H55M-E32)- Side-Surround Out in 7.1 channel mode.


Important

To reach the 8-channel sound effect, the 7th and 8th channels must be output from front panel if you purchase the mainboard with 3 audio jacks.


Connectors

Serial ATA Connector: SATA1~6

This connector is a high-speed Serial ATA interface port. Each connector can connect to one Serial ATA device.

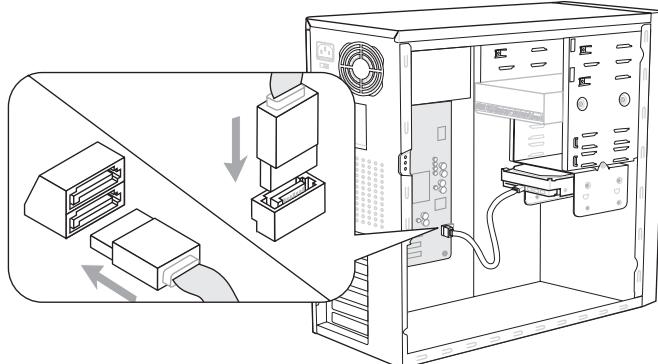

* The MB layout in this figure is for reference only.

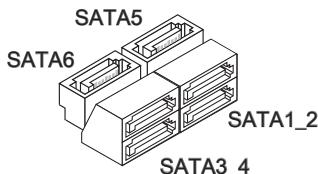


Important

Please do not fold the Serial ATA cable into 90-degree angle. Otherwise, data loss may occur during transmission.


Chassis Intrusion Connector: JCI1

This connector connects to the chassis intrusion switch cable. If the chassis is opened, the chassis intrusion mechanism will be activated. The system will record this status and show a warning message on the screen. To clear the warning, you must enter the BIOS utility and clear the record.

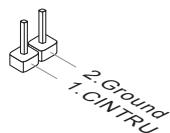


Serial Port Connector: JCOM1

This connector is a 16550A high speed communication port that sends/receives 16 bytes FIFOs. You can attach a serial device.

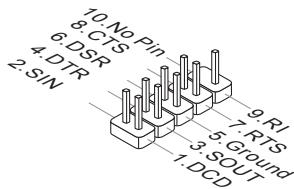

Fan Power Connectors: CPUFAN, SYSFAN1~2

The fan power connectors support system cooling fan with +12V. When connecting the wire to the connectors, always note that the red wire is the positive and should be connected to the +12V; the black wire is Ground and should be connected to GND. If the mainboard has a System Hardware Monitor chipset on-board, you must use a specially designed fan with speed sensor to take advantage of the CPU fan control.

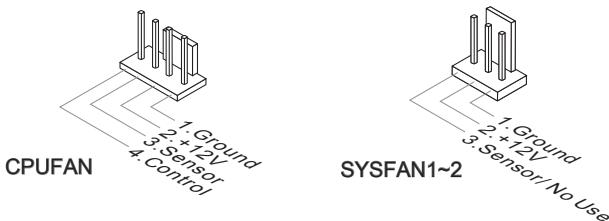


Important

- Please refer to the recommended CPU fans at processor's official website or consult the vendors for proper CPU cooling fan.
- CPUFAN support Smart fan control. You can install **Control Center** utility that will automatically control the CPUFAN speeds according to the actual CPUFAN temperatures.
- Fan cooler set with 3 or 4 pins power connector are both available for CPUFAN.


Front Panel Connectors: JFP1, JFP2

These connectors are for electrical connection to the front panel switches and LEDs. The JFP1 is compliant with Intel® Front Panel I/O Connectivity Design Guide.

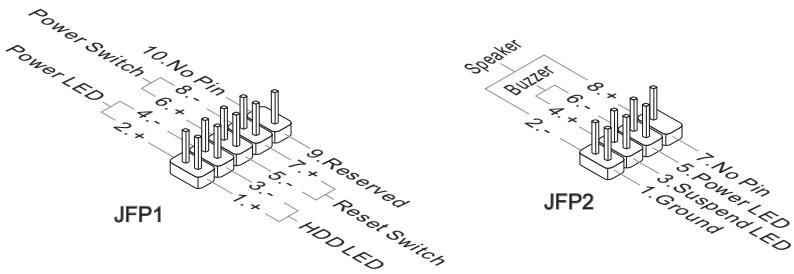

Front USB Connector: JUSB1 / JUSB2 / JUSB3

This connector, compliant with Intel® I/O Connectivity Design Guide, is ideal for connecting high-speed USB interface peripherals such as USB HDD, digital cameras, MP3 players, printers, modems and the like.

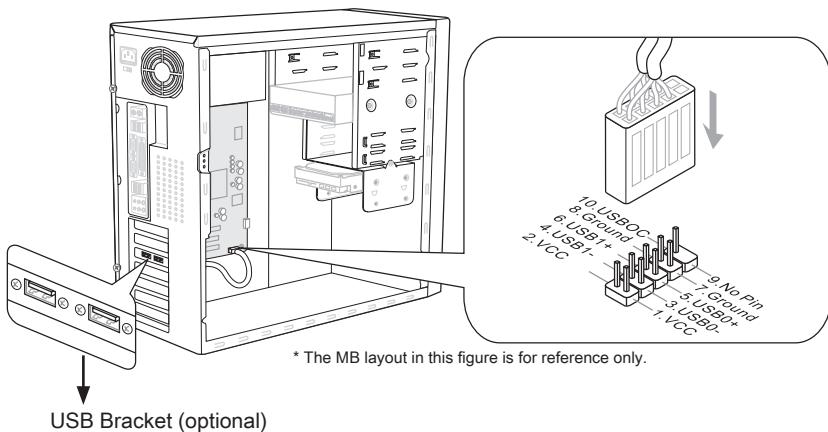


Important

Note that the pins of VCC and GND must be connected correctly to avoid possible damage.


S/PDIF-Out Connector: JSP1

This connector is used to connect S/PDIF (Sony & Philips Digital Interconnect Format) interface for digital audio transmission.

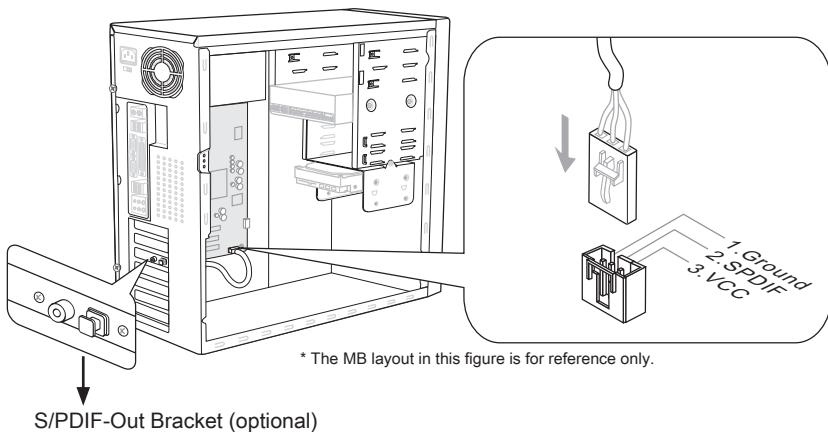


Front Panel Audio Connector: JAUD1

This connector allows you to connect the front panel audio and is compliant with Intel® Front Panel I/O Connectivity Design Guide.

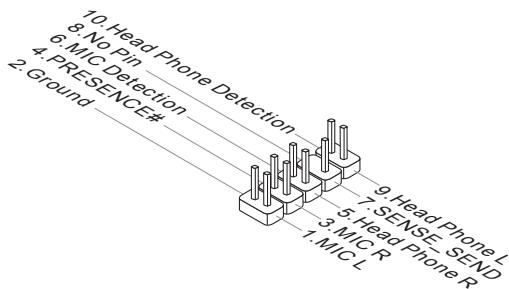



Parallel Port Header: JLPT1

This connector is used to connect an optional parallel port bracket. The parallel port is a standard printer port that supports Enhanced Parallel Port (EPP) and Extended Capabilities Parallel Port (ECP) mode.

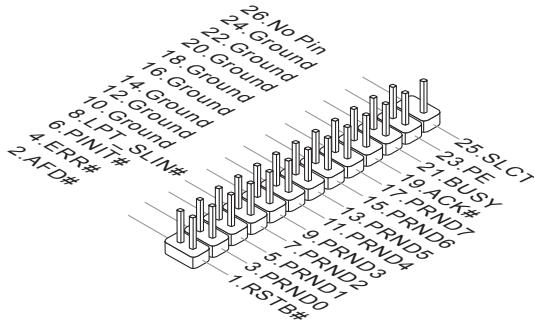

TPM Module connector: JTPM1

This connector connects to a TPM (Trusted Platform Module) module (optional). Please refer to the TPM security platform manual for more details and usages.

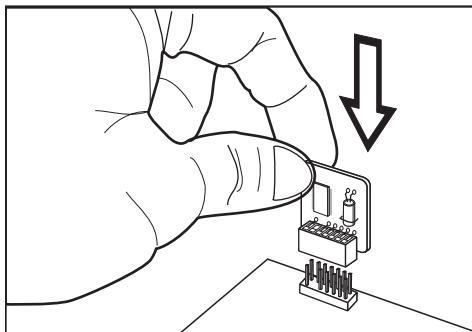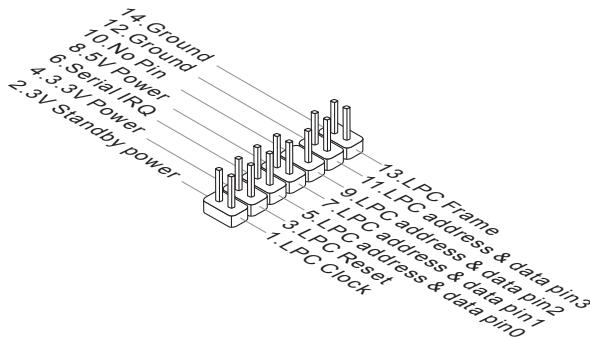

Jumper

Clear CMOS Jumper: JBAT1

There is a CMOS RAM onboard that has a power supply from an external battery to keep the data of system configuration. With the CMOS RAM, the system can automatically boot OS every time it is turned on. If you want to clear the system configuration, set the jumper to clear data.



JBAT1



Keep Data



Clear Data


Important

You can clear CMOS by shorting 2-3 pin while the system is off. Then return to 1-2 pin position. Avoid clearing the CMOS while the system is on; it will damage the mainboard.

Slots


PCIE (Peripheral Component Interconnect Express) Slot

The PCIE slot supports the PCIE interface expansion card.

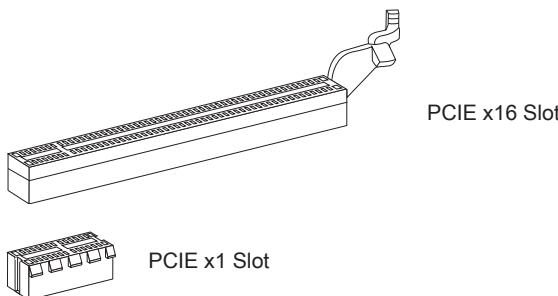

PCI (Peripheral Component Interconnect) Slot

The PCI slot supports LAN card, SCSI card, USB card, and other add-on cards that comply with PCI specifications.

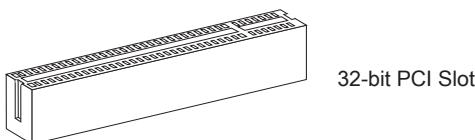


PCI Interrupt Request Routing

The IRQ, acronym of interrupt request line and pronounced I-R-Q, are hardware lines over which devices can send interrupt signals to the microprocessor. The PCI IRQ pins are typically connected to the PCI bus pins as follows:

	Order1	Order2	Order3	Order4
PCI Slot1	INT A#	INT B#	INT C#	INT D#

Important

When adding or removing expansion cards, make sure that you unplug the power supply first. Meanwhile, read the documentation for the expansion card to configure any necessary hardware or software settings for the expansion card, such as jumpers, switches or BIOS configuration.

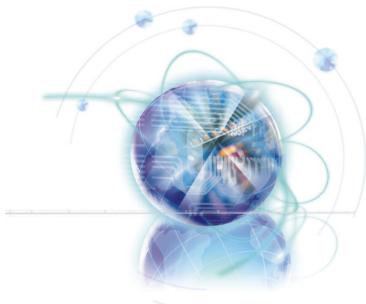

Chapter 3

BIOS Setup

This chapter provides information on the BIOS Setup program and allows you to configure the system for optimum use.

You may need to run the Setup program when:

- An error message appears on the screen during the system booting up, and requests you to run SETUP.
- You want to change the default settings for customized features.

Entering Setup

Power on the computer and the system will start POST (Power On Self Test) process. When the message below appears on the screen, press key to enter Setup.

Press DEL to enter SETUP

If the message disappears before you respond and you still wish to enter Setup, restart the system by turning it OFF and On or pressing the RESET button. You may also restart the system by simultaneously pressing <Ctrl>, <Alt>, and <Delete> keys.

Important

- The items under each BIOS category described in this chapter are under continuous update for better system performance. Therefore, the description may be slightly different from the latest BIOS and should be held for reference only.
- Upon boot-up, the 1st line appearing after the memory count is the BIOS version. It is usually in the format:

A7636IMS V3.0 082710 where:

1st digit refers to BIOS maker as A = AMI, W = AWARD, and P = PHOENIX.

2nd - 5th digit refers to the model number.

6th digit refers to the chipset as I = Intel, N = NVIDIA, A = AMD and V = VIA.

7th - 8th digit refers to the customer as MS = all standard customers.

V3.0 refers to the BIOS version.

082710 refers to the date this BIOS was released.

Control Keys

<↑>	Move to the previous item
<↓>	Move to the next item
<↔>	Move to the item in the left hand
<→>	Move to the item in the right hand
<Enter>	Select the item
<Esc>	Jumps to the Exit menu or returns to the main menu from a submenu
<+/PU>	Increase the numeric value or make changes
<-/PD>	Decrease the numeric value or make changes
<F1>	General Help
<F4>	Enter the CPU Spec. menu, and read the CPU information
<F5>	Enter the Memory-Z menu, and read the memory information
<F6>	Load Optimized Defaults
<F8>	Load Fail-Safe Defaults
<F10>	Save all the CMOS changes and exit

Getting Help


After entering the Setup menu, the first menu you will see is the Main Menu.

Main Menu

The main menu lists the setup functions you can make changes to. You can use the arrow keys (↑↓) to select the item. The on-line description of the highlighted setup function is displayed at the bottom of the screen.

Sub-Menu


If you find a right pointer symbol (as shown in the right view) appears to the left of certain fields that means a sub-menu can be launched from this field. A sub-menu contains additional options for a field parameter. You can use arrow keys (↑↓) to highlight the field and press <Enter> to call up the sub-menu. Then you can use the control keys to enter values and move from field to field within a sub-menu. If you want to return to the main menu, just press the <Esc>.

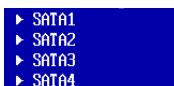

General Help <F1>

The BIOS setup program provides a General Help screen. You can call up this screen from any menu by simply pressing <F1>. The Help screen lists the appropriate keys to use and the possible selections for the highlighted item. Press <Esc> to exit the Help screen.

The Main Menu

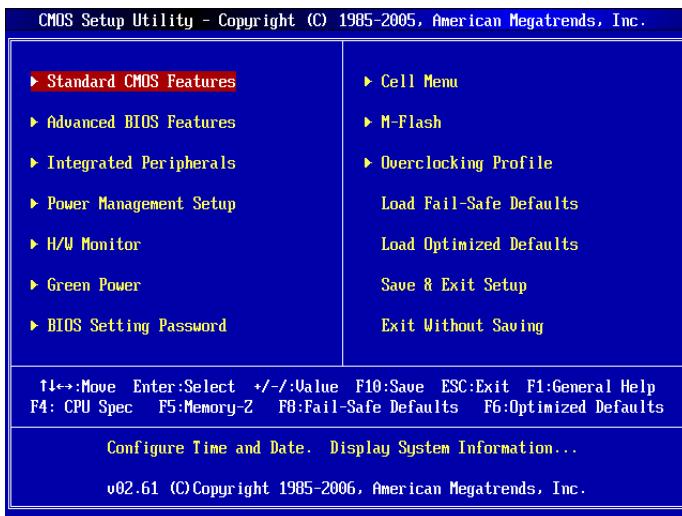

► Standard CMOS Features

Use this menu for basic system configurations, such as time, date etc.

► Advanced BIOS Features

Use this menu to setup the items of the BIOS special enhanced features.

► Integrated Peripherals

Use this menu to specify your settings for integrated peripherals.

► Power Management Setup

Use this menu to specify your settings for power management.

► H/W Monitor

This entry shows your PC health status.

► Green Power

Use this menu to specify the power phase.

► BIOS Setting Password

Use this menu to set the password for BIOS.

► Cell Menu

Use this menu to specify your settings for frequency/voltage control and overclocking.

► M-Flash

Use this menu to read/ flash the BIOS from storage drive (FAT/ FAT32 format only).

► Overclocking Profile

Use this menu to save/ load your settings to/ from CMOS for BIOS.

► Load Fail-Safe Defaults

Use this menu to load the default values set by the BIOS vendor for stable system performance.

► Load Optimized Defaults

Use this menu to load the default values set by the mainboard manufacturer specifically for optimal performance of the mainboard.

► Save & Exit Setup


Save changes to CMOS and exit setup.

► Exit Without Saving

Abandon all changes and exit setup.

Standard CMOS Features

The items in Standard CMOS Features Menu include some basic setup items. Use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

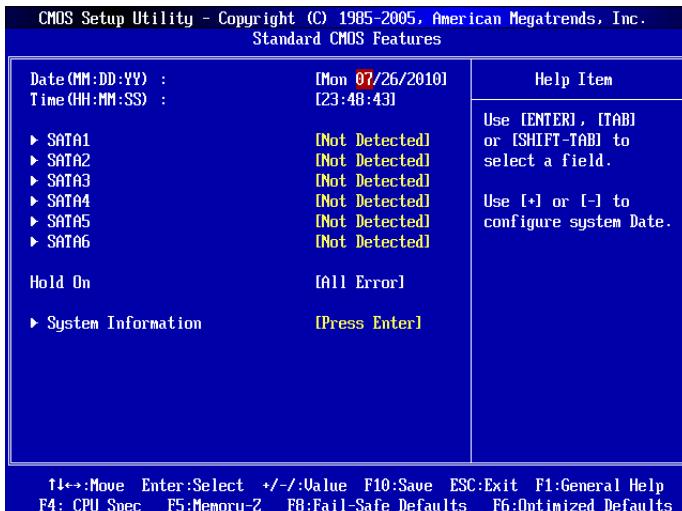

► Date (MM:DD:YY)

This allows you to set the system to the date that you want (usually the current date). The format is <day><month> <date> <year>.

- [day] Day of the week, from Sun to Sat, determined by BIOS. Read-only.
- [month] The month from Jan. through Dec.
- [date] The date from 1 to 31 can be keyed by numeric function keys.
- [year] The year can be adjusted by users.

► Time (HH:MM:SS)

This allows you to set the system time that you want (usually the current time). The time format is <hour> <minute> <second>.

► SATA1~6

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.	
SATA1	
Help Item	
Device	:Hard Disk
Vendor	:WDC WD2000JS-19NCB1
Size	:200.0GB

► Device / Vendor / Size

It will show the device information that you connected to the SATA connector.

Important

SATA1~6 are appearing when you connect the HD devices to the SATA connectors on the mainboard.

► Hold On

The setting determines whether the system will stop of an error is detected at boot. When the system stops of the errors preset, it will halt on for 15 seconds and then automatically resume its operation. Available options are:

[All Error]	The system stops when any error is detected.
[No Error]	The system doesn't stop for any detected error.

► System Information

Press <Enter> to enter the sub-menu, and the following screen appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.	
System Information	
Help Item	
Intel(R) Core(TM) i5 CPU	670 @ 3.47GHz
CPUID/MicroCode	20652/0C
CPU Frequency	3.45GHz (133x26)
BIOS Version	U17.0B7 080510
Physical Memory	1024MB
Cache Size	512KB
L3 Cache Size	4096KB

This sub-menu shows the CPU information, BIOS version and memory status of your system (read only).

Advanced BIOS Features

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Advanced BIOS Features		
Help Item		
► Boot Sequence	[Press Enter]	
BIOS Flash Protection	[Disabled]	
Full Screen Logo Display	[Enabled]	
Quick Booting	[Enabled]	
Boot Up Num-Lock LED	[On]	
IOAPIC Function	[Enabled]	
MPS Table Version	[1.4]	
Primary Graphic's Adapter	[PCI-E]	
PCI Latency Timer	[64]	
HPET	[Enabled]	
Current iGPU Frequency	733MHz	
UVA Share Memory	[32M]	
DUMT Mode Select	[DUMT Mode]	
DUMT/FIXED Memory	[256M]	
TCG/TPM Support	[No]	

↑↓:Move Enter:Select +/−:Value F10:Save ESC:Exit F1:General Help
 F4: CPU Spec F5:Memory-Z F8:Fail-Safe Defaults F6:Optimized Defaults

► Boot Sequence

Press <Enter> to enter the sub-menu.

► 1st/ 2nd/ 3rd/ --- Boot Device

These items allow you to set the first/ second/ third boot device where BIOS attempts to load the disk operating system.

► Boot From Other Device

Setting the option to [Yes] allows the system to try to boot from other device, if the system fails to boot from 1st boot device.

► BIOS Flash Protection

This function protects the BIOS from accidental corruption by unauthorized users or computer viruses. When enabled, the BIOS' data cannot be changed when attempting to update the BIOS with a Flash utility. To successfully update the BIOS, you will need to disable this Flash BIOS Protection function. You should enable this function at all times. The only time when you need to disable it is when you want to update the BIOS. After updating the BIOS, you should immediately re-enable it to protect it against viruses.

► Full Screen Logo Display

This item enables this system to show the company logo on the boot-up screen. Settings are:

- [Enabled] Shows a still image (logo) on the full screen at boot.
- [Disabled] Shows the POST messages at boot.

► Quick Booting

Setting the item to [Enabled] allows the system to boot within 10 seconds since it will skip some check items.

► Boot Up Num-Lock LED

This setting is to set the Num Lock status when the system is powered on. Setting to [On] will turn on the Num Lock key when the system is powered on. Setting to [Off] will allow users to use the arrow keys on the numeric keypad.

► IOAPIC Function

This field is used to enable or disable the APIC (Advanced Programmable Interrupt Controller). Due to compliance with PC2001 design guide, the system is able to run in APIC mode. Enabling APIC mode will expand available IRQ resources for the system.

► MPS Table Version

This field allows you to select which MPS (Multi-Processor Specification) version to be used for the operating system. You need to select the MPS version supported by your operating system. To find out which version to use, consult the vendor of your operating system.

► Primary Graphic's Adapter

This setting specifies which graphic card is your primary graphics adapter.

► PCI Latency Timer

This item controls how long each PCI device can hold the bus before another takes over. When set to higher values, every PCI device can conduct transactions for a longer time and thus improve the effective PCI bandwidth. For better PCI performance, you should set the item to higher values.

► HPET

The HPET (High Precision Event Timers) is a component that is part of the chipset. You can to enable it, and will provide you with the means to get to it via the various ACPI methods.

► Current iGPU Frequency

These items show the current frequencies of iGPU. Read-only.

► VGA Share Memory (only for IGP)

The system shares memory to the IGP. This setting controls the exact memory size shared to the IGP.

► DVMT Mode Select (only for IGP)

This item allows you to set the mode for the graphics core..

[Fixed Mode] a fixed-size fragment of the system memory is allocated to the graphics core. It can only be used by the graphics core.

[DVMT Mode] the driver of the graphics core uses the system memory like any other OS component or application does.


► DVMT/ FIXED Memory (only for IGP)

Specify the size of DVMT/ FIXED memory to allocate for video memory.

► TCG/TPM SUPPORT

Setting the option to [Yes] enables TPM (Trusted Platform Module) for the system.

Integrated Peripherals

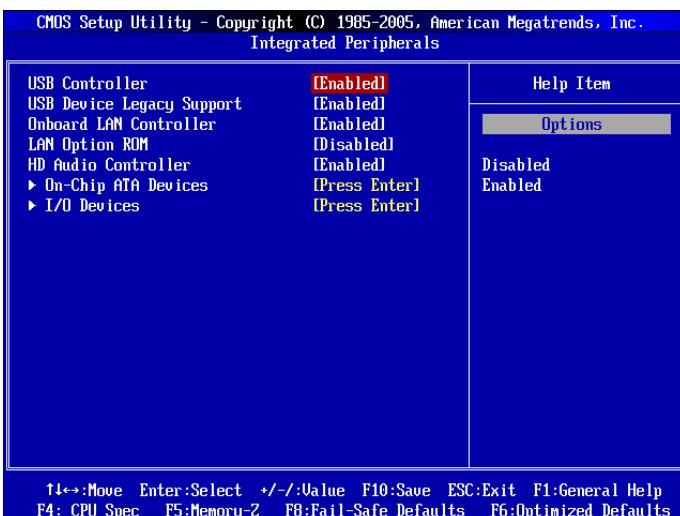

► USB Controller

This setting allows you to enable/disable the onboard USB controller.

► USB Device Legacy Support

Select [Enabled] if you need to use a USB-interfaced device in the operating system.

► Onboard LAN Controller

This setting allows you to enable/disable the onboard LAN controller.

► LAN Option ROM

This item is used to decide whether to invoke the Boot ROM of the onboard LAN.

► HD Audio Controller

This setting is used to enable/disable the onboard audio controller.

► On-Chip ATA Devices

Press <Enter> to enter the sub-menu and the following screen appears:



► PCI IDE BusMaster

This item allows you to enable/ disable BIOS to used PCI busmastering for reading/ writing to IDE drives.

► On-Chip SATA Controller

This item allows users to enable or disable the on-chip SATA controller.

► RAID Mode

This item is used to select mode for on-chip SATA connectors.

► I/O Devices

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
I/O Devices		
COM Port 1	[3F8/IRQ4]	Help Item
Parallel Port	[378]	
Parallel Port Mode	[Bi-Directional]	Allows BIOS to Select

► COM Port 1

Select an address and corresponding interrupt for the serial port.

► Parallel Port

There is a built-in parallel port on the on-board Super I/O chipset that provides Standard, ECP, and EPP features. It has the following options:

[Disabled]

[3BC] Line Printer port 0

[278] Line Printer port 2

[378] Line Printer port 1

► Parallel Port Mode

[Normal] Standard Parallel Port

[EPP] Enhanced Parallel Port

[ECP] Extended Capability Port

[ECP + EPP] Extended Capability Port + Enhanced Parallel Port

[Bi-Directional]

To operate the onboard parallel port as Standard Parallel Port only, choose [Normal].

To operate the onboard parallel port in the EPP mode simultaneously, choose [EPP]. By choosing [ECP], the onboard parallel port will operate in ECP mode only.

Choosing [ECP + EPP] will allow the onboard parallel port to support both the ECP and EPP modes simultaneously.

Power Management Setup

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.	
Power Management Setup	
Setting	Help Item
ACPI Function	[Enabled]
ACPI Standby State	[S1]
EuP 2013	[Enabled]
S4/S5 PowerOn Wait (Sec)	[1-2]
Restore On AC Power Loss	[Off]
► Wake Up Event Setup	[Press Enter]

↑↓:Move Enter:Select +-/+:Value F10:Save ESC:Exit F1:General Help
 F4: CPU Spec F5:Memory-Z F8:Fail-Safe Defaults F6:Optimized Defaults

Important

S3-related functions described in this section are available only when the BIOS supports S3 sleep mode.

► ACPI Function

This item is to activate the ACPI (Advanced Configuration and Power Management Interface) Function. If your operating system is ACPI-aware, such as Windows 98SE/2000/ ME/ XP, select [Enabled].

► ACPI Standby State

This item specifies the power saving modes for ACPI function.

► EuP 2013

This Item is Designed for Energy Using Products Lot 6 2013 (EuP) aka Energy Related Products (ErP). To Reduce Power Consumption when System off or Standby Mode.

Note: When "Enabled" EuP 2013 Setting, System Don't Support RTC Wake Up Event function.

► S4/S5 PowerOn Wait (Sec)

This item allows you to select a waiting period when system wake-up from power state S4/S5.

► Restore On AC Power Loss

This item specifies whether your system will reboot after a power failure or interrupt occurs. Settings are:

- [Off] Always leaves the computer in the power off state.
- [On] Always leaves the computer in the power on state.
- [Last State] Restore the system to the status before power failure or interrupt occurred.

► Wake Up Event Setup

Press <Enter> and the following sub-menu appears.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
Wake Up Event Setup		
Wake Up Event By	[BIOS]	Help Item
Resume From S3 By USB Device	[Disabled]	
Resume S3/S5 By PS/2 Keyboard	[Disabled]	
Resume S3/S5 By PS/2 Mouse	[Disabled]	
Resume By PCI or PCI-E Device	[Disabled]	BIOS
Resume By RTC Alarm	[Disabled]	OS

► Wake Up Event By

Setting to [BIOS] activates the following fields, and use the following fields to set the wake up events. Setting to [OS], the wake up events will be defined by OS.

► Resume From S3 By USB Device

The item allows the activity of the USB device to wake up the system from S3 (Suspend to RAM) sleep state.

► Resume S3/S5 By PS/2 Keyboard / Mouse

These items determine whether the system will be awakened from what power saving modes when input signal of the PS/2 keyboard/ mouse is detected.

► Resume By PCI or PCI-E Device

When set to [Enabled], the feature allows your system to be awakened from the power saving modes through any event on PCI or PCI-E device.

► Resume By RTC Alarm

The field is used to enable or disable the feature of booting up the system on a scheduled time/date.

► Date/ HH:MM:SS

If Resume By RTC Alarm is set to [Enabled], the system will automatically resume (boot up) on a specific date/hour/minute/second specified in these fields (using the <+> and <-> to select the date & time settings). Available settings for each item are:

- [Date] 01 ~ 31, Every Day
- [HH:MM:SS] 00 ~ 23 : 00 ~ 59 : 00 ~ 59

H/W Monitor

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
H/W Monitor		
		Help Item
Chassis Intrusion	[Disabled]	
CPU Smart FAN Target	[Disabled]	
SYS FAN 1 Control	[100%]	
SYS FAN 2 Control	[100%]	
----- PC Health Status -----		
CPU Temperature	41°C/105°F	
System Temperature	32°C/89°F	
CPU FAN Speed	3340 RPM	
SYS FAN 1 Speed	0 RPM	
SYS FAN 2 Speed	0 RPM	
CPU Vcore	1.120 V	
GPU Vcore	0.808 V	
3.3V	3.360 V	
5V	4.961 V	
12V	12.056 V	

↑↓:Move Enter:Select +/−:Value F10:Save ESC:Exit F1:General Help
 F4: CPU Spec F5:Memory-Z F8:Fail-Safe Defaults F6:Optimized Defaults

► Chassis Intrusion

The field enables or disables the feature of recording the chassis intrusion status and issuing a warning message if the chassis is once opened. To clear the warning message, set the field to [Reset]. The setting of the field will automatically return to [Enabled] later.

► CPU Smart FAN Target

The mainboard provides the Smart Fan function which can control the CPU fan speed automatically depending on the current temperature to keep it with in a specific range. You can enable a fan target value here. If the current CPU fan temperature reaches to the target value, the smart fan function will be activated. It provides several sections to speed up for cooling down automatically.

► SYS FAN 1/ 2 Control


These items allow users to select how percentage of speed for the SYSFAN1/ 2.

► PC Health Status

► CPU/ System Temperature, CPU FAN/ SYS FAN 1/ 2 Speed, CPU Vcore, GPU Vcore, 3.3V, 5V, 12V

These items display the current status of all of the monitored hardware devices/components such as CPU voltage, temperatures and all fans' speeds.

Green Power

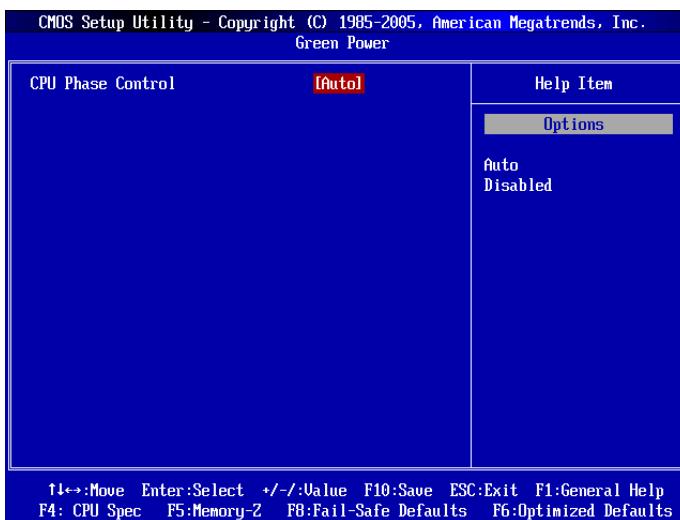


► CPU Phase Control (optional)

When set to [Auto], the hardware will auto adjust the CPU power phase according to the loading of CPU to reach the best power saving function.

BIOS Setting Password

When you select this function, a message as below will appear on the screen:

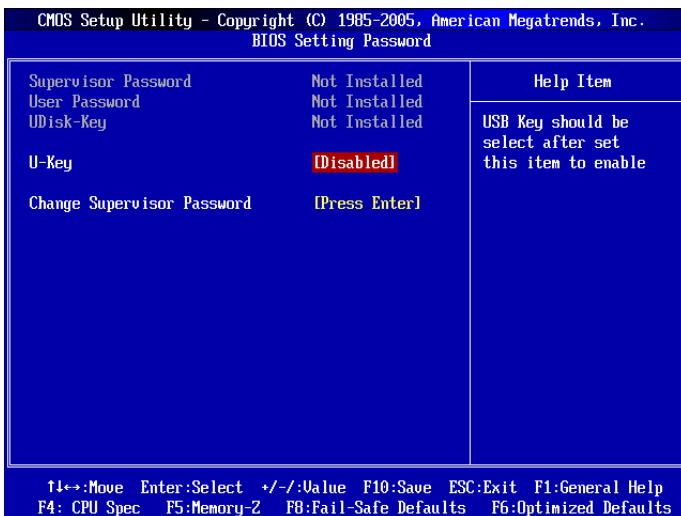

► U-Key

This item is used to enable/ disable USB driver device as a key.


► Make U-Key at

This item is used to specify the USB driver device as a key.

► Change Supervisor Password

This item is used to set the supervisor password.

Cell Menu

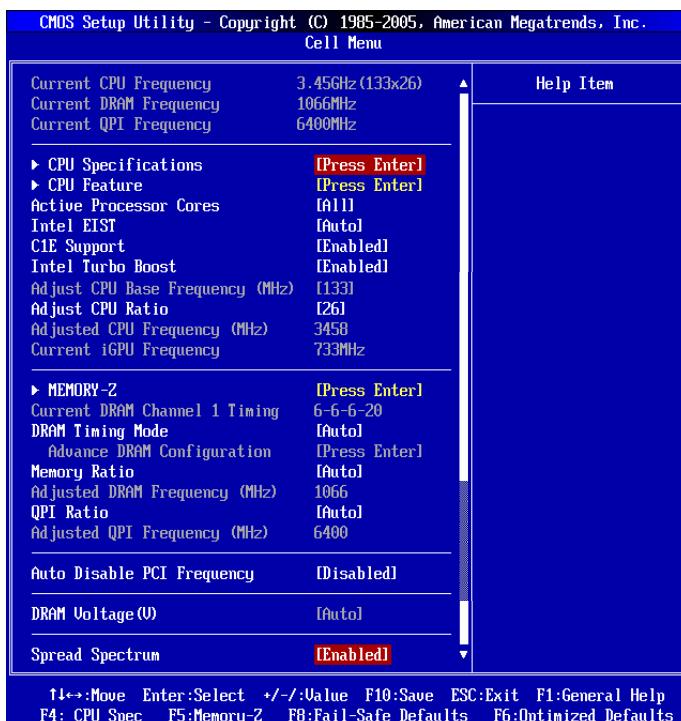

Important

Change these settings only if you are familiar with the chipset.

▶ Current CPU / DRAM / QPI Frequency

These items show the current frequencies of CPU, Memory and QPI. Read-only.

▶ CPU Specifications

Press <Enter> to enter the sub-menu and the following screen appears. This submenu shows the information of installed CPU.

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
CPU Specifications		
Help Item		
Intel (R) Core(TM) i5 CPU	670	0 3.47GHz
CPUID/MicroCode	20652/0C	
CPU Frequency	3450MHz	
Ratio Status	Unlocked (Min:09, Max:26)	
CPU Ratio	26	
CPU Stepping	B0	
Cache L1	128KB	
Cache L2	512KB	
Cache L3	4096KB	
Core VID	N/A	
Current Core VID	1.120 V	
Core Number	2	
► CPU Technology Support	[Press Enter]	

► CPU Technology Support

Press <Enter> to enter the sub-menu. In this sub-menu, it shows the installed CPU technologies. Read only.

► CPU Feature

Press <Enter> to enter the sub-menu and the following screen appears:

CMOS Setup Utility - Copyright (C) 1985-2005, American Megatrends, Inc.		
CPU Feature		
Help Item		
Intel EIST	[Auto]	
Intel C-State	[Enabled]	
C State Package Limit Setting	[Auto]	Disable: Disable GU3 Enable: Enable GU3
C1E Support	[Enabled]	
OverSpeed Protection	[Enabled]	
Hyper-Threading Function	[Enabled]	
Execute Bit Support	[Enabled]	
Set Limit CPUID MaxVal to 3	[Disabled]	
Intel Virtualization Tech	[Enabled]	
Intel VT-d Tech	[Disabled]	

► Intel EIST

The Enhanced Intel SpeedStep technology allows you to set the performance level of the microprocessor whether the computer is running on battery or AC power. This field will appear after you installed the CPU which supports speedstep technology.

► Intel C-State

C-state is a power management state that significantly reduces the power of the processor during idle. This field will appear after you installed the CPU which supports c-state technology.

► C State Package Limit Setting

This field allows you to select a C-state level. We recommend that you leave this setting to Auto.

► C1E Support

To enable this item to read the CPU power consumption while idle. Not all processors support Enhanced Halt state (C1E).

► OverSpeed Protection

Overspeed Protection function can monitor the current CPU draws as well as its power consumption. If it exceeds a certain level, the processor automatically reduces its clock speed. If you want to overclock your CPU, set it to [Disabled].

► Hyper-Threading Function

The processor uses Hyper-Threading technology to increase transaction rates and reduces end-user response times. The technology treats the two cores inside the processor as two logical processors that can execute instructions simultaneously. In this way, the system performance is highly improved. If you disable the function, the processor will use only one core to execute the instructions. Please disable this item if your operating system doesn't support HT Function, or unreliability and instability may occur.

Important

Enabling the functionality of Hyper-Threading Technology for your computer system requires ALL of the following platform Components:

- *CPU: An Intel® Processor with HT Technology;*
- *Chipset: An Intel® Chipset that supports HT Technology;*
- *BIOS: A BIOS that supports HT Technology and has it enabled;*
- *OS: An operating system that supports HT Technology.*

For more information on Hyper-threading Technology, go to:

http://www.intel.com/products/ht/hyperthreading_more.htm

► Execute Bit Support

Intel's Execute Disable Bit functionality can prevent certain classes of malicious "buffer overflow" attacks when combined with a supporting operating system. This functionality allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation.

► Set Limit CPUID MaxVal to 3

The Max CPUID Value Limit is designed limit the listed speed of the processor to older operating systems.

► Intel Virtualization Tech

This item is used to enable/disable the Intel Virtualization technology. For further information please refer to Intel's official website.

► Intel VT-d Tech

This item is used to enable/disable the Intel Virtualization Technology for Directed I/O (VT-d). For further information please refer to Intel's official website.

► Active Processor Cores

This item allows you to select the number of active processor cores.

► Intel EIST

The Enhanced Intel SpeedStep technology allows you to set the performance level of the microprocessor whether the computer is running on battery or AC power. This field will appear after you installed the CPU which supports speedstep technology.

► C1E Support

To enable this item to read the CPU power consumption while idle. Not all processors support Enhanced Halt state (C1E).

► Intel Turbo Boost

This item will appear when you install a CPU with Intel Turbo Boost technology. This item is used to enable/ disable Intel Turbo Boost technology. It can scale processor frequency higher dynamically when applications demand more performance and TDP headroom exists. It also can deliver seamless power scalability (Dynamically scale up, Speed-Step Down).

► Adjust CPU Base Frequency (MHz)

This item allows you to set the CPU Base clock (in MHz). You may overclock the CPU by adjusting this value. Please note the overclocking behavior is not guaranteed.

► Adjust CPU Ratio

This item allows you to adjust the CPU ratio. Setting to [Startup] enables the CPU running at the fastest speed which is detected by system.

► Adjusted CPU Frequency (MHz)

It shows the adjusted CPU frequency (Base clock x Ratio). Read-only.

► Current iGPU Frequency

These items show the current frequencies of iGPU. Read-only.

► MEMORY-Z

Press <Enter> to enter the sub-menu and the following screen appears.



► DIMM1~2 Memory SPD Information

Press <Enter> to enter the sub-menu. The sub-menu displays the informations of installed memory.

► Current DRAM Channel1~2 Timing

It shows the installed DRAM Timing. Read-only.

► DRAM Timing Mode

Select whether DRAM timing is controlled by the SPD (Serial Presence Detect) EEPROM on the DRAM module. Setting to [Auto] enables DRAM timings and the following "Advance DRAM Configuration" sub-menu to be determined by BIOS based on the configurations on the SPD. Selecting [Manual] allows users to configure the DRAM timings and the following related "Advance DRAM Configuration" sub-menu manually.

► Advance DRAM Configuration

Press <Enter> to enter the sub-menu.

► CH1/ CH2 1T/2T Memory Timing

This item controls the SDRAM command rate. Select [1N] makes SDRAM signal controller to run at 1N (N=clock cycles) rate. Selecting [2N] makes SDRAM signal controller run at 2N rate.

► CH1/ CH2 CAS Latency (CL)

This controls the CAS latency, which determines the timing delay (in clock cycles) before SDRAM starts a read command after receiving it.

► CH1/ CH2 tRCD

When DRAM is refreshed, both rows and columns are addressed separately. This setup item allows you to determine the timing of the transition from RAS (row address strobe) to CAS (column address strobe). The less the clock cycles, the faster the DRAM performance.

► CH1/ CH2 tRP

This setting controls the number of cycles for Row Address Strobe (RAS) to be allowed to precharge. If insufficient time is allowed for the RAS to accumulate its charge before DRAM refresh, refresh may be incomplete and DRAM may fail to retain data. This item applies only when synchronous DRAM is installed in the system.

► CH1/ CH2 tRAS

This setting determines the time RAS takes to read from and write to memory cell.

► CH1/ CH2 tRFC

This setting determines the time RFC takes to read from and write to a memory cell.

► CH1/ CH2 tWR

Minimum time interval between end of write data burst and the start of a precharge command. Allows sense amplifiers to restore data to cells.

► CH1/ CH2 tWTR

Minimum time interval between the end of write data burst and the start of a column-read command. It allows I/O gating to overdrive sense amplifiers before read command starts.

► CH1/ CH2 tRRD

Specifies the active-to-active delay of different banks.

► CH1/ CH2 tRTP

Time interval between a read and a precharge command.

► CH1/ CH2 tFAW

This item is used to set the tFAW timing.

► Current CH1/ CH2 tdrRdTRd/ tddRdTRd/ tsrRdTWr/ tdrRdTWr/ tddRdTWr/ tsrWrTRd/ tddWrTWr/ tsrRDTTrd/ tsrWrTWr

These item show the advanced DRAM timings.

► Channel 1/ Channel2 Advanced Memory Setting

Setting to [Auto] enables the advance memory timing automatically to be determined by BIOS. Setting to [Manual] allows you to set the following advanced memory timings.

► Memory Ratio

This item allows you to set the memory multiplier.

► Adjusted DRAM Frequency (MHz)

It shows the adjusted DRAM frequency. Read-only.

► QPI Ratio

This item allows you to set the QPI multiplier.

► Adjusted QPI Frequency (MHz)

It shows the adjusted QPI frequency. Read-only.

► Auto Disable PCI Frequency

When set to [Enabled], the system will remove (turn off) clocks from empty PCI slots to minimize the electromagnetic interference (EMI).

► DRAM Voltage (V)

These items are used to adjust the voltage of Memory.

► Spread Spectrum

When the mainboard's clock generator pulses, the extreme values (spikes) of the pulses create EMI (Electromagnetic Interference). The Spread Spectrum function reduces the EMI generated by modulating the pulses so that the spikes of the pulses are reduced to flatter curves.

Important

- If you do not have any EMI problem, leave the setting at [Disabled] for optimal system stability and performance. But if you are plagued by EMI, select the value of Spread Spectrum for EMI reduction.
- The greater the Spread Spectrum value is, the greater the EMI is reduced, and the system will become less stable. For the most suitable Spread Spectrum value, please consult your local EMI regulation.
- Remember to disable Spread Spectrum if you are overclocking because even a slight jitter can introduce a temporary boost in clock speed which may just cause your over-clock processor to lock up.

Important


Failed Overclocking Resolution

This mainboard supports overclocking greatly. However, please make sure your peripherals and components are bearable for some special settings. Any operation that exceeds product specification is not recommended. Any risk or damage resulting from improper operation will not be under our product warranty.

Two ways to save your system from failed overclocking...

- **Reboot**

Press the Power button to reboot the system three times. Please note that, to avoid electric current to affect other devices or components, we suggest an interval of more than 10 seconds among the reboot actions.

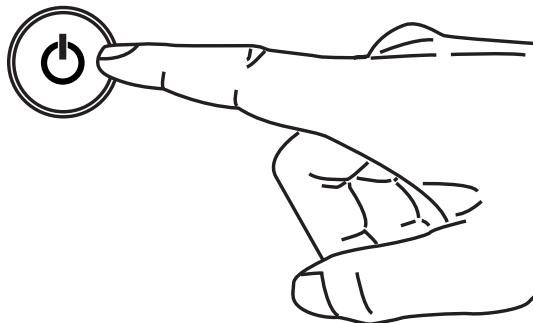


At the fourth reboot, BIOS will determine that the previous overclocking is failed and restore the default settings automatically. Please press any key to boot the system normally when the following message appears on screen.

Warning !!! The previous overclocking had failed,
and system will restore its defaults setting,
Press any key to continue.....

- **Clear CMOS**

Please refer to "Chapter 2" for more information about how to clear CMOS data.

M-Flash

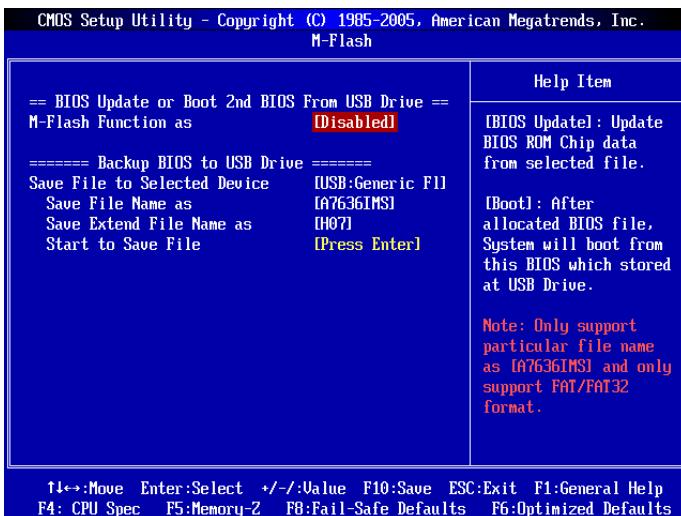

== BIOS Update or Boot 2nd BIOS From USB drive==

► **M-Flash function as**

M-Flash function allows you to flash BIOS from USB drive/ storage drive (FAT/ FAT32 format only), or allows the system to boot from the BIOS file inside USB drive (FAT/ FAT32 format only).


[Disabled] Disable M-Flash function.

[BIOS Update] Flash BIOS via the USB/ Storage drive directly. Update BIOS ROM chip data from selected file, which was be download from official website and must be saved in the root directory of the USB/ Storage drive. It only supports particular file name, which is the official BIOS file name from us.

[Boot] After allocated particular BIOS file, system will boot from this BIOS file which saved in the root directory of USB drive. System will skip MB ROM chip data and boot with this particular BIOS inside USB drive. Note: this option is for USB drive only.

Important

- Please refer to the block diagram below about the M-Flash function.

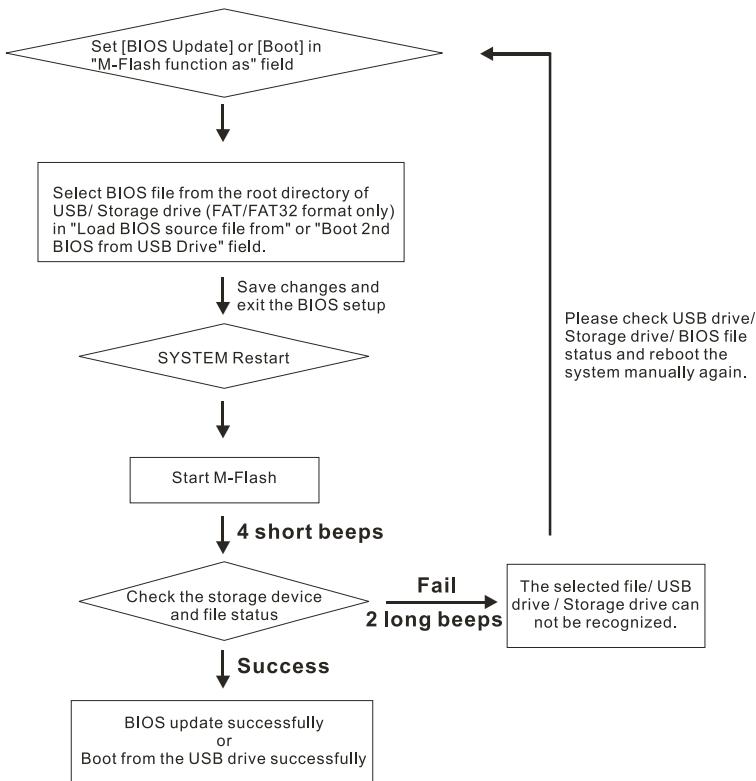

- The monitor may go dark during the Mflash operation due the special design of some graphics cards. The beeping noise signals that the Mflash operation is still in progress.

► Load BIOS source File from

When the M-Flash function as sets to [BIOS Update], this item is selectable. Use this item to select particular BIOS file from the USB/ Storage (FAT32 format only) drive.

► Boot 2nd BIOS from USB Drive

When the M-Flash function as sets to [Boot]], this item is selectable. Use this item to select particular BIOS file from the USB drive.

== Backup BIOS to USB Drive ==

The following fields are used to read the onboard BIOS ROM data, and save it to USB drive/ storage drive.

► Save File to Selected Device

Please setup a specific folder in specific USB drive/ storage drive to save BIOS file from BIOS ROM chip data. Note: it only supports FAT/ FAT32 file system drive.

► Save File Name as

Please setup a specific name for the BIOS file, which will be saved into the USB drive/ storage drive. Note: we suggest you using the official name as the default name.


► Save Extend File Name as

Please setup a specific extend name for the BIOS file, which will be saved into the USB drive/ storage drive. Note: we suggest you using [ROM] as default name.

► Start to Save File

Press “Enter” and select “OK” the system will start to save the onboard ROM chip data to the selected USB drive/ storage drive.

Overclocking Profile

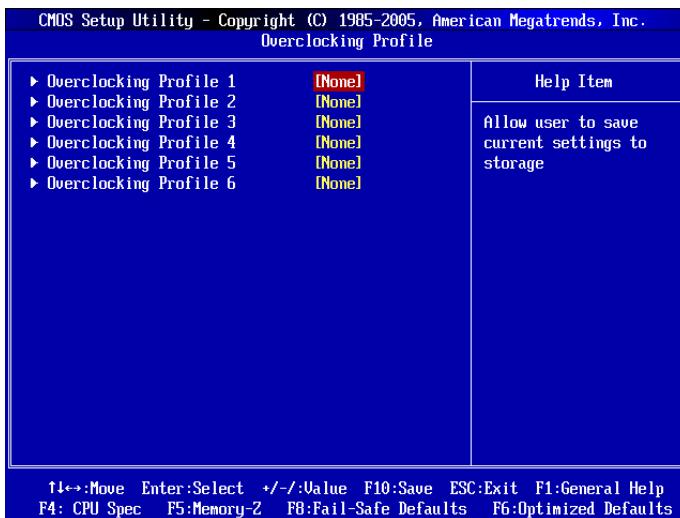

▶ Overclocking Profile 1/ 2/ 3/ 4/ 5/ 6

These items are used to save the correct settings to selected profile, and they are also used to load the settings from the selected profile.

Load Fail-Safe/ Optimized Defaults

The two options on the main menu allow users to restore all of the BIOS settings to the default Fail-Safe or Optimized values. The Optimized Defaults are the default values set by the mainboard manufacturer specifically for optimal performance of the mainboard. The Fail-Safe Defaults are the default values set by the BIOS vendor for stable system performance.

When you select Load Fail-Safe Defaults, a message as below appears:




Selecting Ok and pressing Enter loads the BIOS default values for the most stable, minimal system performance.

When you select Load Optimized Defaults, a message as below appears:



Selecting Ok and pressing Enter loads the default factory settings for optimal system performance.

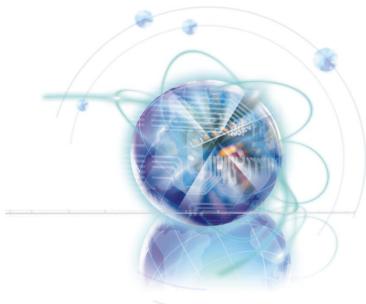

Appendix A

Realtek Audio

The Realtek audio provides 8-channel DAC that simultaneously supports 5.1 sound playback and 2 channels of independent stereo sound output (multiple streaming) through the Front-Out-Left and Front-Out-Right channels.

Installing the Realtek HD Audio Driver

You need to install the HD audio driver for Realtek audio codec to function properly before you can get access to 2-, 4-, 6-, 8- channel or 5.1+2 channel audio operations. Follow the procedures described below to install the drivers for different operating systems.

Installation for Windows®

For Windows® XP, you must install Windows® XP Service Pack3 or later before installing the driver.

The following illustrations are based on Windows® 7 environment and could look slightly different if you install the drivers in different operating systems.

1. Insert the application DVD into the DVD-ROM drive. The setup screen will automatically appear.
2. Click Driver tab.
3. Click Audio button.



4. Select Realtek HD Audio Drivers to start installing the drivers.
5. Click Next to install the Realtek High Definition Audio Driver.
6. Follow the on-screen instructions to install drivers.
7. Click Finish to restart the system.

Important

The HD Audio Configuration software utility is under continuous update to enhance audio applications. Hence, the program screens shown here in this section may be slightly different from the latest software utility and shall be held for reference only.

Software Configuration


After installing the audio driver, the “Realtek HD Audio Manager” icon will appear at the notification area (lower right of the screen). You may double click the icon and the GUI will pop up accordingly.



It is also available to enable the audio driver by clicking the Realtek HD Audio Manager from the Control Panel.

Software panel overview

The following figure describes the function of the Realtek HD Audio Manager panel.

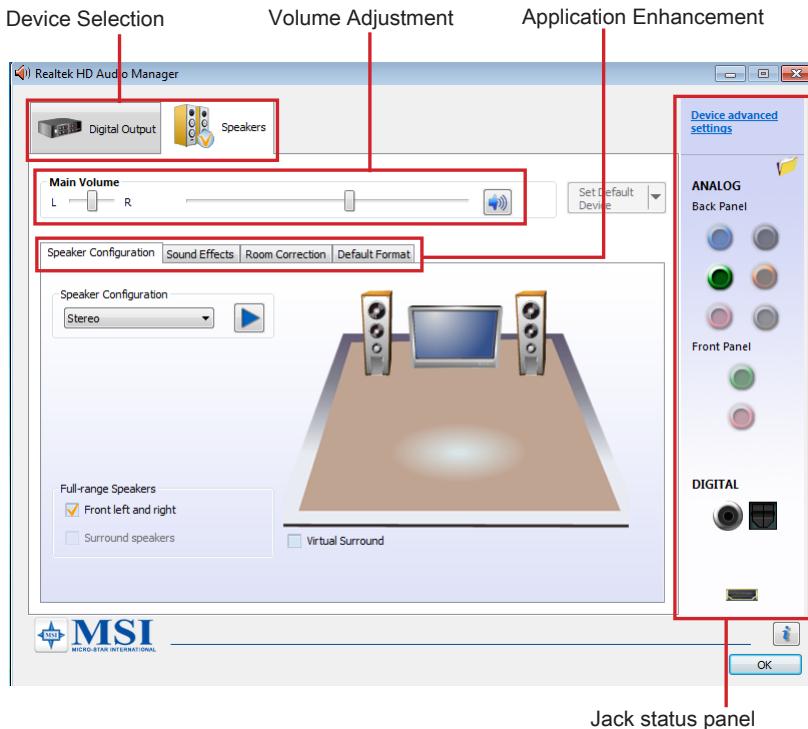

■ Device Selection

Here you can select a audio output source to change the related options. the “check” sign (in orange) indicates the devices as default.

■ Volume Adjustment

You can control the volume or balance the right/left side of the speakers that you plugged in front or rear panel by adjust the bar.

■ Application Enhancement

The array of options will provide you a complete guidance of anticipated sound effect for both output and input device.

■ Jack status panel

This panel depicts all render and capture devices currently connected with your computer. Additionally, more applications would be found at the option of “Device Advanced Settings”.

Auto popup dialog

When you plug into the device at the jack, a dialogue window will pop up asking you which device is current connected.

