



HP Pavilion 17 Notebook PC
HP Pavilion 15 Notebook PC

Maintenance and Service Guide

© Copyright 2014 Hewlett-Packard
Development Company, L.P.

AMD and AMD Radeon are trademarks of Advanced Micro Devices, Inc. Intel, Core, and Pentium are trademarks of Intel Corporation in the U.S. and other countries. Microsoft and Windows are U.S. registered trademarks of the Microsoft group of companies.

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows 8. This computer may require upgraded and/or separately purchased hardware, drivers and/or software to take full advantage of Windows 8 functionality. See <http://www.microsoft.com> for details.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Second Edition: August 2014

First Edition: May 2014

Document Part Number: 764131-002

Important Notice about Customer Self-Repair Parts

 **CAUTION:** Your computer includes Customer Self-Repair parts and parts that should only be accessed by an authorized service provider. See Chapter 5, "Removal and replacement procedures for Customer Self-Repair parts," for details. Accessing parts described in Chapter 6, "Removal and replacement procedures for Authorized Service Provider only parts," can damage the computer or void your warranty.

Safety warning notice

 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Product description	1
2 External component identification	7
Finding your hardware and software information	7
Locating hardware	7
Locating software	7
Right side	8
Left side	11
Display	13
Top	14
TouchPad	14
Lights	15
Buttons and speakers	16
Keys	17
Bottom	18
Labels	19
3 Illustrated parts catalog	20
Computer major components	20
Display assembly subcomponents	40
Mass storage devices	43
Miscellaneous parts	44
Sequential part number listing	45
4 Removal and replacement procedures preliminary requirements	70
Tools required	70
Service considerations	70
Plastic parts	70
Cables and connectors	71
Drive handling	71
Grounding guidelines	72
Electrostatic discharge damage	72
Packaging and transporting guidelines	73
Workstation guidelines	73
Equipment guidelines	74

5 Removal and replacement procedures for Customer Self-Repair parts	75
Component replacement procedures	75
Battery	76
Optical drive	77
6 Removal and replacement procedures for Authorized Service Provider parts	79
Component replacement procedures	79
Base enclosure	80
Display panel	88
WLAN module	96
TouchPad button board	99
Battery Board (select models only)	100
Optical drive connector	101
Subwoofer (select models only)	102
USB board	104
Hard drive	105
System board	106
Speakers	115
Memory modules	116
RTC battery	117
Power connector	118
Fan	119
Heat sink	120
Power button board	123
7 Windows – Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI)	124
Starting Setup Utility (BIOS)	124
Updating the BIOS	124
Determining the BIOS version	124
Downloading a BIOS update	125
Using HP PC Hardware Diagnostics (UEFI)	126
Downloading HP PC Hardware Diagnostics (UEFI) to a USB device	126
8 Ubuntu Linux – Using Setup Utility (BIOS) and System Diagnostics	127
Starting Setup Utility	127
Using Setup Utility	127
Changing the language of Setup Utility	127
Navigating and selecting in Setup Utility	127
Displaying system information	128
Restoring factory default settings in Setup Utility	128

Exiting Setup Utility	128
Updating the BIOS	129
Determining the BIOS version	129
Downloading a BIOS update	129
Using Advanced System Diagnostics	130
9 Specifications	131
Computer specifications	131
Display Specifications (17.3)	132
Display Specifications (15.6-in)	133
Hard drive specifications	134
DVD±RW SuperMulti Double-Layer Combination Drive specifications	134
10 Windows 8.1 – Backing up, restoring, and recovering	136
Creating recovery media and backups	136
Creating HP Recovery media	136
Restore and recovery	137
Recovering using HP Recovery Manager	138
What you need to know	138
Using the HP Recovery partition (select models only)	138
Using HP Recovery media to recover	139
Changing the computer boot order	139
Removing the HP Recovery partition (select models only)	139
11 Backing up, restoring, and recovering	140
Creating backups	140
Creating recovery media to recover the original system	140
What you need to know	140
Creating the recovery media	141
Creating system restore points	141
What you need to know	141
Creating a system restore point	141
Backing up system and personal information	141
Tips for a successful backup	142
What you need to know	142
Creating a backup using Windows Backup and Restore	142
Restore and recovery	143
Restoring to a previous system restore point	143
Restoring specific files	143
Restoring specific files using Windows Backup and Restore	143

Recovering the original system using HP Recovery Manager	143
What you need to know	143
Recovering using HP Recovery partition (select models only)	144
Recovering using the recovery media	144
Changing the computer boot order	144
12 Ubuntu Linux – Backing up, restoring, and recovering	146
Performing a system recovery	146
Creating the restore DVDs	146
Creating a restore image on a USB device	146
Performing recovery using the restore media	147
Backing up your information	147
13 Power cord set requirements	149
Requirements for all countries	149
Requirements for specific countries and regions	150
14 Recycling	152
Index	153

1 Product description



NOTE: This document contains Microsoft Windows 8.1 and Windows 7 content. Parts that are available for Windows 7 are indicated with the spare part number.

Category	Description	AMD	Intel
Product Name	HP Pavilion 17 Notebook PC HP Pavilion 15 Notebook PC	√	√
Processors	Processors are attached to the system board.		
AMD™	<ul style="list-style-type: none"> • AMD A10-5745M (2.1 GHz/2.9 GHz, 4 MB L2, 1333 MHz DDR3L), quad core, 25 W Max DDR3L-1333 • AMD A8-5545M (1.7 GHz, up to 2.7 GHz, 4 MB L2), Quad 19W, Max DDR3L-1333 • AMD A8-6410 (2.0 GHz up to 2.4 GHz, 2 MB L2, 1600 MHz DDR3L), quad core 15 W Max DDR3L-1600 • AMD A6-6310 (1.8 up to 2.4 GHz, 2 MB L2, 1600 MHz DDR3L), quad core, 15 W Max DDR3L-1600 • AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L), quad core, 15 W • AMD E1-6010 (1.35GHz, 1 MB L2), Dual 10 W, Max DDR3L-1333 • HP Hexa-Core (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L), quad core 15 W 	√	
Intel®	<ul style="list-style-type: none"> • Intel Core i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (4 MB L3 cache, dual core, 15 W) • Intel Core i7-4500U (1.8 GHz, SC turbo up to 3.0 GHz), 1600 MHz/4 B L3, dual core 15 W • Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3 MB L3 cache, dual core, 15 W) available for Windows 8.1 and Windows 7 • Intel Core i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/3 MB L3, dual core 15 W • Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, Dual 15 W available for Windows 8.1 and Windows 7 • Intel Core i3-4010U (1.7 GHz), 1600 MHz/3 MB L3, dual core 15 W • Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, dual core 15 W available for Windows 8.1 and Windows 7 • Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) • Intel Pentium N3540 (2.16 GHz, turbo up to 2.66 GHz), 1333 MHz/2 MB L2, quad core 4.5 W • Intel Celeron N2830 (up to 1.83 GHz) 1333 MHz/2 MB L2, dual core SDP4.5 W 		√
Chipset	<ul style="list-style-type: none"> • AMD A76M FCH, for use with computer models A10-5745M 	√	

Category	Description	AMD	Intel
	<ul style="list-style-type: none"> • AMD A76M FCH / AMD A70M FCH AMD A7xM (AMD A76 FCH to AMD A70M FCH) • AMD Integrated SOC FCH, for use with computer models E1-6010, A8-6410, A6-6310, and A4-6210 		
	<ul style="list-style-type: none"> • Intel Lynx Point-LP PCH, for use with 4th Generation Intel Core processors 		√
Graphics	Internal graphics:		
	Support HD Decode, DX11, and HDMI	√	
	Support PX7		
	<ul style="list-style-type: none"> • AMD Radeon™ HD 8610G • AMD Radeon HD 8510G • AMD Radeon R5 Graphics • AMD Radeon R4 Graphics • AMD Radeon R3 Graphics • AMD Radeon R2 Graphics 		
	Switchable Discrete Graphics:		
	AMD Topaz-XT (AMD Radeon™ R7 M260) with up to 2048 MB of dedicated video memory (256Mx16 DDR3L 900MHz x 4 PCs, 1 GHz bridge to 900MHz)		
	<ul style="list-style-type: none"> • Intel HD Graphics 4400, for use with 4th Generation Intel Core processors • Intel HD Graphics, for use with 4th Generation Intel Pentium processors 		√
	Switchable discrete graphics:		
	<ul style="list-style-type: none"> • HD decode, DX11, and HDMI 	√	√
	<ul style="list-style-type: none"> • Px7.0 	√	
	<ul style="list-style-type: none"> • Optimus • GPS (GPU Performance Scaling) 		√
	<ul style="list-style-type: none"> • NVIDIA NI5S_GT GeForce 840M with up to 2048 MB of dedicated video memory (256 M x16 DDR3 900 MHz x 4 PCs, 1 GHz downgrade to 900 MHz), 64 bit available for Windows 8.1 and Windows 7 • NVIDIA NI5S_GM GeForce 830M with up to 2048 MB of dedicated video memory (256 M x16 DDR3 900 MHz x 4 PCs, 1 GHz downgrade to 900 MHz), 64 bit 		√
Panel	16:9 Ultra Wide Aspect Ratio	√	√
	Touch solution with flush glass, multitouch enabled		
	No printing logo, no mic drill hole on mask		
	Support LVDS (co-layout with eDP1.3+PSR)		
	<ul style="list-style-type: none"> • 17.3" HD+ WLED BrightView (1600x900) (wedge, 6.0mm) (for non-touch SKU only) available for Windows 8.1 and Windows 7 		

Category	Description	AMD	Intel
	<ul style="list-style-type: none"> 17.3" HD+ WLED Antiglare (1600x900) LED- SVA (wedge, 6.0mm) (for touch SKU only) 17.3" FHD WLED Antiglare (1920x1080) Wedge (6.0mm) WVA (for both non-touch & touch SKU) 15.6" HD WLED BrightView (1366x768) flat (3.6mm) SVA (for non-touch SKU only) available for Windows 8.1 and Windows 7 15.6" HD WLED Antiglare (1366x768) flat (3.8mm) SVA (for touch SKU only) 15.6" FHD WLED Antiglare (1920x1080) slim (3.2mm) SVA (for both non-touch & touch SKU) 		
Memory	<p>Supports the following configurations:</p> <ul style="list-style-type: none"> 12288 MB (8192 MB×1+ 4096 MB×1; not supported on computer models with a 32-bit operating system) 8192 MB (8192 MB×1 or 4096 MB×2; not supported on computer models equipped with a 32-bit operating system) 6144 MB (4096 MB×1 + 2048 MB×1; not supported on computer models equipped with a 32-bit operating system) 4096 MB (4096 MB×1 or 2048 MB×2) 16384 MB (8192 MB x 2) <p>Two SODIMM memory module slots (select models only)</p> <p>DDR3L-1600 MHz dual channel support</p> <p>DDR3L-1333 MHz dual channel support</p> <p>Max. DDR3L-1600MHz Single Channel Support</p>	√	√
	<p>DDR3-1333MHz Dual Channel Support (DDR3L-1600 downgraded to DDR3-1333)</p> <p>DDR3L-1333MHz Single Channel Support (DDR3L-1600MHz downgrade to DDR3L-1333MHz)</p>	√	
	One SODIMM slot - NON customer accessible / upgradeable		√
Hard drive	<p>Supports 6.35 cm (2.5 in) hard drives in 9.5 mm (.37 in) and 7.0 mm (.28 in) thicknesses (all hard drives use the same bracket)</p> <p>Supports the following hard drives:</p> <ul style="list-style-type: none"> 1.5 TB, 5400 rpm 9.5 mm for HP Pavilion 15 Notebooks and AMD computers only 1 TB, 5400 rpm, 9.5 mm available for Windows 8.1 and Windows 7 750 GB, 5400 rpm, 9.5 mm available for Windows 8.1 and Windows 7 500 GB, 5400 rpm, 7.0 mm or 9.5 mm available for Windows 8.1 and Windows 7 320 GB, 5400 rpm, 7.0 mm or 9.5 mm <p>Serial ATA</p> <p>HP 3D DriveGuard</p>	√	√
	Supports the following hybrid drives:	√	√

Category	Description	AMD	Intel
	<ul style="list-style-type: none"> 500 GB, 5400 rpm, + 8 GB NAND Hybrid HDD; 7 mm 750 GB, 5400 rpm, + 8 GB NAND Hybrid HDD; 9.5 mm 1 TB, 5400 rpm, + 8 GB NAND Hybrid HDD; 9.5 mm 		
Optical drive	Fixed Serial ATA 9.5 mm tray load Zero power optical drive Supports the following:	√	√
	<ul style="list-style-type: none"> DVD±RW Double-Layer SuperMulti Drive Blu-ray Disc R/RW with SuperMulti for AMD HP Pavilion 15 PC models only Support M-disc	√	√
Audio and video	Supports: Beats Audio Subwoofer for AMD only Dual speakers HP TrueVision HD webcam (fixed, no tilt with activity LED; 1280×720 by 30 frames per second, USB 2.0, M-jpeg) Two dual array, digital microphones with appropriate beam-forming, echo-cancellation, noise-reduction software	√	√
	HD Audio		√
	Supports Dragon Notes for AMD models only		
Ethernet	Integrated 10/100 NIC	√	√
Wireless	Integrated wireless local area network (WLAN) options by way of wireless module One half-size mini card/PCI Express (HMC/PCIe) slot Two WLAN antennas built into display assembly Compatible with Miracast-certified devices	√	√
	Support for the following WLAN formats:	√	√
	<ul style="list-style-type: none"> Qualcomm Atheros AR9485 802.11 bgn 1x1 Wi-Fi adapter (with single antenna) available for Windows 7 QCA 9565 802.11 bgn 1x1 Wi-Fi + BT4.0 combo adapter (with single antenna) available for Windows 8.1 and Windows 7 Realtek RT8188 802.11bgn 1x1 Wi-Fi Adapter available for Windows 8.1 and Windows 7 Realtek RT8723BE 802.11bgn 1x1 Wi-Fi + BT4.0 Combo Adapter available for Windows 8.1 and Windows 7 		
	<ul style="list-style-type: none"> Realtek RT8188 802.11 bgn 1x1 Wi-Fi adapter (with single antenna) available for Windows 8.1 and Windows 7 	√	

Category	Description	AMD	Intel
	<ul style="list-style-type: none"> Realtek RT8723BE 802.11 bgn 1x1 Wi-Fi + BT4.0 combo adapter (with single antenna) available for Windows 8.1 and Windows 7 Broadcom BCM 4352 802.11 ac 2x2 WiFi + BT 4.0 Combo Adapter (with dual antenna) available for Windows 8.1 and Windows 7 		
	<ul style="list-style-type: none"> Realtek RTL8188EE 802.11 bgn 1x1 Wi-Fi adapter (with single antenna) available for Windows 8.1 and Windows 7 Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC combo adapter (with single antenna) available for Windows 8.1 and Windows 7 Intel Dual Band Wireless-AC 3160 802.11 ac 1x1 WiFi + BT 4.0 combo adapter (with dual antennas) 		✓
External media cards	<p>HP Multi-Format Memory Card Reader slot with push-push technology, supporting the following digital card formats:</p> <p>Supports memory cards such as Secure Digital SD/SDHC/SDXC</p>	✓	✓
Ports	<ul style="list-style-type: none"> AC Smart Pin adapter plug (4.5 mm barrel) Combination audio-out (stereo headphone)/audio-in (mono microphone) RJ-45 (Ethernet) USB 3.0 (2 ports), USB 2.0 (1 port) 	✓	✓
	<ul style="list-style-type: none"> HDMI version 1.4 output supporting 1920 x 1080 @ 60 Hz Hot Plug / Unplug and auto detect for correct output to wide-aspect versus standard aspect video 	✓	✓
Keyboard/ pointing devices	<p>Full Size Textured island-style Keyboard with numeric key pad black</p> <p>Full Size Textured island-style Keyboard with numeric key pad white</p> <p>Clickpad with image sensor</p> <p>Multitouch gestures enabled</p> <p>Supports Windows® 8 Modern Trackpad Gestures</p>	✓	✓
	<p>Full Size Backlit 3 Coat paint island-style Keyboard with numeric keypad black with red LED for AMD HP Pavilion 15 PC models Beats Audio Special Edition</p>	✓	
Power requirements	<p>Supports the following AC adapters:</p> <ul style="list-style-type: none"> 45 W HP Smart AC adapter (nPFC, 3-wire, 4.5 mm, nslim) 	✓	✓
	<ul style="list-style-type: none"> 65 W HP Smart AC adapter (nPFC, 3-wire, 4.5 mm) 65 W HP Smart AC adapter (nPFC, 3-wire, 4.5 mm, nslim) 	✓	✓
	<ul style="list-style-type: none"> 90 W Smart AC adapter (PFC, 3-wire, 4.5 mm) 90 W AC adapter (PFC, 3-wire, 4.5 mm) 	✓	
	<p>Supports battery fast charge</p> <p>Supports the following batteries (battery is user-removable)</p> <ul style="list-style-type: none"> 4 cell battery - 41 Whr (2.8 AH) 	✓	✓
Security	<ul style="list-style-type: none"> Security cable lock 	✓	✓

Category	Description	AMD	Intel
Operating system	Preinstalled:	√	√
	• Windows 8.1 Standard, 64 bit		
	• Windows 8.1 Professional, 64 bit		
	• Windows 7		
	• FreeDOS 2.0, for Intel models only		
	• Ubuntu Linux		
Serviceability	End-user replaceable parts:	√	√
	• AC adapter		
	• Battery		
	• Optical drive		

2 External component identification

Finding your hardware and software information

Locating hardware

To find out what hardware is installed on your computer:

1. From the Start screen, type `control panel`, and then select **Control Panel**.
2. Select **System and Security**, select **System**, and then click **Device Manager** in the left column.
A list displays all the devices installed on your computer.

For Windows 7 Information:

1. Select **Start > Control Panel**.
2. Select **System and Security**, select **System**, and then click **Device Manager** in the left column.
A list displays all the devices installed on your computer.

To find out information about system hardware components and the system BIOS version number, press `fn+esc`.

Locating software

To find out what software is installed on your computer:

- ▲ From the Start screen, click the down arrow in the lower-left corner of the screen.


For Windows 7 Information:

- ▲ Select **Start > Control Panel > Programs and Features**.

Right side




NOTE: Refer to the illustration that most closely matches your computer.

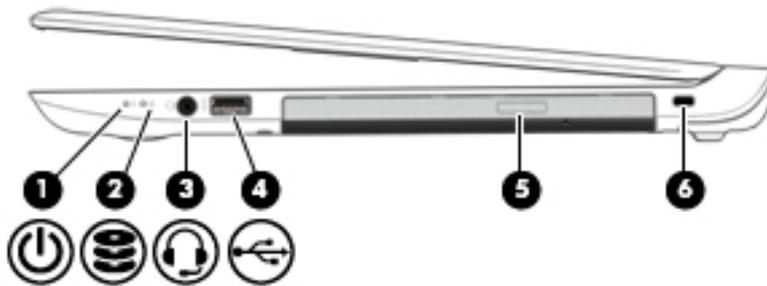

Component	Description
(1)  Power light	<ul style="list-style-type: none"> • On: The computer is on. • Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. • Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2)  Hard drive light	<ul style="list-style-type: none"> • Blinking white: The hard drive is being accessed. • Amber: HP 3D DriveGuard has temporarily parked the hard drive.
(3)  Audio-out (headphone)/Audio-in (microphone) jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional microphone-only devices.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide, from the Start screen, type <code>support</code>, and then select the HP Support Assistant app.</p> <p>For Windows 7, to access the user guides, select Start > Help and Support > User Guides.</p> <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p> <p>NOTE: Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p>
(4)  USB 2.0 port	Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.
(5) Optical drive	Depending on your computer model, reads an optical disc or reads and writes to an optical disc.

Component	Description
	<p>NOTE: For disc compatibility information, go to the Help and Support web page. Follow the web page instructions to select your computer model. Select Drivers & Downloads, and then follow the on-screen instructions.</p>
(6)  Security cable slot	<p>Attaches an optional security cable to the computer.</p> <p>NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.</p>

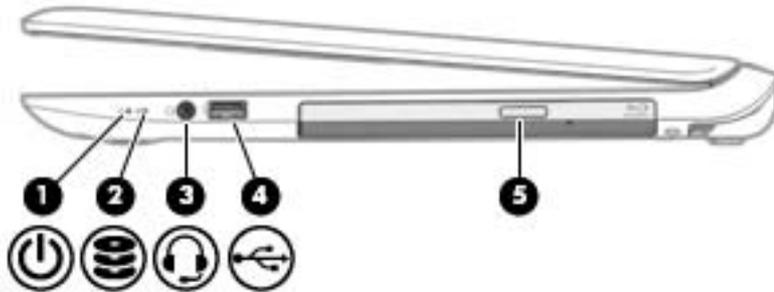


Component	Description
(1)  Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2)  Hard drive light	<ul style="list-style-type: none"> Blinking white: The hard drive is being accessed. Amber: HP 3D DriveGuard has temporarily parked the hard drive.
(3)  Audio-out (headphone)/Audio-in (microphone) jack	<p>Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional microphone-only devices.</p> <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>. To access this guide, from the Start screen, type <code>support</code>, and then select the HP Support Assistant app.</p> <p>For Windows 7, to access the user guides, select Start > Help and Support > User Guides.</p> <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p> <p>NOTE: Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p>


Component	Description
(4)  USB 2.0 port	Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.
(5) Optical drive	Depending on your computer model, reads an optical disc or reads and writes to an optical disc. NOTE: For disc compatibility information, go to the Help and Support web page. Follow the web page instructions to select your computer model. Select Drivers & Downloads , and then follow the on-screen instructions.

Left side

 **NOTE:** Refer to the illustration that most closely matches your computer.

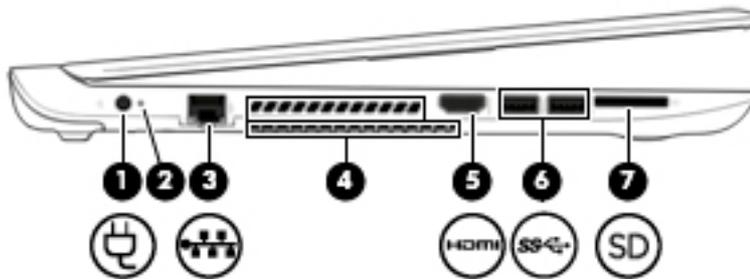


Component	Description
(1) 	Power connector Connects an AC adapter.
(2) 	AC adapter light <ul style="list-style-type: none"> Amber: The battery is charging. White: The AC adapter is connected and the battery is charged. Off: The computer is using battery power.
(3) 	RJ-45 (network) jack/status lights Connects a network cable. <ul style="list-style-type: none"> White: The network is connected. Amber: Activity is occurring on the network.
(4)	Vents (2) Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5) 	HDMI port Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.
(6) 	USB 3.0 ports (2) Each USB 3.0 port connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.
(7)	Memory card reader Reads optional memory cards that store, manage, share, or access information. To insert a card: Hold the card label-side up, with connectors facing the slot, insert the card into the slot, and then push in on the card until it is firmly seated. To remove a card: Press in on the card it until it pops out.

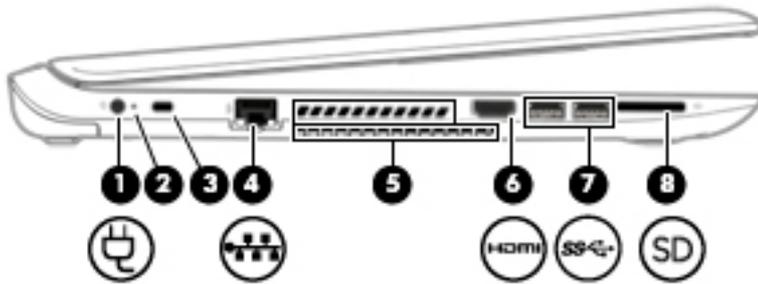

Component	Description
(1) 	Power connector Connects an AC adapter.
(2) 	AC adapter light <ul style="list-style-type: none"> Amber: The battery is charging. White: The AC adapter is connected and the battery is charged. Off: The computer is using battery power.
(3) 	Security cable slot Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(4) 	RJ-45 (network) jack/status lights Connects a network cable. <ul style="list-style-type: none"> White: The network is connected. Amber: Activity is occurring on the network.
(5)	Vents (2) Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(6) 	HDMI port Connects an optional video or audio device, such as a high-definition television, any compatible digital or audio component, or a high-speed HDMI device.
(7) 	USB 3.0 ports (2) Each USB 3.0 port connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.
(8)	Memory card reader Reads optional memory cards that store, manage, share, or access information. To insert a card: Hold the card label-side up, with connectors facing the slot, insert the card into the slot, and then push in on the card until it is firmly seated. To remove a card: Press in on the card it until it pops out.

Display

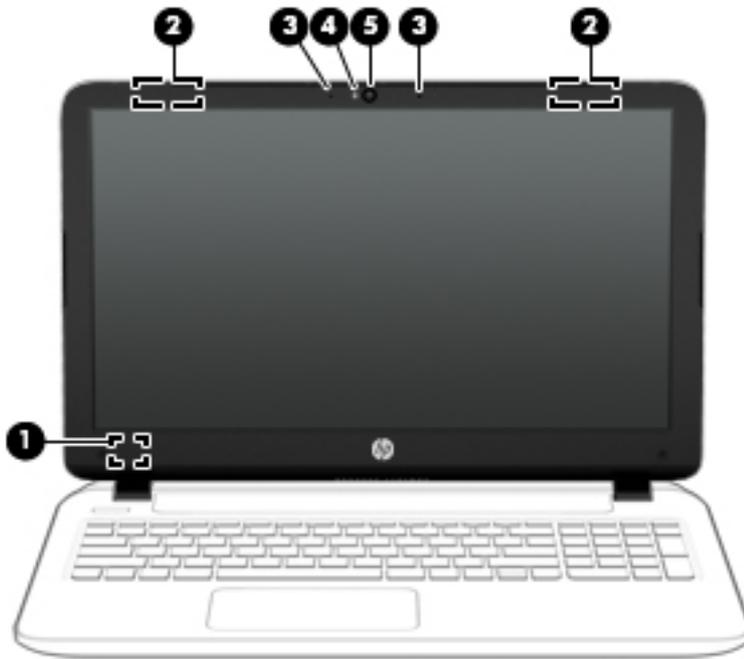

Component	Description
(1) Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on. NOTE: The internal display switch is not visible from the outside of the computer.
(2) WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLANs). NOTE: Depending on your computer model, the number of antennas may vary.
(3) Internal microphones (2)	Record sound.
(4) Webcam light	On: The webcam is in use.
(5) Webcam	Records video and captures photographs. Some models allow you to video conference and chat online using streaming video. To use the webcam, from the Start screen, type <i>camera</i> , and then select Camera from the list of applications. For Windows 7, select Start > All Programs > Communication and Chat > Cyberlink YouCam 5 .

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. To access this guide, from the Start screen, type *support*, and then select the **HP Support Assistant** app.

To access the Windows 7 user guides, select **Start > Help and Support > User Guides**.


Top

TouchPad




Component	Description
(1) TouchPad zone	Reads your finger gestures to move the pointer or activate items on the screen. NOTE: The TouchPad also supports edge-swipe gestures.
(2) Left TouchPad button	Functions like the left button on an external mouse.
(3) Right TouchPad button	Functions like the right button on an external mouse.

Lights

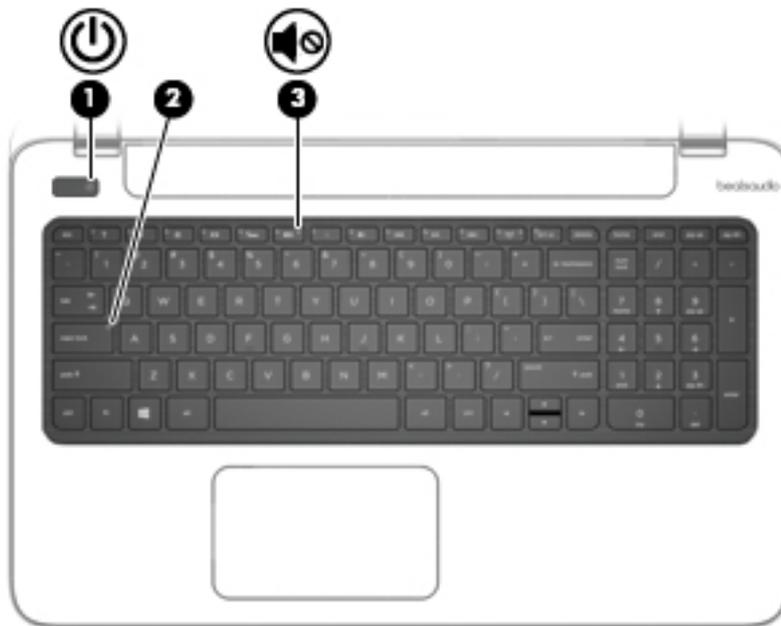


Component	Description
(1)  Power light	<ul style="list-style-type: none">• On: The computer is on.• Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components.• Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power.
(2) Caps lock light	On: Caps lock is on, which switches the keys to all capital letters.
(3)  Mute light	<ul style="list-style-type: none">• Amber: Computer sound is off.• Off: Computer sound is on.

Buttons and speakers

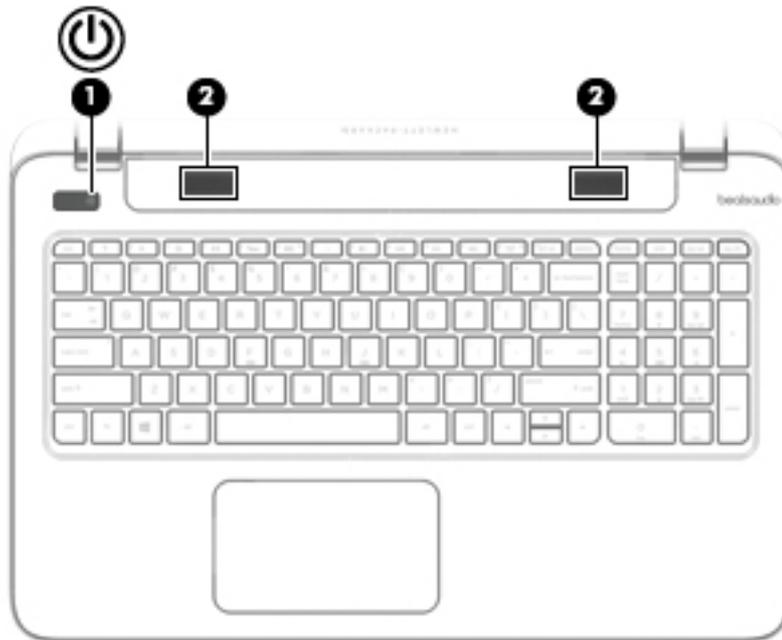


Component	Description
(1)  Power button	<ul style="list-style-type: none">• When the computer is off, press the button to turn on the computer.• When the computer is on, press the button briefly to initiate Sleep.• When the computer is in the Sleep state, press the button briefly to exit Sleep.• When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button will result in the loss of unsaved information.</p> <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, press and hold the power button down for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options. From the Start screen, type <code>power</code>, select Power and sleep settings, and then select Power and sleep from the list of applications.</p> <p>To learn more about your power settings with Windows 7, select Start > Control Panel > System and Security > Power Options.</p>
(2) Speakers (2)	Produce sound.

Keys

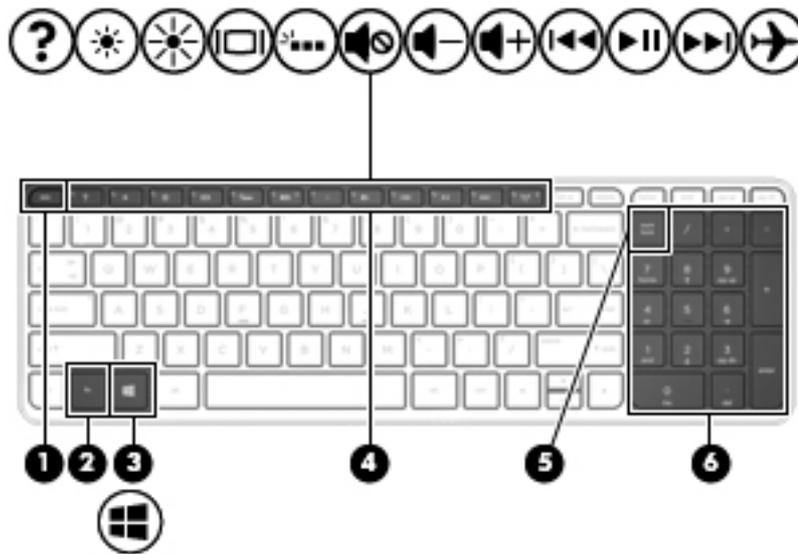

Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions.
(3)  Windows key	Returns you to the Start screen from an open app or the Windows desktop. NOTE: Pressing the Windows key again will return you to the previous screen. For Windows 7, Displays the Windows Start Menu.
(4) Action keys	Execute frequently used system functions. NOTE: On select models, the <code>f5</code> action key turns the keyboard backlight feature off or on.
(5) <code>num lock</code> key	Controls the function of the integrated numeric keypad. Press the key to alternate between the standard numeric function found on an external keypad (this function is turned on at the factory) and the navigational function (indicated by the directional arrows on the keys). NOTE: The keypad function that is active when the computer is turned off is reinstated when the computer is turned back on.
(6) Integrated numeric keypad	When <code>num lock</code> has been enabled, it can be used like an external numeric keypad.

Bottom

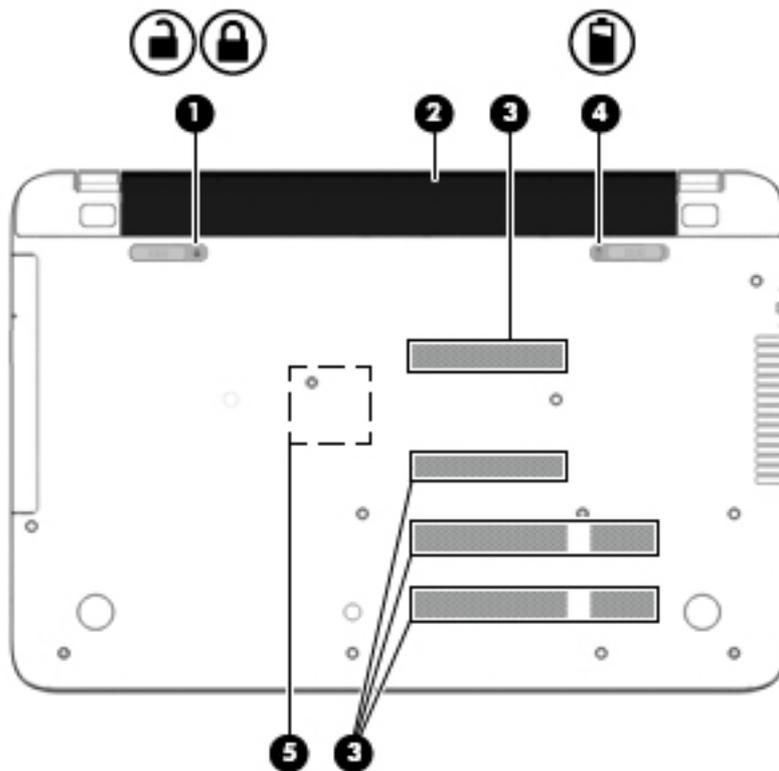

Component	Description
(1)  Battery lock	Locks the battery in the battery bay.
(2) Battery bay	Holds the battery.
(3) Vents (4) NOTE: The number of vents may vary depending on your computer model.	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(4)  Battery release latch	Releases the battery.
(5) Optical drive access	Access to remove the optical drive

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

 **IMPORTANT:** All labels described in this section will be located in one of 3 places depending on your computer model: affixed to the bottom of the computer, located in the battery bay, or under the service door.

- Service label—Provides important information to identify your computer. When contacting support, you will probably be asked for the serial number, and possibly for the product number or the model number. Locate these numbers before you contact support.

Your service label will resemble one of the examples shown below. Refer to the illustration that most closely matches the service label on your computer.



Component

- | | |
|-----|-----------------------------------|
| (1) | Serial number |
| (2) | Product number |
| (3) | Warranty period |
| (4) | Model number (select models only) |
-

- Microsoft® Certificate of Authenticity label (select models only prior to Windows 8)—Contains the Windows Product Key. You may need the Product Key to update or troubleshoot the operating system. HP platforms preinstalled with Windows 8 or Windows 8.1 do not have the physical label, but have a Digital Product Key electronically installed.

 **NOTE:** This Digital Product Key is automatically recognized and activated by Microsoft Operating Systems on a reinstall of the Windows 8 or Windows 8.1 operating system with HP approved recovery methods.


- Regulatory label(s)—Provide(s) regulatory information about the computer.
- Wireless certification label(s)—Provide(s) information about optional wireless devices and the approval markings for the countries or regions in which the devices have been approved for use.

3 Illustrated parts catalog

Computer major components



NOTE: Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Bottom on page 18](#) for details.

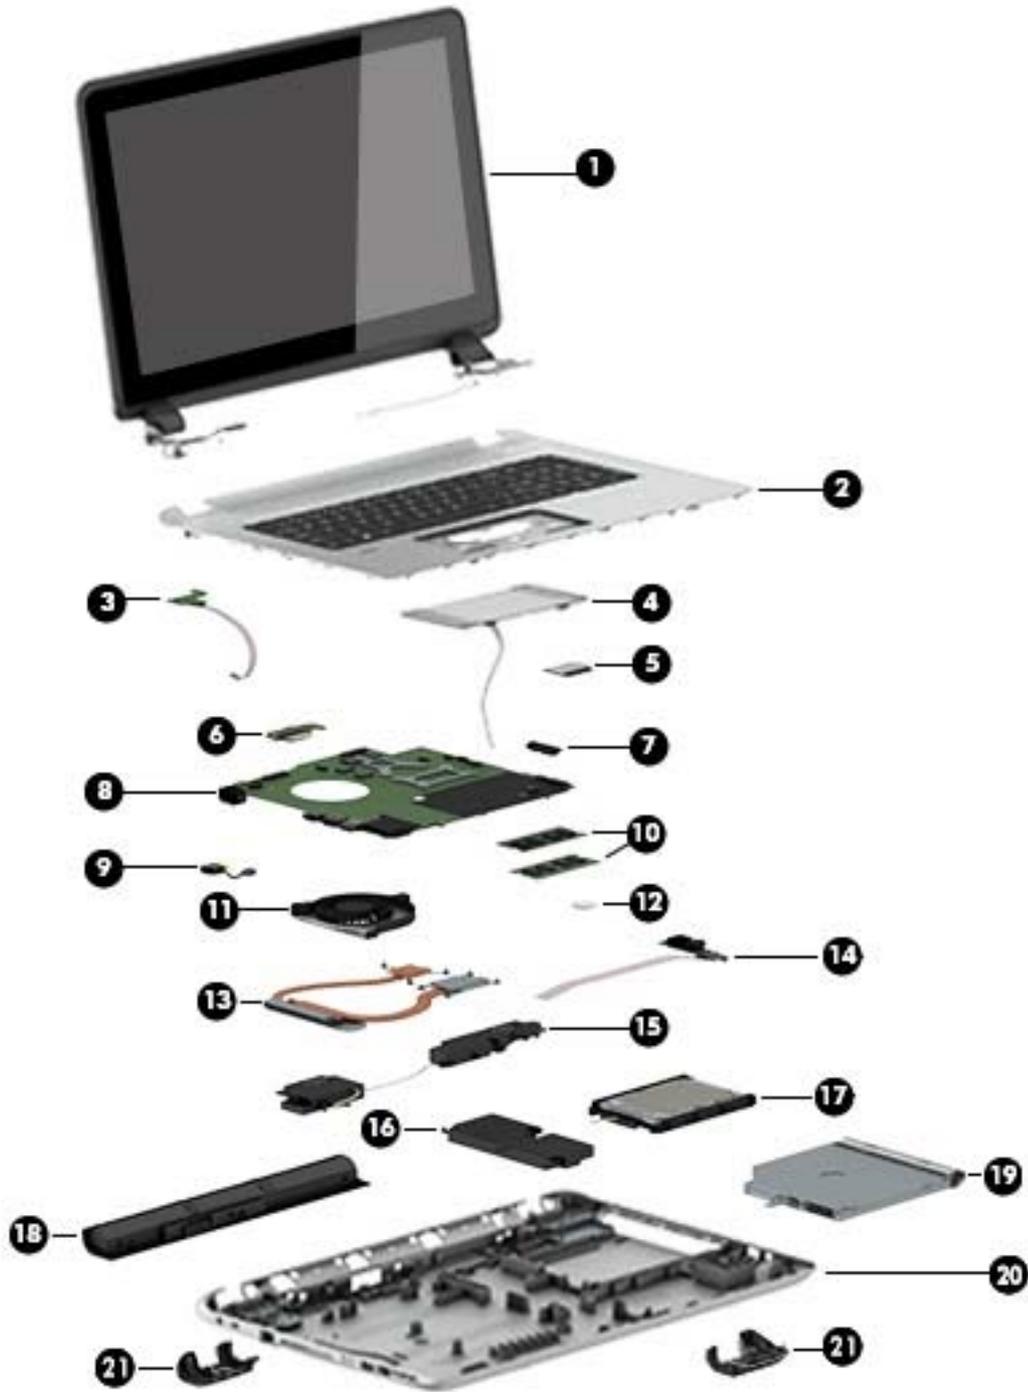

Item	Component	Spare part number
(1)	Display assembly, 15.6 in Display assembly, 17.3 in	

Flat display assembly for use with HP Pavilion Notebooks.
This display assembly is spared at the subcomponent level

Item	Component	Spare part number
	only. For more display assembly spare part information, see Display assembly subcomponents on page 40 .	
(2)	Top cover (includes keyboard and cable):	
	Top cover for HP Pavilion 15 Notebook PC computer models:	
	With full size textured island-style Keyboard. Touchpad and numeric keypad black for use in the United States	762529-001
	With full size textured island-style Keyboard and numeric keypad black for use in the United Kingdom	762529-031
	With full size textured island-style Keyboard and numeric keypad black for use in Germany	762529-041
	With full size textured island-style Keyboard and numeric keypad black for use in France	762529-051
	With full size textured island-style Keyboard and numeric keypad black for use in Italy	762529-061
	With full size textured island-style Keyboard and numeric keypad black for use in Spain	762529-071
	With full size textured island-style Keyboard and numeric keypad black for use in Portugal	762529-131
	With full size textured island-style Keyboard and numeric keypad black for use in Turkey	762529-141
	With full size textured island-style Keyboard and numeric keypad black for use in Greece	762529-151
	With full size textured island-style Keyboard and numeric keypad black for use in Latin America	762529-161
	With full size textured island-style Keyboard and numeric keypad black for use in Saudi Arabia	762529-171
	With full size textured island-style Keyboard and numeric keypad black for use in Hungary	762529-211
	With full size textured island-style Keyboard and numeric keypad black for use in Russia	762529-251
	With full size textured island-style Keyboard and numeric keypad black for use in Bulgaria	762529-261
	With full size textured island-style Keyboard and numeric keypad black for use in Romania	762529-271
	With full size textured island-style Keyboard and numeric keypad black for use in Thailand	762529-281
	With full size textured island-style Keyboard and numeric keypad black for use in Japan	762529-291
	With full size textured island-style Keyboard and numeric keypad black for use in Europe	762529-A41
	With full size textured island-style Keyboard and numeric keypad black for use in Taiwan	762529-AB1

Item	Component	Spare part number
	With full size textured island-style Keyboard and numeric keypad black for use in South Korea	762529-AD1
	With full size textured island-style Keyboard and numeric keypad black for International use	762529-B31
	With full size textured island-style Keyboard and numeric keypad black for use in the Adriatics	762529-BA1
	With full size textured island-style Keyboard and numeric keypad black for use in Israel	762529-BB1
	With full size textured island-style Keyboard and numeric keypad black for use in Switzerland	762529-BG1
	With full size textured island-style Keyboard and numeric keypad black Canada	762529-DB1
	With full size textured island-style Keyboard and numeric keypad black for use in the Netherlands	762529-DH1
	With full size textured island-style Keyboard and numeric keypad black for use in Czech and Slovakia	762529-FL1
	With full size textured island-style Keyboard and numeric keypad black for use in South Africa	762529-FP1
	With full size textured island-style Keyboard, TouchPad, and numeric keypad white for use in the United States	762530-001
	With full size textured island-style Keyboard and numeric keypad white for use in the United Kingdom	762530-031
	With full size textured island-style Keyboard and numeric keypad white for use in Germany	762530-041
	With full size textured island-style Keyboard and numeric keypad white for use in France	762530-051
	With full size textured island-style Keyboard and numeric keypad white for use in Italy	762530-061
	With full size textured island-style Keyboard and numeric keypad white for use in Spain	762530-071
	With full size textured island-style Keyboard and numeric keypad white for use in Portugal	762530-131
	With full size textured island-style Keyboard and numeric keypad white for use in Turkey	762530-141
	With full size textured island-style Keyboard and numeric keypad white for use in Greece	762530-151
	With full size textured island-style Keyboard and numeric keypad white for use in Latin America	762530-161
	With full size textured island-style Keyboard and numeric keypad white for use in Saudi Arabia	762530-171
	With full size textured island-style Keyboard and numeric keypad white for use in Hungary	762530-211

Item	Component	Spare part number
	With full size textured island-style Keyboard and numeric keypad white for use in Russia	762530-251
	With full size textured island-style Keyboard and numeric keypad white for use in Bulgaria	762530-261
	With full size textured island-style Keyboard and numeric keypad white for use in Romania	762530-271
	With full size textured island-style Keyboard and numeric keypad white for use in Thailand	762530-281
	With full size textured island-style Keyboard and numeric keypad white for use in Japan	762530-291
	With full size textured island-style Keyboard and numeric keypad white for use in Europe	762530-A41
	With full size textured island-style Keyboard and numeric keypad white for use in Taiwan	762530-AB1
	With full size textured island-style Keyboard and numeric keypad white for use in South Korea	762530-AD1
	With full size textured island-style Keyboard and numeric keypad white for International use	762530-B31
	With full size textured island-style Keyboard and numeric keypad white for use in the Adriatics	762530-BA1
	With full size textured island-style Keyboard and numeric keypad white for use in Israel	762530-BB1
	With full size textured island-style Keyboard and numeric keypad white for use in Switzerland	762530-BG1
	With full size textured island-style Keyboard and numeric keypad white for use in Canada	762530-DB1
	With full size textured island-style Keyboard and numeric keypad white for use in the Netherlands	762530-DH1
	With full size textured island-style Keyboard and numeric keypad white for use in Czech and Slovakia	762530-FL1
	With full size textured island-style Keyboard and numeric keypad white for use in South Africa	762530-FP1
	With full size textured island-style Keyboard, TouchPad and numeric keypad Beats Audio for use in the United States	762533-001
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in the United Kingdom	762533-031
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in France	762533-051
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Spain	762533-071
	With full size textured island-style Keyboard and numeric keypad Beats Audio in Latin America	762533-161

Item	Component	Spare part number
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Russia	762533-251
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Japan	762533-291
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Korea	762533-AD1
	With full size textured island-style Keyboard and numeric keypad Beats Audio for International use	762533-B31
	With full size textured island-style Keyboard, TouchPad and numeric keypad Beats Audio for use in Slovenia	762533-BA1
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Canada	762533-DB1
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in the Netherlands	762533-DH1
	With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Czech and Slovakia	762533-FL1
	Top cover for HP Pavilion 17 Notebook PC computer models:	
	With full size textured island-style Keyboard and numeric keypad black for use in the United States	765806-001
	With full size textured island-style Keyboard and numeric keypad black for use in the United Kingdom	765806-031
	With full size textured island-style Keyboard and numeric keypad black for use in Germany	765806-041
	With full size textured island-style Keyboard and numeric keypad black for use in France	765806-051
	With full size textured island-style Keyboard and numeric keypad black for use in Italy	765806-061
	With full size textured island-style Keyboard and numeric keypad black for use in Spain	765806-071
	With full size textured island-style Keyboard and numeric keypad black for use in Portugal	765806-131
	With full size textured island-style Keyboard and numeric keypad black for use in Turkey	765806-141
	With full size textured island-style Keyboard and numeric keypad black for use in Greece	765806-151
	With full size textured island-style Keyboard and numeric keypad black for use in Saudi Arabia	765806-171
	With full size textured island-style Keyboard and numeric keypad black for use in Hungary	765806-211
	With full size textured island-style Keyboard and numeric keypad black for use in Russia	765806-251
	With full size textured island-style Keyboard and numeric keypad black for use in Bulgaria	765806-261

Item	Component	Spare part number
	With full size textured island-style Keyboard and numeric keypad black for use in Romania	765806-271
	With full size textured island-style Keyboard and numeric keypad black for use in Belgium	765806-A41
	With full size textured island-style Keyboard and numeric keypad black for International use	765806-B31
	With full size textured island-style Keyboard and numeric keypad black for use in Slovenia	765806-BA1
	With full size textured island-style Keyboard and numeric keypad black for use in Israel	765806-BB1
	With full size textured island-style Keyboard and numeric keypad black for use in Switzerland	765806-BG1
	With full size textured island-style Keyboard and numeric keypad black for use in Canada	765806-DB1
	With full size textured island-style Keyboard and numeric keypad black for use in Nordic regions	765806-DH1
	With full size textured island-style Keyboard and numeric keypad black for use in Czech and Slovackia	765806-FL1
	With full size textured island-style Keyboard and numeric keypad white for use in the United States	765807-001
	With full size textured island-style Keyboard and numeric keypad white for use in the United Kingdom	765807-031
	With full size textured island-style Keyboard and numeric keypad white for use in Germany	765807-041
	With full size textured island-style Keyboard and numeric keypad white for use in France	765807-051
	With full size textured island-style Keyboard and numeric keypad black for use in Italy	765807-061
	With full size textured island-style Keyboard and numeric keypad white for use in Spain	765807-071
	With full size textured island-style Keyboard and numeric keypad white for use in Portugal	765807-131
	With full size textured island-style Keyboard and numeric keypad white for use in Turkey	765807-141
	With full size textured island-style Keyboard and numeric keypad white for use in Greece	765807-151
	With full size textured island-style Keyboard and numeric keypad white for use in Saudi Arabia	765807-171
	With full size textured island-style Keyboard and numeric keypad white for use in Hungary	765807-211
	With full size textured island-style Keyboard and numeric keypad white for use in Russia	765807-251

Item	Component	Spare part number
	With full size textured island-style Keyboard and numeric keypad white for use in Bulgaria	765807-261
	With full size textured island-style Keyboard and numeric keypad white for use in Romania	765807-271
	With full size textured island-style Keyboard and numeric keypad white for use in Belgium	765807-A41
	With full size textured island-style Keyboard and numeric keypad white for International use	765807-B31
	With full size textured island-style Keyboard and numeric keypad white for use in Slovenia	765807-BA1
	With full size textured island-style Keyboard and numeric keypad white for use in Israel	765807-BB1
	With full size textured island-style Keyboard and numeric keypad white for use in Switzerland	765807-BG1
	With full size textured island-style Keyboard and numeric keypad white for use in Canada	765807-DB1
	With full size textured island-style Keyboard and numeric keypad white	765807-DH1
	With full size textured island-style Keyboard and numeric keypad white for use in Nordic regions	765807-FL1
(3)	Power button board (includes cable)	
	For HP Pavilion15 Notebook PC computer models	762496-001
	For HP Pavilion17 Notebook PC computer models	763708-001
(4)	TouchPad board (with bracket and cable)	
	For HP Pavilion 15 Intel Notebook PC computer models	
	In Ano Silver	762506-001
	In Ash Silver	762525-001
	For use with Beats Audio	766726-001
	For HP Pavilion 17 Intel Notebook PC computer models	
	In Ash Silver	765792-001
	In natural silver	767059-001
	For HP Pavilion AMD Notebook PC computer models	
	In Ano Silver	781764-001
	In Ash Silver	781765-001
	TouchPad board with bracket and cable in ano silver for AMD computers	781767-001
	TouchPad board with bracket and cable ano silver for AMD computers	781768-001

Item	Component	Spare part number
	TouchPad board with bracket and cable for AMD computers using Beats Audio	781769-001
(5)	WLAN module:	
	Realtek RT8188EE 802.11 bgn 1x1 Wi-Fi adapter, for use only on computer models equipped with Intel processors for HP Pavilion 17 and 15 Notebook PC available for Windows 8.1 and Windows 7	709848-005
	Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC combo adapter, for use only on computer models equipped with Intel processors for HP Pavilion 17 and 15 Notebook PC available for Windows 8.1 and Windows 7	753076-005
	Intel Dual Band Wireless-AC 3160 802.11 ac 1x1 WiFi + BT 4.0 combo adapter, for use only on computer models equipped with Intel processors for HP Pavilion 17 and 15 Notebook PC	710662-005
	Realtek RT8723BE 802.11bgn 1x1 Wi-Fi + BT4.0 Combo Adapter for HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	753077-005
	Realtek 8188EE 802.11BGN 1x1 available for Windows 8.1 and Windows 7	709848-005
	Broadcom BCM 4352 WLAN 802.11 AC+BT4 2x2HMC for AMD HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	724935-005
(6)	Battery Board (For use only with HP Pavilion 17 Notebook PC)	763710-001
(7)	USB board	
	For use with HP Pavilion 17 Notebook PC computer models	767120-001
	For use with HP Pavilion 15 Notebook PC computer models	762497-001
(8)	System board (includes replacement thermal material):	
	For computer models equipped with Intel processors and UMA graphics	
	Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC available	767409-001
	Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC 767409-001	767409-501
	Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC 767409-001	766469-001
	Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766469-501
	Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766469-601

Item	Component	Spare part number
	Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778946-001
	Intel Core i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC	778946-501
	Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774767-001
	Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	774767-501
	Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC	774767-601
	Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 1 5W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767410-001
	Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767410-501
	Intel Core i3-4030U (1.9GHz), 1600MHz/3 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774768-001
	Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	774768-501
	Intel Core i3-4030U (1.9 GHz), 1600 MHz/3M B L3, dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	774768-601
	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766471-001
	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766471-501
	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766471-601
	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	787515-001
	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	787515-501
	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 15 Notebook PC	787515-601

Item	Component	Spare part number
	Intel Pentium N3530, turbo up to 2.16 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767419-001
	Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767419-501
	Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766480-001
	Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766480-501
	Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766480-601
	Intel Celeron N2830 (up to 2.42 GHz) 1333 MHz/2 MB L2, dual SDP4.5 W for use with FreeDOS and Ubuntu Linux for use with Windows Standard HP Pavilion 17 Notebook PC	767420-001
	Intel Celeron N2830 (up to 2.42GHz) 1333 MHz/2MB L2, dual SDP4.5W for use with Windows Standard HP Pavilion 17 Notebook PC	767420-501
	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	787484-001
	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	787484-501
	Intel Celeron N2840 (2.16 up to 2.58 GHz) 1333 MHz/2 MB L2, dual SDP4.5 W for use with FreeDOS and Ubuntu Linux for use with Windows Standard HP Pavilion 17 Notebook PC	787485-001
	Intel Celeron N2840 (2.16 up to 2.58 GHz) 1333 MHz/2MB L2, dual SDP4.5 W for use with Windows Standard HP Pavilion 17 Notebook PC	787485-501
	Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	779839-001
	Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779839-501
	Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779839-601
	Intel Core i3-4005U (1.7GHz), 1600 MHz/3 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux	779127-001
	Intel Core i3-4005U (1.7GHz), 1600MHz/3 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	779127-501

Item	Component	Spare part number
For computer models equipped with Intel processors and discrete switchable graphics		
	Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774769-001
	Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	774769-501
	Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Professional HP Pavilion 15 Notebook PC	774769-601
	Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778947-001
	Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC	778947-501
	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778948-001
	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC	778948-501
	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778949-001
	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC	778949-501
	Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767412-001
	Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767412-501
	Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W	779840-001
	Intel Core 830 M i3-4005U (1.7 GHz), 1600 MHz/2 MB L3, dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779840-501
	Intel Core 830 M i3-4005U (1.7 GHz), 1600 MHz/2 MB L3, dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779840-601
	Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766472-001

Item	Component	Spare part number
	Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766472-501
	Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766472-601
	Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767413-001
	Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767413-501
	Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766473-001
	Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	766473-501
	Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	766473-601
	Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767414-001
	Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767414-501
	Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766476-001
	Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	766476-501
	Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	766476-601
	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774770-001
	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	774770-501

Item	Component	Spare part number
	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Professional HP Pavilion 15 Notebook PC	774770-601
	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774771-001
	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC	774771-501
	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC	774771-601
	Intel Core 830M i3-4030U (1.9 GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767415-001
	Intel Core 830M i3-4030U (1.9 GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767415-501
	Intel Core 830M i3-4030U (1.9 GHz), 1600MHz/2 MB L3, dual core 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774772-001
	Intel Core 830M i3-4030U (1.9 GHz), 1600MHz/2 MB L3, dual core 15W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	774772-501
	Intel Core 830Mi3-4030U (1.9 GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	774772-601
	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766478-001
	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766478-501
	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766478-601
	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767411-001
	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767411-501
	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767416-001
	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767416-501

Item	Component	Spare part number
	Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W	779840-001
	Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779840-501
	Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779840-601
	Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	787516-001
	Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	787516-501
	Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 15 Notebook PC	787516-601
	Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	782940-001
	Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	782940-501
	Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 17 Notebook PC	782940-601
For computer models equipped with AMD processors and UMA graphics		
	AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763420-001
	AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763420-501
	AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762527-001
	AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762527-501
	AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762527-601
	AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763422-001

Item	Component	Spare part number
	AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763422-501
	AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762526-001
	AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762526-501
	AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762526-601
	AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763421-001
	AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763421-501
	AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762528-001
	AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762528-501
	AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762528-601
	EI-6010 (1.35 GHz, 1 MB L2), Dual 10W, Max DDR3L-1333 for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763423-001
	EI-6010 (1.3 5GHz, 1MB L2), Dual 10W, Max DDR3L-1333 for use with Windows Standard HP Pavilion 17 Notebook PC	763423-001
	AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763424-001
	AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763424-501
	AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766714-001
	AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766714-501
	AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766714-601


Item	Component	Spare part number
	AMD A8-5545M W8STD for use with Windows Standard HP Pavilion 15 Notebook PC	766713-501
For computer models equipped with AMD processors and Discrete graphics		
	AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763425-001
	AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763425-501
	AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762532-001
	AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762532-501
	AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762532-601
	AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763427-001
	AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763427-501
	AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762531-001
	AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762531-501
	AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762531-601
	AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763428-001
	AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763428-501
	AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766715-001
	AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766715-501

Item	Component	Spare part number
	AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766715-601
(9)	Power Connector	
	For use with HP Pavilion 15 Notebook PC computer models	762507-001
	For use with HP Pavilion 17 Notebook PC computer models	763699-001
(10)	Memory modules :	
	2 GB memory module	691739-005
	4 GB memory module	691740-005
	8 GB memory module	693374-005
	2 GB memory module	652972-005
	8 GB memory module	670034-005
	16 GB memory module for use with AMD HP Pavilion 15 computer models	756760-004
(11)	Fan for use with HP Pavilion 17 Notebook PC computer models	765788-001
	Fan for use with HP Pavilion 15 Notebook PC computer models	762505-001
(12)	RTC battery	697917-001
(13)	Heat sink assembly for use only on computer models equipped with UMA graphics (includes replacement thermal material):	
	For use with HP Pavilion 15 Notebook PC computer models:	
	For use only on computer models with Intel processors discrete memory 19 W	762524-001
	For use only on computer models equipped with AMD processors and UMA graphics 19 W	767339-001
	For use only on computer models equipped with AMD processors and discrete graphics 19 W	767340-001
	For use only on computer models equipped with AMD processors and UMA graphics 8.5 W	767341-001
	Heat sink 8.5 W discrete for use with Intel computer models	780212-001
	For use with HP Pavilion 17 Notebook PC computer models:	
	For use only on computer models with Intel processors discrete memory 19 W	762524-001
	For use only on computer models equipped with AMD processors and UMA graphics 19 W	764080-001
	For use only on computer models equipped with AMD processors and UMA graphics 25 W	764082-001
	For use only on computer models equipped with AMD processors and discrete graphics 25 W	764083-001

Item	Component	Spare part number
	For use only on computer models equipped with AMD processors and UMA graphics 19 W	767339-001
	For use only on computer models with Intel processors discrete memory 19 W	767340-001
	For use only on computer models equipped with AMD processors and UMA graphics 8.5 W	767341-001
	For use only on computer models with Intel processors discrete memory 19 W CB	777250-001
(14)	Display Cable For specific cable spare parts, see Display assembly subcomponents on page 40	
(15)	Speaker Kit (includes left and right front speakers and cables) for HP Pavilion 17 Notebook PC computer models	763717-001
	Speaker Kit (includes left and right front speakers and cables) for HP Pavilion 15 Notebook PC computer models	762502-001
(16)	Subwoofer For HP Pavilion 15 Notebook PC computer models for computers equipped with Beats Audio	766723-001
(17)	Hard drive (does not include the hard drive rubber bracket, hard drive connector cable, or screws) For specific hard drive spare parts, see Mass storage devices on page 43	
(18)	4-cell, 41 WHr, 2.8A H Li-ion battery	756743-001
(19)	Optical drive: For specific optical drives with spare part numbers, see Mass storage devices on page 43	
(20)	Base enclosure: For use on HP Pavilion 17 Notebook PC computer models	
	Aqua blue finish	766908-001
	Natural silver finish	766909-001
	Snow white finish	765781-001
	Vibrant red finish	766910-001
	Neon purple	777196-001
	Snow white for use with AMD processors	780084-001
	Aqua blue for use with AMD processors	780085-001
	Natural silver for use with AMD processors	780086-001
	Vibrant red for use with AMD processors	780087-001
	Neon purple for use with AMD processors	780088-001

Item	Component	Spare part number
For use on HP Pavilion 15 Notebook PC computer models		
	Aqua blue finish	762501-001
	Natural silver finish	762498-001
	Snow white finish	762499-001
	Vibrant red finish	762500-001
	For Beats Audio	766725-001
	Neon purple	778264-001
	natural silver for use with Intel processors	780094-001
	Snow white for use with Intel processors	780095-001
	Vibrant red for use with Intel processors	780096-001
	Aqua blue for use with Intel processors	780097-001
	Neon purple for use with Intel processors	780099-001
	For use with HP Pavilion 15 Notebook PC touchscreen computers	790018-001
	For use with Intel processors for use with HP Pavilion 15 Notebook PC	788385-001
(21)	Base enclosure caps (Included in the plastics kit)	
	For HP Pavilion 17 Notebook PC computer models	765789-001
	For HP Pavilion 15 Notebook PC computer models	764081-001

Display assembly subcomponents

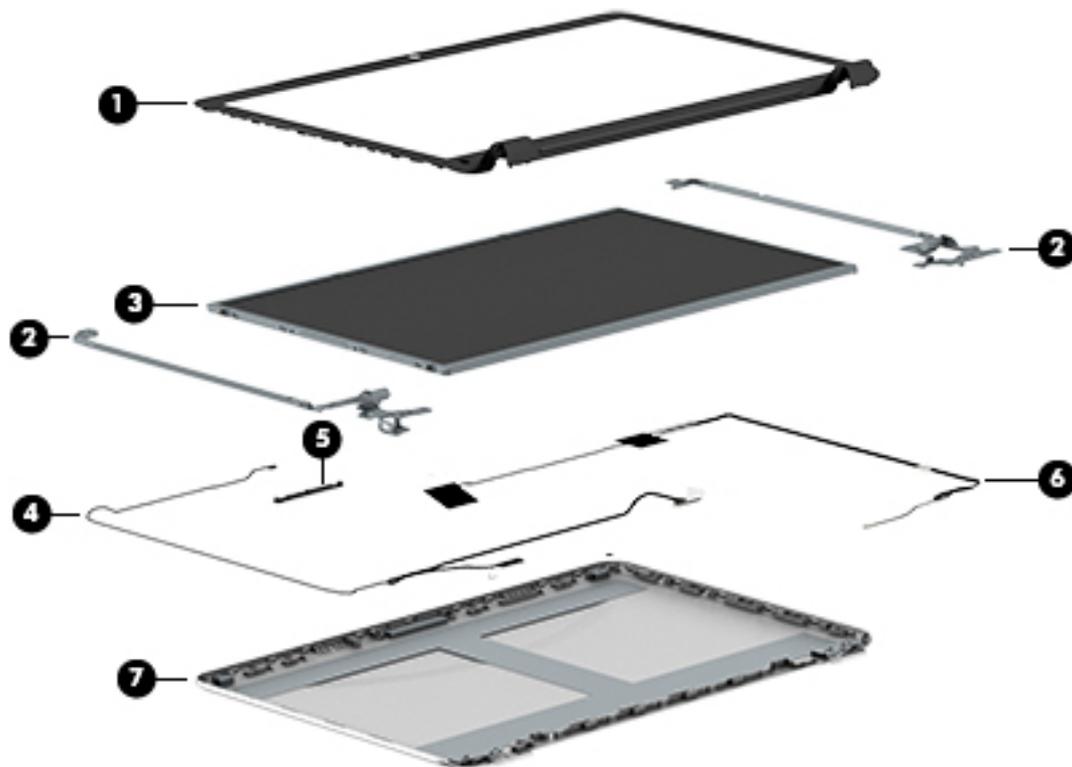

Item	Component	Spare part number
(1)	Display bezel for HP Pavilion 17 Notebook PC (includes screws)	765782-001
	Display bezel for HP Pavilion 15 Notebook PC (includes screws)	762512-001
(2)	Display Hinge Kit (includes left and right hinges and screws)	
	For HP Pavilion 17 Notebook PC	
	Display Hinge Kit, non-touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	763706-001
	Display Hinge Kit, touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	765356-001
	For HP Pavilion 15 Notebook PC	
	Display Hinge Kit, non-touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	762520-001
	Display Hinge Kit, touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	763105-001
(3)	15.6 LED BrightView HD SVA HD, WLED, SVA flat display panel (includes screws)	762513-001
	15.6 WLED AG HD Touchscreen with bezel (includes screws)	764622-001
	15.6 WLED AG full HD SVA available for Windows 8.1 and Windows 7 (includes screws)	764623-001
	15.6 WLED AG full HD Touchscreen with bezel flat display panel (includes screws)	766687-001

Item	Component	Spare part number
	17.3 WLED AG HD touchscreen flat display panel flat display panel (includes screws)	766903-001
	17.3 WLED AG BrightView HD flat display panel available for Windows 8.1 and Windows 7 (includes screws)	766904-001
	17.3 WLED AG full HD flat display panel available for Windows 8.1 and Windows 7 (includes screws)	766905-001
	17.3 WLED AG touchscreen full HD flat display panel (includes screws)	766906-001
(4)	Antenna Kit (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 15 Notebook PC	762518-001
	Antenna Kit, Touchscreen (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 15 Notebook PC	763568-001
	Antenna Kit (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 17 Notebook PC	763691-001
	Antenna Kit, Touchscreen (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 15 Notebook PC	763692-001
(5)	Webcamera/microphone module (includes adhesive and screws) for HP Pavilion 17 and 15 Notebook PC	762521-001
	Webcamera/microphone module, Touchscreen (includes adhesive and screws) for HP Pavilion 17 and 15 Notebook PC	762545-001
(6)	Display panel SXGA cable for non-Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 17 Notebook PC computer models	765785-001
	Display panel SXGA cable for Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 17 Notebook PC computer models	765786-001
	Display panel HD cable for non-Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	762519-001
	Display panel full HD cable for Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	763590-001
	Display panel full HD cable for non-Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	762544-001
	Display panel HD cable for non-Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	763572-001
(7)	Display back cover (includes screws):	
	For HP Pavilion 17 Notebook PC	
	Aqua blue finish	765774-001
	Natural silver finish	765775-001
	Snow white finish	765773-001
	Vibrant red finish	765776-001
	Neon purple finish	777194-001

Item	Component	Spare part number
	Aqua blue finish, Touchscreen	765778-001
	Natural silver finish, Touchscreen	765779-001
	Snow white finish, Touchscreen	765777-001
	Vibrant red finish, Touchscreen	765780-001
	Neon purple finish, Touchscreen	777195-001
For HP Pavilion 15 Notebook PC		
	Aqua blue finish	762511-001
	Natural silver finish	762508-001
	Snow white finish	762509-001
	Vibrant red finish	762510-001
	Neon purple finish	779639-001
	Aqua blue finish, Touchscreen	762517-001
	Natural silver finish, Touchscreen	762514-001
	Snow white finish, Touchscreen	762515-001
	Vibrant red finish, Touchscreen	762516-001
	For Beats Audio, Touchscreen	766724-001
	Neon purple finish, Touchscreen	778263-001
	Display back cover (includes screws), touchscreen HP Pavilion 15 Notebook PC Intel computer model	790017-001

Mass storage devices



Item	Component	Spare part number
(1)	Hard drive (does not include the hard drive rubber bracket, hard drive connector cable, or screws)	
	1 TB, 5400 rpm, 9.5 mm available for Windows 8.1 and Windows 7	778192-005
	750 GB, 5400 rpm, 9.5 mm available for Windows 8.1 and Windows 7	778190-005
	500 GB 5400 rpm 9.5 mm available for Windows 8.1 and Windows 7	778188-005
	500 GB 5400 rpm 7 mm hybrid	732000-005
	1 TB, 5400 rpm 9.5 mm	731999-005
	750 GB 5400 rpm + 8 GB NAND hybrid, 9.5 mm	732001-005
	1.5 TB, 5400 rpm 9.5 mm for HP Pavilion 15 Notebooks and AMD computers only	747375-005
	Hard Drive Hardware Kit , for HP Pavilion 17 Notebook PC	773501-001
	Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC	762504-001
	Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in natural silver	763100-001
	Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in snow white	763101-001
	Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in aqua blue	763103-001
	Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in vibrant red	763102-001
	Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in neon purple	778265-001
	Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in for Beats Audio	767516-001
	Hardware sleeve for HP Pavilion 17 Notebook PC	777944-001
	Hardware sleeve for HP Pavilion 15 Notebook PC	776506-001
(2)	Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket):	
	For HP Pavilion 17 Notebook PC	
	Aqua blue finish	765793-001
	Natural silver finish	763426-001
	Snow white finish	765787-001

Item	Component	Spare part number
	Vibrant red finish	766894-001
	Neon purple finish	777222-001
For HP Pavilion 15 Notebook PC		
	Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket):	762503-001
	Blu-ray Disc R/RW with SuperMulti for AMD models only	778266-001
	Optical drive board natural silver	778856-001
	Optical drive hardware kit for touchscreen Intel computer models	790019-001

Miscellaneous parts

Component	Spare part number
AC adapter:	
45 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm, nslim)	741727-001
65 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm)	710412-001
90 W HP Smart AC adapter (PFC, RC, 3-wire, 4.5 mm), for use with computer models with AMD processors	710413-001
90-W AC adapter (EM, PFC, SMT, 3-wire, 4.5-mm) for use with HP Pavilion 15 Notebook PC computer models only	710414-001
65-W HP Smart AC adapter (non-PFC, EM, 3-wire, 4.5-mm) for use with HP Pavilion 15 Notebook PC computer models only	714657-001
Power cord (3 pin, black, 1.0 m):	
For use in North America	755530-001
For use in Argentina	755530-D01
For use in Australia, for use with computer models with Intel processors	755530-011
For use in Brazil, for use with computer models with Intel processors	755530-202
For use in Europe, for use with computer models with Intel processors	755530-021
For use in India, for use with computer models with Intel processors	755530-D61
For use in Italy	755530-061
For use in the People's Republic of China, for use with computer models with Intel processors	755530-AA1
For use in South Korea, for use with computer models with Intel processors	755530-AD1
For use in Taiwan, for use with computer models with Intel processors	755530-AB1
For use in Thailand, for use with computer models with Intel processors	755530-201
For use in the United Kingdom and Singapore, for use with computer models with Intel processors	755530-031
For use in Denmark, Finland, Norway	755530-081

Component	Spare part number
For use in Switzerland	755530-111
For use in Japan	755530-291
For use in Israel	755530-BB1
For use in South Africa	755530-AR1
Screw Kit for HP Pavilion 15 Notebook PC	762522-001
Screw Kit for HP Pavilion 17 Notebook PC	765790-001
HDMI to VGA Adapter for use with computer models with AMD processors	701943-001
Rubber kit for HP Pavilion 15 Notebook PC	763104-001
Rubber kit for HP Pavilion 17 Notebook PC	763714-001
Notebook sleeve for HP Pavilion 15 Notebook PC	777944-001
Case sleeve for HP Pavilion 15 Notebook PC	776506-001
Heat spreader for use with Intel computer models	784982-001

Sequential part number listing

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
652972-005	2 GB memory module for HP Pavilion 15 Notebook PC	√	√		
670034-005	8 GB memory module for HP Pavilion 17 Notebook PC			√	√
691739-005	2 GB memory module for HP Pavilion 17 Notebook PC			√	√
691740-005	4 GB memory module	√	√	√	√
693374-001	8 GB memory module for HP Pavilion 15 Notebook PC	√			
697917-001	RTC battery	√	√	√	√
701943-001	HDMI to VGA adapter for use with computer models with AMD processors		√	√	√
709848-005	Realtek RTL8188EE 802.11 bgn Wi-Fi Adapter available for Windows 8.1 and Windows 7	√	√	√	√
710412-001	65 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm), select models only	√	√	√	√
710413-001	90 W HP Smart AC adapter (PFC, RC, 3-wire, 4.5 mm) for use with computer models with AMD processors select models only		√	√	
710414-001	90 W HP Smart AC adapter Slim (PFC, RC, 3-wire, 4.5 mm) for use with computer models with AMD processors select models only		√		
710662-005	WLAN Intel Dual Band Wireless-AC 3160 802.11 ac 1x1 WiFi + BT 4.0 combo adapter, for use only on computer models equipped with Intel processors	√			√

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
714657-001	65 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm), select models only		√		
724935-005	WLAN Broadcom BCM 4352 WLAN 802.11 AC+BT4 2x2HMC for HP Pavilion 15 AMD computer models available for Windows 8.1 and Windows 7		√		
731999-005	Hard drive 1 TB, 5400 rpm + 8 GB NAND hybrid, 9.5 mm	√	√	√	√
732000-005	Hard drive 500 GB 5400 rpm + 8 GB NAND hybrid, 7 mm	√	√	√	√
732001-005	Hard drive, 750 GB 5400 rpm + 8 GB NAND hybrid, 9.5 mm	√	√	√	√
741727-001	45 W HP Smart AC adapter (nPFC, RC, 3-wire, 4.5 mm), nslim	√	√	√	√
747375-005	Hard drive 1.5 TB 5400-RPM SATA RAW 9.5 mm		√		
753076-005	WLAN Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC combo adapter for use only with HP Pavilion 17 Notebook PC computer models or HP Pavilion 15 Notebook PC computer models	√			√
753077-005	WLAN Realtek RT8723BE 802.11 bgn 1x1 Wi-Fi + BT4.0 combo adapter, for use only on computer models equipped with AMD processors available for Windows 8.1 and Windows 7		√	√	
755530-001	Power cord for use in North America (3 pin, black, 1.0 m)	√	√	√	√
755530-011	Power cord for use in Australia (3 pin, black, 1.0 m), for use with computer models with Intel processors	√	√		
755530-021	Power cord for use in Europe (3 pin, black, 1.0 m), for use with computer models with Intel processors	√	√	√	√
755530-031	Power cord for use in the United Kingdom and Singapore (3 pin, black, 1.0 m), for use with computer models with Intel processors	√	√	√	√
755530-061	Power cord for use in Italy (3 pin, black, 1.0 m)		√		
755530-081	Power cord for use in Denmark (3 pin, black, 1.0 m)	√	√	√	√
755530-111	Power cord for use in Switzerland (3 pin, black, 1.0 m)	√	√	√	√
755530-201	Power cord for use in Thailand (3 pin, black, 1.0 m), for use with computer models with Intel processors		√		
755530-291	Power cord for use in Japan (3 pin, black, 1.0 m), for use in Japan		√		
755530-AA1	Power cord for use in People's Republic of China (3 pin, black, 1.0 m), for use with computer models with Intel processors		√		
755530-AB1	Power cord for use in Taiwan (3 pin, black, 1.0 m), for use with computer models with Intel processors		√		
755530-AD1	Power cord for use in South Korea (3 pin, black, 1.0 m), for use with computer models with Intel processors		√		
755530-AR1	Power cord for use in South Africa (3 pin, black, 1.0 m)	√			√
755530-BB1	Power cord for use in Israel (3 pin, black, 1.0 m)	√	√		√

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
755530-D61	Power cord for use in India (3 pin, black, 1.0 m), for use with computer models with Intel processors	√	√		
756743-001	4 cell, 41 Whr, 2.8 Ah, Li-ion battery	√	√	√	√
762521-001	Webcamera/microphone module (includes adhesive) for HP Pavilion 17 Notebook PC			√	√
762524-001	Heat sink for use only on computer models equipped with a graphics subsystem with AMD switchable discrete graphics, 19 W select models only			√	
762545-001	Webcamera/microphone module, Touchscreen (includes adhesive and screws) for HP Pavilion 17 Notebook PC			√	√
762496-001	Power button board (includes cable) For HP Pavilion 15 Notebook PC	√	√		
762497-001	USB board for use with HP Pavilion 15 Notebook PC computer models	√	√		
762498-001	Base enclosure Natural silver finish for use on select HP Pavilion 15 Notebook PC	√			
762499-001	Base enclosure Snow white finish for use on HP Pavilion 15 Notebook PC	√			
762500-001	Base enclosure Vibrant red finish for use on HP Pavilion 15 Notebook PC	√			
762501-001	Base enclosure for Beats Audio use on HP Pavilion 15 Notebook PC	√			
762502-001	Speaker Kit (includes left and right front speakers and cables) for HP Pavilion 15 Notebook PC	√	√		
762503-001	Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket):	√	√		
762504-001	Hard Drive Hardware Kit for use with HP Pavilion 15 Notebook PC	√	√		
762505-001	Fan for use with HP Pavilion 15 Notebook PC	√	√		
762506-001	TouchPad board (with bracket and cable) for HP Pavilion 15 Notebook PC computer models in ano silver	√			
762507-001	Power connector for use with HP Pavilion 15 Notebook PC	√	√		
762508-001	Display back cover Natural silver finish for HP Pavilion 15 Notebook PC	√	√		
762509-001	Display back cover in snow white for HP Pavilion 15 Notebook PC	√	√		
762510-001	Display back cover in vibrant red for HP Pavilion 15 Notebook PC	√	√		
762511-001	Display back cover in aqua blue for HP Pavilion 15 Notebook PC	√	√		
762512-001	Display bezel for HP Pavilion 15 Notebook PC	√	√		

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
762513-001	15.6 LED BrightView HD SVA HD, WLED, SVA flat display panel (includes screws) available for Windows 8.1 and Windows 7	✓	✓		
762514-001	Display back cover (includes screws): natural silver finish, Touchscreen for HP Pavilion 15 Notebook PC	✓	✓		
762515-001	Display back cover (includes screws): snow white, Touchscreen for HP Pavilion 15 Notebook PC	✓	✓		
762516-001	Display back cover (includes screws): vibrant red finish, Touchscreen for HP Pavilion 15 Notebook PC	✓	✓		
762517-001	Display back cover (includes screws): aqua blue finish, Touchscreen for HP Pavilion 15 Notebook PC	✓	✓		
762518-001	WLAN Antenna Kit for use with HP Pavilion 15 Notebook PC computer non-touch models (includes left and right wireless antenna cables and transceivers)	✓	✓		
762519-001	Display panel cable HD cable for non-Touchscreen models for HP Pavilion 15 Notebook PC computer models:	✓	✓		
762520-001	Display Hinge Kit, non-touchscreen (includes left and right hinges and screws) for HP Pavilion 15 Notebook PC	✓	✓		
762521-001	Webcamera/microphone module (includes adhesive and screws) for HP Pavilion 15 Notebook PC	✓	✓		
762522-001	Screw Kit for HP Pavilion 15 Notebook PC	✓	✓		
762524-001	Heat sink for use only on computer models equipped with a graphics subsystem with AMD switchable discrete graphics, 19 W for use with HP Pavilion 15 Notebook PC computer models		✓		
762525-001	TouchPad board (with bracket and cable) In Ash Silver for use with HP Pavilion 15 Notebook PC computer models	✓			
762526-001	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC		✓		
762526-501	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC		✓		
762526-601	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC		✓		
762527-001	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC		✓		
762527-501	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC		✓		
762527-601	System board AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC		✓		

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
762528-001	System board AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC		√		
762528-501	System board AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC		√		
762528-601	System board AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC		√		
762529-001	Top cover (includes keyboard and cable): With full size textured island-style Keyboard. and numeric keypad black for use in the United States		√		
762529-031	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in the United Kingdom	√	√		
762529-041	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Germany	√	√		
762529-051	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in France	√	√		
762529-061	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Italy	√	√		
762529-071	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Spain	√	√		
762529-131	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Portugal	√	√		
762529-141	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Turkey	√	√		
762529-151	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Turkey	√	√		
762529-161	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Latin America		√		
762529-171	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Saudi Arabia	√	√		
762529-211	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Hungary	√	√		
762529-251	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Russia	√	√		

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
762529-261	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Bulgaria	√	√		
762529-271	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Romania	√	√		
762529-281	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Thailand			√	
762529-291	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Japan			√	
762529-A41	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Europe	√	√		
762529-AB1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Taiwan			√	
762529-AD1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in South Korea			√	
762529-B31	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for International use	√	√		
762529-BA1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in the Adriatics	√	√		
762529-BB1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Israel	√	√		
762529-BG1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Switzerland	√	√		
762529-DB1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Canada			√	
762529-DH1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in the Netherlands	√	√		
762529-FL1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in Czech and Slovakia	√	√		
762529-FP1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad black for use in South Africa	√			

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
762530-001	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in the United States		√		
762530-031	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in the United Kingdom	√	√		
762530-041	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Germany	√	√		
762530-051	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in France	√	√		
762530-061	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Italy	√	√		
762530-071	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Spain	√	√		
762530-131	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Portugal	√	√		
762530-141	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Turkey	√	√		
762530-151	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Greece	√	√		
762530-161	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Latin America		√		
762530-171	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Saudi Arabia	√	√		
762530-211	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Hungary	√	√		
762530-251	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Russia	√	√		
762530-261	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Bulgaria	√	√		
762530-271	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Romania	√	√		

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
762530-281	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Thailand		✓		
762530-291	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Japan		✓		
762530-A41	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Europe	✓	✓		
762530-AB1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Taiwan		✓		
762530-AD1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in South Korea		✓		
762530-B31	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for International use		✓		
762530-BA1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Adriatic		✓		
762530-BB1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Israel	✓	✓		
762530-BG1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Switzerland	✓	✓		
762530-DB1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Canada		✓		
762530-DH1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in the Netherlands	✓	✓		
762530-FL1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Spain	✓	✓		
762530-FP1	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in South Africa	✓			
762531-001	Top cover (includes keyboard and cable): With full size textured island-style Keyboard and numeric keypad White for use in Spain		✓		
762531-501	System board AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC		✓		

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
762531-601	System board AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC		√		
762532-001	System board AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC		√		
762532-501	System board AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC		√		
762532-601	System board AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC		√		
762533-001	Top cover for HP Pavilion 15 Notebook PC computer models with full size texture black d island-style Keyboard, and numeric keypad red for use in the United States		√		
762533-031	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad red for use in the United Kingdom		√		
762533-051	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured island-style Keyboard, and numeric keypad red for use in the France		√		
762533-071	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad red for use in the Spain		√		
762533-161	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, numeric keypad red for use in the Latin America		√		
762533-251	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad red for use in the Russia		√		
762533-291	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad red for use in the Japan		√		
762533-AD1	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad red for use in South Korea		√		
762533-B31	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad red for use International use		√		
762533-BA1	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured island-style Keyboard, numeric keypad Beats Audio for use in Slovenia		√		
762533-DB1	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad Beats Audio for use in Canada		√		

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
762533-DH1	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, and numeric keypad Beats Audio for use in the Netherlands		√		
762533-FL1	Top cover for HP Pavilion 15 Notebook PC computer models with full size textured black island-style Keyboard, numeric keypad Beats Audio for use in the Czech and Slovakia		√		
762544-001	Display panel full HD cable for non-Touchscreen models (includes webcam/microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	√	√		
762545-001	Webcamera/microphone module for Touchscreen models	√	√		
763100-001	Hard Drive Hardware Kit, for HP Pavilion 15 Notebook PC in natural silver	√	√		
763101-001	Hard Drive Hardware Kit, for HP Pavilion 15 Notebook PC in snow white	√	√		
763102-001	Hard Drive Hardware Kit, for HP Pavilion 15 Notebook PC in vibrant red	√	√		
763103-001	Hard Drive Hardware Kit, for HP Pavilion 15 Notebook PC in aqua blue	√	√		
763104-001	Rubber kit for HP Pavilion 15 Notebook PC	√	√		
763105-001	Display Hinge Kit, touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	√	√		
763420-001	System board AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	
763420-501	System board AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC			√	
763421-001	System board AMD A4-6210 (1.8GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	
763421-501	System board AMD A4-6210 (1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC			√	
763422-001	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	
763422-501	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC			√	
763423-001	System board EI-6010 (1.35 GHz, 1 MB L2), dual 1 0W, Max DDR3L-1333 for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
763423-501	System board EI-6010 (1.35GHz, 1MB L2), Dual 10W, Max DDR3L-1333 for use with Windows Standard HP Pavilion 17 Notebook PC			√	
763424-001	System board AMD A76M FCH chipset, AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	
763424-501	System board AMD A76M FCH chipset, AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 17 Notebook PC			√	
763425-001	System board AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	
763425-501	System board AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PCC			√	
763426-001	Optical drive, DVD+/-RW DL SuperMulti Natural silver finish for use with Windows Standard HP Pavilion 17 Notebook PCC			√	√
763427-001	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	
763427-501	System board AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC			√	
763428-001	System board AMD A76M FCH chipset, AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC			√	
763428-501	System board AMD A76M FCH chipset, AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 17 Notebook PC			√	
763568-001	WLAN Antenna Kit for use with HP Pavilion 15 Notebook PC computer touch screen models (includes left and right wireless antenna cables and transceivers)	√	√		
763572-001	Display panel HD cable for non-Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	√	√		
763590-001	Display panel HD cable for non-Touchscreen models (includes webcamera/microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	√	√		
763691-001	WLAN Antenna Kit for use with HP Pavilion 17 Notebook PC computer non-touch models (includes left and right wireless antenna cables and transceivers)			√	√
763692-001	WLAN Antenna Kit for use with HP Pavilion 17 Notebook PC computer touch screen models (includes left and right wireless antenna cables and transceivers)			√	√

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
763699-001	Power Connector for use with HP Pavilion 17 Notebook PC computer			√	√
763706-001	Display Hinge Kit, non-touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC			√	√
763708-001	Power button board (includes cable) for HP Pavilion 17 Notebook PC computer models			√	√
763710-001	Battery Board (For use only with HP Pavilion 17 Computer models)			√	√
763714-001	Rubber kit for HP Pavilion 17 Notebook PC			√	√
763717-001	Speaker Kit (includes left and right front speakers and cables) for HP Pavilion 17 Notebook PC computer models			√	√
764080-001	Heat sink assembly for use only on computer models equipped with UMA graphics (includes replacement thermal material):		√	√	
764081-001	Base enclosure caps (Included in the plastics kit) for HP Pavilion 15 Notebook PC computer models	√	√		
764082-001	Heat sink assembly for use only on computer models equipped with UMA graphics (includes replacement thermal material):		√	√	
764083-001	Heat sink assembly for use only on computer models equipped with AMD processors and discrete graphics 25 W		√	√	
764622-001	Display panel 15.6 WLED AG HD Touchscreen with bezel (includes screws)	√	√		
764623-001	Display panel 15.6 WLED AG full HD SVA (includes screws)	√	√		
765356-001	Display Hinge Kit, touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC			√	√
765773-001	Display back cover (includes screws) Snow white finish for HP Pavilion 17 Notebook PC			√	√
765774-001	Display back cover (includes screws) aqua blue finish for HP Pavilion 17 Notebook PC			√	√
765775-001	Display back cover (includes screws) natural silver finish for HP Pavilion 17 Notebook PC			√	√
765776-001	Display back cover (includes screws) Vibrant red finish for HP Pavilion 17 Notebook PC			√	√
765777-001	Display back cover (includes screws) Snow white finish, Touchscreen for HP Pavilion 17 Notebook PC			√	√
765778-001	Display back cover (includes screws) Aqua blue finish, Touchscreen for HP Pavilion 17 Notebook PC			√	√
765779-001	Display back cover (includes screws) Natural silver finish, Touchscreen for HP Pavilion 17 Notebook PC			√	√
765780-001	Display back cover (includes screws) Vibrant red finish, Touchscreen for HP Pavilion 17 Notebook PC			√	√

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
765781-001	Base enclosure Snow white finish for HP Pavilion 17 Notebook PC				√
765782-001	Display bezel (includes screws)			√	√
765785-001	Display panel SXGA cable for non-Touchscreen models (includes webcam/microphone module cable and screws) for HP Pavilion 17 Notebook PC computer models			√	√
765786-001	Display panel SXGA cable for Touchscreen models (includes webcam/microphone module cable and screws) for HP Pavilion 17 Notebook PC computer models			√	√
765787-001	Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket): Snow white finish			√	√
765788-001	Fan for use with HP Pavilion 17 Notebook PC computer models			√	√
765789-001	Base enclosure caps (Included in the plastics kit) for HP Pavilion 17 Notebook PC computer models			√	√
765790-001	Screw Kit for HP Pavilion 17 Notebook PC			√	√
765792-001	TouchPad board (with bracket and cable) In Ash Silver for HP Pavilion 17 Notebook PC				√
765793-001	Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket): aqua blue finish for HP Pavilion 17 Notebook PC			√	√
765806-001	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in the United States			√	√
765806-031	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in the United Kingdom			√	√
765806-041	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Germany			√	√
765806-051	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in France			√	√
765806-061	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Italy			√	√
765806-071	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Spain			√	√
765806-131	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Portugal			√	

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
765806-141	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Turkey			√	√
765806-151	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Greece			√	√
765806-171	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Saudi Arabia				√
765806-211	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Hungary			√	√
765806-251	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Russia			√	√
765806-261	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Bulgaria				√
765806-271	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Romania			√	√
765806-A41	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Belgium			√	√
765806-B31	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for International use			√	√
765806-BA1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Slovenia			√	√
765806-BB1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Israel				√
765806-BG1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Switzerland			√	√
765806-DB1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Canada			√	√
765806-DH1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Nordic regions			√	√
765806-FL1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad black for use in Czech and Slovackia			√	√

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
765807-001	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the United States			√	√
765807-031	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the United Kingdom			√	√
765807-041	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Germany			√	√
765807-051	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the France			√	√
765807-061	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Italy			√	√
765807-071	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Spain			√	√
765807-131	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Portugal			√	
765807-141	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Turkey			√	√
765807-151	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Greece			√	√
765807-171	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Saudi Arabia				√
765807-211	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Hungary			√	√
765807-251	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Russia			√	√
765807-261	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Bulgaria				√
765807-271	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Romania			√	√
765807-A41	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Belgium			√	√

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
765807-B31	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for International use			✓	✓
765807-BA1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Belgium			✓	✓
765807-BB1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Israel				✓
765807-BG1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Switzerland			✓	✓
765807-DB1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Canada			✓	✓
765807-DH1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Nordic regions			✓	✓
765807-FL1	Top cover for HP Pavilion 17 Notebook PC computer models with full size textured island-style Keyboard and numeric keypad white for use in the Czech and Slovackia			✓	✓
766469-001	System board Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.6 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
766469-501	System board Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.6 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
766469-601	System board Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.6 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
766471-001	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
766471-501	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
766471-601	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
766472-001	System board Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
766472-501	System board Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	✓			

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
766472-601	System board Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
766473-001	System board Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
766473-501	System board Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
766473-601	System board Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
766476-001	System board Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
766476-501	System board Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
766476-601	System Board Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
766478-001	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
766478-501	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
766478-601	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
766480-001	System board Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
766480-501	System board Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
766480-601	System board Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
766687-001	15.6 WLED AG full HD Touchscreen with bezel flat display panel (includes screws)		✓		
766713-501	System board AMD A8-5545M Windows Standard for use with Windows Standard HP Pavilion 15 Notebook PC		✓		

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
766714-001	System board AMD A76M FCH chipset, AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC		✓		
766714-501	System board AMD A76M FCH chipset, AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 15 Notebook PC		✓		
766714-601	System board AMD A76M FCH chipset, AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Professional HP Pavilion 15 Notebook PC		✓		
766715-001	System board AMD A76M FCH chipset, AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC		✓		
766715-501	System board AMD A76M FCH chipset, AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 15 Notebook PC		✓		
766715-601	System board AMD A76M FCH chipset, AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Professional HP Pavilion 15 Notebook PC		✓		
766723-001	Subwoofer for HP Pavilion 15 Notebook PC computer models for computers equipped with Beats Audio		✓		
766724-001	Display back cover (includes screws): For Beats Audio, Touchscreen for HP Pavilion 15 Notebook PC		✓		
766725-001	Base enclosure: for Beats Audio, Touchscreen for HP Pavilion 15 Notebook PC		✓		
766894-001	Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket): vibrant red for HP Pavilion 15 Notebook PC			✓	✓
766903-001	17.3 WLED AG HD touchscreen flat display panel (includes screws)			✓	✓
766904-001	17.3 WLED AG BrightView HD flat display panel (includes screws) available for Windows 8.1 and Windows 7			✓	✓
766905-001	17.3 WLED AG full HD flat display panel (includes screws) available for Windows 8.1 and Windows 7			✓	✓
766906-001	17.3 WLED AG touchscreen full HD flat display panel (includes screws)			✓	✓
766908-001	Base enclosure: aqua finish for use with HP 17 Notebook PC				✓
766909-001	Base enclosure: natural silver finish for use with HP 17 Notebook PC				✓
766910-001	Base enclosure: vibrant red finish for use with HP 17 Notebook PC				✓

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
767059-001	TouchPad board (with bracket and cable) in natural silver finish for use with HP 17 Notebook PC				✓
767120-001	USB board for use with HP Pavilion 17 Notebook PC computer models			✓	✓
767339-001	Heat sink assembly for use only on computer models equipped with UMA graphics (includes replacement thermal material): For use only on computer models equipped with AMD processors and UMA graphics 19 W	✓			✓
767340-001	Heat sink assembly for use only on computer models equipped with UMA graphics (includes replacement thermal material): For use only on computer models equipped with AMD processors and UMA graphics 19 W	✓ ✓			✓
767341-001	Heat sink assembly for use only on computer models equipped with UMA graphics (includes replacement thermal material): For use only on computer models equipped with AMD processors and UMA graphics 8.5 W	✓			✓
767409-001	System board Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767409-501	System board Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 1 Notebook PC available for Windows 8.1 and Windows 7				✓
767410-001	System board Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767410-501	System board Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7				✓
767411-001	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767411-501	Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC				✓
767412-001	System board Intel Core i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (4 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767412-501	System board Intel Core i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (4 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC				✓
767413-001	System board Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767413-501	System board Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use				✓

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
	with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7				
767414-001	System board Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767414-501	System board Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7				✓
767415-001	System board Intel Core 830M i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767415-501	System board Intel Core 830M i3-4030U (1.9GHz), 1600MHz/3MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7				✓
767416-001	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767416-501	Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC				✓
767419-001	System board Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
767419-501	System board Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC				✓
767420-001	System board Intel Celeron N2830 (up to 2.42 GHz) 1333 MHz/2 MB L2, dual SDP4.5 W for use with FreeDOS and Ubuntu Linux				✓
767420-501	System board Intel Celeron N2830 (up to 2.42 GHz) 1333 MHz/2 MB L2, dual SDP4.5 W for use with Windows Standard HP Pavilion 17 Notebook PC				✓
767516-001	Hard Drive Hardware Kit, for HP Pavilion 15 Notebook PC in for Beats Audio		✓		
773501-001	Hard Drive Hardware Kit, for HP Pavilion 17 Notebook PC			✓	✓
774767-001	Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
774767-501	Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
774767-601	Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC	✓			

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
774768-001	System board Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
774768-501	System board Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
774768-601	System board Intel Core i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
774769-001	Intel Core 840M i7-4500U (1.8 GHz, SC turbo up to 3.0 GHz), 1600 MHz/2 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
774769-501	Intel Core 840M i7-4500U (1.8 GHz, SC turbo up to 3.0 GHz), 1600 MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
774769-601	Intel Core 840M i7-4500U (1.8 GHz, SC turbo up to 3.0 GHz), 1600 MHz/2 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
774770-001	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
774770-501	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
774770-601	Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
774771-001	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
774771-501	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
774771-601	Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC for use with FreeDOS and Ubuntu Linux	✓			
774772-001	System board Intel Core 830M i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
774772-501	System board Intel Core 830M i3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			
774772-601	System board Intel Core 830Mi3-4030U (1.9 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓			

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
776506-001	Hardware sleeve for HP Pavilion 15 Notebook PC	✓	✓		
777194-001	Display back cover (includes screws): neon purple finish for HP Pavilion 17 Notebook PC			✓	✓
777195-001	Display back cover (includes screws): neon purple finish for HP Pavilion 17 Notebook PC			✓	✓
777196-001	Base enclosure: neon purple finish for HP Pavilion 17 Notebook PC				✓
777222-001	Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket) for HP Pavilion 17 Notebook PC neon purple			✓	✓
777944-001	Hard drive rubber bracket, left and right			✓	✓
778188-005	500 GB hard drive, 5400-RPM for use with HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	✓	✓	✓	✓
778190-005	750 GB hard drive, 5400-RPM available for Windows 8.1 and Windows 7		✓	✓	✓
778192-005	1 TB Hard drive 5400 rpm, 9.5 mm available for Windows 8.1 and Windows 7		✓	✓	✓
778259-001	Display back cover (includes screws), neon purple HP Pavilion 15 Notebook PC Intel computer model	✓			
778260-001	Display back cover (includes screws), neon purple touchscreen HP Pavilion 15 Notebook PC Intel computer model	✓			
778262-001	Optical drive hardware neon purple	✓			
778263-001	Display back cover (includes screws): neon purple, touchscreen for use with Windows Professional HP Pavilion 15 Notebook PC	✓	✓		
778264-001	Base enclosure: neon purple for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
778265-001	Hard Drive Hardware Kit, for HP Pavilion 15 Notebook PC in neon purple	✓	✓		
778266-001	Optical drive Blu-ray Disc R/RW with SuperMulti for HP Pavilion 15 Notebook PC AMD models only		✓		
778856-001	Optical drive Blu-ray Disc R/RW with SuperMulti for HP Pavilion 15 Notebook PC AMD models only		✓		
778946-001	System board Intel Core i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/3 MB L3, dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓
778946-501	System board Intel Core i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC				✓
778947-001	Intel Core 840M i7-4500U (1.8 GHz, SC turbo up to 3.0 GHz), 1600 MHz/ 2 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				✓

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
778947-501	Intel Core 840M i7-4500U (1.8 GHz, SC turbo up to 3.0 GHz), 1600 MHz/2 MB L3, Dual 1 5W for use with Windows Standard HP Pavilion 17 Notebook PC				√
778948-001	Intel Core 840M i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/2 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				√
778948-501	Intel Core 840M i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC				√
778949-001	Intel Core 830M i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/2 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC				√
778949-501	Intel Core 830M i5-4200U (1.6 GHz, SC turbo up to 2.6 GHz), 1600 MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC				√
779127-001	System board Intel Core i3-4005U (1.7GHz), 1600 MHz/3 MB L3, dual 15 W for use with FreeDOS and Ubuntu Linux for use with HP Pavilion 17 Notebook PC				√
779127-501	System board Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, dual 15 W for use with FreeDOS and Ubuntu Linux for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7				√
779639-001	Back cover neon purple for use with Windows Standard HP Pavilion 15 Notebook PC	√	√		
779839-001	System board Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	√			
779839-501	System board Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	√			
779839-601	System board Intel Core i3-4005U (1.7 GHz), 1600 MHz/3 MB L3, dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	√			
779840-001	System board Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W	√			
779840-501	System board Intel Core 830 M i3-4005U (1.7 GHz), 1600 MHz/2 MB L3, dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	√			
779840-601	System board Intel Core 830 M i3-4005U (1.7 GHz), 1600 MHz/2 MB L3, dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	√			
780084-001	Base enclosure snow white for use with AMD processors for use with HP Pavilion 7 Notebook PC			√	
780085-001	Base enclosure aqua blue for use with AMD processors for use with HP Pavilion 17 Notebook PC			√	

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
780086-001	Base enclosure natural silver for use with AMD processors for use with HP Pavilion 17 Notebook PC			✓	
780087-001	Base enclosure vibrant red for use with AMD processors for use with HP Pavilion 17 Notebook PC			✓	
780088-001	Base enclosure neon purple for use with AMD processors for use with HP Pavilion 17 Notebook PC			✓	
780094-001	Base enclosure natural silver for use with Intel processors for use with HP Pavilion 15 Notebook PC		✓		
780095-001	Base enclosure snow white for use with Intel processors for use with HP Pavilion 15 Notebook PC		✓		
780096-001	Base enclosure vibrant red for use with Intel processors for use with HP Pavilion 15 Notebook PC		✓		
780097-001	Base enclosure aqua blue for use with Intel processors for use with HP Pavilion 15 Notebook PC		✓		
780099-001	Base enclosure neon purple for use with Intel processors for use with HP Pavilion 15 Notebook PC		✓		
780212-001	Heat sink 8.5 W discrete for use with Intel computer models	✓			
781764-001	TouchPad board ash silver with cable for AMD computers			✓	
781765-001	TouchPad board ano silver with cable for AMD computers			✓	
781767-001	TouchPad board with bracket and cable in ano silver for AMD computers		✓		
781768-001	TouchPad board with bracket and cable ano silver for AMD computers		✓		
781769-001	TouchPad board with bracket and cable for AMD computers using Beats Audio		✓		
782940-001	Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	✓			
782940-501	Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	✓			
782940-601	Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 17 Notebook PC	✓			
784982-001	Heat spreader for use with Intel computer models	✓			
787484-001	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC				✓
787484-501	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC				✓

Spare part number	Description	Regulatory Model Number			
		TPN-Q140	TPN-Q143	TPN-Q144	TPN-Q141
787485-001	Intel Celeron N2840 (2.16 up to 2.58 GHz) 1333 MHz/2 MB L2, dual SDP4.5 W for use with FreeDOS and Ubuntu Linux for use with Windows Standard HP Pavilion 17 Notebook PC				✓
787485-501	Intel Celeron N2840 (2.16 up to 2.58 GHz) 1333 MHz/2MB L2, dual SDP4.5 W for use with Windows Standard HP Pavilion 17 Notebook PC				✓
787515-001	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
787515-501	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	✓			
787515-601	Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional	✓			
787516-001	Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	✓			
787516-501	Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	✓			
787516-601	Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 15 Notebook PC	✓			
788385-001	Base enclosure neon purple for use with Intel processors for use with HP Pavilion 15 Notebook PC	✓			
790017-001	Display back cover (includes screws), touchscreen HP Pavilion 15 Notebook PC Intel computer model	✓			
790018-001	Base enclosure for use with Intel processors for use with HP Pavilion 15 Notebook PC touchscreen computers	✓			
790019-001	Optical drive hardware kit for touchscreen Intel computer models	✓			

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

CAUTION: A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of staticsafe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

Material	Use	Voltage protection level
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

5 Removal and replacement procedures for Customer Self-Repair parts

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part not supported by the Customer Self-Repair program may void your warranty. Check your warranty to determine if Customer Self-Repair is supported in your location.

Component replacement procedures

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Please read and follow the procedures described here to access and replace Customer Self-Repair parts successfully.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Bottom on page 18](#) for details.

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

There may be as many as five screws that must be removed, replaced, and/or loosened when servicing Customer Self-Repair parts. Make special note of each screw size and location during removal and replacement.

Battery

Description	Spare part number
4-cell, 41 WHr 2.8AH Li-ion battery	756743-001

Before removing the battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.


Remove the battery:

1. Turn the computer upside down on a flat surface.
2. Slide the battery lock latch (1) and then slide the battery release latch (2) to release the battery.



NOTE: The battery release latch automatically returns to its original position.

3. Pivot the battery upward (3), and then remove the battery from the computer (4).

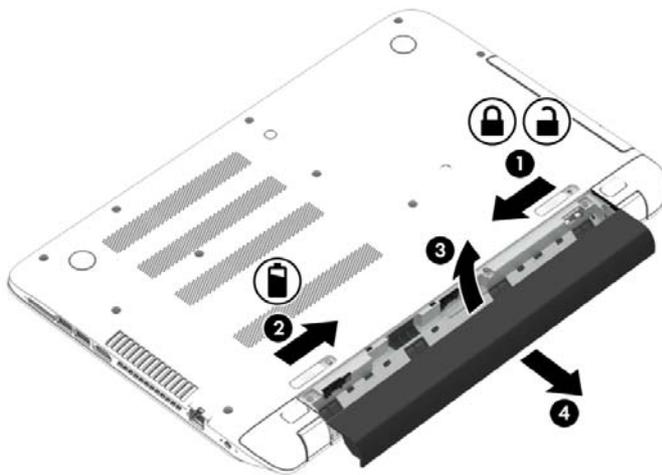

Reverse this procedure to install the battery.

Optical drive



NOTE: The optical drive spare part kit includes the optical drive connector board and cable. The optical drive connector board and cable are removed when removing the system board and not part of the customer replacement procedure of the optical drive.

Description	Spare part number
Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket):	
For HP Pavilion 17 Notebook PC	
Aqua blue finish	765793-001
Natural silver finish	763426-001
Snow white finish	765787-001
Vibrant red finish	766894-001
Neon purple finish	777222-001
For HP Pavilion 15 Notebook PC	
Optical drive, DVD+/-RW DL SuperMulti (includes optical drive hardware kit with optical drive bezel and bracket):	762503-001
Blu-ray Disc R/RW with SuperMulti fo AMD models only	778266-001
Aqua blue finish	765793-001
Natural silver finish	763426-001
Optical drive hardware kit for touchscreen Intel computer models	790019-001


Before removing the optical drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).


Remove the optical drive:

1. Remove the screw (1) that secures the optical drive to the computer.

2. Use a flat tool to press on the optical drive bracket tab (2) to release the optical drive.

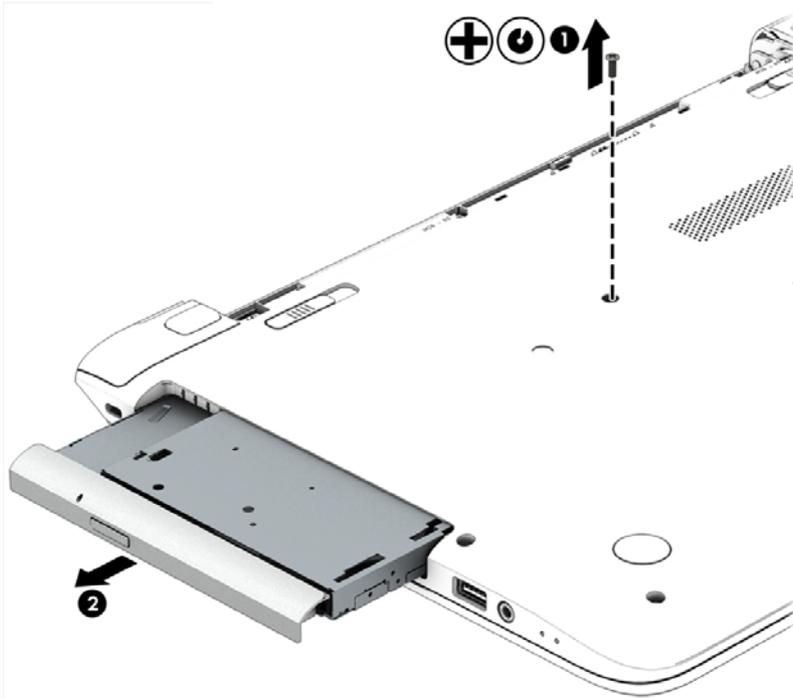

3. Remove the optical drive from the computer.
4. If it is necessary to replace the optical drive bracket, position the optical drive with the rear panel toward you.
5. Remove the two screws (1) that secure the optical drive bracket to the optical drive.
6. Remove the optical drive bracket (2).

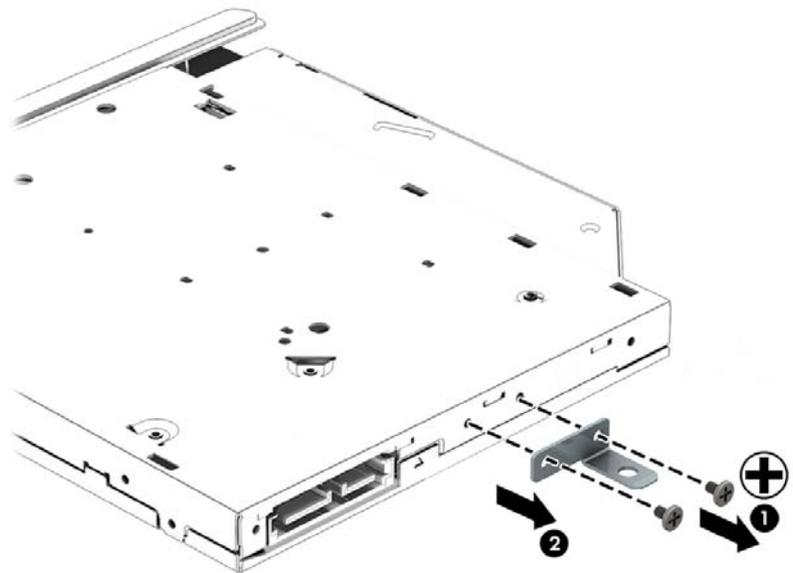

Reverse this procedure to reassemble and install the optical drive.

6 Removal and replacement procedures for Authorized Service Provider parts

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **CAUTION:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Bottom on page 18](#) for details.

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

There are as many as 83 screws that must be removed, replaced, and/or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Base enclosure

Description	Spare part number
Top cover for HP Pavilion 15 Notebook PC computer models:	
With full size textured island-style Keyboard. Touchpad and numeric keypad black for use in the United States	762529-001
With full size textured island-style Keyboard and numeric keypad black for use in the United Kingdom	762529-031
With full size textured island-style Keyboard and numeric keypad black for use in Germany	762529-041
With full size textured island-style Keyboard and numeric keypad black for use in France	762529-051
With full size textured island-style Keyboard and numeric keypad black for use in Italy	762529-061
With full size textured island-style Keyboard and numeric keypad black for use in Spain	762529-071
With full size textured island-style Keyboard and numeric keypad black for use in Portugal	762529-131
With full size textured island-style Keyboard and numeric keypad black for use in Turkey	762529-141
With full size textured island-style Keyboard and numeric keypad black for use in Greece	762529-151
With full size textured island-style Keyboard and numeric keypad black for use in Latin America	762529-161
With full size textured island-style Keyboard and numeric keypad black for use in Saudi Arabia	762529-171
With full size textured island-style Keyboard and numeric keypad black for use in Hungary	762529-211
With full size textured island-style Keyboard and numeric keypad black for use in Russia	762529-251
With full size textured island-style Keyboard and numeric keypad black for use in Bulgaria	762529-261
With full size textured island-style Keyboard and numeric keypad black for use in Romania	762529-271
With full size textured island-style Keyboard and numeric keypad black for use in Thailand	762529-281
With full size textured island-style Keyboard and numeric keypad black for use in Japan	762529-291
With full size textured island-style Keyboard and numeric keypad black for use in Europe	762529-A41
With full size textured island-style Keyboard and numeric keypad black for use in Taiwan	762529-AB1
With full size textured island-style Keyboard and numeric keypad black for use in South Korea	762529-AD1
With full size textured island-style Keyboard and numeric keypad black for International use	762529-B31
With full size textured island-style Keyboard and numeric keypad black for use in the Adriatics	762529-BA1
With full size textured island-style Keyboard and numeric keypad black for use in Israel	762529-BB1
With full size textured island-style Keyboard and numeric keypad black for use in Switzerland	762529-BG1
With full size textured island-style Keyboard and numeric keypad black Canada	762529-DB1
With full size textured island-style Keyboard and numeric keypad black for use in the Netherlands	762529-DH1
With full size textured island-style Keyboard and numeric keypad black for use in Czech and Slovakia	762529-FL1
With full size textured island-style Keyboard and numeric keypad black for use in South Africa	762529-FP1
With full size textured island-style Keyboard, TouchPad, and numeric keypad white for use in the United States	762530-001

Description	Spare part number
With full size textured island-style Keyboard and numeric keypad white for use in the United Kingdom	762530-031
With full size textured island-style Keyboard and numeric keypad white for use in Germany	762530-041
With full size textured island-style Keyboard and numeric keypad white for use in France	762530-051
With full size textured island-style Keyboard and numeric keypad white for use in Italy	762530-061
With full size textured island-style Keyboard and numeric keypad white for use in Spain	762530-071
With full size textured island-style Keyboard and numeric keypad white for use in Portugal	762530-131
With full size textured island-style Keyboard and numeric keypad white for use in Turkey	762530-141
With full size textured island-style Keyboard and numeric keypad white for use in Greece	762530-151
With full size textured island-style Keyboard and numeric keypad white for use in Latin America	762530-161
With full size textured island-style Keyboard and numeric keypad white for use in Saudi Arabia	762530-171
With full size textured island-style Keyboard and numeric keypad white for use in Hungary	762530-211
With full size textured island-style Keyboard and numeric keypad white for use in Russia	762530-251
With full size textured island-style Keyboard and numeric keypad white for use in Bulgaria	762530-261
With full size textured island-style Keyboard and numeric keypad white for use in Romania	762530-271
With full size textured island-style Keyboard and numeric keypad white for use in Thailand	762530-281
With full size textured island-style Keyboard and numeric keypad white for use in Japan	762530-291
With full size textured island-style Keyboard and numeric keypad white for use in Europe	762530-A41
With full size textured island-style Keyboard and numeric keypad white for use in Taiwan	762530-AB1
With full size textured island-style Keyboard and numeric keypad white for use in South Korea	762530-AD1
With full size textured island-style Keyboard and numeric keypad white for International use	762530-B31
With full size textured island-style Keyboard and numeric keypad white for use in the Adriatics	762530-BA1
With full size textured island-style Keyboard and numeric keypad white for use in Israel	762530-BB1
With full size textured island-style Keyboard and numeric keypad white for use in Switzerland	762530-BG1
With full size textured island-style Keyboard and numeric keypad white for use in Canada	762530-DB1
With full size textured island-style Keyboard and numeric keypad white for use in the Netherlands	762530-DH1
With full size textured island-style Keyboard and numeric keypad white for use in Czech and Slovakia	762530-FL1
With full size textured island-style Keyboard and numeric keypad white for use in South Africa	762530-FP1
With full size textured island-style Keyboard, TouchPad and numeric keypad Beats Audio for use in the United States	762533-001
With full size textured island-style Keyboard and numeric keypad Beats Audio for use in the United Kingdom	762533-031
With full size textured island-style Keyboard and numeric keypad Beats Audio for use in France	762533-051
With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Spain	762533-071

Description	Spare part number
With full size textured island-style Keyboard and numeric keypad Beats Audio in Latin America	762533-161
With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Russia	762533-251
With full size textured island-style Keyboard and numeric keypad Beats Audio for International use	762533-B31
With full size textured island-style Keyboard, TouchPad and numeric keypad Beats Audio for use in Slovenia	762533-BA1
With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Canada	762533-DB1
With full size textured island-style Keyboard and numeric keypad Beats Audio for use in the Netherlands	762533-DH1
With full size textured island-style Keyboard and numeric keypad Beats Audio for use in Czech and Slovackia	762533-FL1
Top cover for HP Pavilion 17 Notebook PC computer models:	
With full size textured island-style Keyboard and numeric keypad black for use in the United States	765806-001
With full size textured island-style Keyboard and numeric keypad black for use in the United Kingdom	765806-031
With full size textured island-style Keyboard and numeric keypad black for use in Germany	765806-041
With full size textured island-style Keyboard and numeric keypad black for use in France	765806-051
With full size textured island-style Keyboard and numeric keypad black for use in Italy	765806-061
With full size textured island-style Keyboard and numeric keypad black for use in Spain	765806-071
With full size textured island-style Keyboard and numeric keypad black for use in Portugal	765806-131
With full size textured island-style Keyboard and numeric keypad black for use in Turkey	765806-141
With full size textured island-style Keyboard and numeric keypad black for use in Greece	765806-151
With full size textured island-style Keyboard and numeric keypad black for use in Saudi Arabia	765806-171
With full size textured island-style Keyboard and numeric keypad black for use in Hungary	765806-211
With full size textured island-style Keyboard and numeric keypad black for use in Russia	765806-251
With full size textured island-style Keyboard and numeric keypad black for use in Bulgaria	765806-261
With full size textured island-style Keyboard and numeric keypad black for use in Romania	765806-271
With full size textured island-style Keyboard and numeric keypad black for use in Belgium	765806-A41
With full size textured island-style Keyboard and numeric keypad black for International use	765806-B31
With full size textured island-style Keyboard and numeric keypad black for use in Slovenia	765806-BA1
With full size textured island-style Keyboard and numeric keypad black for use in Israel	765806-BB1
With full size textured island-style Keyboard and numeric keypad black for use in Switzerland	765806-BG1
With full size textured island-style Keyboard and numeric keypad black for use in Canada	765806-DB1
With full size textured island-style Keyboard and numeric keypad black for use in Nordic regions	765806-DH1
With full size textured island-style Keyboard and numeric keypad black for use in Czech and Slovackia	765806-FL1

Description	Spare part number
With full size textured island-style Keyboard and numeric keypad white for use in the United States	765807-001
With full size textured island-style Keyboard and numeric keypad white for use in the United Kingdom	765807-031
With full size textured island-style Keyboard and numeric keypad white for use in Germany	765807-041
With full size textured island-style Keyboard and numeric keypad white for use in France	765807-051
With full size textured island-style Keyboard and numeric keypad black for use in Italy	765807-061
With full size textured island-style Keyboard and numeric keypad white for use in Spain	765807-071
With full size textured island-style Keyboard and numeric keypad white for use in Portugal	765807-131
With full size textured island-style Keyboard and numeric keypad white for use in Turkey	765807-141
With full size textured island-style Keyboard and numeric keypad white for use in Greece	765807-151
With full size textured island-style Keyboard and numeric keypad white for use in Saudi Arabia	765807-171
With full size textured island-style Keyboard and numeric keypad white for use in Hungary	765807-211
With full size textured island-style Keyboard and numeric keypad white for use in Russia	765807-251
With full size textured island-style Keyboard and numeric keypad white for use in Bulgaria	765807-261
With full size textured island-style Keyboard and numeric keypad white for use in Romania	765807-271
With full size textured island-style Keyboard and numeric keypad white for use in Belgium	765807-A41
With full size textured island-style Keyboard and numeric keypad white for International use	765807-B31
With full size textured island-style Keyboard and numeric keypad white for use in Slovenia	765807-BA1
With full size textured island-style Keyboard and numeric keypad white for use in Israel	765807-BB1
With full size textured island-style Keyboard and numeric keypad white for use in Switzerland	765807-BG1
With full size textured island-style Keyboard and numeric keypad white for use in Canada	765807-DB1
With full size textured island-style Keyboard and numeric keypad white	765807-DH1
With full size textured island-style Keyboard and numeric keypad white for use in Nordic regions	765807-FL1
Base enclosure	
For use on HP Pavilion 17 Notebook PC computer models	
Aqua blue finish	766908-001
Natural silver finish	766909-001
Snow white finish	765781-001
Vibrant red finish	766910-001
Neon purple	777196-001
Snow white for use with AMD processors	780084-001
Aqua blue for use with AMD processors	780085-001
Natural silver for use with AMD processors	780086-001
Vibrant red for use with AMD processors	780087-001


Description	Spare part number
Neon purple for use with AMD processors	780088-001
For use on HP Pavilion 15 Notebook PC computer models	
Aqua blue finish	762501-001
Natural silver finish	762498-001
Snow white finish	762499-001
Vibrant red finish	762500-001
For Beats Audio	766725-001
Neon purple	777196-001
Snow white for use with AMD processors	780084-001
Aqua blue for use with AMD processors	780085-001
Natural silver for use with AMD processors	780086-001
Vibrant red for use with AMD processors	780087-001
Neon purple for use with AMD processors	780088-001
For use with HP Pavilion 15 Notebook PC Intel touchscreen computers	788385-001
For use with Intel processors for use with HP Pavilion 15 Notebook PC Intel computer models	790018-001
Base enclosure caps	
For HP Pavilion 17 Notebook PC computer models	765789-001
For HP Pavilion 15 Notebook PC computer models	764081-001

Before disassembling the computer, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.

Remove the base enclosure:

1. Turn the computer face down, and remove the rubber feet **(1)**, the two screws **(2)** and lift the end caps **(3)**.

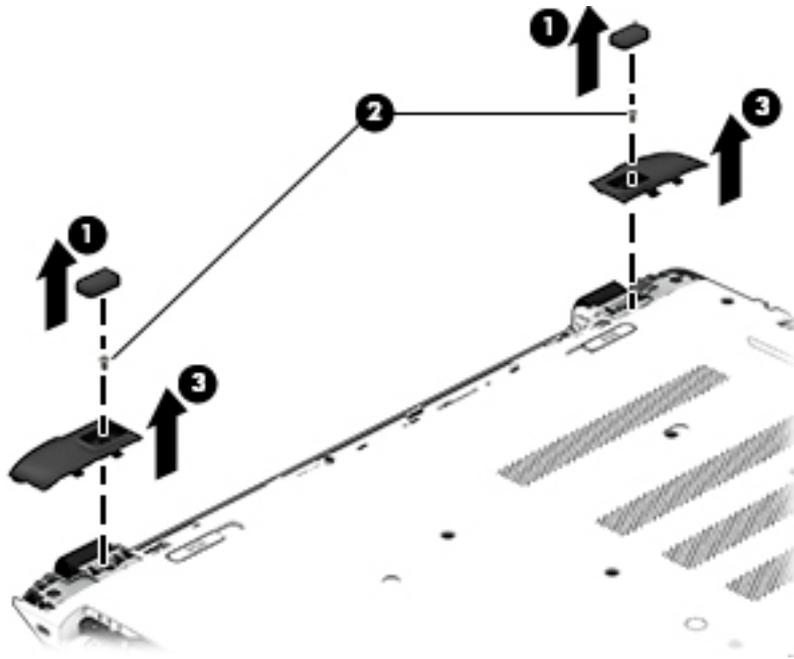


2. Remove the ten Phillips screws.

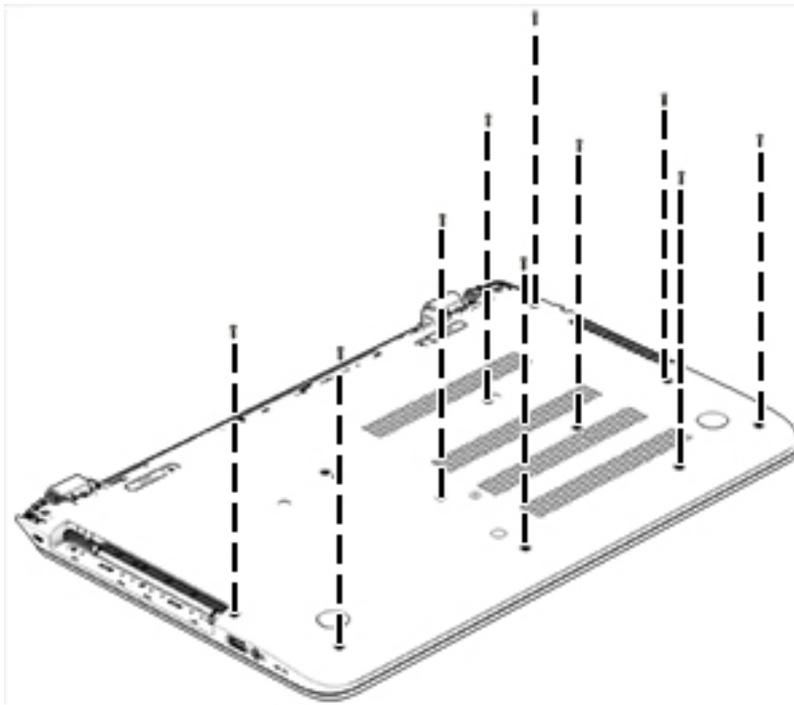

3. Remove five screws (1) around the battery area, three broadhead screws (2) in the optical drive bay and one screw (3) near the display hinge.

 **NOTE:** Some models may have two screws in the optical drive bay (2).

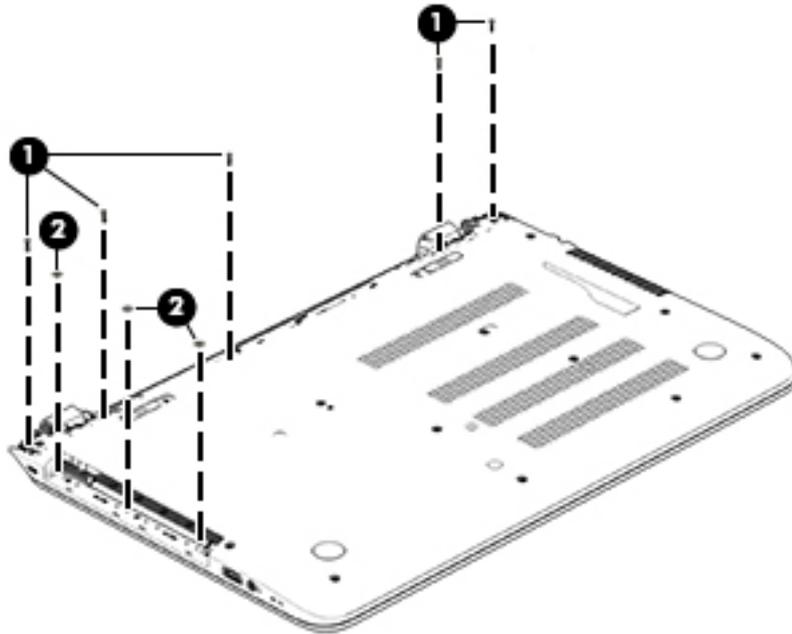

4. Turn the computer right side up and carefully remove the top cover.



 **NOTE:** Use a thin, non-conductive tool to lift the top cover..

5. Carefully disconnect the following cables:
 - Power button cable (1)
 - Keyboard cable (2)
 - TouchPad cable (3)

Lift the top cover (4) to remove it from the computer.



Reverse this procedure to install the top cover and base enclosure.

Display panel

Component	Spare part number
Display bezel (includes screws) for HP Pavilion 17 Notebook PC	765782-001
Display bezel (includes screws) for HP Pavilion 15 Notebook PC	762512-001
Display Hinge Kit (includes left and right hinges and screws)	
For HP Pavilion 17 Notebook PC	
Display Hinge Kit, non-touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	763706-001
Display Hinge Kit, touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	765356-001
For HP Pavilion 15 Notebook PC	
Display Hinge Kit, non-touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	762520-001
Display Hinge Kit, touchscreen (includes left and right hinges and screws) for HP Pavilion 17 Notebook PC	763105-001
15.6 LED BrightView HD SVA HD, WLED, SVA flat display panel available for Windows 8.1 and Windows 7 (includes screws)	762513-001
15.6 WLED AG HD Touchscreen with bezel (includes screws)	764622-001
15.6 WLED AG full HD SVA available for Windows 8.1 and Windows 7 (includes screws)	764623-001
15.6 WLED AG full HD Touchscreen with bezel flat display panel (includes screws)	766687-001
17.3 WLED AG HD touchscreen flat display panel flat display panel (includes screws)	766903-001
17.3 WLED AG BrightView HD flat display panel available for Windows 8.1 and Windows 7 (includes screws)	766904-001
17.3 WLED AG full HD flat display panel available for Windows 8.1 and Windows 7 (includes screws)	766905-001
17.3 WLED AG touchscreen full HD flat display panel (includes screws)	766906-001
Antenna Kit (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 15 Notebook PC	762518-001
Antenna Kit, Touchscreen (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 15 Notebook PC	763568-001
Antenna Kit (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 17 Notebook PC	763568-001
Antenna Kit (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 17 Notebook PC	763691-001
Antenna Kit, Touchscreen (includes left and right wireless antenna cables and transceivers and screws) for HP Pavilion 15 Notebook PC	763692-001
Display panel SXGA cable for non-Touchscreen models (includes webcamera/ microphone module cable and screws) for HP Pavilion 17 Notebook PC computer models	765785-001
Display panel SXGA cable for Touchscreen models (includes webcamera/ microphone module cable and screws) for HP Pavilion 17 Notebook PC computer models	765786-001
Display panel HD cable for non-Touchscreen models (includes webcamera/ microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	762519-001


Component	Spare part number
Display panel full HD cable for Touchscreen models (includes webcam/ microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	763590-001
Display panel full HD cable for non-Touchscreen models (includes webcam/ microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	762544-001
Display panel HD cable for non-Touchscreen models (includes webcam/ microphone module cable and screws) for HP Pavilion 15 Notebook PC computer models	763572-001
Display back cover (includes screws):	
For HP Pavilion 17 Notebook PC	
Aqua blue finish	765774-001
Natural silver finish	765775-001
Snow white finish	765773-001
Vibrant red finish	765776-001
Neon purple finish	777194-001
Aqua blue finish, Touchscreen	765778-001
Natural silver finish, Touchscreen	765779-001
Snow white finish, Touchscreen	765777-001
Vibrant red finish, Touchscreen	765780-001
Neon purple finish, Touchscreen	777195-001
For HP Pavilion 15 Notebook PC	
Aqua blue finish	762511-001
Natural silver finish	762508-001
Snow white finish	762509-001
Vibrant red finish	762510-001
Neon purple finish	779639-001
Aqua blue finish, Touchscreen	762517-001
Natural silver finish, Touchscreen	762514-001
Snow white finish, Touchscreen	762515-001
Vibrant red finish, Touchscreen	762516-001
Aqua blue finish, Touchscreen	762516-001
For Beats Audio, Touchscreen	766724-001
Neon purple finish, Touchscreen	778263-001
Touchscreen	790017-001
Webcamera/Microphone	
Webcamera/microphone module (includes adhesive and screws)	762521-001
Webcamera/microphone module, Touchscreen (includes adhesive and screws)	762545-001

Before removing the display panel, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).

Remove the display panel:


1. Open the computer.
2. Disengage the display cable (1) and disconnect the display connector (2) on the left side base of the display panel.
3. On the right side, disconnect the WLAN cable (3) and carefully remove the cable from the retaining tabs (4).

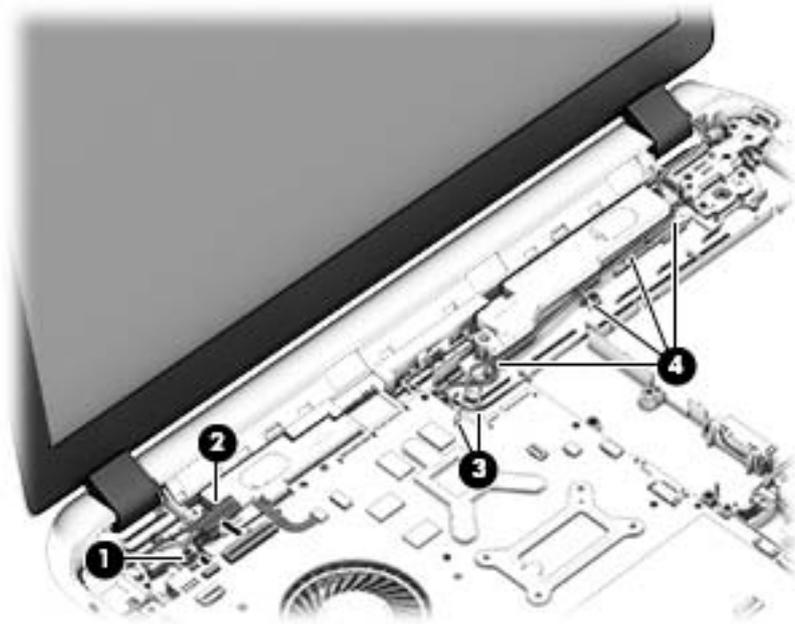

4. Remove the power connector cover by removing the Phillips screw (1) and lifting the cover (2).


 **NOTE:** The power connector cover has two screws, however, the screw on the left is removed during the base enclosure and top cover removal process. Removing the cover is required for the display panel removal.

 **NOTE:** You will remove the power connector after you have removed the system board. This procedure is to remove the power connector cover.

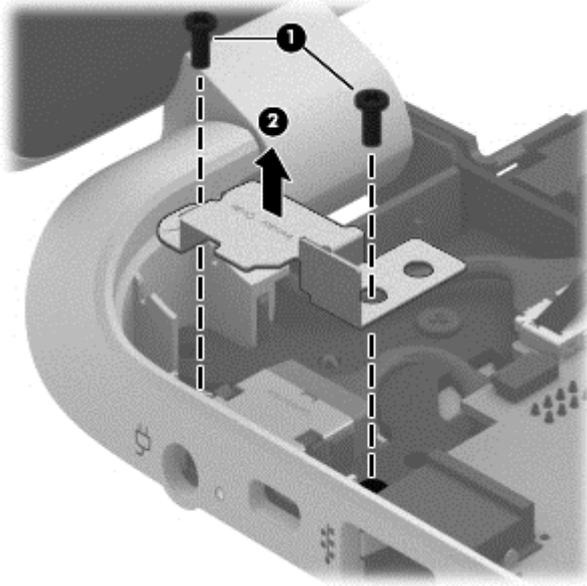


5. Remove the six Phillips screws (1) on the left and one broadhead screw (2) on the right side base of the display panel. Lift the panel up (3).

 **NOTE:** Support the display panel as you are removing the screws.

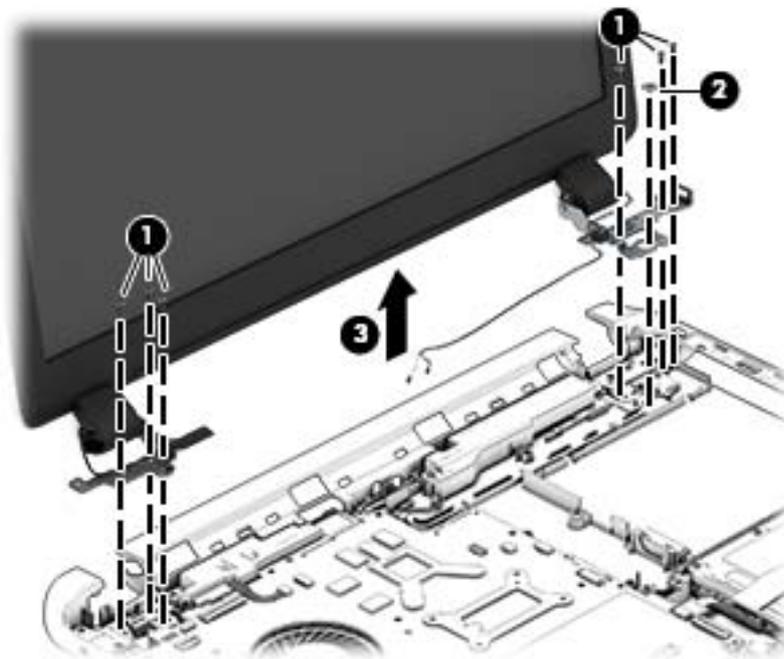


6. Open the panel cover (1), swivel the display panel hinges (2) on both sides and then tilt up the display panel hinge (3) to release it.

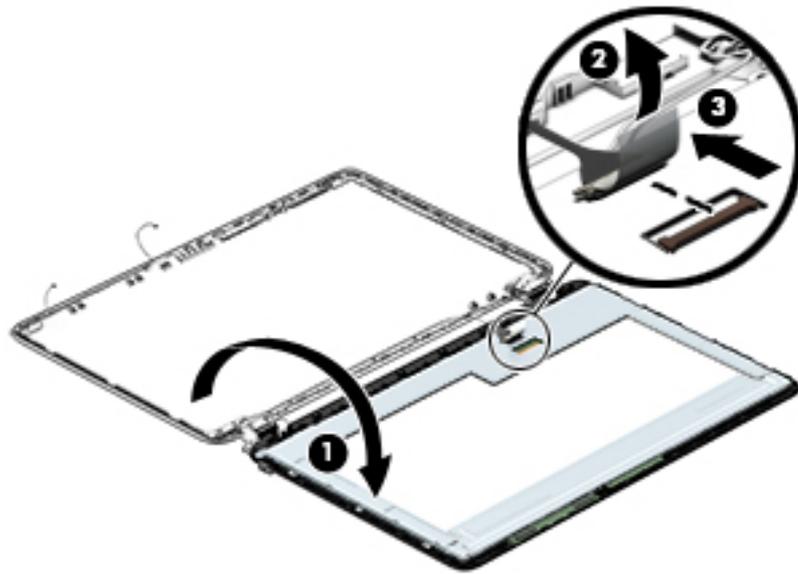

7. Loosen the edges of the back cover (1), (2), and (3) from all four sides of the display bezel and lift the display panel (4).




NOTE: Use a sharp probe to pop the covers out to avoid scratching the bezel.

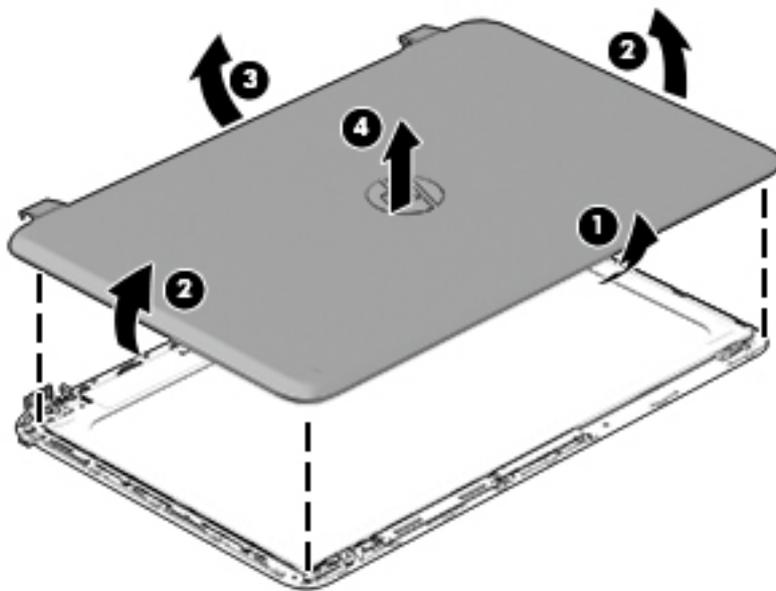


- To remove the raw panel, remove the six Phillips screws (1) and any adhesive that secures the display panel to the back cover and lift the display panel (2) carefully.

 **NOTE:** Depending on your specific model, some computers only have four display panel screws.

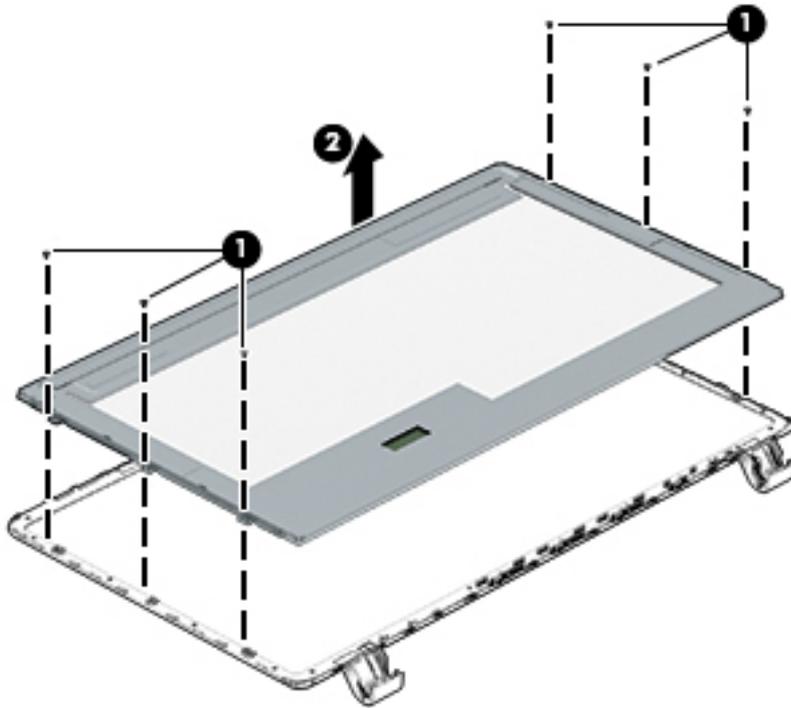


- Remove the display panel side bracket (select models only) by removing the four Phillips screws (1) and releasing the side bracket (2).

 **NOTE:** If your computer model does not have side brackets, skip to the next step.

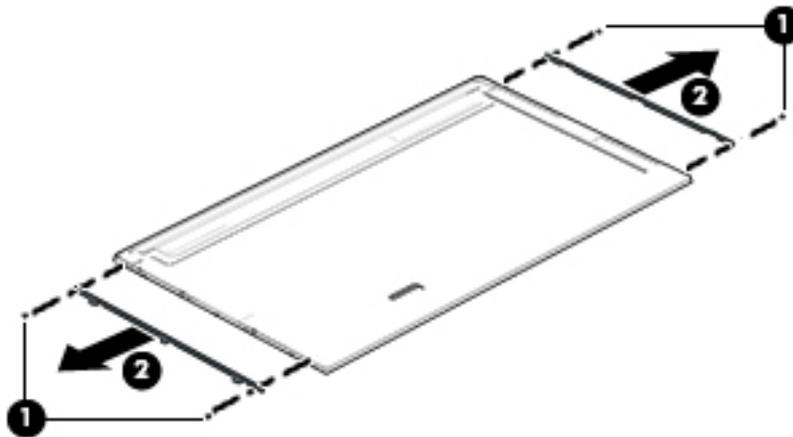


10. If it is necessary to remove the display panel cable or access the webcam and microphone, follow these steps. With the display bezel upside down, disconnect the cable from the webcam/microphone (1) and from the routing channel built into the back cover.


Carefully release the cable from the channel guides, the guides in the display hinge, and remove the display panel cable (2). Lift the cable (3) to remove it.

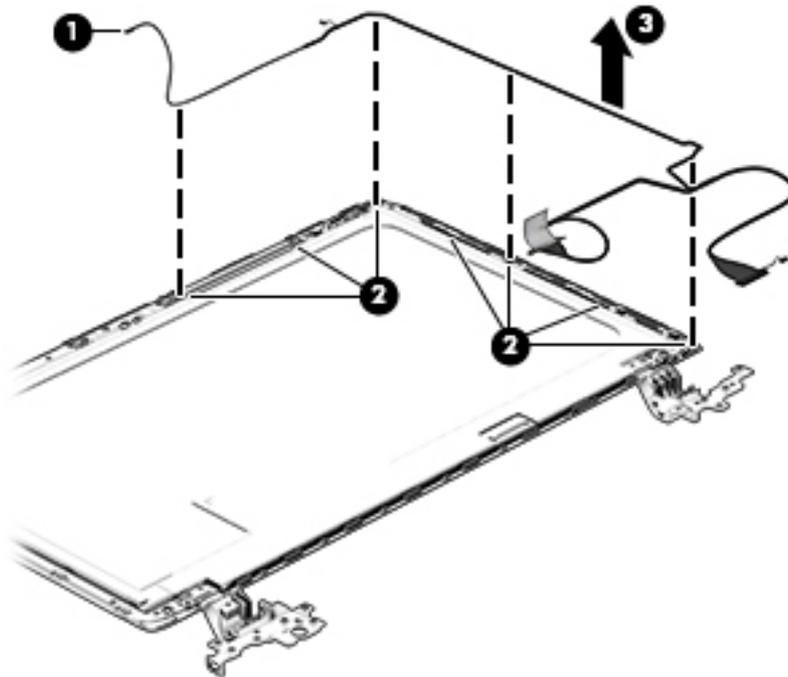

11. On select models, removing the cable also requires disengaging it from the channels in the hinges and disconnecting from the display panel. To disconnect the cable from the display panel, carefully remove the foil tape at the bottom of the display panel and then carefully lift the display cable connector (1) and remove the display connector (2).

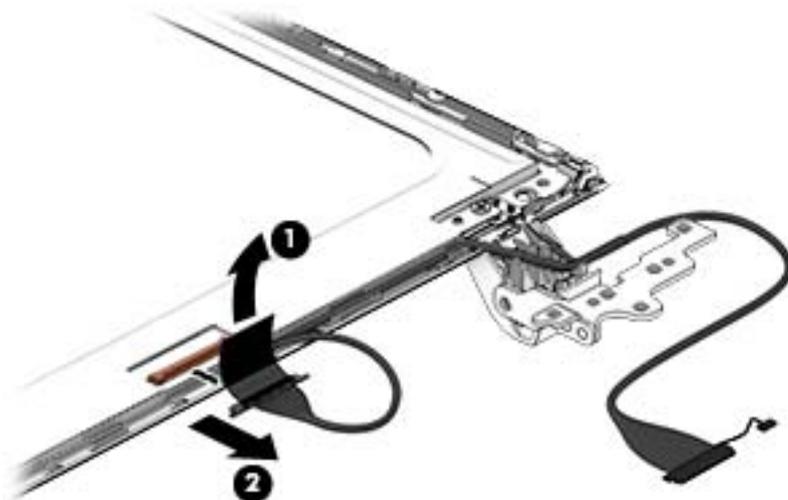


12. If it is necessary to replace the webcam/microphone perform the following: Lift the module (1) from the adhesive holding it in place on the display bezel and disconnect the module connector (2) if you have not already done so when removing the display cable.

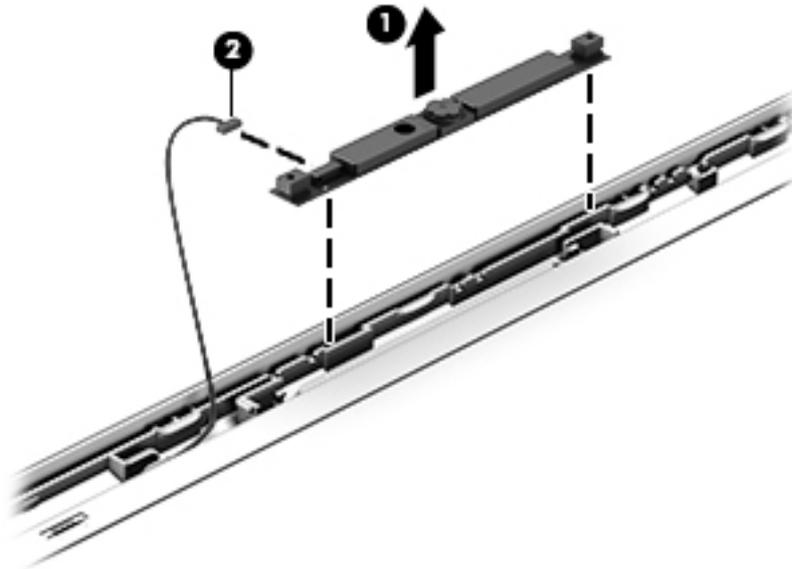


13. If it is necessary to replace the WLAN antenna cable, follow these procedures:

- a. Position the display back cover face up.
- b. Remove the display brackets by removing the eight Phillips and broadhead screws (1) securing the hinge brackets to the back cover, and then lift the brackets (2) to remove them.

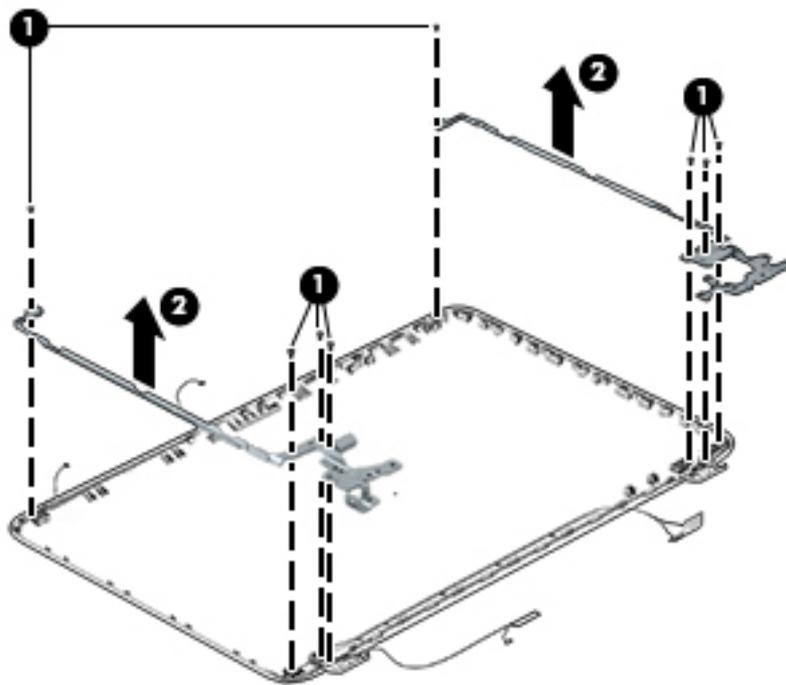

- c. Release the wireless antenna transceivers (1) from the display bezel. (The wireless antenna transceivers are attached to the display bezel with double-sided tape.)

- d. Remove the wireless antenna from the retaining channels (2), and lift the antenna (3)

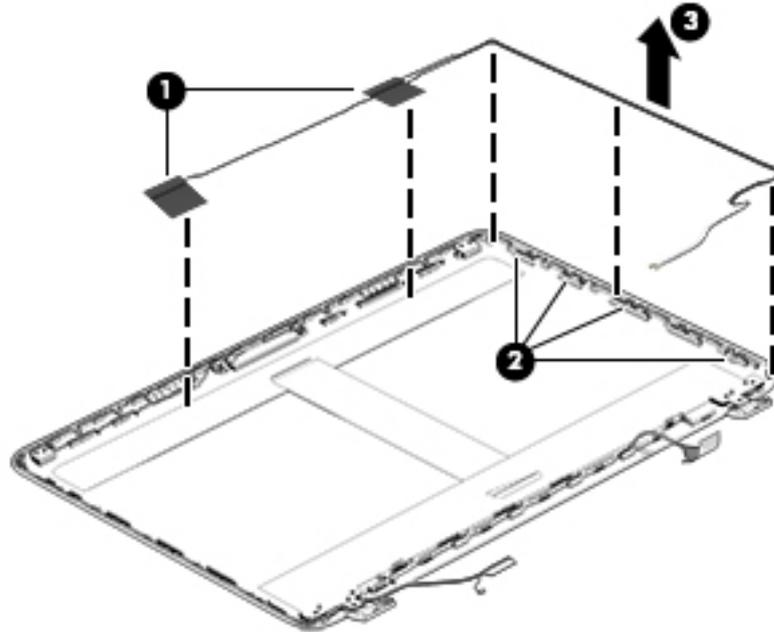

Reverse this procedure to install the display panel.

WLAN module

Description	Spare part number
Realtek RT8188EE 802.11 bgn 1x1 Wi-Fi adapter, for use only on computer models equipped with Intel processors for HP Pavilion 17 and 15 Notebook PC computer models	709848-005
Broadcom BCM43142 802.11 bgn 1x1 Wi-Fi + BT4.0 HMC combo adapter, for use only on computer models equipped with Intel processors for HP Pavilion 17 and 15 Notebook PC computer models available for Windows 8.1 and Windows 7	753076-005
Intel Dual Band Wireless-AC 3160 802.11 ac 1x1 WiFi + BT 4.0 combo adapter, for use only on computer models equipped with Intel processors for HP Pavilion 17 and 15 Notebook PC computer models	710662-005
Realtek RT8723BE 802.11bgn 1x1 Wi-Fi + BT4.0 Combo Adapter for HP Pavilion 17 Notebook PC computer models available for Windows 8.1 and Windows 7	753077-005
RTL8188EE 802.11BGN 1x1 available for Windows 8.1 and Windows 7	709848-005
Broadcom BCM 4352 WLAN 802.11 AC+BT4 2x2HMC for HP Pavilion 15 AMD computer models available for Windows 8.1 and Windows 7	724935-005

CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.
6. Remove the base enclosure and top cover (see [Base enclosure on page 80](#)).

Remove the WLAN module:

1. Disconnect the #1 and #2 WLAN antenna cables from the WLAN module **(1)** if you have not already done so to remove the display panel..




NOTE: The WLAN module may have two screws depending on the model.




NOTE: The #1 WLAN antenna cable is connected to the WLAN module #1 main terminal. The #2 WLAN antenna cable is connected to the WLAN module #2 auxiliary terminal.

2. Remove the Phillips PM screw(s) **(2)** that secure the WLAN module to the system board. (The WLAN module tilts up.)

3. Remove the WLAN module by pulling the module away from the slot at an angle (3).

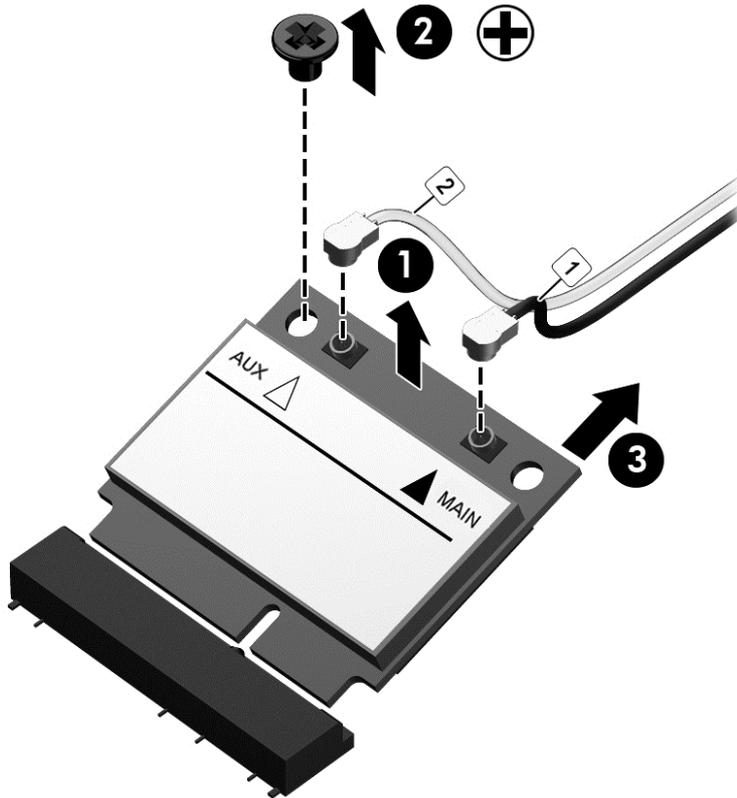

 **NOTE:** If the WLAN antennas are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.

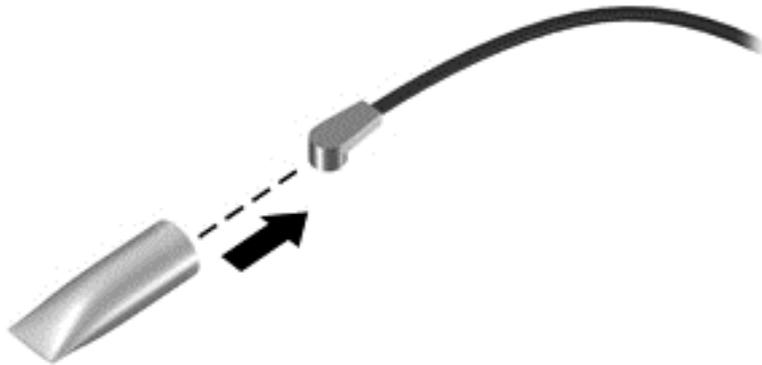

TouchPad button board

Description	Spare part number
For HP Pavilion 15 Notebook PC Intel computer models	
In Ano silver	762506-001
In ash silver	762525-001
For HP Pavilion 15 Notebook PC AMD computer models	
In Ano silver	781767-001
In ash silver	781768-001
For use with Beats Audio	781769-001
For HP Pavilion 17 Notebook PC Intel computer models	
In ash silver	765792-001
In natural silver	767059-001
For HP Pavilion 17 Notebook PC AMD computer models	
In Ano Silver	781764-001
In Ash Silver	781765-001
TouchPad board with bracket and cable in ano silver for AMD computers	781767-001
TouchPad board with bracket and cable ano silver for AMD computers	781768-001
TouchPad board with bracket and cable for AMD computers using Beats Audio	781769-001

Before removing the TouchPad button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).


Remove the TouchPad button board:

1. Turn the top cover upside down, with the front toward you.
2. Remove the two broadhead screws (1) that secure the TouchPad button board bracket to the top cover.



NOTE: Some models may have three screws for the TouchPad button board (1).

3. Remove the TouchPad board by carefully pushing the TouchPad down **(2)** and routing the cable through the opening **(3)** (the cable was disconnected earlier from the top cover).

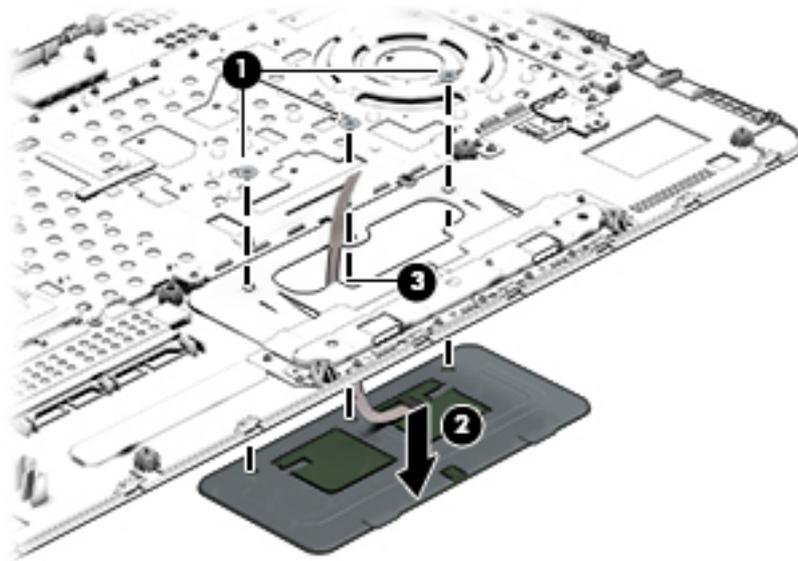

Reverse this procedure to install the TouchPad button board.

Battery Board (select models only)

Description	Spare part number
Battery board for HP Pavilion 17 Notebook PC	763710-001

The battery board is for select HP Pavilion 17 Notebook PC computer models.


Before removing the battery board, follow these steps:

1. Disconnect all external devices connected to the computer.
2. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
3. Remove the battery (see [Battery on page 76](#)).
4. Remove the optical drive.
5. Remove the base enclosure and top cover (see [Base enclosure on page 80](#)).

Remove the battery board:

1. Turn the computer, with the front edge toward you.
2. Remove the two screws **(1)**.

3. Lift the battery board (2) to remove it.

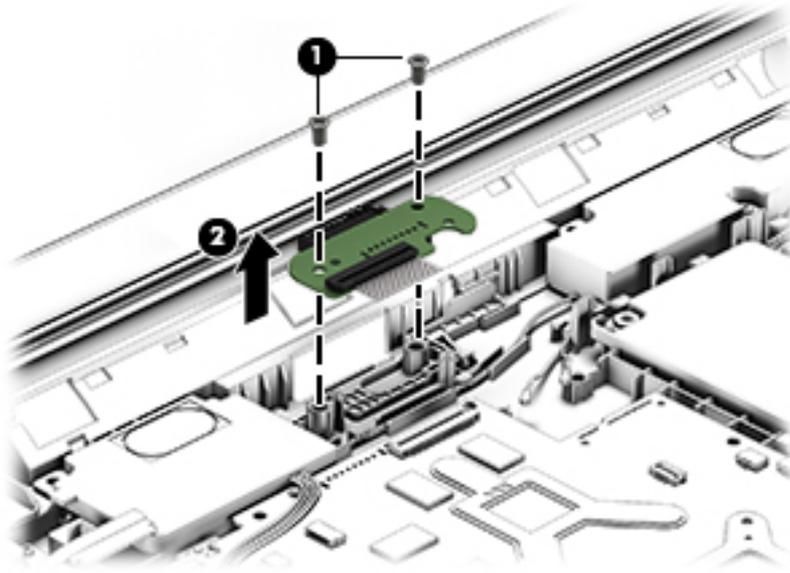

Reverse this procedure to install the battery board.

Optical drive connector


 **NOTE:** The optical drive connector and cable are included in the optical drive spare part kit. (See the Optical drive removal for more information for the spare part kit information.)

Before removing the optical drive connector board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.
6. Remove the base enclosure and top cover (see [Base enclosure on page 80](#)).

Remove the optical drive connector board:

- ▲ Disconnect the cable from the ZIF connector (1), and then disconnect the optical drive connector (2) from the tabs to remove it.

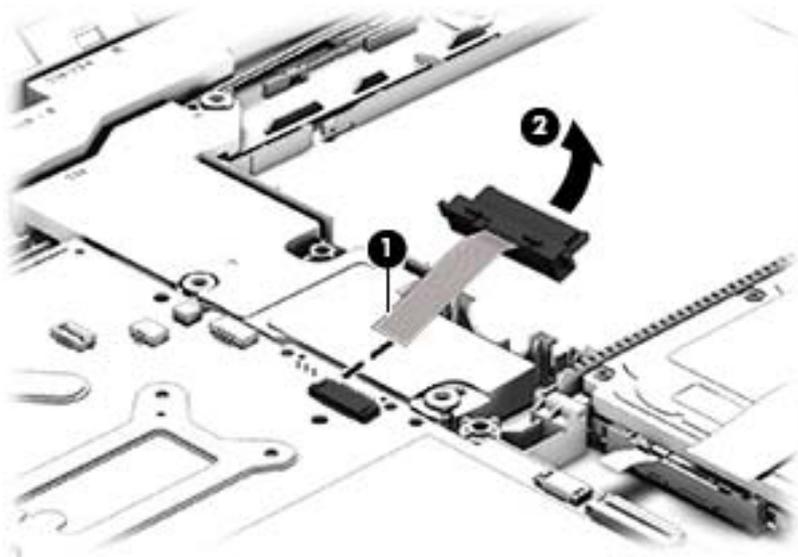

Reverse this procedure to install the optical drive connector board.

Subwoofer (select models only)

Description	Spare part number
Subwoofer for Beats Audio HP Pavilion 15 Notebook PC computer models	763788-001

Before removing the subwoofer, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.
6. Remove the base enclosure and top cover (see [Base enclosure on page 80](#)).

Remove the subwoofer:

- ▲ Disconnect the subwoofer cable (1) from the system board, remove the three screws (2), and then remove the subwoofer by lifting it straight up.



NOTE: Carefully disconnect the cable by grasping the sides of the connector and do not pull from the cables.

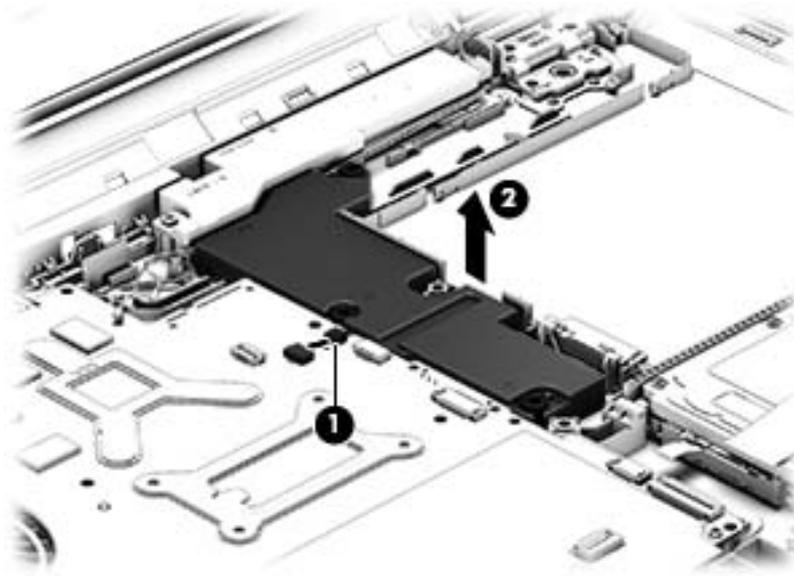

Reverse this procedure to install the subwoofer.

USB board


Description	Spare part number
USB board for use with HP Pavilion 17 Notebook PC computer models	767120-001
USB board for use with HP Pavilion 15 Notebook PC computer models	762497-001

Before removing the USB board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.
6. Remove the base enclosure and top cover (see [Base enclosure on page 80](#)).

Remove the USB board and cables:

1. Disconnect the USB cable from the ZIF connector (1).
2. Remove the Phillips screw securing the USB board (2), and lift the USB board (3) to remove it.

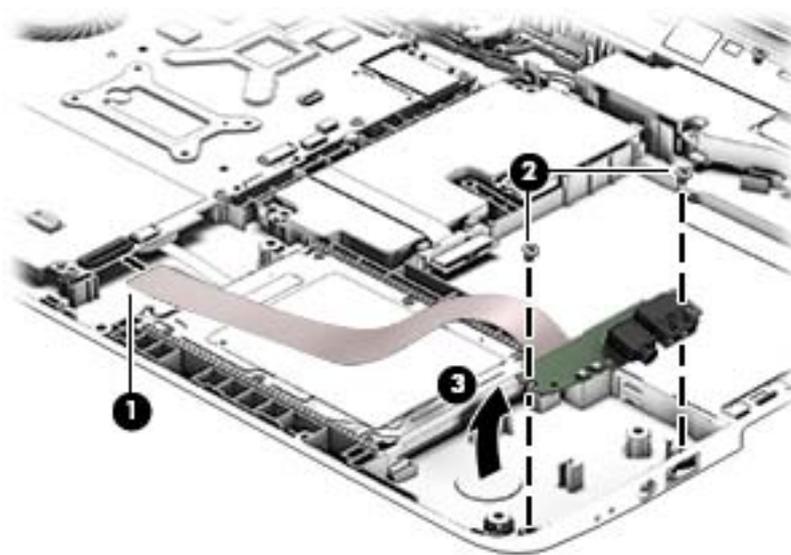

Reverse this procedure to install the USB board and cables.

Hard drive


Description	Spare part number
1 TB, 5400 rpm, 9.5 mm	778192-005
750 GB, 5400 rpm, 9.5 mm available for Windows 8.1 and Windows 7	778190-005
500 GB 5400 rpm 9.5 mm available for Windows 8.1 and Windows 7	778188-005
500 GB 5400 rpm 7 mm hybrid	732000-005
1 TB, 5400 rpm 9.5 mm available for Windows 8.1 and Windows 7	731999-005
750 GB 5400 rpm + 8 GB NAND hybrid, 9.5 mm	732001-005
500 GB 5400 rpm + 8 GB NAND hybrid, 7 mm	732000-005
1.5 TB, 5400 rpm 9.5 mm for HP Pavilion 15 Notebooks and AMD computers only	747375-005
Hard Drive Hardware Kit , for HP Pavilion 17 Notebook PC	773501-001
Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC	762504-001
Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in natural silver	763100-001
Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in snow white	763101-001
Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in aqua blue	763103-001
Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in vibrant red	763102-001
Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in neon purple	778265-001
Hard Drive Hardware Kit , for HP Pavilion 15 Notebook PC in for Beats Audio	767516-001
Hardware sleeve for HP Pavilion 17 Notebook PC	777944-001
Hardware sleeve for HP Pavilion 15 Notebook PC	776506-001

Before removing the hard drive, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)).
5. Remove the optical drive.
6. Remove the base enclosure and top cover (see [Base enclosure on page 80](#)).
7. Remove the USB connector cable (see [USB board on page 104](#)).


Remove the primary hard drive:

- ▲ Disconnect the hard drive cable from the system board (1), and then tilt the hard drive (2) and lift to remove it (3).

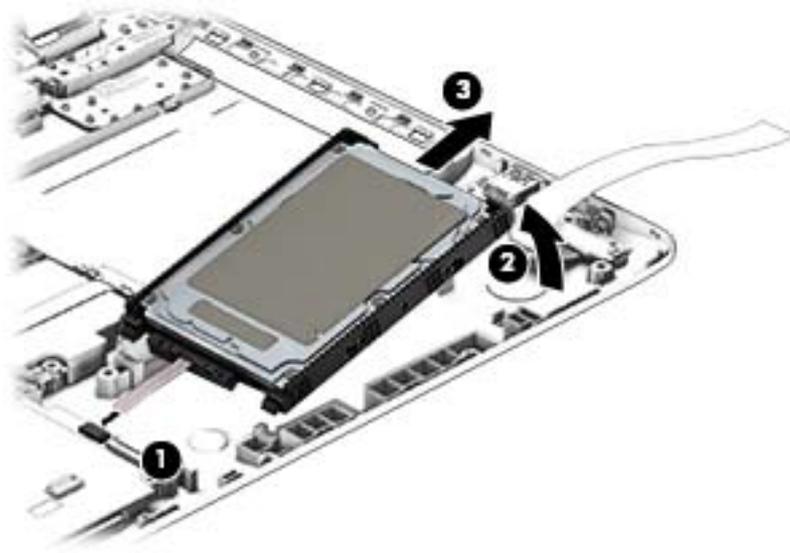

If it is necessary to disassemble the hard drive:

- ▲ Remove the hard drive cable (1), and then remove the hard drive bracket (2).

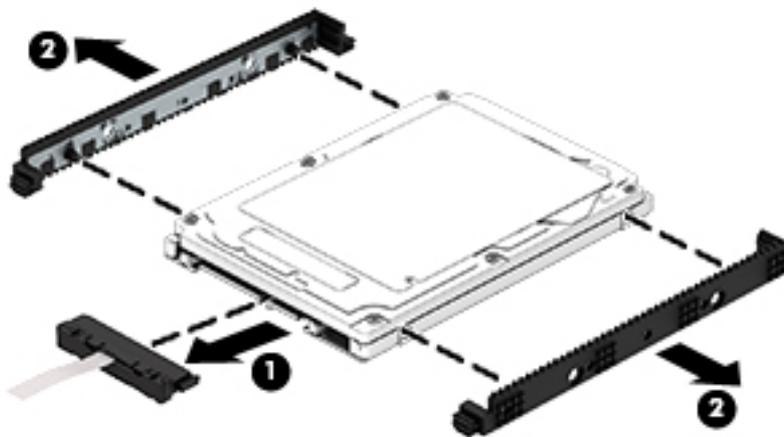

Reverse these procedures to reassemble and install the hard drive.

System board

 **NOTE:** The system board spare part kit includes replacement thermal material.

Description	Spare part number
For computer models equipped with Intel processors and UMA graphics	
Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767409-001
Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767409-501
Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766469-001

Description	Spare part number
Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	766469-501
Intel Core i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	766469-601
Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778946-001
Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC	778946-501
Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774767-001
Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	774767-501
Intel Core i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/3MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC	774767-601
Intel Core i3-4030U (1.9GHz), 1600MHz/3 MB L3, Dual 1 5W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767410-001
Intel Core i3-4030U (1.9GHz), 1600MHz/3 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767410-501
Intel Core i3-4030U (1.9GHz), 1600MHz/3 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774768-001
Intel Core i3-4030U (1.9GHz), 1600MHz/3 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	774768-501
Intel Core i3-4030U (1.9GHz), 1600MHz/3M B L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	774768-601
Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766471-001
Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766471-501
Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766471-601
Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	787515-001
Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	787515-501
Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	787515-601
Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767419-001
Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767419-501
Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766480-001

Description	Spare part number
Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766480-501
Intel Pentium N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766480-601
Intel Celeron N2830 (up to 2.42GHz) 1333MHz/2MB L2, Dual SDP4.5W for use with FreeDOS and Ubuntu Linux for use with Windows Standard HP Pavilion 17 Notebook PC	767420-001
Intel Celeron N2830 (up to 2.42GHz) 1333MHz/2MB L2, Dual SDP4.5W for use with Windows Standard HP Pavilion 17 Notebook PC	767420-501
Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	787484-001
Intel Pentium N3540, 2.16 turbo up to 2.66 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	787484-501
Intel Celeron N2840 (2.16 up to 2.58 GHz) 1333 MHz/2 MB L2, dual SDP4.5 W for use with FreeDOS and Ubuntu Linux for use with Windows Standard HP Pavilion 17 Notebook PC	787485-001
Intel Celeron N2840 (2.16 up to 2.58 GHz) 1333 MHz/2MB L2, dual SDP4.5 W for use with Windows Standard HP Pavilion 17 Notebook PC	787485-501
Intel Core i3-4005U (1.7 GHz), 1600MHz/3 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	779839-001
Intel Core i3-4005U (1.7 GHz), 1600MHz/3 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779839-501
Intel Core i3-4005U (1.7 GHz), 1600MHz/3 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779839-601
Intel Core i3-4005U (1.7GHz), 1600MHz/3 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux	779127-001
Intel Core i3-4005U (1.7GHz), 1600MHz/3 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	779127-501
Intel Celeron N2830 (up to 2.42 GHz) 1333MHz/2 MB L2, Dual SDP4.5 W or use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767420-001
Intel Celeron N2830 (up to 2.42 GHz) 1333MHz/2 MB L2, Dual SDP4.5 W for use with Windows Standard HP Pavilion 17 Notebook PC	767420-501
For computer models equipped with Intel processors and discrete switchable graphics	
Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774769-001
Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	774769-501
Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Professional HP Pavilion 15 Notebook PC	774769-601
Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/ 2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778947-001
Intel Core 840M i7-4500U (1.8GHz, SC turbo up to 3.0GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC	778947-501
Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778948-001

Description	Spare part number
Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC	778948-501
Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3 Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	778949-001
Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 17 Notebook PC	778949-501
Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767412-001
Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767412-501
Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766472-001
Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766472-501
Intel Core 840M i7-4510U 2.0 GHz processor, SC turbo up to 3.1 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766472-601
Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767413-001
Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767413-501
Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766473-001
Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766473-501
Intel Core 840M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766473-601
Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767414-001
Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767414-501
Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766476-001
Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766476-501
Intel Core 830M i5-4210U 1.7 GHz processor, SC turbo up to 2.7 GHz (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766476-601
Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774770-001
Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	774770-501
Intel Core 840M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Professional HP Pavilion 15 Notebook PC	774770-601
Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774771-001

Description	Spare part number
Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC	774771-501
Intel Core 830M i5-4200U (1.6GHz, SC turbo up to 2.6GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC for use with FreeDOS and Ubuntu Linux	774771-601
Intel Core 830M i3-4030U (1.9GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767415-001
Intel Core 830M i3-4030U (1.9GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 17 Notebook PC available for Windows 8.1 and Windows 7	767415-501
Intel Core 830M i3-4030U (1.9GHz), 1600MHz/2 MB L3, Dual 15W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	774772-001
Intel Core 830M i3-4030U (1.9GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Standard HP Pavilion 15 Notebook PC	774772-501
Intel Core 830Mi3-4030U (1.9GHz), 1600MHz/2 MB L3, Dual 15W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	774772-601
Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766478-001
Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766478-501
Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766478-601
Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767411-001
Intel Core i3-4010U 1.7 GHz processor (3.0 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767411-501
Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	767416-001
Intel Core 830M i3-4010U 1.7 GHz processor (2 MB L3 cache, dual core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	767416-501
Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	779840-001
Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Standard HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779840-501
Intel Core 830 M i3-4005U (1.7 GHz), 1600MHz/2 MB L3, Dual 15 W for use with Windows Professional HP Pavilion 15 Notebook PC available for Windows 8.1 and Windows 7	779840-601
Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	787516-001
Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 15 Notebook PC	787516-501
Intel Pentium 830 N3540, 2.16 turbo up to 2.66 GHz discrete processor (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 15 Notebook PC	787516-601
Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	782940-001
Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Standard HP Pavilion 17 Notebook PC	782940-501

Description	Spare part number
Intel Pentium 830M N3530, turbo up to 2.58 GHz (2 MB L2 cache, quad core, SDP 4.5 W) for use with Windows Professional HP Pavilion 17 Notebook PC	782940-601
For computer models equipped with AMD processors and UMA graphics	
AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763420-001
AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763420-501
AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762527-001
AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762527-501
AMD A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762527-601
AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763422-001
AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763422-501
AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762526-001
AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762526-501
AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762526-601
AMD A4-6210 (1.8GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763421-001
AMD A4-6210 (1.8GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763421-501
AMD A4-6210 (1.8GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762528-001
AMD A4-6210 (1.8GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762528-501
AMD A4-6210 (1.8GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762528-601
EI-6010 (1.35GHz, 1MB L2), Dual 10W, Max DDR3L-1333 for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763423-001
EI-6010 (1.35GHz, 1MB L2), Dual 10W, Max DDR3L-1333 for use with Windows Standard HP Pavilion 17 Notebook PC	763423-001
AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763424-001
AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763424-501
AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766714-001

Description	Spare part number
AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766714-501
AMD A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766714-601
AMD A8-5545M W8STD for use with Windows Standard HP Pavilion 15 Notebook PC	766713-501
For computer models equipped with AMD processors and Discrete graphics	
AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763425-001
AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763425-501
AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762532-001
AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762532-501
AMD M260 A6-6310 (2.4 GHz/1.8 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762532-601
AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763427-001
AMD A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763427-501
AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	762531-001
AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Standard HP Pavilion 15 Notebook PC	762531-501
AMD M260 A8-6410 (2.4 GHz/2.0 GHz, 2 MB L2, 1600 MHz DDR3L, quad core, 15 W) for use with Windows Professional HP Pavilion 15 Notebook PC	762531-601
AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 17 Notebook PC	763428-001
AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 17 Notebook PC	763428-501
AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with FreeDOS and Ubuntu Linux HP Pavilion 15 Notebook PC	766715-001
AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Standard HP Pavilion 15 Notebook PC	766715-501
AMD M260 A10-5745M (2.9 GHz/2.1 GHz, 4 MB L2, 1333 MHz DDR3L, quad core, 25 W) for use with Windows Professional HP Pavilion 15 Notebook PC	766715-601


Before removing the system board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.


4. Remove the battery (see [Battery on page 76](#)),
5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).
7. Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
8. Remove the WLAN module (see [WLAN module on page 96](#)).

Remove the system board:

1. Remove the following cables if you have not already done so:
 - Power connector board cable (1)
 - Display cables (2), and (3)
 - Speaker cable (4)

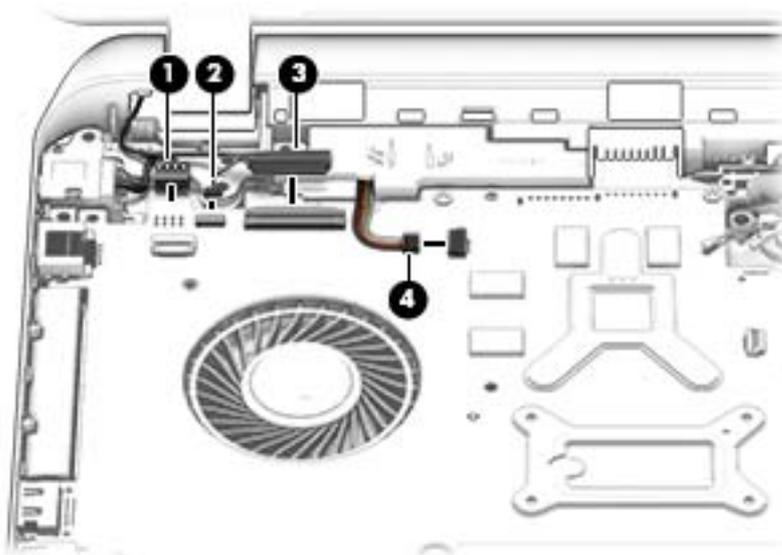


2. Disconnect the following cables if you have not already done so:
 - Subwoofer cable (1)
 - Optical drive cable (2)
 - Hard drive cable (3)
 - USB connector cable (4)

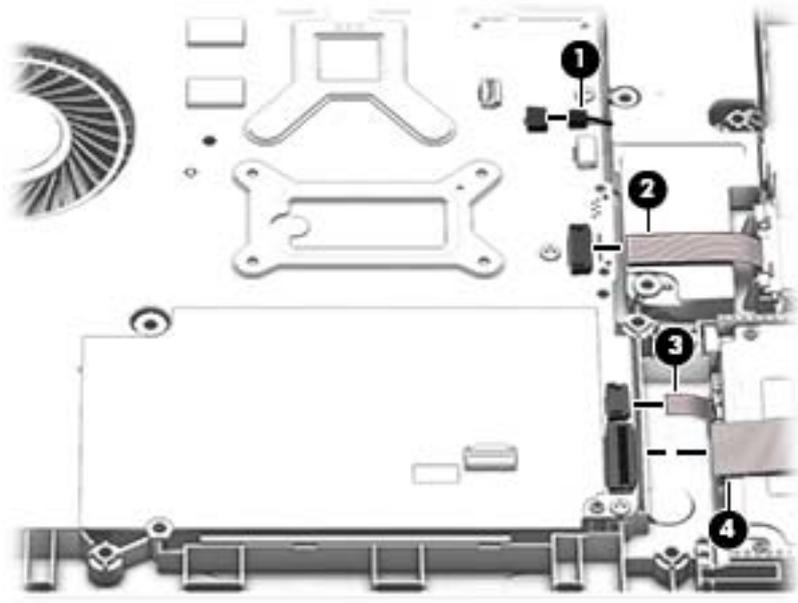

3. Remove the power connector cover by removing the screw(s) (1) and lifting the cover (2).


 **NOTE:** The power connector cover has two screws, however, the screw on the left is removed during the base enclosure and top cover removal process.

 **NOTE:** You will remove the power connector after you have removed the system board. This procedure is to remove the power connector cover if did not remove it when removing the display panel.

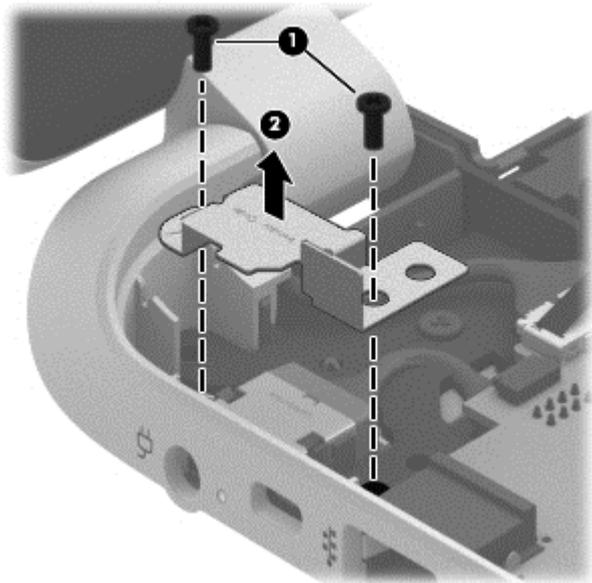

4. Remove the six Phillips screws (1).

- Lift the system board (2), and then remove the system board (3) by sliding it up and to the right at an angle.

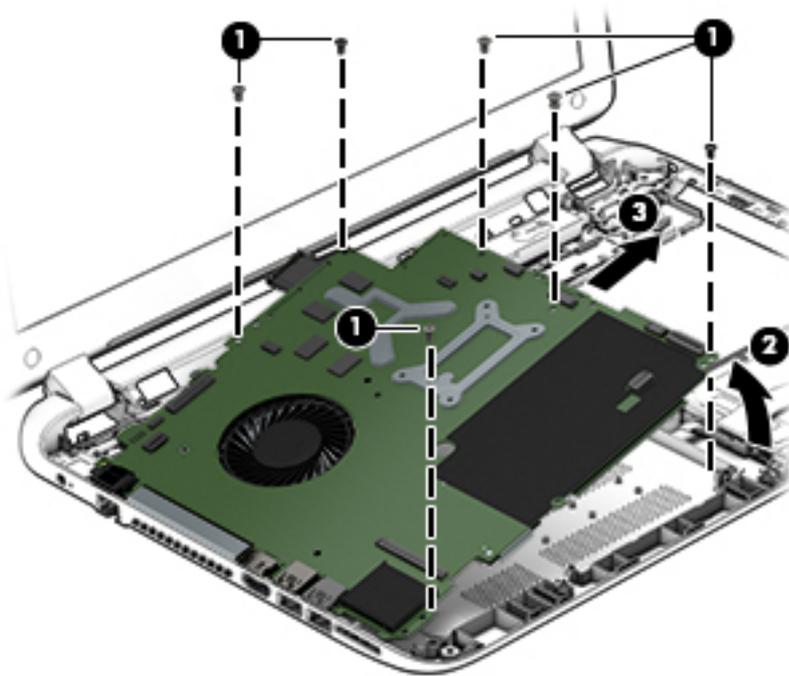

Reverse this procedure to install the system board.

Speakers


Description	Spare part number
Speaker Kit (includes left and right front speakers and cables) for HP Pavilion 17 Notebook PC computer models	763717-001
Speaker Kit (includes left and right front speakers and cables) for HP Pavilion 15 Notebook PC computer models	762502-001

Before removing the speakers, follow these steps:

- Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
- Disconnect all external devices connected to the computer.
- Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
- Remove the battery (see [Battery on page 76](#)),
- Remove the optical drive.
- Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).
- Remove the WLAN module (see [WLAN module on page 96](#)).
- Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
- Remove the system board (see [System board on page 106](#)).

Remove the speakers:

1. Turn the computer, with the front edge toward you.
2. Remove two screws (1).
3. Disengage the cables, and then remove the front speakers (2).

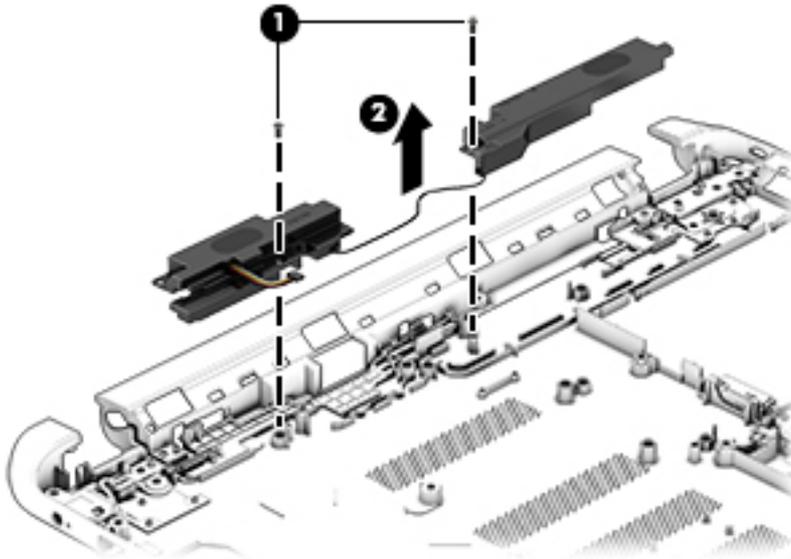

Reverse this procedure to install the speakers.

Memory modules

Description	Spare part number
2 GB memory module	691739-005
4 GB memory module	691740-005
8 GB memory module	693374-005
2 GB memory module	652972-005
8 GB memory module	670034-005
16 GB memory module for use with AMD HP Pavilion 15 computer models	756760-004

Before removing a memory module, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)),
5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).


7. Remove the WLAN module (see [WLAN module on page 96](#)).
8. Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
9. Remove the system board (see [System board on page 106](#)).

Remove the memory module:

1. Turn the system board over.
2. Spread the retaining tabs (1) on each side of the memory module slot to release the memory module. (The memory module tilts up.)

⚠ CAUTION: To prevent damage to the memory module, hold it by the edges only. Do not touch the components on the memory module.

3. Slide the memory module forward (2) to remove it.

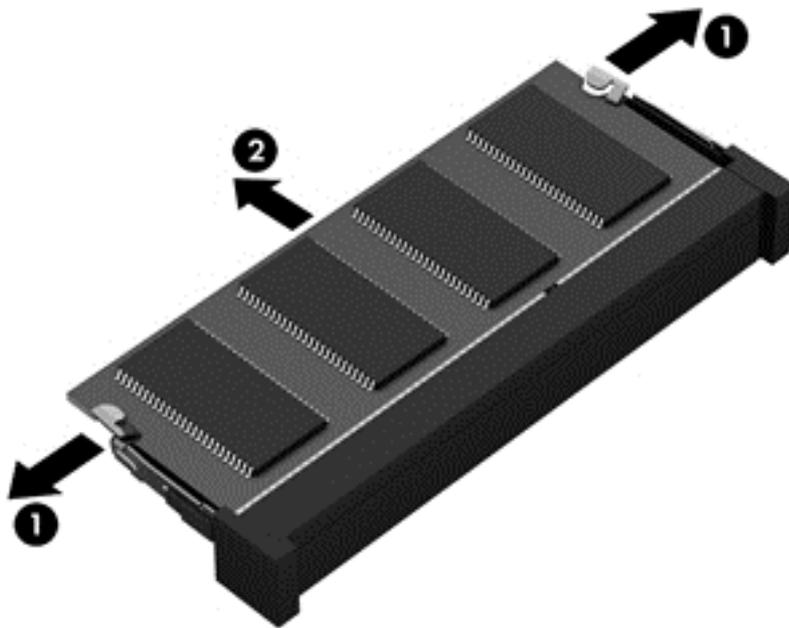

Reverse this procedure to install a memory module.

RTC battery

Description	Spare part number
RTC battery	697917-001


Before removing the RTC battery, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)),

5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).
7. Remove the WLAN module (see [WLAN module on page 96](#)).
8. Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
9. Remove the system board (see [System board on page 106](#)).

Remove the RTC battery:

1. Turn the system board upside down.
2. Use a thin, non-conductive tool to remove the RTC battery (1) from the socket on the system board.

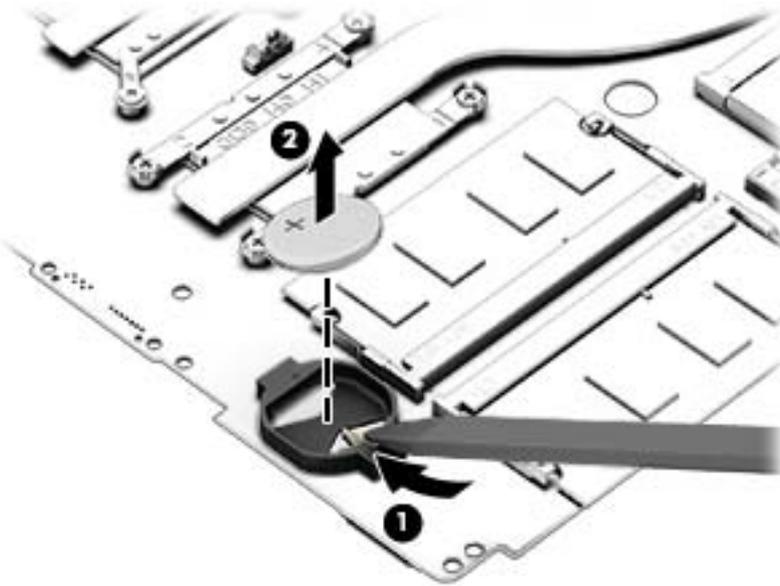

Reverse this procedure to install the RTC battery on computer models. When installing the RTC battery, make sure the “+” sign faces up.

Power connector

Description	Spare part number
For use with HP Pavilion 15 Notebook PC computer models	762507-001
For use with HP Pavilion 17 Notebook PC computer models	763699-001

Before removing the power connector cable, follow these steps:


1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)),

5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).
7. Remove the WLAN module (see [WLAN module on page 96](#)).
8. Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
9. Remove the system board (see [System board on page 106](#)).

Remove the power connector cable:

 **NOTE:** The power connector cover was removed during the system board removal.

1. Release the metal clip to disconnect the power connector cable (1) from the system board.
2. Disengage the cable from the clips (2).
3. Release the clips (3), and then remove the power connector cable (4).

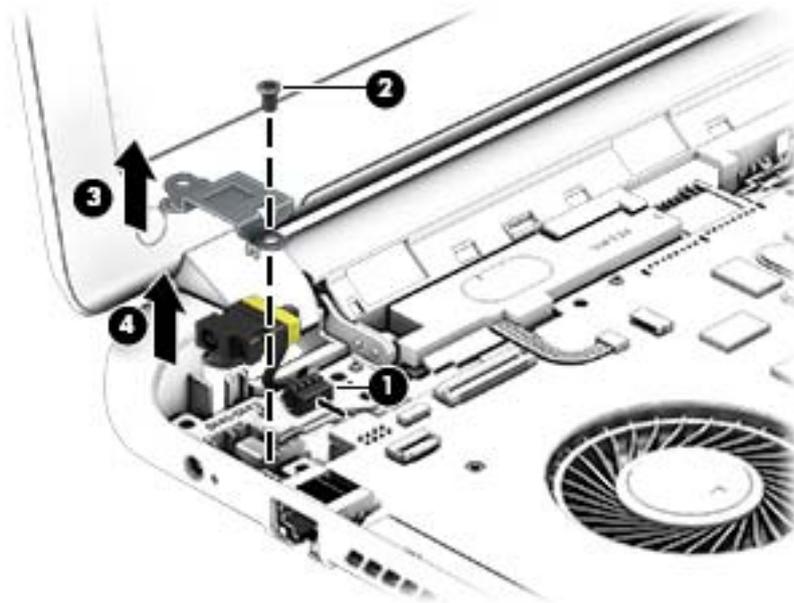

Reverse this procedure to install the power connector cable and bracket.

Fan

Description	Spare part number
For use with HP Pavilion 15 Notebook PC computer models	762505-001
For use with HP Pavilion 17 Notebook PC computer models	765788-001


Before removing the Fan, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.

3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)),
5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).
7. Remove the WLAN module (see [WLAN module on page 96](#)).
8. Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
9. Remove the system board (see [System board on page 106](#)).

Remove the fan:

1. Turn the system board upside down.
2. Disconnect the fan cable from the system board, and then remove the piece of tape that secures the fan to the heat sink (1).
3. Remove the 3 screws securing the fan to the unit (2) and lift the fan to remove it (3).
4. Lift the fan (4) to remove it.

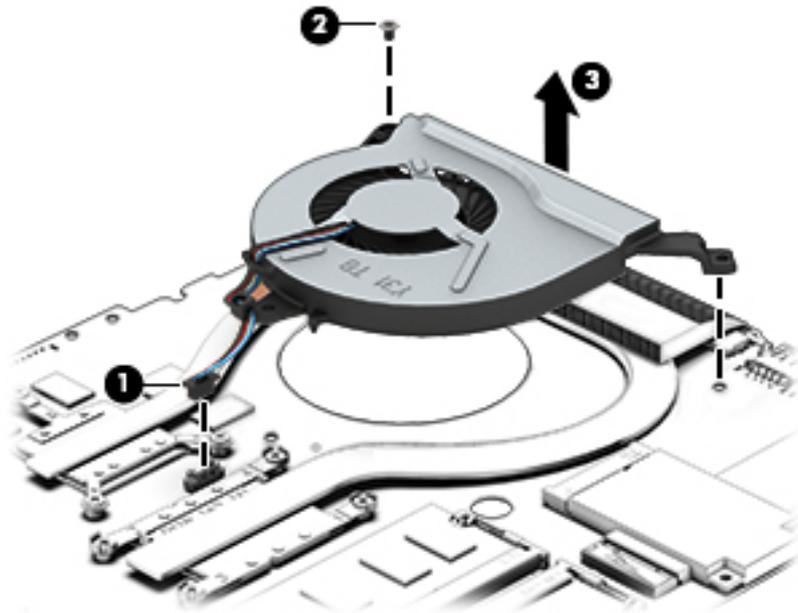

Reverse this procedure to install the fan.

Heat sink

Description	Spare part number
For use with HP Pavilion 15 Notebook PC computer models:	
For use only on computer models with Intel processors discrete memory 19 W	762524-001
For use only on computer models equipped with AMD processors and UMA graphics 19 W	767339-001
For use only on computer models equipped with AMD processors and discrete graphics 19W	767340-001

Description	Spare part number
For use only on computer models equipped with AMD processors and UMA graphics 8.5W	767341-001
Heat sink 8.5 W discrete for use with Intel computer models	780212-001
For use with HP Pavilion 17 Notebook PC computer models:	
For use only on computer models with Intel processors discrete memory 19 W	762524-001
For use only on computer models equipped with AMD processors and UMA graphics 19 W	764080-001
For use only on computer models equipped with AMD processors and UMA graphics 25 W	764082-001
For use only on computer models equipped with AMD processors and discrete graphics 25 W	764083-001
For use only on computer models equipped with AMD processors and UMA graphics 19 W	767339-001
For use only on computer models with Intel processors discrete memory 19 W	767340-001
For use only on computer models equipped with AMD processors and UMA graphics 8.5 W	767341-001
For use only on computer models with Intel processors discrete memory 19 W CB	777250-001
Heat spreader for use with Intel computer models	784982-001

 **NOTE:** To properly ventilate the computer, allow at least 7.6 cm (3 in) of clearance on the left side of the computer. The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software requirements. Exhaust air is displaced through the ventilation grill located on the left side of the computer.


Before removing the heat sink, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)),
5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).
7. Remove the WLAN module (see [WLAN module on page 96](#)).
8. Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
9. Remove the system board (see [System board on page 106](#)).
10. Remove the fan (see [Fan on page 119](#)).

Remove the heat sink:

- ▲ Loosen the seven captive screws in the order listed on the heat sink (1), and then remove the heat sink (2).

 **NOTE:** The heat sink may vary by computer model and may have a different number of screws. The heat sink is marked with the order the screws should be removed in. Follow the order shown.

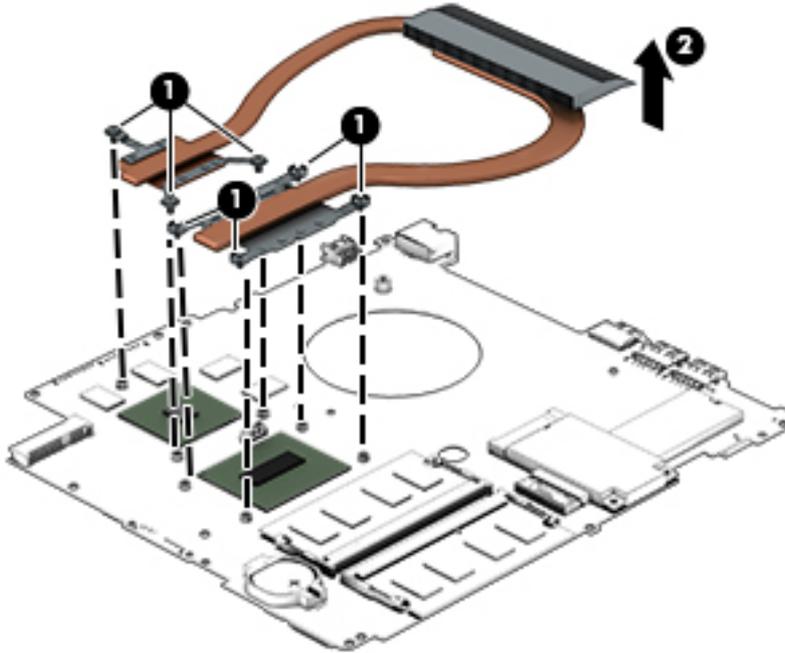

 **NOTE:** There is thermal paste between the heat sink and the processor.

Reverse this procedure to install the heat sink.

Power button board

Description	Spare part number
Power button board (includes cable) For HP Pavilion 15 Notebook PC computer models	762496-001
Power button board (includes cable) For HP Pavilion 17 Notebook PC computer models	763708-001


Before removing the Power button board, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the battery (see [Battery on page 76](#)),
5. Remove the optical drive.
6. Remove the top cover from the base enclosure (see [Base enclosure on page 80](#)).
7. Remove the WLAN module (see [WLAN module on page 96](#)).
8. Remove the subwoofer (see [Subwoofer \(select models only\) on page 102](#)).
9. Remove the system board (see [System board on page 106](#)).

Remove the Power button board and cable:

1. Turn the top cover upside down, with the back edge toward you.
2. Remove the 2 Phillips screws securing the Power button board to the base enclosure (1).
3. Remove the Power button board (2).

 **NOTE:** The Power button board's cable is attached to the base enclosure.

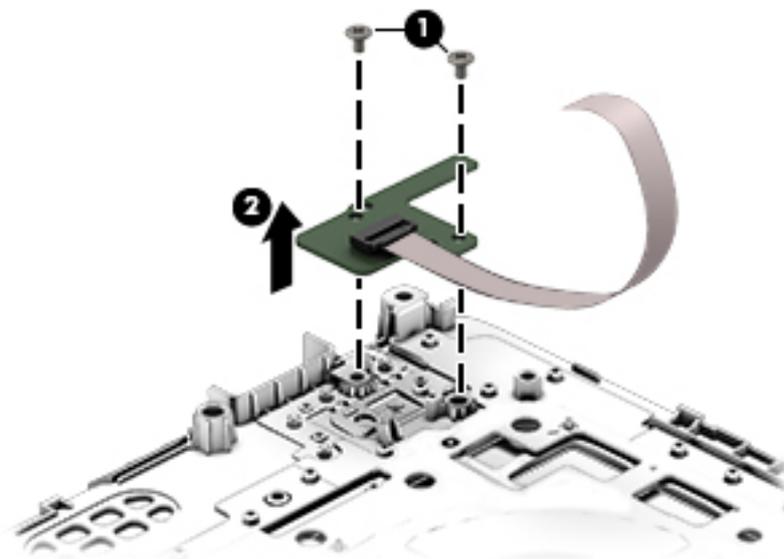

Reverse this procedure to install the Power button board.

7 Windows – Using Setup Utility (BIOS) and HP PC Hardware Diagnostics (UEFI)

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility (BIOS) includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

Starting Setup Utility (BIOS)

To start Setup Utility (BIOS), turn on or restart the computer, quickly press **esc**, and then press **f10**.



NOTE: Use extreme care when making changes in Setup Utility (BIOS). Errors can prevent the computer from operating properly.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be revealed by pressing **fn+esc** (if you are already in Windows) or by using Setup Utility (BIOS).

1. Start Setup Utility (BIOS) (see [Starting Setup Utility \(BIOS\) on page 124](#)).
2. Use the arrow keys to select **Main**.
3. To exit Setup Utility (BIOS) without saving your changes, use the arrow keys to select **Exit**, select **Exit Discarding Changes**, and then press **enter**.
4. Select **Yes**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, type `hp support assistant`, and then select the **HP Support Assistant** app.
For Windows 7, select **Start > Help and Support > Maintain** and go to Step 3 below.
2. Click **Updates and tune-ups**, and then click **Check for HP updates now**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. If the update is more recent than your BIOS, make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

If the update is more recent than your BIOS, make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. From the Start screen, type `file`, and then select **File Explorer**.
For Windows 7, open Windows Explorer by selecting **Start > Computer**.
2. Click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

To start HP PC Hardware Diagnostics UEFI:

1. Turn on or restart the computer, quickly press **esc**, and then press **f2**.

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive



NOTE: To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 126](#).

- b. Hard drive
- c. BIOS

2. When the diagnostic tool opens, use the keyboard arrow keys to select the type of diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostic test, press **esc**.

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device



NOTE: Instructions for downloading HP PC Hardware Diagnostics (UEFI) are provided in English only.

There are two options to download HP PC Hardware Diagnostics to a USB device:

Option 1: HP PC Diagnostics homepage— Provides access to the latest UEFI version

1. Go to <http://hp.com/go/techcenter/pcdiags>.
2. Click the **UEFI Download** link, and then select **Run**.

Option 2: Support and Drivers page—Provides downloads for a specific product for earlier and later versions

1. Go to <http://www.hp.com>.
2. Point to **Support**, located at the top of the page, and then click **Download Drivers**.
3. In the text box, enter the product name, and then click **Go**.

– or –

Click **Find Now** to let HP automatically detect your product.

4. Select your computer model, and then select your operating system.
5. In the **Diagnostic** section, click **HP UEFI Support Environment**.

– or –

Click **Download**, and then select **Run**.

8 Ubuntu Linux – Using Setup Utility (BIOS) and System Diagnostics

Setup Utility, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Setup Utility includes settings for the types of peripherals installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Setup Utility. Errors can prevent the computer from operating properly.

Starting Setup Utility

- ▲ Turn on or restart the computer. While the computer is booting press **esc**. When the Startup menu is displayed, press **f10**.

Using Setup Utility

Changing the language of Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **System Configuration > Language**, and then press **enter**.
3. Use the arrow keys to select a language, and then press **enter**.
4. When a confirmation prompt with your language selected is displayed, press **enter**.
5. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.

Your change takes effect immediately.

Navigating and selecting in Setup Utility

Setup Utility does not support the TouchPad. Navigation and selection are by keystroke.

- To choose a menu or a menu item, use the arrow keys.
- To choose an item in a list or to toggle a field—for example an Enable/Disable field—use either the arrow keys or **f5** and **f6**.
- To select an item, press **enter**.
- To close a text box or return to the menu display, press **esc**.
- To display additional navigation and selection information while Setup Utility is open, press **f1**.

Displaying system information

1. Start Setup Utility.
2. Select the **Main** menu. System information such as the system time and date, and identification information about the computer is displayed.
3. To exit Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Restoring factory default settings in Setup Utility

1. Start Setup Utility.
2. Use the arrow keys to select **Exit > Load Setup Defaults**, and then press **enter**.
3. When the Setup Confirmation is displayed, press **enter**.
4. To save your change and exit Setup Utility, use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.

The Setup Utility factory settings take effect when the computer restarts.



NOTE: Your password, security, and language settings are not changed when you restore the factory settings.

Exiting Setup Utility

- To exit Setup Utility and save your changes from the current session:
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.
- To exit Setup Utility without saving your changes from the current session:
If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.

BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by using Setup Utility.

1. Start Setup Utility.
2. If the system information is not displayed, use the arrow keys to select the **Main** menu.
BIOS and other system information is displayed.
3. To exit Setup Utility, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power from the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Suspend or Hibernation.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Access the page on the HP website that provides software for your computer.
2. Follow the on-screen instructions to identify your computer and access the BIOS update you want to download.
3. At the download area, follow these steps:
 - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Using Advanced System Diagnostics

Advanced System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly. The following diagnostic tests are available in Advanced System Diagnostics:

- **Start-up test**—This test analyzes the main computer components that are required to start the computer.
- **Run-in test**—This test repeats the start-up test and checks for intermittent problems that the start-up test does not detect.
- **Hard disk test**—This test analyzes the physical condition of the hard drive, and then checks all data in every sector of the hard drive. If the test detects a damaged sector, it attempts to move the data to a good sector.
- **Memory test**—This test analyzes the physical condition of the memory modules. If it reports an error, replace the memory modules immediately.
- **Battery test**—This test analyzes the condition of the battery and calibrates the battery if necessary. If the battery fails the test, contact support to report the issue and purchase a replacement battery.
- **System Tune-Up**—This group of additional tests checks your computer to make sure that the main components are functioning correctly. System Tune-Up runs longer and more comprehensive tests on memory modules, hard drive SMART attributes, the hard drive surface, the battery (and battery calibration), video memory, and the WLAN module status.

You can view system information and error logs in the Advanced System Diagnostics window.

To start Advanced System Diagnostics:

1. Turn on or restart the computer. While the computer is booting press **esc**. When the Startup menu is displayed, press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.



NOTE: If you need to stop a diagnostics test while it is running, press **esc**.

9 Specifications

Computer specifications

	Metric	U.S.
Dimensions:		
Width for HP Pavilion 17 Notebook PC	41.95 cm	16.5 in
Width for HP Pavilion 15 Notebook PC	38.45 cm	15.9 in
Depth for HP Pavilion 17 Notebook PC	27.9 cm	10.7 in
Depth for HP Pavilion 15 Notebook PC	26.09 cm	10.3 in
Height for HP Pavilion 17 Notebook PC	2.67 cm	1.1 in
Height for HP Pavilion 15 Notebook PC	2.49 cm	1 in
Weight:		
NOTE: Actual weight varies by features.		
Height for HP Pavilion 17 Notebook PC	2.9 kg	6.0 lbs
Height for HP Pavilion 15 Notebook PC	2.44 kg	5.0 lbs
Input power		
Operating voltage and current	19.5 V dc @ 3.33 A – 65 W 19.5 V dc @ 4.62 A – 90 W 19.5 V dc @ 2.31 A – 45 W	
Temperature		
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity		
Operating	10% to 90%	
Nonoperating	5% to 95%	
Maximum altitude (unpressurized)		
Operating (14.7 to 10.1 psia)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia)	-15 m to 12,192 m	-50 ft to 40,000 ft
Shock		
Operating	125 g, 2 ms, half-sine	
Nonoperating	200 g, 2 ms, half-sine	
Random vibration		
Operating	0.75 g zero-to-peak, 10 Hz to 500 Hz, 0.25 oct/min sweep rate	

	Metric	U.S.
Nonoperating	1.50 g zero-to-peak, 10 Hz to 500 Hz, 0.5 oct/min sweep rate	

NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.

Display Specifications (17.3)

	Metric	U.S.
Dimensions		
Width	32.4 cm	12.8 in
Height	19.3 cm	7.6 in
Diagonal	35.56 cm	14.0 in
Number of colors	262K (6 bit)	
Contrast ratio	500:1 (typical)	
Brightness	200 cd/m ² (nits) (typical)	
Backlight	WLED	
Total power consumption	3.2 W (max)	
Viewing angle	±45° horizontal, +15° up & -35° down vertical (typical)	

Display Specifications (15.6-in)

	Metric	U.S.
Active diagonal size	39.6-cm	15.6-in
Resolution	1600x900 (HD+)	
Active area	309.399x173.952	
PPI	112	
Surface treatment	Anti-glare	
Contrast ratio	300:1 (typical)	
Response time	8 ms	
Brightness	200 nits (typical)	
Viewing angle	SVA	
Backlight	LED	
Luminance uniformity @ 13 points	1.4 (typ), 1.6 (max)	
Lifetime (1/2 luminance)	12,000 hours	
Color coordinate (white)	(0.313, 0.329)	
Color tolerance (White)	+/- 0.02	
Color tolerance (W, R, G, B)	+/- 0.03	
Color gamut	45% typical	

Hard drive specifications

	1.5 TB, 5400 rpm*	1 TB*	750 GB*	500 GB*
Dimensions				
Height	9.5 mm	9.5 mm	9.5 mm	7 mm
Width	70 mm	70 mm	70 mm	70 mm
Weight	107 g	107 g max	107 g max	107 g max
Interface type	SATA	SATA	SATA	SATA
Transfer rate	145 MB/sec	300 MB/sec	300 MB/sec	300 MB/sec
Security	ATA security	ATA security	ATA security	ATA security
Seek times (typical read, including setting)				
Single track	2.0 ms	1.5 ms	1.0 ms	1.5 ms
Average	12 ms	11.0 ms	14.0 ms	12.0 ms
Maximum	22ms	22.0 ms	24.0 ms	22.0 ms
Logical blocks	2,930,277,168	1,953,525,168	1,465,128,359	976,752,240
Disk rotational speed	5400 rpm	5400 rpm	7200 and 5400 rpm	7200 and 5400 rpm
Operating temperature	5°C to 55°C (41°F to 131°F)			
*Size refers to hard drive storage capacity. Actual accessible capacity is less. Actual drive specifications may differ slightly.				
NOTE: Certain restrictions and exclusions apply. Contact support for details.				

DVD±RW SuperMulti Double-Layer Combination Drive specifications

Applicable disc	
Read	CD-DA, CD+(E)G, CD-MIDI, CD-TEXT, CD-ROM, CD-ROM XA, MIXED MODE CD, CD-I, CD-I Bridge (Photo-CD, Video CD), Multisession CD (Photo-CD, CD-EXTRA, Portfolio, CD-R, CD-RW), CD-R, CD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-RAM
Write	CD-R and CD-RW, DVD+R, DVD+RW, DVD-R, DVD-RW, DVD-RAM
Random access time	
DVD	< 230 ms
CD	< 175 ms
Cache buffer	2 MB
Data transfer rate	
24X CD-ROM	3,600 KB/sec

8X DVD-ROM	10,800 KB/sec
24X CD-R	3,600 KB/sec
16X CD-RW	2,400 KB/sec
8X DVD+R	10,800 KB/sec
4X DVD+RW	5,400 KB/sec
8X DVD-R	10,800 KB/sec
4X DVD-RW	5,400 KB/sec
2.4X DVD+R(9)	2,700 KB/sec
5X DVD-RAM	6,750 KB/sec
Transfer mode	Multiword DMA Mode

10 Windows 8.1 – Backing up, restoring, and recovering

This chapter provides information about the following processes:

- Creating recovery media and backups
- Restoring and recovering your system

Creating recovery media and backups

1. After you successfully set up the computer, create HP Recovery media. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced.

HP Recovery media you create will provide the following recovery options:

- **System Recovery**—Reinstalls the original operating system and the programs that were installed at the factory.
- **Minimized Image Recovery**—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- **Factory Reset**—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

See [Creating HP Recovery media on page 136](#).

2. Use the Windows tools to create system restore points and create backups of personal information. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.

Creating HP Recovery media

HP Recovery Manager is a software program that offers a way to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.

- Only one set of HP Recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the blank USB flash drive or the number of blank DVD discs that will be required.
- To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or instead you can use a high-quality blank USB flash drive.

- If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue, and the remaining discs will be burned.

To create HP Recovery media:

 **IMPORTANT:** For tablets, connect to the keyboard dock before beginning these steps (select models only).

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Recovery Media Creation**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 138](#).

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information and steps, see Help and Support. From the Start screen, type `help`, and then select **Help and Support**.
- If you need to correct a problem with a preinstalled application or driver, use the Drivers and Applications Reinstall option of HP Recovery Manager to reinstall the individual application or driver.

From the Start screen, type `recovery`, select **HP Recovery Manager**, select **Drivers and Applications Reinstall**, and then follow the on-screen instructions.

- If you want to reset your computer using a minimized image, you can choose the HP Minimized Image Recovery option from the HP Recovery partition (select models only) or HP Recovery media. Minimized Image Recovery installs only drivers and hardware-enabling applications. Other applications included in the image continue to be available for installation through the Drivers and Applications Reinstall option in HP Recovery Manager.

For more information, see [Recovering using HP Recovery Manager on page 138](#).

- If you want to recover the computer's original factory partitioning and content, you can choose the System Recovery option from the HP Recovery partition (select models only) or use the HP Recovery media that you have created. For more information, see [Recovering using HP Recovery Manager on page 138](#). If you have not already created recovery media, see [Creating HP Recovery media on page 136](#).

- If you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media to restore the factory image to the replacement drive. For more information, see [Recovering using HP Recovery Manager on page 138](#).
- If you wish to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.

For more information, see [Removing the HP Recovery partition \(select models only\) on page 139](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you created or by using the HP Recovery partition (select models only). If you have not already created recovery media, see [Creating HP Recovery media on page 136](#).

Using HP Recovery media, you can choose from one of the following recovery options:

- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Minimized Image Recovery (select models only)—Reinstalls the operating system and all hardware-related drivers and software, but not other software applications.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select models only) allows System Recovery and Minimized Image Recovery.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.
- Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.
- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media on page 136](#).
- To use the Factory Reset option, you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media on page 136](#).
- If the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.



IMPORTANT: HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you wish to retain.

Using the HP Recovery partition (select models only)

The HP Recovery partition (select models only) allows you to perform a system recovery or minimized image recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can only be used if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

 **IMPORTANT:** For tablets, connect to the keyboard dock before beginning these steps (select models only).

1. Press **f11** while the computer boots.
– or –
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media that you created, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 139](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection for an optical drive or a USB flash drive.

To change the boot order:

1. Insert the HP Recovery media you created.
2. Restart the computer, quickly press **esc**, and then press **f9** for boot options.
3. Select the optical drive or USB flash drive you want to boot from.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select models only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.

 **IMPORTANT:** After you remove the HP Recovery partition, you can no longer use the Windows Refresh option or the Windows option to remove everything and reinstall Windows. In addition, you will not be able to perform System Recovery or Minimized Image Recovery from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media on page 136](#).

Follow these steps to remove the HP Recovery partition:

1. From the Start screen, type `recovery`, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.

11 Backing up, restoring, and recovering

Your computer includes tools provided by the operating system and HP to help you safeguard your information and retrieve it if ever needed.

Creating backups

1. Use HP Recovery Manager to create recovery media immediately after you set up the working computer.
2. As you add hardware and software programs, create system restore points.
3. As you add photos, video, music, and other personal files, create a backup of your system and personal information.

Creating recovery media to recover the original system

After you successfully set up the computer, you should create recovery discs or a recovery flash drive using HP Recovery Manager. You will need these recovery discs or recovery flash drive to perform a system recovery should the hard drive become corrupted. A system recovery reinstalls the original operating system, and then configures the settings for the default programs.

What you need to know

- Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
- HP Recovery Manager examines the computer and determines the required storage capacity for the flash drive or the number of blank DVD discs that will be required.

Use DVD-R, DVD+R, DVD-R DL, DVD+R DL discs or a flash drive. Do not use rewriteable discs such as CD±RW, DVD±RW, double-layer DVD±RW, and BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software.
- If your computer does not include an integrated optical drive, you can use an optional external optical drive (purchased separately) to create recovery discs, or you can obtain recovery discs for your computer from the HP website. If you use an external optical drive, it must be connected directly to a USB port on the computer, not to a USB port on an external device, such as a USB hub.
- Be sure that the computer is connected to AC power before you begin creating the recovery media.
- The creation process can take up to an hour or more. Do not interrupt the creation process.
- Store the recovery media in a safe location, separate from the computer.
- If necessary, you can exit the program before you have finished creating the recovery media. The next time you open HP Recovery Manager, you will be prompted to continue the process.

Creating the recovery media

1. Select **Start** and type `recovery` in the search field. Select **Recovery Manager** from the list. Allow the action to continue, if prompted.
2. Click **Recovery Media Creation**.
3. Follow the on-screen instructions to continue.

To recover, see [Recovering the original system using HP Recovery Manager on page 143](#).

Creating system restore points

A system restore point is a snapshot of certain hard drive contents saved by Windows System Restore at a specific time. A restore point contains information such as registry settings that Windows uses. Restoring to a previous restore point allows you to reverse changes that have been made to the system since the restore point was created.

Restoring to an earlier system restore point does not affect data files saved or emails created since the last restore point, but it does affect software you may have installed.

For example, if you download a photo from a digital camera and then restore the computer to the state it was on the previous day, the photo remains on the computer.

However, if you install photo viewing software and then restore your computer to the state it was on the previous day, the software will be uninstalled, and you won't be able to use it.

What you need to know

- If you restore to a restore point and then change your mind, you can undo the restoration.
- You should create system restore points:
 - Before you add or change software or hardware
 - Periodically, whenever the computer is running normally
- System Restore also saves shadow copies of files that have been changed since the last restore point was created. For more information about using shadow copies to restore, see Help and Support.

Creating a system restore point

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Click **Create**, and follow the on-screen instructions.

To restore, see [Restoring to a previous system restore point on page 143](#).

Backing up system and personal information

Your computer stores information that is important to you, such as files, emails, and photos, and you will want to keep that information even if you download a virus or the system stops working properly. How completely you are able to recover your files depends on how recent your backup is. As you add new software and data files, you should create backups on a regular basis.

Tips for a successful backup

- Number backup discs before inserting them into the optical drive.
- Store personal files in the Documents, Music, Pictures, and Videos libraries, and back up these folders periodically.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to re-enter your preferences.

To create a screen shot:

1. Display the screen you want to save.
2. Copy the screen image:
To copy only the active window, press **alt+prt sc**.
To copy the entire screen, press **prt sc**.
3. Open a word-processing document or graphics editing program, and then select **Edit > Paste**. The screen image is added to the document.
4. Save and print the document.

What you need to know

- You can back up your information to an optional external hard drive, a flash drive, a network drive, or discs.
- Connect the computer to AC power during backups.
- Allow enough time for the backup. Depending on files sizes, it may take more than an hour.
- Verify the amount of free space on your backup storage device before you back up.
- You should back up:
 - Before adding or changing software or hardware.
 - Before the computer is repaired or restored.
 - On a regular schedule to be sure you have recent copies of personal information.
 - After you add many files—for example, if you saved videos from a birthday party.
 - Before using antivirus software to remove a malicious program.
 - After adding information that is hard to replace, such as pictures, videos, music, project files, or data records.

Creating a backup using Windows Backup and Restore

Windows allows you to back up files using Windows Backup and Restore. You can select the level you want to back up, from individual folders to drives. The backups are compressed to save space. To back up:

1. Select **Start > Control Panel > System and Security > Backup and Restore**.
2. Follow the on-screen instructions to schedule and create a backup.



NOTE: Windows includes the User Account Control feature to improve the security of the computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. See Help and Support for more information.

To restore, see [Restoring specific files using Windows Backup and Restore on page 143](#).

Restore and recovery

Restoring to a previous system restore point

Sometimes installing a software program causes your computer or Windows to behave unpredictably. Usually uninstalling the software fixes the problems. If uninstalling does not fix the problems, you can restore the computer to a previous system restore point (created at an earlier date and time).

To restore to a previous system restore point, when the computer was running correctly:

1. Select **Start > Control Panel > System and Security > System**.
2. In the left pane, click **System Protection**.
3. Click the **System Protection** tab.
4. Click **System Restore**, and follow the on-screen instructions.

Restoring specific files

If files are accidentally deleted from the hard disk and they can no longer be restored from the Recycle Bin, or if files become corrupt, restoring specific files is useful. Restoring specific files is also useful if you ever choose to recover the original system using HP Recovery Manager. You can only restore specific files that you have backed up before.

Restoring specific files using Windows Backup and Restore

Windows allows you to restore files that were backed up using Windows Backup and Restore:

1. Select **Start > Control Panel > System and Security > Backup and Restore**.
2. Follow the on-screen instructions to restore your backup.

 **NOTE:** Windows includes the User Account Control feature to improve the security of the computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. See Help and Support for more information.

Recovering the original system using HP Recovery Manager

HP Recovery Manager software allows you to repair or recover the computer to its original factory state.

What you need to know

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the disc provided by the manufacturer.
- A system recovery should be used as a final attempt to correct computer issues. If you have not already tried restore points (see [Restoring to a previous system restore point on page 143](#)) and partial restores (see [Restoring specific files on page 143](#)), try them before using HP Recovery Manager to recover your system.
- A system recovery must be performed if the computer hard drive fails or if all attempts to correct any functional computer issues fail.

- If the recovery media do not work, you can obtain recovery discs for your system from the HP website.
- The Minimized Image Recovery option is recommended for advanced users only. All hardware-related drivers and software are re-installed, but other software applications are not. Do not interrupt the process until it is complete, otherwise the recovery will fail.

Recovering using HP Recovery partition (select models only)

The HP Recovery partition (select models only), allows you to restore your system without the need for recovery discs or a recovery flash drive. This type of recovery can only be used if the hard drive is still working.

To check for the presence of a recovery partition, select **Start**, right-click **Computer** then select **Manage > Disk Management**. If the recovery partition is present, a Recovery drive is listed in the window.

 **NOTE:** Recovery discs have been included if your computer did not ship with a recovery partition.

1. Access HP Recovery Manager in either of the following ways:
 - Select **Start** and type `recovery` in the search field. Select **Recovery Manager** from the list.
 - or –
 - Turn on or restart the computer, and then press `esc` while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen. Then press `f11` while the “F11 (System Recovery)” message is displayed on the screen.
2. Click **System Recovery** in the **HP Recovery Manager** window.
3. Follow the on-screen instructions.

Recovering using the recovery media

1. If possible, back up all personal files.
2. Insert the first recovery disc into the optical drive on your computer or an optional external optical drive, and then restart the computer.

– or –

Insert the recovery flash drive into a USB port on your computer, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 144](#).

3. Press `f9` at system bootup.
4. Select the optical drive or the flash drive.
5. Follow the on-screen instructions.

Changing the computer boot order

To change the boot order for recovery discs:

1. Restart the computer.
2. Press `esc` while the computer is restarting, and then press `f9` for boot options.
3. Select **Internal CD/DVD ROM Drive** from the boot options window.

To change the boot order for a recovery flash drive:

1. Insert the flash drive into a USB port.
2. Restart the computer.
3. Press `esc` while the computer is restarting, and then press `f9` for boot options.
4. Select the flash drive from the boot options window.

12 Ubuntu Linux – Backing up, restoring, and recovering

Recovery after a system failure is as good as your most recent backup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

Performing a system recovery

The Deja Dup Restore Tool allows you to repair or restore the computer to its original factory state. You can create an image restore DVD using an optional external DVD±RW optical drive. You can also create a restore image on a USB storage device.

 **CAUTION:** Using Restore completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The recovery tool reinstalls the original operating system and programs and drivers that were installed at the factory. Software, drivers, and updates not installed at the factory must be manually reinstalled. Personal files must be restored from a backup.

 **NOTE:** HP recommends that you create the image restore in the event of a system failure.

Creating the restore DVDs

The restore creation software creates a set of system restore discs using blank, writable DVDs (DVD-R or DVD+R). HP recommends using blank DVD+R discs from a manufacturer you trust, because these recovery DVDs are so important. You need approximately 3 blank DVD+R discs. The program states how many discs are needed at the beginning of the process.

To create restore DVDs:

1. Click the **System** menu icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select the DVD from the drop-down list.
3. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.
4. Follow the on-screen instructions.

Creating a restore image on a USB device

 **NOTE:** Be sure AC power is connected to the computer you begin.

Verify the exact amount of free space on your storage device before you begin the creation process. For most models, you will need at least 8 GB of free space on the storage device. However, depending on the drivers and software installed on your computer, you may need slightly more than 8 GB of space. **HP recommends that you use a 16 GB device or above for best results.**

 **IMPORTANT:** Remember to insert your USB device into the USB port on the computer before starting this procedure.

To create the restore image:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup**.
2. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup location**, and select the USB device from the drop-down list.



NOTE: If the USB device is not listed in the drop-down list for Backup Location, select **Local Folder**, and then click the **Choose Folder** button. Select the USB device from the panel on the left side of the **Choose Folder** window, and click **OK**.

3. Select **Overview** from the panel on the left side of the window, and then click **Backup Now**.
4. Follow the on-screen instructions.

Performing recovery using the restore media



NOTE: The following procedure uses the F11 BIOS Recovery feature to perform the recovery.

1. If possible, back up all personal files.
2. Shut down the computer.
3. Be sure the restore DVD or USB device is connected to the computer.
4. Restart the computer.
5. Using the arrow keys, select **Recovery**, and then press **enter**.
6. Follow the on-screen instructions.



NOTE: If you are unable to boot (start up) your computer with the primary operating system, and you did not create a system recovery disc, you must purchase an *Ubuntu Operating System DVD* to reinstall the operating system. For additional information, refer to the *Worldwide Telephone Numbers* booklet for more information.

Backing up your information

You should back up your computer files on a regular schedule to maintain a current backup. You can manually back up your information to an optional external drive, a network drive, discs, or the Ubuntu One website. Back up your system at the following times:

- At regularly scheduled times
- Before the computer is repaired or restored
- Before you add or modify hardware or software

To back up your home directory files to the Ubuntu website using the Deja Dup Backup Tool:



NOTE: Before you back up your information, be sure you have designated a location to save the backup files.

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Select **Folders** from the panel on the left side of the window, and beneath **Folders to back up**, select the folders to back up.

3. Select **Storage** from the panel on the left side of the window, click the down-arrow next to **Backup Location**, and select **Ubuntu One** from the drop-down list.
4. Select **Overview** from the panel on the left side of the window, and then click **Back Up Now**.

 **NOTE:** The first time you backup your files to Ubuntu One, you will need to create an account to sign into Ubuntu One. Enter your email address and password into the account sign-in boxes and follow the on-screen instructions to complete the sign-in process.

To restore backup files:

1. Click the **System menu** icon at the far right of the top panel, and then click **System Settings > Backup** icon.
2. Click **Restore**, select the location of the backup files and the folder name, and then click **Forward**.
3. Under **Restore from When?**, select the date of the files to be restored and click **Forward**.
4. Select the location and folder where the files are to be restored and click **Forward**.
5. Follow the on-line instructions.
6. Click **Restore** to start restoring the files, or click **Cancel** to cancel the operation.

 **NOTE:** You may also back up to cloud storage services provided by various companies. For a small fee, they will keep your backup for you. A cloud service is recommended since it is an easy way to keep your backups off-site and safe from any disaster.

13 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 V ac, or from 220 to 240 V ac.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries or regions must meet the requirements of the country and region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 A and a nominal voltage rating of 125 or 250 V ac, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Argentina	IRAM	1
Australia	SAA	1
Austria	OVE	1
Belgium	CEBEC	1
Brazil	ABNT	1
Canada	CSA	2
Chile	IMQ	1
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
India	ISI	1
Israel	SII	1
Italy	IMQ	1
Japan	JIS	3
The Netherlands	KEMA	1
New Zealand	SANZ	1
Norway	NEMKO	1
The People's Republic of China	CCC	4
Saudi Arabia	SASO	7
Singapore	PSB	1
South Africa	SABS	1
South Korea	KTL	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	6
Thailand	TISI	1
The United Kingdom	ASTA	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

Country/region	Accredited agency	Applicable note number
		<ol style="list-style-type: none"> <li data-bbox="277 222 1461 296">2. The flexible cord must be Type SVT/SJT or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V ac) or NEMA 6-15P (15 A, 250 V ac) configuration. CSA or C-UL mark. UL file number must be on each element. <li data-bbox="277 321 1461 394">3. The appliance coupler, flexible cord, and wall plug must bear a “T” mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² or 1.25 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V ac) configuration. <li data-bbox="277 420 1461 468">4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the CCC certification mark. <li data-bbox="277 493 1461 541">5. The flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² conductor size. KTL logo and individual approval number must be on each element. Corset approval number and logo must be printed on a flag label. <li data-bbox="277 567 1461 615">6. The flexible cord must be Type HVCTF 3-conductor, 1.25 mm² conductor size. Power cord set fittings (appliance coupler, cable, and wall plug) must bear the BSMI certification mark. <li data-bbox="277 640 1461 709">7. For 127 V ac, the flexible cord must be Type SVT or SJT 3-conductor, 18 AWG, with plug NEMA 5-15P (15 A, 125 V ac), with UL and CSA or C-UL marks. For 240 V ac, the flexible cord must be Type H05VV-F 3-conductor, 0.75 mm² or 1.00 mm² conductor size, with plug BS 1363/A with BSI or ASTA marks.

14 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

AC adapter 11, 12
 spare part numbers 44, 45, 46
 support 5
action keys
 identifying 17
adapter, HDMI to VGA 45
Advanced System Diagnostics
 using for Ubuntu Linux computer models 130
antenna
 spare part number 41, 48, 55, 88
Antenna Kit, spare part number 41, 48, 55, 88
audio, product description 4
audio-out (headphone)/audio-in (microphone) jack 8, 9

B

backups 140
 for Ubuntu Linux computer models 146
 for Windows computer models 136
 personal information for Ubuntu Linux computer models 147
base enclosure
 removal 80
 spare part number 57
 spare part numbers 38, 47, 57, 62, 66, 67, 68, 69, 80
base enclosure caps
 spare part number 56
battery
 removal 76
 spare part number 38
 spare part numbers 47, 76
battery board
 removal 100
 spare part number 100
 spare part numbers 28, 56
battery board, spare part number 100

battery cover, identifying 18
battery release latch 18
BIOS
 determining version 124
 determining version for Ubuntu Linux computer models 129
 downloading an update 125
 downloading an update for Ubuntu Linux computer models 129
 updating 124
 updating for Ubuntu Linux computer models 129
Bluetooth label 19
boot order
 changing 144
 changing HP Recovery Manager 139
bottom 19
buttons
 left TouchPad 14
 power 16
 right TouchPad 14

C

caps lock light, identifying 15
chipset, product description 1
components
 bottom 18
 display 13
 left side 11
 right side 8
 top 14
computer major components 20
computer specifications 131
connector, power 11, 12

D

default settings, restoring for Ubuntu Linux computer models 128
deleted files
 restoring 137, 143

display assembly
 spare part numbers 88
 subcomponents 40
display back cover
 spare part numbers 47, 48, 56, 66, 67, 69
display back cover, spare part numbers 41, 56, 62
display bezel
 spare part number 40, 57, 88
 spare part numbers 47
display hinge
 spare part number 40, 88
display hinge kit
 spare part number 56
 spare part numbers 48, 54, 56
Display Hinge Kit, spare part number 40, 88
display panel
 product description 2
 removal 88
 spare part number 40, 48, 88
 spare part numbers 56, 61, 62
display panel cable
 removal 95
 spare part number 41, 48, 54, 55, 57, 94
display specifications 132, 133
DVD±RW and CD-RW SuperMulti Double-Layer Combination Drive, specifications 134

E

esc key, identifying 17
Ethernet, product description 4

F

factory settings, restoring for Ubuntu Linux computer models 128
fan
 removal 119
 spare part number 57, 119
 spare part numbers 47

fn key, identifying 17

G

graphics, product description 2

H

hard drive

product description 3

removal 105

spare part numbers 38, 43,
46, 66, 105

specifications 134

Hard Drive Hardware Kit

contents 43, 54, 64, 66, 105

spare part number 43, 54, 64,
66, 105

hard drive hardware kit

spare part numbers 47

hard drive light 8, 9

hard drive rubber bracket

spare part numbers 66

hardware sleeve

spare part numbers 66

HDMI port

identifying 11, 12

HDMI to VGA adapter, spare part

number 45

heat sink

removal 120

spare part numbers 47, 48,
120

heat sink assembly

spare part numbers 37, 56,
63

HP PC Hardware Diagnostics
(UEFI)

downloading 126

using 126

HP Recovery Manager 143

correcting boot problems 139

starting 139

HP Recovery media

creating 136

recovery 139

HP Recovery partition

recovery 138

removing 139

I

integrated numeric keypad,
identifying 17

internal display switch,
identifying 13

internal microphones, identifying
13

J

jacks

audio-out (headphone)/audio-in
(microphone) 8, 9

network 11, 12

RJ-45 (network) 11, 12

K

keyboard

product description 5

keys

action 17

esc 17

fn 17

Windows 17

L

labels

Bluetooth 19

Microsoft Certificate of
Authenticity 19

regulatory 19

serial number 19

service 19

wireless certification 19

WLAN 19

latch, battery release 18

lights

AC adapter 11, 12

caps lock 15

hard drive 8, 9

mute 15

power 8, 9, 15

RJ-45 (network) status 11, 12

M

mass storage device

removal 105

spare part numbers 105

memory card reader, identifying
11, 12

memory card, identifying 11, 12

memory module

product description 3

removal 116

spare part numbers 37, 45,
116

microphone

product description 4

minimized image

creating 138

minimized image recovery 138

model name 1

mute light, identifying 15

N

network jack, identifying 11, 12

O

operating system, product
description 6

optical drive

product description 4

removal 77

spare part number 77

spare part numbers 43, 44,
47, 55, 57, 62, 66

specifications 134

optical drive connector board

removal 101

optical drive, identifying 8, 10

optical drive, spare part numbers
38

original system recovery 138,
143

P

pointing device, product
description 5

ports

HDMI 11, 12

product description 5

USB 2.0 8, 10

USB 3.0 11, 12

power button board

removal 123

spare part number 27, 56,
123

spare part numbers 47

power button, identifying 16

power connector

spare part number 56

spare part numbers 47

- power connector cable
 - removal 118
 - spare part number 118
- power connector, identifying 11, 12
- power cord
 - requirements for all countries 149
 - requirements for specific countries and regions 150
 - set requirements 149
 - spare part numbers 44, 46, 47
- power lights, identifying 8, 9, 15
- power requirements, product description 5
- processor, product description 1
- product description
 - audio 4
 - chipset 1
 - display panel 2
 - Ethernet 4
 - external media cards 5
 - graphics 2
 - hard drive 3
 - keyboard 5
 - memory module 3
 - microphone 4
 - operating system 6
 - optical drive 4
 - pointing device 5
 - ports 5
 - power requirements 5
 - processors 1
 - product name 1
 - security 5
 - serviceability 6
 - video 4
 - wireless 4
- product name 1
- product name and number, computer 19
- R**
- recovering from the recovery discs 144
- recovering the original system 143
- recovery 143
 - discs 136, 139
 - HP Recovery Manager 138, 143
 - media 139
 - options 137
 - starting 139
 - supported discs 136
 - system 138
 - USB flash drive 139
 - using HP Recovery media 137
- recovery discs 140
- recovery media 140
 - creating 136
 - creating using HP Recovery Manager 137
- recovery partition
 - removing 139
- recovery, system 143
- regulatory information
 - regulatory label 19
 - wireless certification labels 19
- removal/replacement procedures 75, 79
- restore
 - recovery for Ubuntu Linux computer models 147
 - Windows File History 137
- restore DVDs
 - for Ubuntu Linux computer models 146
- restore points 141
- restore USB device
 - for Ubuntu Linux computer models 146
- restoring the original system
 - creating recovery media 140
- RJ-45 (network) jack, identifying 11, 12
- RJ-45 (network) status lights, identifying 11, 12
- RTC battery
 - removal 117
 - spare part number 37, 45, 117
- rubber kit
 - spare part number 56
- rubber kits
 - spare part numbers 54
- S**
- Screw Kit, spare part number 45, 48, 57
- security cable slot, identifying 9, 12
- security, product description 5
- serial number 19
- serial number, computer 19
- service labels
 - locating 19
- serviceability, product description 6
- Setup Utility
 - changing the language for Ubuntu Linux computer models 127
 - displaying system information for Ubuntu Linux computer models 128
 - exiting for Ubuntu Linux computer models 128
 - navigating for Ubuntu Linux computer models 127
 - restoring default settings for Ubuntu Linux computer models 128
 - selecting for Ubuntu Linux computer models 127
 - starting for Ubuntu Linux computer models 127
- Setup Utility (BIOS), using for Windows computer models 124
- slots
 - memory card reader 11, 12
 - security cable 9, 12
- speaker kit
 - spare part number 56
 - spare part numbers 47
- Speaker Kit, spare part number 115
- speakers
 - identifying 16
 - removal 115
 - spare part number 115
- speakers, spare part numbers
 - front 38
- specifications
 - computer 131
 - display 132, 133

- DVD±RW and CD-RW
 - SuperMulti Double-Layer Combination Drive 134
 - hard drive 134
 - optical drive 134
- subwoofer
 - removal 102
 - spare part number 102
 - spare part numbers 38, 62
- subwoofer, identifying 18
- supported discs 140
 - recovery 136
- system board
 - removal 106
 - spare part numbers 28, 48, 49, 52, 53, 54, 55, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 106
- system information, displaying for Ubuntu Linux computer models 128
- system recovery 138, 143
 - for Ubuntu Linux computer models 146
- system restore point
 - creating 136
- system restore points 141
 - creating 141

T

- top cover
 - spare part numbers 22, 49, 50, 51, 52, 53, 54, 57, 58, 59, 60
- TouchPad
 - buttons 14
- TouchPad button board
 - removal 99
 - spare part number 99
- TouchPad module
 - spare part numbers 27, 47, 48, 57, 63
- TouchPad zone, identifying 14
- traveling with the computer 19

U

- USB 2.0 port, identifying 8, 10
- USB 3.0 ports, identifying 11, 12

- USB board
 - removal 104
 - spare part numbers 47, 63, 104

V

- vents, identifying 11, 12, 18
- video, product description 4

W

- webcam
 - identifying 13
- webcam light, identifying 13
- webcamera/microphone
 - spare part numbers 47
- webcamera/microphone module
 - spare part number 41, 48, 54
- Windows
 - File History 137
 - restoring files 137
 - system restore point 136
- Windows Backup and Restore
 - restoring files 143
- Windows key, identifying 17
- wireless antenna
 - spare part number 41, 48, 55, 88
- wireless certification label 19
- wireless, product description 4
- WLAN antennas, identifying 13
- WLAN device 19
- WLAN label 19
- WLAN module
 - removal 96
 - spare part numbers 28, 45, 46, 96