Alienware m17 Setup and Specifications

Notes, cautions, and warnings

NOTE: A NOTE indicates important information that helps you make better use of your product.

△ CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

© 2018 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2018 - 12

Rev. A00

Contents

Set up your Alienware m17	5
Create a USB recovery drive for Windows	6
Views of Alienware m17	
Right	
Left	
Base	
Display	
Back	
Bottom	10
Specifications of Alienware m17	11
Computer model	11
Dimensions and weight	11
Processors	
Chipset	
Operating system	
Memory	
Ports and connectors	12
Communications	13
Ethernet	13
Wireless module	
Audio	
Storage	14
Keyboard	14
Camera	
Touchpad	
Touchpad gestures	15
Power adapter	16
Battery	16
Display	
Video	
Computer environment	
Hybrid power	
Keyboard shortcuts	20
Alienware Command Center	

Getting help and contacting Alienware	
Self-help resources	
Contacting Alienware	

Set up your Alienware m17

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

1 Connect the power adapter and press the power button.



2 Create recovery drive for Windows.

NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see Create a USB recovery drive for Windows.

Create a USB recovery drive for Windows

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.



NOTE: This process may take up to an hour to complete.



NOTE: The following steps may vary depending on the version of Windows installed. Refer to the Microsoft support

- site for latest instructions.
- 1 Connect the USB flash drive to your computer.
- 2 In Windows search, type Recovery.
- 3 In the search results, click **Create a recovery drive**. The **User Account Control** window is displayed.
- 4 Click Yes to continue. The **Recovery Drive** window is displayed.
- 5 Select Back up system files to the recovery drive and click Next.
- 6 Select the USB flash drive and click Next.

A message appears, indicating that all data in the USB flash drive will be deleted.

- 7 Click Create.
- 8 Click Finish.

For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at <u>www.dell.com/support/manuals</u>.

Views of Alienware m17


Right



1 USB 3.1 Gen 1 ports (2)

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

Left



1 Security-cable slot (wedge-shaped)

Connect a security cable to prevent unauthorized movement of your computer.

2 Network port

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

3 USB 3.1 Gen 1 port with PowerShare

Connect peripherals such as external storage devices and printers.

Provides data transfer speeds up to 5 Gbps. PowerShare enables you to charge your USB devices even when your computer is turned off.



NOTE: If your computer is turned off or in hibernate state, you must connect the power adapter to charge your devices using the PowerShare port. You must enable this feature in the BIOS setup program.



NOTE: Certain USB devices may not charge when the computer is turned off or in sleep state. In such cases, turn on the computer to charge the device.

4 Headset port

Connect headphones or a headset (headphone and microphone combo).

Base



Power button (Alienhead)

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state. Press to put the computer in sleep state if it is turned on.

Press and hold for 4 seconds to force shut-down the computer.

NOTE: You can customize the power-button behavior in Power Options.

2 Right-click area

Press to right-click.

3 Left-click area

Press to left-click.

4 Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.





1 Left microphone

Provides digital sound input for audio recording and voice calls.

2 Camera

Enables you to video chat, capture photos, and record videos.


3 Camera-status light

Turns on when the camera is in use.

4 Right microphone

Provides digital sound input for audio recording and voice calls.

Back



1 Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

2 HDMI port

Connect to a TV or another HDMI-in enabled device. Provides video and audio output.

3 Mini DisplayPort

Connect to a TV or another DisplayPort-in enabled device. Provides video and audio output.

4 Thunderbolt 3 (USB Type-C) port

Supports USB 3.1 Gen 2, DisplayPort 1.2, Thunderbolt 3 and also enables you to connect to an external display using a display adapter.


Provides data transfer rates up to 10 Gbps for USB 3.1 Gen 2 and up to 40 Gbps for Thunderbolt 3.

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

5 External graphics port

Connect an Alienware Graphics Amplifier to enhance the graphics performance.

Bottom

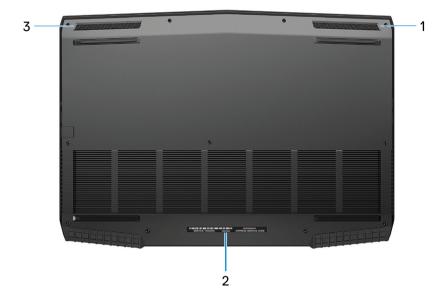

1 Right speaker

Provides audio output.

2 Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

3 Left speaker

Provides audio output.

Computer model

Alienware m17

Dimensions and weight

Table 1. Dimensions and weight

Description	Values	
Height:		
Front	13.97 mm (0.55 in.)	
Rear	21.76 mm (0.86 in.)	
Width	410 mm (16.14 in.)	
Depth	292 mm (11.50 in.)	
Weight (minimum)	2.63 kg (5.79 lbs)	
	NOTE: The weight of your computer depends on the configuration ordered and the manufacturing variability.	

Processors

Table 2. Processor specifications

Features		Values	
Processor	8 th Generation Intel Core i5	8 th Generation Intel Core i7	
Wattage	45 W	45 W	
Core count	4	6	
Thread count	8	12	
Speed	Up to 4 GHz	Up to 4.1 GHz	
L2 cache	1 MB	1.5 MB	
L3 cache	9 MB	9 MB	
Integrated graphics	Intel UHD graphics 630	Intel UHD graphics 630	

Chipset

Table 3. Chipset specifications

Features	Values
Chipset	HM 370
Processor	8 th Generation Intel Core i5/i7
DRAM bus width	64-bit

Features	Values
Flash EPROM	16 MB
PCIe bus	PCle Gen3
External bus frequency	8 GT/s

Operating system

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)

Memory

Table 4. Memory specifications

Features	Values	
Slots	Two SODIMM slots	
Туре	DDR4	
Speed	2666 MHz	
Maximum memory	32 GB	
Minimum memory	8 GB	
Memory per slot	4 GB, 8 GB, and 16 GB	
Configurations supported	 8 GB DDR4 at 2666 MHz (2 x 4 GB) 16 GB DDR4 at 2666 MHz (2 x 8 GB) 32 GB DDR4 at 2666 MHz (2 x 16 GB) 	

Ports and connectors

Table 5. External ports and connectors specifications

Features	Values
Network	One RJ-45 port
USB	 Two USB 3.1 Gen 1 ports One USB 3.1 Gen 1 with PowerShare One Thunderbolt 3 (USB Type-C)
Audio	One headset port
Video	 One HDMI 2.0b port One mini DisplayPort 1.3 One external graphics port
Media-card reader	Not supported
Power adapter port	7.4 mm DC-in

Features	Values
Security	One security-cable slot (wedge-shaped)

Table 7. Internal	ports and	connectors	specifications
-------------------	-----------	------------	----------------

Features	Values
M.2	 One M.2 slot for Wi-Fi and Bluetooth combo card Two M.2 PCIe/SATA slots for 2230/2280 solid-state drive or 2280 Intel Optane

Communications

Ethernet

Table 8. Ethernet specifications

Features	Values
Model number	Killer E2400 PCI-E Gigabit Ethernet Controller
Transfer rate	10/100/1000 Mbps

Wireless module

Table 9. Wireless module specifications

Features	Values		
Model number	Qualcomm QCA61x4A (DW1820)	Killer 1550	
Transfer rate	867 Mbps (maximum)	1733 Mbps (maximum)	
Frequency bands supported	Dual band 2.4 GHz/5 GHz	Dual band 2.4 GHz/5 GHz	
Wireless standards	Wi-Fi 802.11b/g/a/n/ac	Wi-Fi 802.11b/g/a/n/ac	
Encryption	64-bit/128-bit WEPAES-CCMPTKIP	64-bit/128-bit WEPAES-CCMPTKIP	
Bluetooth	Bluetooth 4.2	Bluetooth 5.0	

Audio

Table 10. Audio specifications

Features	Values
Туре	4 channel High Definition Audio
Controller	Realtek ALC3281-CG
Stereo conversion	Supported
Internal interface	High-definition audio interface
External interface	Universal Audio Jack supports Headset/Headphone/Line- out/Microphone/Line-in function

Features	Values
Speakers	Supported
Internal speaker amplifier	Supported
External volume controls	Supported
Speaker output:	
Average	2 W
Peak	2.5 W
Subwoofer output	Not supported
Microphone	Digital-array microphones in camera assembly

Storage

Your computer supports one of the following configurations:

- One 2.5-inch hard drive
- One M.2 PCIe solid-state drive
- One M.2 PCIe solid-state drive and one 2.5-inch hard drive
- One M.2 Intel Optane and one 2.5-inch hard drive
- Two M.2 PCIe solid-state drives

NOTE: The primary drive of your computer varies depending on the storage configuration.

For computers:

- with a M.2 drive, the M.2 drive is the primary drive.
- without M.2 drive, the 2.5-inch drive is the primary drive.

Table 11. Storage specifications

Storage type	Interface type	Capacity
One 2.5-inch hard drive	SATA AHCI, up to 6 Gbps	Up to 1 TB
One M.2 2230/2280 solid-state drive	 SATA AHCI, up to 6 Gbps PCIe Gen3x4 NVMe, up to 32 Gbps 	Up to 1 TB
One M.2 2280 Intel Optane storage	PCIe Gen3x2 NVMe, up to 16 Gbps	Up to 118 GB

Keyboard

Table 12. Keyboard specifications

Features	Values
Туре	4-zone RGB backlit keyboard
Layout	QWERTY
Number of keys	 United States and Canada: 101 keys United Kingdom: 102 keys Japan: 105 keys

Features	Values
Size	 X = 19.05 mm key pitch Y = 18.05 mm key pitch
Shortcut keys	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.
	NOTE: You can define the primary behavior of the function keys (F1-F12) by changing Function Key Behavior in BIOS setup program.

Keyboard shortcuts

Camera

Table 13. Camera specifications

Features	Values
Number of cameras	One
Туре	FHD fixed focus
Location	Front
Sensor type	CMOS sensor technology
Resolution:	
Still image	2.0 megapixel (FHD)
Video	1920 x 1080 (FHD) at 30 fps
Diagonal viewing angle	74.9 degrees

Touchpad

Table 14. Touchpad specifications

Features	Values	
Resolution:		
Horizontal	1229	
Vertical	749	
Dimensions:		
Horizontal	105 mm (4.13 in.)	
Vertical	65 mm (2.56 in.)	

Touchpad gestures

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article <u>4027871</u> at <u>support.microsoft.com</u>.

Power adapter

Table 15. Power adapter specifications

Features	Values	
Туре	130 W	180 W
Diameter (connector)	7.4 mm	7.4 mm
Input voltage	100 VAC-240 VAC	100 VAC-240 VAC
Input frequency	50 Hz-60 Hz	50 Hz-60 Hz
Input current (maximum)	2.34 A	2.34 A
Output current (continuous)	6.70 A	9.23 A
Rated output voltage	19.50 VDC	19.50 VDC
Temperature range:		
Operating	0°C to 40°C (32°F to 104°F)	–40°C to 70°C (–40°F to 158°F)
Storage	−40°C to 70°C (−40°F to 158°F)	–40°C to 70°C (–40°F to 158°F)

NOTE: This computer supports Hybrid power feature during heavy loading. For more information, see <u>Hybrid</u> <u>power</u>.

Battery

Table 16. Battery specifications

Features	N	Values		
Туре	4-cell "smart" lithium-ion (60 WHr)	6-cell "smart" lithium-ion (90 WHr)		
Voltage	15.20 VDC	11.40 VDC		
Weight (maximum)	0.25 kg (0.56 lb)	0.37 kg (0.81 lb)		
Dimensions:				
Height	11.60 mm (0.46 in.)	11.60 mm (0.46 in.)		
Width	222.20 mm (8.75 in.)	332.65 mm (13.09 in.)		
Depth	74.20 mm (2.92 in.)	74.20 mm (2.92 in.)		
Temperature range:				
Operating	0°C to 35°C (32°F to 95°F)	0°C to 35°C (32°F to 95°F)		
Storage	–40°C to 65°C (–40°F to 149°F)	–40°C to 65°C (–40°F to 149°F)		
Operating time	Varies depending on operating conditic certain power-intensive conditions.	ons and can significantly reduce under		
Charging time (approximate)	4 hours (when the computer is off)	4 hours (when the computer is off)		
Life span (approximate)	300 discharge/charge cycles	300 discharge/charge cycles		
Coin-cell battery	CR-2032	CR-2032		

NOTE: This computer supports Hybrid power feature during heavy loading. For more information, see <u>Hybrid</u> <u>power</u>.

Ø

Display

Table 17. Display specifications

Features		Values
Туре	Full High Definition (FHD)	Ultra High Definition (UHD)
Panel technology	Wide Viewing angle(WVA)	Wide Viewing angle(WVA)
Luminance (typical)	300 nits	400 nits
Dimensions (active area):		
Height	214.81 mm (8.46 in.)	214.94 mm (8.46 in.)
Width	381. 89 mm (15.04 in.)	382.12 mm (15.04 in.)
Diagonal	438.16 mm (17.25 in.)	438.42 mm (17.26 in.)
Native resolution	1920 x 1080	3840 x 2160
Megapixels	2.07	8.29
Pixels Per Inch (PPI)	127	255
Contrast ratio (minimum)	500:1	800:1
Response time (maximum)	35 msec rise/fall	35 msec rise/fall
Refresh rate	60 Hz	60 Hz
Horizontal view angle	+/- 85 degrees	+/- 85 degrees
Vertical view angle	+/- 85 degrees	+/- 85 degrees
Pixel pitch	0.199 mm	0.0995 mm
Power consumption (maximum)	8 W	14 W
Anti-glare vs glossy finish	Anti-glare	Anti-glare
Touch options	Not supported	Not supported

Video

Table 18. Discrete graphics specifications

Discrete graphics				
Controller	External display support	Memory size	Memory type	
NVIDIA GTX 1050 Ti	One HDMI port, one mini- DisplayPort	4 GB	GDDR5	

Table 19. Integrated graphics specifications

Controller	External display support	Memory size	Processor
Intel UHD Graphics 630	One Thunderbolt 3 (USB Type-C)	Shared system memory	8 th Generation Intel Core i5/i7

Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 20. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C (32°F to 95°F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	0% to 95% (non-condensing)
Vibration (maximum)	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G†	160 G‡
Altitude (maximum)	–15.2 m to 3,048 m (–50 ft to 10,000 ft)	–15.2 m to 10,668 m (–50 ft to 35,000 ft)

* Measured using a random vibration spectrum that simulates user environment.

 \dagger Measured using a 2 ms half-sine pulse when the hard drive is in use.

 \ddagger Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Hybrid power

The Hybrid power feature enables your computer to function optimally during the following instances of heavy loading. Examples of heavy loading include:

- Graphics and processor-intensive applications and/or gaming
- External power loading from devices relying on your computer as a power source such as gaming mice, keyboards, external speakers and headsets

When during instances of heavy loading, system performance is maintained through hybrid power. Hybrid power coordinates the power drawn from the power adapter and battery, allowing power to be drawn from the battery for up to 5 percent per hour with the power adapter plugged in. This feature is disabled when the battery falls below 20 percent charge.

The following table shows the different scenarios and benefits of hybrid power: Table 21. Hybrid power feature description

Battery capacity	Feature description
100%~20%	When the battery charge reaches 100 percent and the power adapter is plugged in, battery stops charging to avoid lithium-ion degradation.
	Under heavy loading, hybrid power is enabled and battery charge will deplete to maintain system performance.
	If your computer is no longer under heavy load, battery will resume charging.
<20%	Hybrid function is disabled.
	Computer will throttle during heavy loading and may encounter performance issues.

Keyboard shortcuts

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

NOTE: You can define the primary behavior of the function keys (F1–F12) by changing Function Key Behavior in BIOS setup program.

Table 22. List of keyboard shortcuts

Keys	Description
FN + F2 %	Disable/enable wireless
	Mute audio
	Decrease volume
	Increase volume
	Switch to external display
FN + F9 *	Decrease brightness
	Increase brightness
	Disable/enable touch pad
FN + F12 ALIEN FX	Disable/enable AlienFX



Keys	Description
γ_1	
م ²	Macro keys
4 ³	NOTE: You can configure modes and assign multiple tasks for the macro keys on the keyboard.
74	

Alienware Command Center

Alienware Command Center (AWCC) provides a single interface to customize and enhance the gaming experience. The AWCC dashboard displays most recently played or added games, and provides game-specific information, themes, profiles, and access to computer settings. You can quickly access settings such as game-specific profiles and themes, lighting, macros, and audio that are critical to the gaming experience.

AWCC also supports AlienFX 2.0. AlienFX enables you to create, assign, and share game-specific lighting maps to enhance the gaming experience. It also enables you to create your own individual lighting effects and apply them to the computer or attached peripherals. AWCC embeds Peripheral Controls to ensure a unified experience and the ability to link these settings to your computer or game.

AWCC supports the following features:

- FX: Create and manage the AlienFX zones.
- Fusion: Includes the ability to adjust game-specific Power Management, Sound Management, and Thermal Management features.
- Peripheral Management: Enables peripherals to appear in and be managed in Alienware Command Center. Supports key
 peripheral settings and associates with other functions such as profiles, macros, AlienFX, and game library.

AWCC also supports Sound Management, Thermal Controls, CPU, GPU, Memory (RAM) monitoring. For more information about AWCC, see the *Alienware Command Center Online Help*.

Getting help and contacting Alienware

Self-help resources

You can get information and help on Alienware products and services using these online self-help resources: Table 24. Alienware products and online self-help resources

Self-help resources	Resource location
Information about Alienware products and services	www.alienware.com
My Dell	Deel
Tips	·•
Contact Support	In Windows search, type Contact Support, and press Enter.
Online help for operating system	www.dell.com/support/windows www.dell.com/support/linux
Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on	www.alienware.com/gamingservices
VR Support	www.dell.com/VRsupport
Videos providing step-by-step instructions to service your computer	www.youtube.com/alienwareservices

Contacting Alienware

To contact Alienware for sales, technical support, or customer service issues, see <u>www.alienware.com</u>.

NOTE: Availability varies by country and product, and some services may not be available in your country.

NOTE: If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.