

Vostro 5300

Setup and Specifications



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.


 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2020 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Set up your Vostro 5300

NOTE: The images in this document may differ from your computer depending on the configuration you ordered.

1. Connect the power adapter and press the power button.

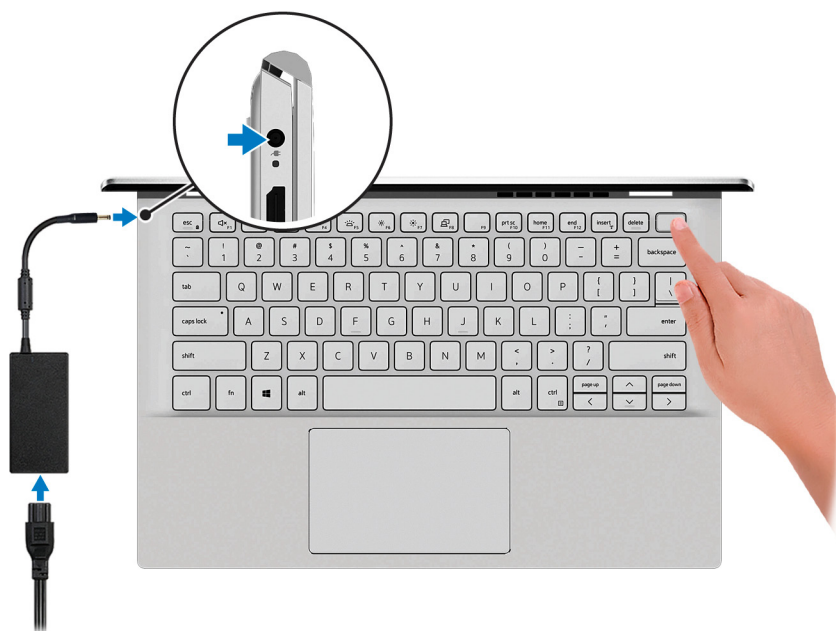

NOTE: All pictures shown are for illustration purposes only. Actual product may differ in color.

NOTE: To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.

2. Finish operating system setup.

For Ubuntu:

Follow the on-screen instructions to complete the setup. For more information about installing and configuring Ubuntu, see the knowledge base articles [SLN151664](#) and [SLN151748](#) at www.dell.com/support.


For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

- Connect to a network for Windows updates.
 - NOTE:** If connecting to a secured wireless network, enter the password for the wireless network access when prompted.
- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended.

Table 1. Locate Dell apps

Resources	Description
	My Dell Centralized location for key Dell applications, help articles, and other important information about your computer. It also notifies you about the warranty status, recommended accessories, and software updates if available.

Resources

Description



SupportAssist

Pro-actively checks the health of your computer's hardware and software. The SupportAssist OS Recovery tool troubleshoots issues with the operating system. For more information, see the SupportAssist documentation at www.dell.com/support.

 **NOTE:** In SupportAssist, click the warranty expiry date to renew or upgrade your warranty.



Dell Update

Updates your computer with critical fixes and latest device drivers as they become available. For more information about using Dell Update, see the knowledge base article [SLN305843](https://www.dell.com/support/article/SLN305843) at www.dell.com/support.



Dell Digital Delivery

Download software applications, which are purchased but not pre-installed on your computer. For more information about using Dell Digital Delivery, see the knowledge base article [153764](https://www.dell.com/support/article/153764) at www.dell.com/support.

Views of Vostro 5300

Right



NOTE: All pictures shown are for illustration purposes only. Actual product may differ in color.

1. microSD-card slot

Reads from and writes to the microSD card. The computer supports the following card types:

- microSecure Digital (microSD)
- microSecure Digital High Capacity (microSDHC)
- microSecure Digital Extended Capacity (microSDXC)

2. Headset port

Connect headphones or a headset (headphone and microphone combo).

3. USB 3.2 Gen 1 port

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

Left



NOTE: All pictures shown are for illustration purposes only. Actual product may differ in color.

1. Power-adaptor port

Connect a power adapter to provide power to your computer.

2. HDMI port

Connect to a TV or another HDMI-in enabled device. Provides video and audio output.

3. USB 3.2 Gen 1 port

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

4. USB 3.2 Gen 1 (Type-C) port with Power Delivery/DisplayPort

Connect peripherals such as external storage devices, printers, and external displays.


Supports Power Delivery that enables two-way power supply between devices. Provides up to 15 W power output that enables faster charging.

NOTE:

The Dell Adapter USB-C to USB-A 3.0 is shipped with this computer. Use this adapter to connect legacy USB 3.0 accessories to USB (Type-C) ports on your computer.

NOTE: A USB Type-C to DisplayPort adapter (sold separately) is required to connect a DisplayPort device.

Base

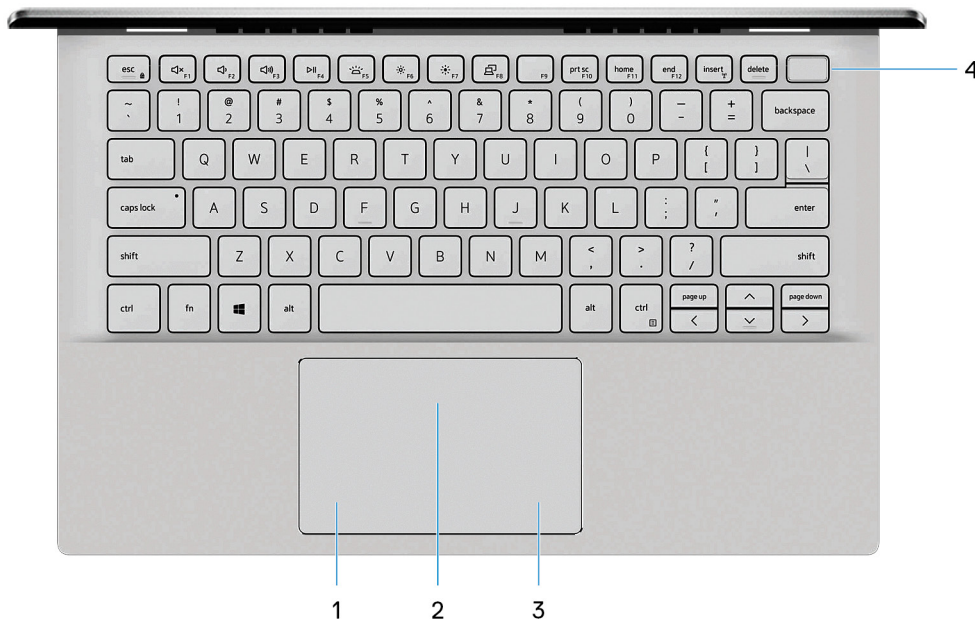

NOTE: All pictures shown are for illustration purposes only. Actual product may differ in color.

1. Left-click area

Press to left-click.

2. Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

3. Right-click area

Press to right-click.

4. Power button with optional fingerprint reader

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 4 seconds to force shut-down the computer.

If the power button has a fingerprint reader, place your finger on the power button to log in.

NOTE: You can customize power-button behavior in Windows. For more information, see *Me and My Dell* at www.dell.com/support/manuals.


Display



NOTE: All pictures shown are for illustration purposes only. Actual product may differ in color.

1. **Left microphone**
Provides digital sound input for audio recording and voice calls.
2. **Camera**
Enables you to video chat, capture photos, and record videos.
3. **Camera-status light**
Turns on when the camera is in use.
4. **Right microphone**
Provides digital sound input for audio recording and voice calls.

Bottom

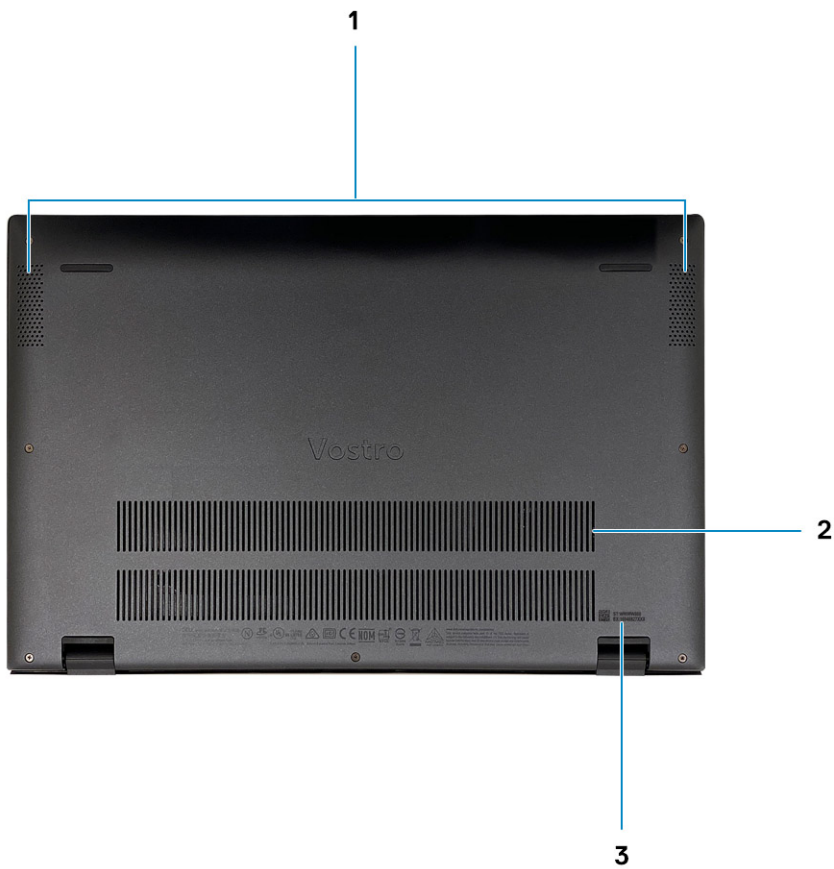

1. Speaker grills

Provides audio output.

2. Fan vents

Provides for entry of air intake.

3. Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.

Specifications of Vostro 5300

Dimensions and weight

The following table lists the height, width, depth, and weight of your Vostro 5300.

Table 2. Dimensions and weight

Description	Values
Height:	
Front height	13.97 mm (0.55 in.)
Rear height	15.85 mm (0.62 in.)
Width	305.96 mm (12.04 in.)
Depth	203.40 mm (8.01 in.)
Weight (maximum)	<ul style="list-style-type: none"> UMA: 1.16 kg (2.56 lb) DSC: 1.23 kg (2.71 lb)
NOTE: The weight of your computer depends on the configuration ordered and manufacturing variability.	

Processors

NOTE: Global Standard Products (GSP) are a subset of Dell's relationship products that are managed for availability and synchronized transitions on a worldwide basis. They ensure the same platform is available for purchase globally. This allows customers to reduce the number of configurations managed on a worldwide basis, thereby reducing their costs. They also enable companies to implement global IT standards by locking in specific product configurations worldwide.

Device Guard (DG) and Credential Guard (CG) are the new security features that are only available on Windows 10 Enterprise today. Device Guard is a combination of enterprise-related hardware and software security features. When you configure together, it locks a device down so that it can only run trusted applications. Credential Guard uses virtualization-based security to isolate secrets (credentials) so that only privileged system software can access them. Unauthorized access to these secrets can lead to credential theft attacks. Credential Guard prevents these attacks by protecting NT LAN Manager (NTLM) password hashes and Kerberos Ticket Granting Tickets.

NOTE: Processor numbers are not a measure of performance. Processor availability is subject to change and may vary by region/country.

Table 3. Processors

Description	Option one	Option two	Option three
Processors	10 th Generation Intel Core i5-10210U	10 th Generation Intel Core i7-10510U	10 th Generation Intel Core i7
Wattage	15 W	15 W	15 W
Core count	4	6	4
Thread count	8	8	8
Speed	1.6 GHz to 4.2 GHz	1.1 GHz to 4.9 GHz	Up to 4.9 GHz

Description	Option one	Option two	Option three
Cache	6 MB	6 MB	8 MB
Integrated graphics	Intel UHD Graphics	Intel UHD Graphics	Intel UHD Graphics

Chipset

The following table lists the details of the chipset supported by your Vostro 5300.

Table 4. Chipset

Description	Values
Chipset	Intel Q490
Processor	10 th Generation Intel Comet Lake Core i3/i5/i7
DRAM bus width	64-bit
Flash EPROM	16 MB + 8 MB
PCIe bus	Up to Gen3

Operating system

Your Vostro 5300 supports the following operating systems:

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)
- Ubuntu 18.04 LTS (64-bit)

Memory

The following table lists the memory specifications of your Vostro 5300.

Table 5. Memory specifications

Description	Values
Memory slots	Onboard system memory
Memory type	Single-channel DDR4
Memory speed	2666 MHz
Maximum memory configuration	8 GB
Minimum memory configuration	4 GB
Memory configurations supported	<ul style="list-style-type: none"> • 4 GB, 1 x 4 GB, Single-Channel DDR4, 2666 MHz • 8 GB, 1 x 8 GB, Single-Channel DDR4, 2666 MHz

Ports and connectors

Table 6. External ports and connectors

Description	Values
External:	

Description	Values
USB	<ul style="list-style-type: none"> One USB 3.2 Gen 1 Type-C port with DisplayPort 1.2 and Power Delivery support (5 Gbps) Two USB 3.2 Gen 1 Type-A port with PowerShare (5 Gbps)
Audio	One headset (headphone and microphone combo) port
Video	One HDMI 1.4b Port
Media card reader	One microSD 3.0 card reader (integrated)
Power adapter port	One 4.5 mm x 2.9 mm DC-in port

Table 7. Internal ports and connectors

Description	Values
Internal:	
M.2	<ul style="list-style-type: none"> One M.2 2230 slot for Wi-Fi One M.2 2230/ 2280 slot for solid-state drive
	<p>NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article SLN301626.</p>

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module specifications of your Vostro 5300.

Table 8. Wireless module specifications

Description	Option one	Option two	Option three
Model number	Qualcomm QCA61x4A (DW1820) (2x2) Wireless Adapter with Bluetooth 4.2	Intel Wi-Fi 6 AX201, 2x2, 802.11ax with Bluetooth 5.0	Intel Wireless-AC 9462, Dualband, Wi-Fi 802.11ac with Bluetooth 5.0
Transfer rate	<ul style="list-style-type: none"> 802.11ac - Up to 867 Mbps 802.11n - Up to 450 Mbps 802.11a/g - Up to 54 Mbps 802.11b - Up to 11 Mbps 	<ul style="list-style-type: none"> 2.4 GHz 40M: Up to 574 Mbps 5 GHz 80M: Up to 1.2 Gbps 5 GHz 160M: Up to 2.4 Gbps 	Up to 433 Mbps
Frequency bands supported	2.4 GHz (802.11b/g/n) and 5 GHz (802.11a/n/ac)	2.4/5 GHz	2.4/5 GHz
Wireless standards	<ul style="list-style-type: none"> 802.11a, 802.11b, 802.11g, 802.11n and 802.11ac Dual-mode Bluetooth 4.2, BLE (HW ready, SW depends on OS) 	IEEE 802.11a/b/g/n/ac/ax, 160MHz channel use	Wi-Fi 5 (WiFi 802.11ac)
Encryption	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP TKIP 	<ul style="list-style-type: none"> 64/128-bit WEP 128-bit AES-CCMP TKIP 	<ul style="list-style-type: none"> 64-bit/128-bit WEP AES-CCMP TKIP
Bluetooth	Bluetooth 5.0	Bluetooth 5.0	Bluetooth 5.0

Audio

The following table lists the audio specifications of your Vostro 5300.

Table 9. Audio specifications

Description	Values
Audio controller	Realtek ALC3204
Stereo conversion	Supported
Internal audio interface	HD audio interface
External audio interface	Universal Audio Jack
Number of speakers	Two
Internal-speaker amplifier	Supported (audio codec integrated)
External volume controls	No hardware volume buttons, keyboard shortcut controls
Speaker output:	
Average speaker output	2 W
Peak speaker output	2.5 W
Subwoofer output	Not supported
Microphone	Dual array microphone

Storage

Your computer supports one of the following configurations:

- M.2 2230 Class 35/40 SSD/SED
- M.2 2280 Class 35/40 SSD/SED
- M.2 2280 Intel Optane memory

Table 10. Storage specifications

Storage type	Interface type	Capacity
M.2 Intel Optane with Storage	PCIe x4 NVMe 3.0	512 GB
M.2 Class 35 solid-state drive	PCIe x4 NVMe 3.0	<ul style="list-style-type: none">• 128 GB• 256 GB• 512 GB
M.2 Class 40 solid-state drive	PCIe x4 NVMe 3.0	<ul style="list-style-type: none">• 256 GB• 512 GB• 1 TB

Intel Optane Memory H10 with solid-state storage (optional)

Intel Optane Memory technology utilizes 3D XPoint memory technology and functions as a non-volatile storage cache/accelerator and/or storage device depending on the Intel Optane Memory installed in your computer.

Intel Optane Memory H10 with solid-state storage functions as both a non-volatile storage cache/accelerator (enabling enhanced read/write speeds for hard-drive storage) and a solid-state storage solution. It neither replaces nor adds to the memory (RAM) installed on your computer.

Table 11. Intel Optane Memory H10 with solid-state storage specifications

Description	Values
Interface	PCIe 3 x4 NVMe <ul style="list-style-type: none">• One PCIe 3 x4 for Optane memory• One PCIe 3 x2 for solid-state storage
Connector	M.2
Form factor	2230/2280
Capacity (Intel Optane memory)	Up to 32 GB
Capacity (solid-state storage)	Up to 512 GB

NOTE: Intel Optane Memory H10 with solid-state storage is supported on computers that meet the following requirements:

- 9th Generation or higher Intel Core i3/i5/i7 processors
- Windows 10 64-bit version or higher (Anniversary Update)
- Intel Rapid Storage Technology driver version 15.9.1.1018 or higher

Intel Optane Memory H10 with solid-state storage (optional)

Intel Optane Memory technology utilizes 3D XPoint memory technology and functions as a non-volatile storage cache/accelerator and/or storage device depending on the Intel Optane Memory installed in your computer.

Intel Optane Memory H10 with solid-state storage functions as both a non-volatile storage cache/accelerator (enabling enhanced read/write speeds for hard-drive storage) and a solid-state storage solution. It neither replaces nor adds to the memory (RAM) installed on your computer.

Table 12. Intel Optane Memory H10 with solid-state storage specifications

Description	Values
Interface	PCIe 3 x4 NVMe <ul style="list-style-type: none">• One PCIe 3 x4 for Optane memory• One PCIe 3 x2 for solid-state storage
Connector	M.2
Form factor	2230/2280
Capacity (Intel Optane memory)	Up to 32 GB
Capacity (solid-state storage)	Up to 512 GB

NOTE: Intel Optane Memory H10 with solid-state storage is supported on computers that meet the following requirements:

- 9th Generation or higher Intel Core i3/i5/i7 processors

- Windows 10 64-bit version or higher (Anniversary Update)
- Intel Rapid Storage Technology driver version 15.9.1.1018 or higher

Media-card reader

The following table lists the media cards supported by your Vostro 5300.

Table 13. Media-card reader specifications

Description	Values
Media-card type	One micro-SD 3.0 card
Media-cards supported	Secure Digital (SD)

NOTE: The maximum capacity supported by the media-card reader varies depending on the standard of the media card installed in your computer.

Keyboard

The following table lists the keyboard specifications of your Vostro 5300.

Table 14. Keyboard specifications

Description	Values
Keyboard type	<ul style="list-style-type: none"> Standard spill resistant keyboard (Optional backlit)
Keyboard layout	QWERTY/ KANJI
Number of keys	<ul style="list-style-type: none"> United States and Canada: 81 keys United Kingdom: 82 keys Japan: 85 keys
Keyboard size	X=18.07 mm key pitch Y=18.07 mm key pitch
Keyboard shortcuts	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key. NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in BIOS setup program.

[Keyboard shortcuts](#)

Camera

The following table lists the camera specifications of your Vostro 5300.

Table 15. Camera specifications

Description	Values
Number of cameras	One
Camera type	RGB HD camera
Camera location	Front camera

Description	Values
Camera sensor type	CMOS sensor technology
Camera resolution:	
Still image	0.92 megapixel
Video	1280 x 720 (HD) at 30 fps
Diagonal viewing angle:	74.9 degrees

Touchpad

The following table lists the touchpad specifications of your Vostro 5300.

Table 16. Touchpad specifications

Description	Values
Touchpad resolution:	
Horizontal	1229
Vertical	749
Touchpad dimensions:	
Horizontal	105 mm (4.13 in.)
Vertical	65 mm (2.56 in.)
Touchpad gestures	For more information about touchpad gestures available on Windows 10, see the Microsoft knowledge base article 4027871 at support.microsoft.com .

Power adapter

The following table lists the power adapter specifications of your Vostro 5300.

Table 17. Power adapter specifications

Description	Option one	Option two
Type	45 W	65 W
Connector dimensions:		
External diameter	4.50	4.50
Internal diameter	2.90	2.90
Input voltage	100 VAC–240 VAC	100 VAC–240 VAC
Input frequency	50 Hz–60 Hz	50 Hz–60 Hz
Input current (maximum)	1.30 A	1.60 A
Output current (continuous)	2.31 A	3.34 A
Rated output voltage	19.50 VDC	19.50 VDC
Temperature range:		
Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)

Description	Option one	Option two
Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

Battery

Table 18. Battery specifications

Description	Values	
Type	3-cell, 40 WHr, smart lithium-ion battery	4-cell, 53 WHr, smart lithium-ion battery
Voltage	11.40 VDC	15.2 VDC
Weight (maximum)	0.18 kg (0.4 lb)	0.235 kg (0.518 lb)
Dimensions:		
Height	5.75 mm (0.23 in.)	5.75 mm (0.23 in.)
Width	184.1 mm (7.25 in.)	239.1 mm (9.41 in.)
Depth	90.73 mm (3.6 in.)	90.73 mm (3.6 in.)
Temperature range:		
Operating	0 °C to 35 °C (32 °F to 95 °F)	0 °C to 35 °C (32 °F to 95 °F)
Storage	-40 °C to 65 °C (-40 °F to 149 °F)	-40 °C to 65 °C (-40 °F to 149 °F)
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.	
Charging time (approximate)	4 hours (when the computer is off)	4 hours (when the computer is off)
	NOTE: Control the charging time, duration, start and end time, and so on using the Dell Power Manager application. For more information on the Dell Power Manager see, https://www.dell.com/support/home/us/en/19/product-support/product/power-manager/docs	
Life span (approximate)	300 discharge/charge cycles	300 discharge/charge cycles
ExpressCharge	Supported	Supported
User replaceable	No (FRU)	No (FRU)
Coin-cell battery	CR2032	

NOTE: For batteries with the ExpressCharge feature, the battery will typically have at least an 80% charge after about an hour of charging with the system off, and fully charged in about 2 hours with the system off.

Enabling ExpressCharge requires that both the computer and the battery used be ExpressCharge capable. If these requirements are not met, ExpressCharge will not be enabled.

Display

The following table lists the display specifications of your Vostro 5300.

Table 19. Display specifications

Description	Values
Display type	Full High Definition (FHD)

Description	Values
Display-panel technology	In-Plane Switching (IPS)
Display-panel dimensions (active area):	
Height	165.24 mm (6.5 in.)
Width	293.76 mm (11.57 in.)
Diagonal	337.82 mm (13.3 in.)
Display-panel native resolution	1920 x 1080
Luminance (typical)	300 nits
Megapixels	2.07
Color gamut	sRGB 95%
Pixels Per Inch (PPI)	166
Contrast ratio (min)	600:1
Response time (max)	35 ms
Refresh rate	60 Hz
Horizontal view angle	+/-80°
Vertical view angle	+/-80°
Pixel pitch	0.153 mm x 0.153 mm
Power consumption (maximum)	4 W
Anti-glare vs glossy finish	Anti-glare
Touch options	No

Fingerprint reader (optional)

The following table lists the specifications of the optional fingerprint-reader of your Vostro 5300.

Table 20. Fingerprint reader specifications

Description	Values
Fingerprint-reader sensor technology	Capacitive
Fingerprint-reader sensor resolution	500 dpi
Fingerprint-reader sensor area	4.06 mm x 3.25 mm
Fingerprint-reader sensor pixel size	64 x 80

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Vostro 5300.

Table 21. GPU—Integrated

Controller	External display support	Memory size	Processor
Intel UHD Graphics	HDMI 1.4/ Display over USB Type-C	Shared system memory	10 th Generation Intel Core i3/i5/i7

GPU—Discrete

The following table lists the specifications of the discrete Graphics Processing Unit (GPU) supported by your Vostro 5300.

Table 22. GPU—Discrete

Controller	External display support	Memory size	Memory type
NVIDIA GeForce MX330	N/A	2 GB	GDDR5

Operating and storage environment

This table lists the operating and storage specifications of your Vostro 5300.

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 23. Computer environment

Description	Operating	Storage
Temperature range	0 °C to 40 °C (32 °F to 104 °F)	-40°C to 65°C (-40°F to 149°F)
Relative humidity (maximum)	10% to 90% (non-condensing)	10% to 95% (non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	140 G†	160 G†
Altitude (maximum)	0 m to 3048 m (32 ft to 5518.4 ft)	0 m to 10668 m (32 ft to 19234.4 ft)

* Measured using a random vibration spectrum that simulates user environment.

† Measured using a 2 ms half-sine pulse when the hard drive is in use.

System setup

 **CAUTION:** Unless you are an expert computer user, do not change the settings in the BIOS Setup program. Certain changes can make your computer work incorrectly.

 **NOTE:** Depending on the computer and its installed devices, the items listed in this section may or may not be displayed.

 **NOTE:** Before you change BIOS Setup program, it is recommended that you write down the BIOS Setup program screen information for future reference.

Use the BIOS Setup program for the following purposes:

- Get information about the hardware installed in your computer, such as the amount of RAM and the size of the hard drive.
- Change the system configuration information.
- Set or change a user-selectable option, such as the user password, type of hard drive installed, and enabling or disabling base devices.

Topics:

- [Entering BIOS setup program](#)
- [Navigation keys](#)
- [Boot Sequence](#)
- [One time boot menu](#)
- [System setup options](#)


Entering BIOS setup program

Turn on (or restart) your computer and press F2 immediately.

Navigation keys

 **NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Table 24. Navigation keys

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.  NOTE: For the standard graphics browser only.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

Boot Sequence

Boot Sequence allows you to bypass the System Setup–defined boot device order and boot directly to a specific device (for example: optical drive or hard drive). During the Power-on Self Test (POST), when the Dell logo appears, you can:

- Access System Setup by pressing F2 key
- Bring up the one-time boot menu by pressing F12 key

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

NOTE: XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

NOTE: Choosing Diagnostics, will display the SupportAssist diagnostics screen.

The boot sequence screen also displays the option to access the System Setup screen.

One time boot menu

To enter **one time boot menu**, turn on your computer, and then press F2 immediately.

NOTE: It is recommended to shutdown the computer if it is on.

The one-time boot menu displays the devices that you can boot from including the diagnostic option. The boot menu options are:

- Removable Drive (if available)
- STXXXX Drive (if available)

NOTE: XXX denotes the SATA drive number.

- Optical Drive (if available)
- SATA Hard Drive (if available)
- Diagnostics

NOTE: Choosing Diagnostics, will display the SupportAssist diagnostics screen.

The boot sequence screen also displays the option to access the System Setup screen.

System setup options

NOTE: Depending on this computer and its installed devices, the items that are listed in this section may or may not be displayed.

Table 25. System setup options—System information menu

Overview	
BIOS Version	Displays the BIOS version number.
Service Tag	Displays the Service Tag of the computer.
Asset Tag	Displays the Asset Tag of the computer.
Ownership Tag	Displays the ownership tag of the computer.
Manufacture Date	Displays the manufacture date of the computer.
Ownership Date	Displays the ownership date of the computer.
Express Service Code	Displays the express service code of the computer.
Ownership Tag	Displays the ownership tag of the computer.
Signed Firmware Update	Displays whether the signed firmware update is enabled.
Battery	Displays the battery health information.
Primary	Displays the primary battery.
Battery Level	Displays the battery level.
Battery State	Displays the battery state.

Overview

Health	Displays the battery health.
AC Adapter	Displays whether an AC adapter is installed.
Processor Information	
Processor Type	Displays the processor type.
Maximum Clock Speed	Displays the maximum processor clock speed.
Core Count	Displays the number of cores on the processor.
Processor L2 Cache	Displays the processor L2 Cache size.
Processor ID	Displays the processor identification code.
Processor L3 Cache	Displays the processor L3 Cache size.
Current Clock Speed	Displays the current processor clock speed.
Minimum Clock Speed	Displays the minimum processor clock speed.
Microcode Version	Displays the microcode version.
Intel Hyper-Threading Capable	Displays whether the processor is Hyper-Threading (HT) capable.
64-Bit Technology	Displays whether 64-bit technology is used.
Memory Information	
Memory Installed	Displays the total computer memory installed.
Memory Available	Displays the total computer memory available.
Memory Speed	Displays the memory speed.
Memory Channel Mode	Displays single or dual channel mode.
Memory Technology	Displays the technology that is used for the memory.
Device Information	
Video Controller	Displays the integrate graphics information of the computer.
dGPU Video Controller	Displays the discrete graphics information of the computer.
Video BIOS Version	Displays the video BIOS version of the computer.
Video Memory	Displays the video memory information of the computer.
Panel Type	Displays the Panel Type of the computer.
Native Resolution	Displays the native resolution of the computer.
Audio Controller	Displays the audio controller information of the computer.
Wi-Fi Device	Displays the wireless device information of the computer.
Bluetooth Device	Displays the Bluetooth device information of the computer.

Table 26. System setup options—Boot options menu

Boot options

Advanced Boot Options

Enable UEFI Network Stack	Enables or disables UEFI Network Stack. Default: OFF.
---------------------------	--

Boot Mode

Boot Mode: UEFI only	Displays the boot mode of this computer.
Enable Boot Devices	Enables or disables boot devices for this computer.
Boot Sequence	Displays the boot sequence.

BIOS Setup Advanced Mode

Enables or disables advanced BIOS settings.

Boot options

UEFI Boot Path Security

Default: ON.

Enables or disables the system to prompt the user to enter the Admin password when booting a UEFI boot path from the F12 boot menu.

Default: Always Except Internal HDD.

Table 27. System setup options—System Configuration menu

System Configuration

Date/Time

Date

Sets the computer date in MM/DD/YYYY format. Changes to the date take effect immediately.

Time

Sets the computer time in HH/MM/SS 24-hour format. You can switch between 12-hour and 24-hour clock. Changes to the time take effect immediately.

Enable SMART Reporting

Enables or disables SMART (Self-Monitoring, Analysis, and Reporting Technology) during computer startup to report hard drive errors.

Default: OFF.

Enable Audio

Enables or disables all integrated audio controller.

Default: ON.

Enable Microphone

Enables or disables microphone.

Default: ON.

Enable Internal Speaker

Enables or disables internal speaker.

Default: ON.

USB Configuration

Enable Boot Support

Enables or disables booting from USB mass storage devices such as external hard drive, optical drive, and USB drive.

Enable External USB Ports

Enables or disables USB ports to be functional in an operating system environment.

SATA Operation

Configures operating mode of the integrated SATA hard drive controller.

Default: RAID. SATA is configured to support RAID (Intel Rapid Restore Technology).

Drives

Enables or disables various onboard drives.

M.2 PCIe SSD-0/SATA-2

Default: ON.

SATA-0

Default: ON.

Drive Information

Displays the information of various onboard drives.

Miscellaneous Devices

Enables or disables various onboard devices.

Enable Camera

Enables or disables the camera.

Default: ON.

Keyboard Illumination

Configures the operating mode of the keyboard illumination feature.

Default: Disabled. The keyboard illumination will always be off.

Keyboard Backlight Timeout on AC

Configures the timeout value for the keyboard when an AC adapter is connected to the computer. The keyboard backlight timeout value is only effect when the backlight is enabled.

Default: 10 seconds.

Keyboard Backlight Timeout on Battery

Configures the timeout value for the keyboard when the computer is running on battery. The keyboard backlight timeout value is only effect when the backlight is enabled.

System Configuration

Touchscreen	Default: 10 seconds. Enables or disables the touchscreen for the operating system. i NOTE: Touchscreen will always work in the BIOS setup irrespective of this setting. Default: ON.
-------------	---

Table 28. System setup options—Video menu

Video

LCD Brightness	
Brightness on battery power	Sets the screen brightness when the computer is running on battery power.
Brightness on AC power	Sets the screen brightness when the computer is running on AC power.
EcoPower	
	Enables or disables EcoPower which increases the battery life by reducing the screen brightness when appropriate. Default: ON.

Table 29. System setup options—Security menu

Security

Enable Admin Setup Lockout	Enables or disables the user from entering BIOS Setup when an Admin Password is set. Default: OFF.
Password Bypass	Bypass the System (Boot) Password and the internal hard drive password prompts during a system restart. Default: Disabled.
Enable Non-Admin Password Changes	Enables or disables the user to change the system and hard drive password without the need for admin password. Default: ON.
Non-Admin Setup Changes	
Allow Wireless Switch Changes	Enables or disables changes to the setup option when an Administrator password is set. Default: OFF.
Enable UEFI Capsule Firmware Updates	Enables or disables BIOS updates through UEFI capsule update packages.
Computrace	
Enable or disable the BIOS module interface of the optional Computrace(R) Service from Absolute Software.	
Intel Platform Trust Technology On	
	Enables or disables Platform Trust Technology (PTT) visibility to the operating system. Default: ON.
PPI Bypass for Clear Commands	Enables or disables the operating system to skip BIOS Physical Presence Interface (PPI) user prompts when issuing the Clear command. Default: OFF.
Clear	Enables or disables the computer to clear the PTT owner information, and returns the PTT to the default state. Default: OFF.
Intel SGX	
	Enables or disables the Intel Software Guard Extensions (SGX) to provide a secured environment for running code/storing sensitive information.

Security

	Default: Software Control
SMM Security Mitigation	Enables or disables additional UEFI SMM Security Mitigation protections. Default: OFF. NOTE: This feature may cause compatibility issues or loss of functionality with some legacy tools and applications.
Enable Strong Passwords	Enables or disables strong passwords. Default: OFF.
Password Configuration	Control the minimum and maximum number of characters that are allowed for Admin and System passwords.
Admin Password	Sets, Changes, or deletes the administrator (admin) password (sometimes called the "setup" password).
System Password	Sets, Changes, or deletes the system password.
Enable Master Password Lockout	Enables or disables the master password support. Default: OFF.

Table 30. System setup options—Secure Boot menu

Secure Boot

Enable Secure Boot	Enables or disables the computer to boot using only validated boot software. Default: OFF. NOTE: For Secure Boot to be enabled, the computer needs to be in UEFI boot mode and the Enable Legacy Option ROMs option needs to be turned off.
Secure Boot Mode	Selects the Secure Boot operation mode. Default: Deployed Mode. NOTE: Deployed Mode should be selected for normal operation of Secure Boot.

Table 31. System setup options—Expert Key Management menu

Expert Key Management

Enable Custom Mode	Enables or disables the keys in the PK, KEK, db, and dbx security key databases to be modified. Default: OFF.
Custom Mode Key Management	Selects the custom values for expert key management. Default: PK.

Table 32. System setup options—Performance menu

Performance

Intel Hyper-Threading Technology	Enables or disables the Intel Hyper-Threading Technology to use processor resources more efficiently. Default: ON.
Intel SpeedStep	Enables or disables the Intel SpeedStep Technology to dynamically adjust processor voltage and core frequency, decreasing average power consumption and heat production. Default: ON.

Performance

Intel TurboBoost Technology	Enabled or disabled the Intel TurboBoost mode of the processor. If enabled, the Intel TurboBoost driver increases the performance of the CPU or graphics processor. Default: ON.
Multi-Core Support	Changes the number of CPU cores available to the operating system. The default value is set to the maximum number of cores. Default: All Cores.
Enable C-State Control	Enables or disables the CPU's ability to enter and exit low-power states. Default: ON.

Table 33. System setup options—Power Management menu

Power Management

Wake on AC	Enables the computer to turn on and go to boot when AC power is supplied to the computer. Default: OFF.
Auto on Time	Enables the computer to automatically power on for defined days and times. Default: Disabled. The system will not automatically power up.
Battery Charge Configuration	Enables the computer to run on battery during power usage hours. Use the below options to prevent AC power usage between certain times of each day. Default: Adaptive. Battery settings are adaptively optimized based on your typical battery usage pattern.
Enable Advanced Battery Charge Configuration	Enables Advanced Battery Charge Configuration from the beginning of the day to a specified work period. Advanced Battery Charged maximizes battery health while still supporting heavy use during the work day. Default: OFF.
Block Sleep	Blocks the computer from entering Sleep (S3) mode in the operating system. Default: OFF. NOTE: If enabled, the computer will not go to sleep, Intel Rapid Start will be disabled automatically, and the operating system power option will be blank if it was set to Sleep.
Enable USB Wake Support	Enables the USB devices to wake the computer from Standby mode. Default: OFF.
Enable Intel Speed Shift Technology	Enables or disables Intel Speed Shift Technology support which enables the operating system to select the appropriate processor performance automatically. Default: ON.
Lid Switch	Enables the computer to power up from the off state whenever the lid is opened. Default: ON.

Table 34. System setup options—Wireless menu

Wireless

Wireless Switch

Determines which wireless devices can be controlled by the Wireless Switch. For Windows 8 systems, this is controlled by an operating system drive directly. As a result, the setting does not affect the Wireless Switch behavior.

NOTE: When both WLAN and WiGig are present, enable/disable controls are tied together. Thus, they cannot be enabled or disabled independently.

Wireless

WLAN	Default: ON.
Bluetooth	Default: ON.
Wireless Device Enable	Enable or disable internal WLAN/Bluetooth devices.
WLAN	Default: ON.
Bluetooth	Default: ON.

Table 35. System setup options—POST Behavior menu

POST Behavior

Numlock Enable	Enables or disables Numlock when the computer boots. Default: ON.
Enable Adapter Warnings	Enables the computer to display adapter warning messages during boot. Default: ON.
Extend BIOS POST Time	Configures the BIOS POST (Power-On Self-Test) load time. Default: 0 seconds.
Fastboot	Configures the speed of the UEFI boot process. Default: Thorough. Performs complete hardware and configuration initialization during boot.
Fn Lock Options	Enables or disables the Fn lock mode. Default: ON.
Lock Mode	Default: Lock Mode Secondary. Lock Mode Secondary = If this option is selected, the F1-F12 keys scan the code for their secondary functions.
Pull Screen Logo	Enabled or disabled the computer to display full screen logo if the image match screen resolution. Default: OFF.
Warnings and Errors	Selects an action on encountering a warning or error during boot. Default: Prompt on Warnings and Errors. Stop, prompt and wait for user input when warnings or errors are detected.

NOTE: Errors deemed critical to the operation of the computer hardware will always halt the computer.

Table 36. System setup options—Virtualization menu

Virtualization

Intel Virtualization Technology	Enables the computer to run a virtual machine monitor (VMM). Default: ON.
VT for Direct I/O	Enables the computer to perform Virtualization Technology for Direct I/O (VT-d). VT-d is an Intel method that provides virtualization for memory map I/O. Default: ON.

Table 37. System setup options—Maintenance menu

Maintenance

Asset Tag	Creates a system Asset Tag that can be used by an IT administrator to uniquely identify a particular system. Once set in BIOS, the Asset Tag cannot be changed.
-----------	---

Maintenance

Service Tag	Displays the Service Tag of the computer.
BIOS Recovery from Hard Drive	<p>Enables the computer to recover from a bad BIOS image, as long as the Boot Block portion is intact and functioning.</p> <p>Default: ON.</p> <p>NOTE: BIOS recovery is designed to fix the main BIOS block and cannot work if the Boot Block is damaged. In addition, this feature cannot work in the event of EC corruption, ME corruption, or a hardware issue. The recovery image must exist on an unencrypted partition on the drive.</p>
BIOS Auto-Recovery	<p>Enables the computer to automatically recover the BIOS without user actions. This feature requires BIOS Recovery from Hard Drive to be set to Enabled.</p> <p>Default: OFF.</p>
Start Data Wipe	<p>CAUTION: This Secure Wipe Operation will delete information in a way that it cannot be reconstructed.</p> <p>If enabled, the BIOS will queue up a data wipe cycle for storage devices that are connected to the motherboard on the next reboot.</p> <p>Default: OFF.</p>
Allow BIOS Downgrade	<p>Controls flashing of the system firmware to previous revisions.</p> <p>Default: ON.</p>

Table 38. System setup options—System Logs menu

System Logs

Power Event Log	<p>Displays Power events.</p> <p>Default: Keep.</p>
BIOS Event Log	<p>Displays BIOS events.</p> <p>Default: Keep.</p>
Thermal Event Log	<p>Displays Thermal events.</p> <p>Default: Keep.</p>

Table 39. System setup options—SupportAssist menu

SupportAssist

Dell Auto operating system Recovery Threshold	<p>Controls the automatic boot flow for SupportAssist System Resolution Console and for Dell operating system Recovery tool.</p> <p>Default: 2.</p>
SupportAssist operating system Recovery	<p>Enables or disables the boot flow for SupportAssist operating system Recovery tool in the even of certain system errors.</p> <p>Default: ON.</p>

Clearing BIOS (System Setup) and System passwords

To clear the system or BIOS passwords, contact Dell technical support as described at www.dell.com/contactdell.

NOTE: For information on how to reset Windows or application passwords, refer to the documentation accompanying Windows or your application.

Technology and components

 **NOTE:** Instructions provided in this section are applicable on computers shipped with Windows 10 operating system. Windows 10 is factory-installed with this computer.

Topics:

- [Audio](#)
- [Camera](#)
- [Display](#)
- [GPU—Integrated](#)
- [USB](#)
- [Wireless module](#)
- [Media-card reader](#)
- [Keyboard](#)
- [Touchpad](#)
- [Power adapter](#)
- [Chipset](#)
- [Memory](#)

Audio

The following table lists the audio specifications of your Vostro 5300.

Table 40. Audio specifications

Description		Values
Audio controller		Realtek ALC3204
Stereo conversion		Supported
Internal audio interface		HD audio interface
External audio interface		Universal Audio Jack
Number of speakers		Two
Internal-speaker amplifier		Supported (audio codec integrated)
External volume controls		No hardware volume buttons, keyboard shortcut controls
Speaker output:		
	Average speaker output	2 W
	Peak speaker output	2.5 W
Subwoofer output		Not supported
Microphone		Dual array microphone

Identifying the audio controller

1. On the taskbar, click the search box, and then type `Device Manager`.

- 2. Click **Device Manager**.
The **Device Manager** window is displayed.
- 3. Expand **Sound, video and game controllers** to view the audio controller.

Changing the audio settings

- 1. On the taskbar, click the search box, and then type **Audio**.
- 2. Click **Audio** and change the audio settings as required.

Identifying the audio controller

- 1. On the taskbar, click the search box, and then type **Device Manager**.
- 2. Click **Device Manager**.
The **Device Manager** window is displayed.
- 3. Expand **Sound, video and game controllers** to view the audio controller.

Camera

The following table lists the camera specifications of your Vostro 5300.

Table 41. Camera specifications


Description	Values
Number of cameras	One
Camera type	RGB HD camera
Camera location	Front camera
Camera sensor type	CMOS sensor technology
Camera resolution:	
Still image	0.92 megapixel
Video	1280 x 720 (HD) at 30 fps
Diagonal viewing angle:	74.9 degrees

Identifying the webcam in device manager

- 1. On the taskbar, click the search box, and then type **Device Manager**.
- 2. Click **Device Manager**.
The **Device Manager** window is displayed.
- 3. Expand **Camera Imaging Devices**.

Starting the camera application

- 1. On the taskbar, click the search box, and then type **Camera**.
- 2. Click **Camera**.

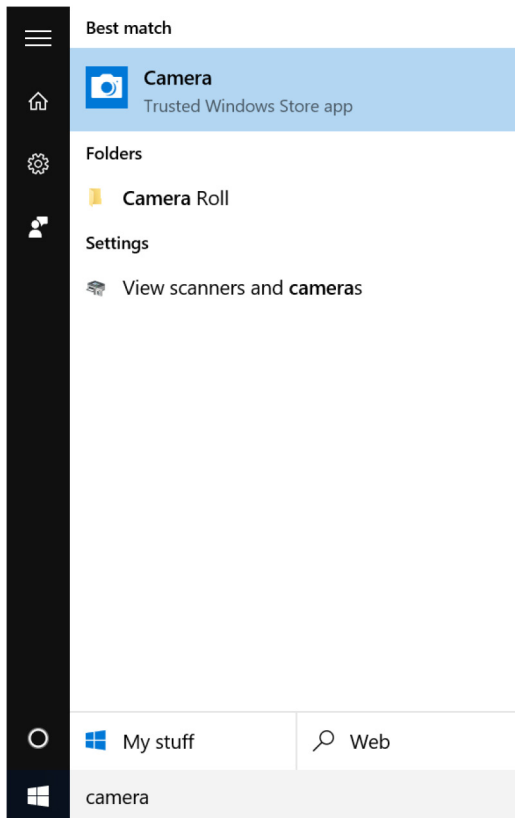

Display

The following table lists the display specifications of your Vostro 5300.


Table 42. Display specifications

Description	Values
Display type	Full High Definition (FHD)
Display-panel technology	In-Plane Switching (IPS)
Display-panel dimensions (active area):	
Height	165.24 mm (6.5 in.)
Width	293.76 mm (11.57 in.)
Diagonal	337.82 mm (13.3 in.)
Display-panel native resolution	1920 x 1080
Luminance (typical)	300 nits
Megapixels	2.07
Color gamut	sRGB 95%
Pixels Per Inch (PPI)	166
Contrast ratio (min)	600:1

Description	Values
Response time (max)	35 ms
Refresh rate	60 Hz
Horizontal view angle	+/-80°
Vertical view angle	+/-80°
Pixel pitch	0.153 mm × 0.153 mm
Power consumption (maximum)	4 W
Anti-glare vs glossy finish	Anti-glare
Touch options	No

Adjusting the brightness


1. Right-click on your desktop and select **Display settings**.
2. Drag the **Change brightness** slider to adjust the brightness.

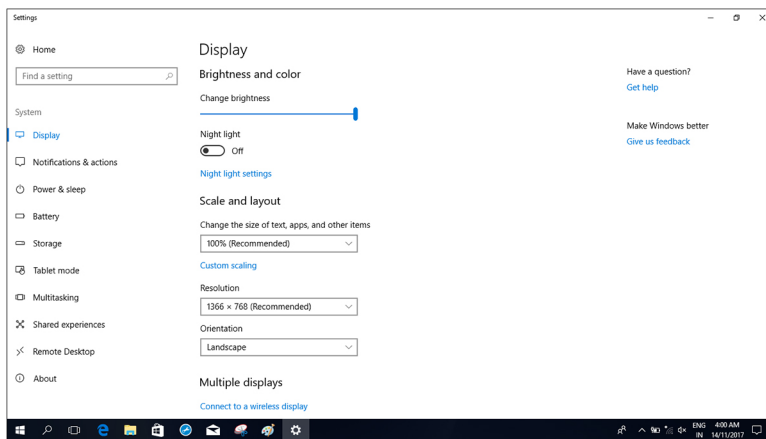

Alternatively, press F11 to decrease brightness and F12 to increase brightness.


Changing the screen resolution

1. Right-click on your desktop and select **Display settings**.
2. Select the appropriate resolution from the drop-down list.
3. Click **Apply**.

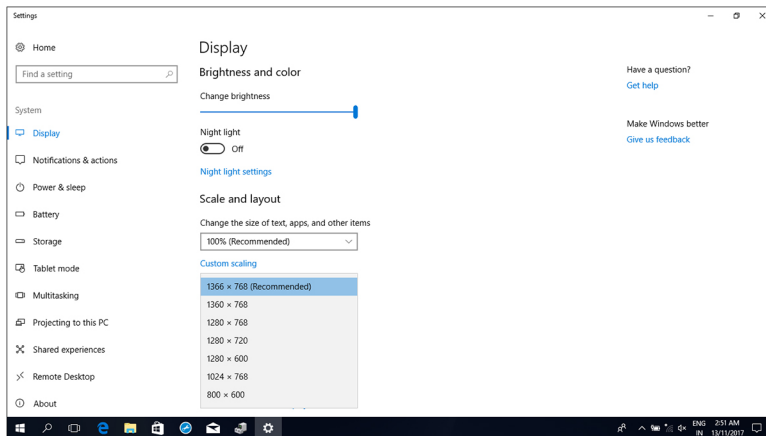

Rotating the display

1. Right-click on your desktop.
2. Select **Display Settings**.
The **Settings** window is displayed.
3. From the **Orientation** drop-down list, select one of the following options:
 - Landscape
 - Portrait
 - Landscape (flipped)
 - Portrait (flipped)

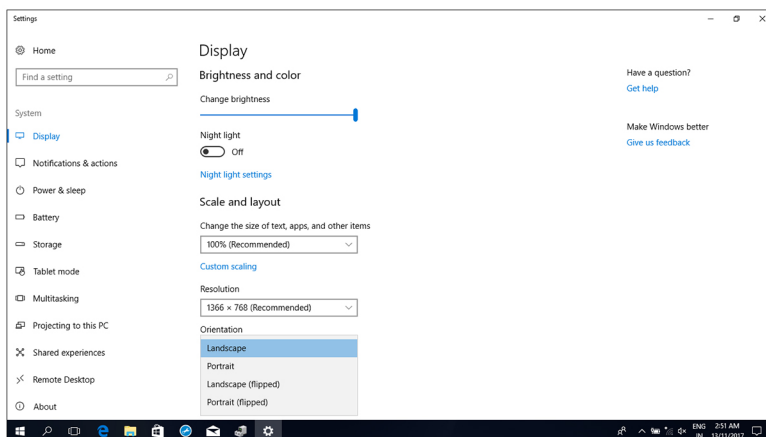

4. Click **Apply**.

Cleaning the display

CAUTION: Do not use substances such as alcohol, chemicals, or household cleaners for cleaning the display.

CAUTION: To avoid damaging the display, do not apply force when cleaning and wipe off any remaining liquid after cleaning.

NOTE: A commercial display cleaning kit should be used for cleaning. If unavailable, use a soft, damp microfiber cloth lightly sprayed with distilled water.

1. Turn off your computer and display before cleaning.
2. Gently wipe the display in circular motions to remove any dust or dirt particles.
3. Let the display dry thoroughly before turning it on.

GPU—Integrated

The following table lists the specifications of the integrated Graphics Processing Unit (GPU) supported by your Vostro 5300.

Table 43. GPU—Integrated


Controller	External display support	Memory size	Processor
Intel UHD Graphics	HDMI 1.4/ Display over USB Type-C	Shared system memory	10 th Generation Intel Core i3/i5/i7

Identifying the display adapter

- On the taskbar, click the search box, and then type `Device Manager`.
- Click **Device Manager**.
The **Device Manager** window is displayed.
- Expand **Display adapters**.

Changing the display settings

- On the taskbar, select **Intel Graphics Command Center**.
- Click **Display**.

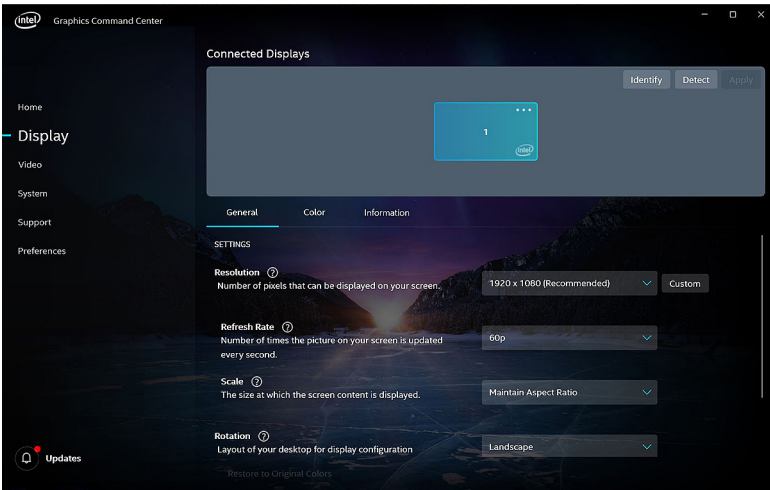

- Change the display settings as required.

USB

The following table shows the USB ports available in your computer.

Table 44. USB ports and their locations

Ports	Location
One USB 3.2 Gen 1 (Type-A) port	Left side
One USB 3.2 Gen 1 (Type-A) port	Right side
One USB 3.2 Gen 1 (Type-C) with DisplayPort 1.2 port	Right side

Enabling or disabling the USB in BIOS setup program

- Turn on or restart your computer.
- Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.

The BIOS setup program is displayed.

- On the left pane, select **Settings > System Configuration > USB Configuration**.
The USB configuration is displayed on the right pane.
- Select or clear the **Enable External USB Port** check box to enable or disable it, respectively.
- Save the settings and exit.

Fixing a no-boot issue caused by USB-boot support

Sometimes the computer does not boot to the operating system when USB devices are connected to the computer during startup. This behavior occurs because the computer is looking for bootable files in connected USB devices.

Either disconnect USB devices before booting or follow these steps to fix the no-boot issue.

- Turn on or restart your computer.
- Press F2 when the Dell logo is displayed on the screen to enter the BIOS setup program.

NOTE: The F2 prompt indicates that the keyboard is initialized. This prompt can appear very quickly, so you must watch for it, and then press F2. If you press F2 before the F2 prompt, this keystroke is lost. If you wait too long and the operating system logo appears, continue to wait until you see the desktop. Then, turn off your computer and try again.

The BIOS setup program is displayed.

- On the left pane, select **Settings > System Configuration > USB Configuration**.
The USB configuration is displayed on the right pane.
- Clear the **Enable Boot Support** check box to disable it.
- Save the settings and exit.

Wireless module

The following table lists the Wireless Local Area Network (WLAN) module specifications of your Vostro 5300.

Table 45. Wireless module specifications

Description	Option one	Option two	Option three
Model number	Qualcomm QCA61x4A (DW1820) (2x2) Wireless Adapter with Bluetooth 4.2	Intel Wi-Fi 6 AX201, 2x2, 802.11ax with Bluetooth 5.0	Intel Wireless-AC 9462, Dualband, Wi-Fi 802.11ac with Bluetooth 5.0
Transfer rate	<ul style="list-style-type: none">802.11ac - Up to 867 Mbps802.11n - Up to 450 Mbps802.11a/g - Up to 54 Mbps802.11b - Up to 11 Mbps	<ul style="list-style-type: none">2.4 GHz 40M: Up to 574 Mbps5 GHz 80M: Up to 1.2 Gbps5 GHz 160M: Up to 2.4 Gbps	Up to 433 Mbps
Frequency bands supported	2.4 GHz (802.11b/g/n) and 5 GHz (802.11a/n/ac)	2.4/5 GHz	2.4/5 GHz
Wireless standards	<ul style="list-style-type: none">802.11a, 802.11b, 802.11g, 802.11n and 802.11acDual-mode Bluetooth 4.2, BLE (HW ready, SW depends on OS)	IEEE 802.11a/b/g/n/ac/ax, 160MHz channel use	Wi-Fi 5 (WiFi 802.11ac)
Encryption	<ul style="list-style-type: none">64-bit/128-bit WEPAES-CCMPTKIP	<ul style="list-style-type: none">64/128-bit WEP128-bit AES-CCMPTKIP	<ul style="list-style-type: none">64-bit/128-bit WEPAES-CCMPTKIP
Bluetooth	Bluetooth 5.0	Bluetooth 5.0	Bluetooth 5.0

Identifying the wireless drivers

1. On the taskbar, click the search box, and then type `Device Manager`.
2. Click **Device Manager**.
The **Device Manager** window is displayed.
3. Expand **Network adapters**.


Turning on or off WiFi

1. Click the **Action Center** icon on the taskbar to access the Action Center.
2. Click **WiFi** to turn WiFi on or off.

 **NOTE:** Alternatively, press **Fn+PrtScr** on your keyboard to turn WiFi on or off.

Configuring the WiFi

1. Turn on WiFi. For more information, see [Turning on or off WiFi](#).
2. Click the **Action Center** icon on the taskbar to access the Action Center.
3. Right-click **WiFi**, and then click **Go to settings**.
A list of available networks is displayed.
4. Click **Show available networks**.
5. Select your network and click **Connect**.

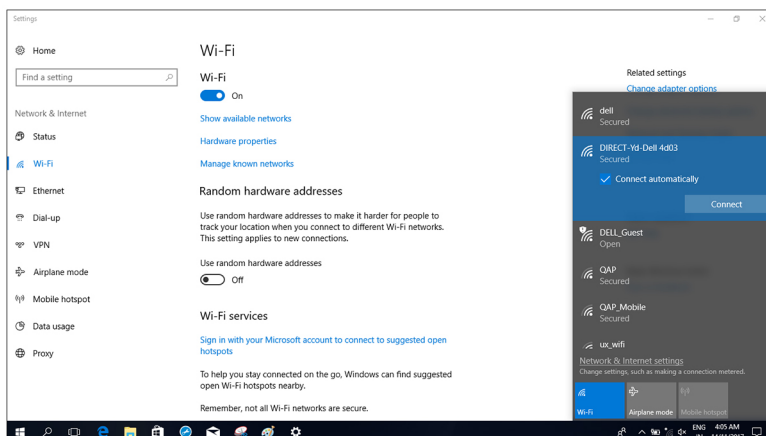

 **NOTE:** Type the network security key if prompted.

Identifying Bluetooth

1. On the taskbar, click the search box, and then type `Device Manager`.
2. Click **Device Manager**.
The **Device Manager** window is displayed.
3. Expand **Bluetooth**.


Turning on or off Bluetooth

1. Click the **Action Center** icon on the taskbar to access the Action Center.
2. Click **Bluetooth** to turn Bluetooth on or off.

Pairing the Bluetooth-enabled devices


1. Turn on Bluetooth. For more information, see [Turning on or off Bluetooth](#).

2. Click the **Action Center** icon on the taskbar to access the Action Center.
3. Right-click **Bluetooth**, and then click **Go to settings**.
4. Click **Add Bluetooth or other device**.
Add a device window is displayed.
5. Select the required Bluetooth device and click **Connect**.

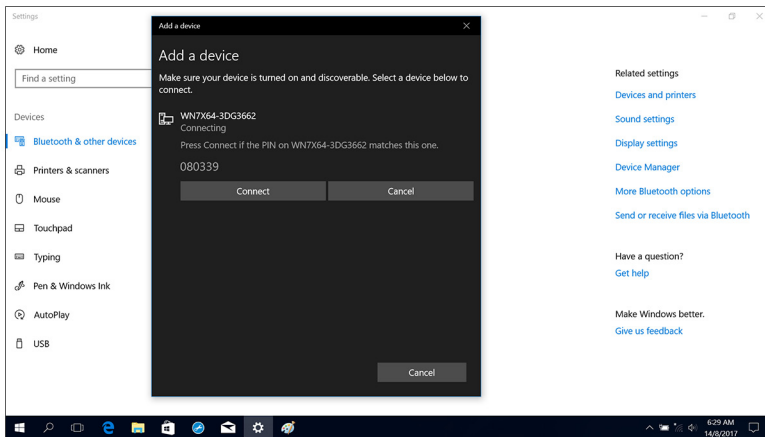


Removing the Bluetooth device

1. Click the **Action Center** icon on the taskbar to access the Action Center.
2. Right-click **Bluetooth**, and then click **Go to settings**.
3. Click the device you want to remove, and then click **Remove device**.

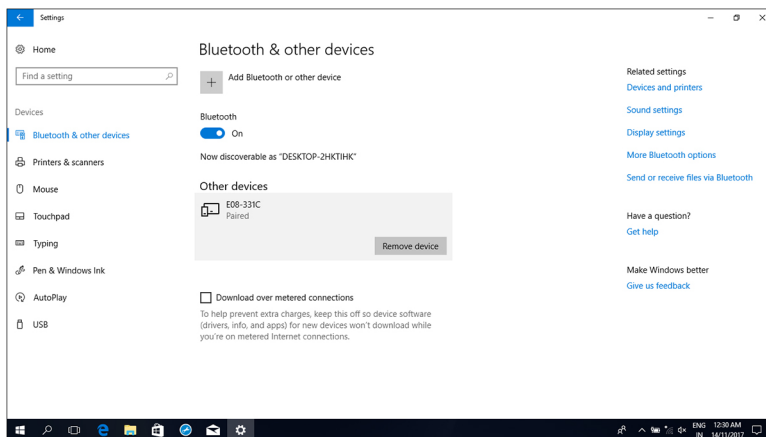

Transferring files between devices using Bluetooth

1. Click the **Action Center** icon on the taskbar to access the Action Center.
2. Right-click **Bluetooth**, and then click **Go to settings**.
3. Select your Bluetooth device.
4. Click **Send or receive files via Bluetooth**.
5. In the **Bluetooth File Transfer** window, click **Send files**, and then select the file you want to transfer.

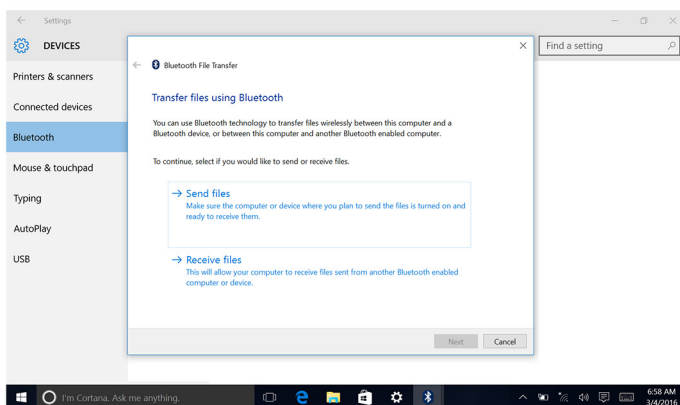

Media-card reader

The following table lists the media cards supported by your Vostro 5300.

Table 46. Media-card reader specifications

Description	Values
Media-card type	One micro-SD 3.0 card
Media-cards supported	Secure Digital (SD)

NOTE: The maximum capacity supported by the media-card reader varies depending on the standard of the media card installed in your computer.

Identifying the media-card reader

1. On the taskbar, click the search box, and then type `Device Manager`.
2. Click **Device Manager**.
The **Device Manager** window is displayed.
3. Expand **Universal Serial Bus controllers**.

Browsing a media card

1. Insert the media card with the metal contacts facing down.
The card will auto-play and a notification is displayed on the screen.
2. Follow the onscreen instructions.

Keyboard



The following table lists the keyboard specifications of your Vostro 5300.

Table 47. Keyboard specifications

Description	Values
Keyboard type	<ul style="list-style-type: none">Standard spill resistant keyboard (Optional backlit)
Keyboard layout	QWERTY/ KANJI
Number of keys	<ul style="list-style-type: none">United States and Canada: 81 keysUnited Kingdom: 82 keysJapan: 85 keys

Description	Values
Keyboard size	X=18.07 mm key pitch Y=18.07 mm key pitch
Keyboard shortcuts	<p>Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.</p> <p>NOTE: You can define the primary behavior of the function keys (F1–F12) changing Function Key Behavior in BIOS setup program.</p> <p>Keyboard shortcuts</p>

Changing the keyboard language

1. Click **Start** .
2. Click **Settings** .
3. Click **Time & language** > **Region & language**.
4. Click **Add a language**.
5. Choose the language you want to add and select a country for the language.
6. Under **Languages**, click the language that you want to set as the default language.
7. Click **Set as default**.

Keyboard shortcuts of Vostro 5300

NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.







Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. The symbol shown on the lower part of the key refers to the character that is typed out when the key is pressed. If you press shift and the key, the symbol shown on the upper part of the key is typed out. For example, if you press **2**, 2 is typed out; if you press **Shift + 2**, @ is typed out.







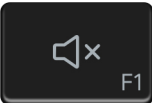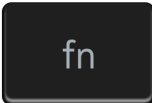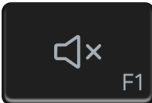





The keys **F1-F12** at the top row of the keyboard are function keys for multi-media control, as indicated by the icon at the bottom of the key. Press the function key to invoke the task represented by the icon. For example, pressing **F1** mutes the audio (refer to the table below).

However, if the function keys **F1-F12** are needed for specific software applications, multi-media functionality can be disabled by pressing **Fn + esc**. Subsequently, multimedia control can be invoked by pressing **Fn** and the respective function key. For example, mute audio by pressing **Fn + F1**.

NOTE: You can also define the primary behavior of the function keys (F1-F12) by changing Function Key Behavior in BIOS setup program.




Table 48. List of keyboard shortcuts







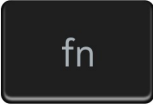


Function key	Redefined key (for multimedia control)	Behavior
	 + 	Mute audio
	 + 	Decrease volume

Function key	Redefined key (for multimedia control)	Behavior
 F3	fn +  F3	Increase volume
 F4	fn +  F4	Play/Pause
 F5	fn +  F5	Toggle keyboard backlight
 F6	fn +  F6	Decrease brightness
 F7	fn +  F7	Increase brightness
 F8	fn +  F8	Switch to external display
prt sc F10	fn + prt sc F10	Print screen
home F11	fn + home F11	Home
end F12	fn + end F12	End

The **Fn** key is also used with selected keys on the keyboard to invoke other secondary functions.

Table 49. List of keyboard shortcuts

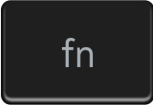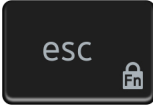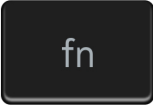Function key	Behavior
fn + 	Pause/Break
fn + 	Toggle scroll lock
fn + 	System request

Function key	Behavior
 + 	Open application menu
 + 	Toggle Fn-key lock
 + 	Toggle Battery charge LED and HDD LED behavior
 + 	Toggle Ultra performance mode
 + Space Bar	Emoji (Win + Period (.) or Win + Semicolon (;))

Touchpad

The following table lists the touchpad specifications of your Vostro 5300.

Table 50. Touchpad specifications

Description	Values
Touchpad resolution:	
Horizontal	1229
Vertical	749
Touchpad dimensions:	
Horizontal	105 mm (4.13 in.)
Vertical	65 mm (2.56 in.)
Touchpad gestures	For more information about touchpad gestures available on Windows 10, see the Microsoft knowledge base article 4027871 at support.microsoft.com .

Identifying the touchpad

1. On the taskbar, click the search box, and then type **Device Manager**.
2. Click **Device Manager**.
The **Device Manager** window is displayed.
3. Expand **Mice and other pointing devices**.

Touchpad gestures

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article [4027871](https://support.microsoft.com/4027871) at support.microsoft.com.

Power adapter

The following table lists the power adapter specifications of your Vostro 5300.

Table 51. Power adapter specifications

Description	Option one	Option two
Type	45 W	65 W
Connector dimensions:		
External diameter	4.50	4.50
Internal diameter	2.90	2.90
Input voltage	100 VAC–240 VAC	100 VAC–240 VAC
Input frequency	50 Hz–60 Hz	50 Hz–60 Hz
Input current (maximum)	1.30 A	1.60 A
Output current (continuous)	2.31 A	3.34 A
Rated output voltage	19.50 VDC	19.50 VDC
Temperature range:		
Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (32°F to 104°F)
Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

Chipset

The following table lists the details of the chipset supported by your Vostro 5300.

Table 52. Chipset

Description	Values
Chipset	Intel Q490
Processor	10 th Generation Intel Comet Lake Core i3/i5/i7
DRAM bus width	64-bit
Flash EPROM	16 MB + 8 MB
PCIe bus	Up to Gen3

Identifying the chipset

1. On the taskbar, click the search box, and then type `Device Manager`.
2. Click **Device Manager**.
The **Device Manager** window is displayed.
3. Expand **System devices**.



Memory

The following table lists the memory specifications of your Vostro 5300.

Table 53. Memory specifications

Description	Values
Memory slots	Onboard system memory
Memory type	Single-channel DDR4
Memory speed	2666 MHz
Maximum memory configuration	8 GB
Minimum memory configuration	4 GB
Memory configurations supported	<ul style="list-style-type: none">4 GB, 1 x 4 GB, Single-Channel DDR4, 2666 MHz8 GB, 1 x 8 GB, Single-Channel DDR4, 2666 MHz

Checking the system memory in Windows


1. Click **Start** .
2. Select **Settings** .
3. Click **System** > **About**.

Checking the system memory in BIOS setup program

1. Turn on or restart your computer.
2. Press F2 when the Dell logo is displayed to enter the BIOS setup program.
3. On the left pane, select **Settings** > **General** > **System Information**.
The memory information is displayed on the right pane.

Testing memory using ePSA diagnostics

1. Turn on or restart your computer.
2. Press F12 after the Dell logo is displayed on the screen to access the boot menu.
3. Use the arrow keys to highlight the **Diagnostics** menu option and press Enter.
4. Follow the instructions on the screen to complete the ePSA Pre-boot System Assessment (PSA).

 **NOTE:** If the operating system logo appears, wait until you see the desktop. Turn off your computer and try again.

Software

This chapter details the supported operating systems along with instructions on how to install the drivers.

Topics:

- [Operating system](#)
- [Downloading the audio driver](#)
- [Downloading the graphics driver](#)
- [Downloading the USB driver](#)
- [Downloading the WiFi driver](#)
- [Downloading the media-card reader driver](#)
- [Downloading the chipset driver](#)
- [Downloading the network driver](#)

Operating system

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)
- Ubuntu 18.04 LTS (64-bit)

Downloading the audio driver

1. Turn on your computer.
2. Go to www.dell.com/support.
3. Enter the Service Tag of your computer, and then click **Submit**.

 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.

4. Click **Drivers & downloads**.
5. Click the **Detect Drivers** button.
6. Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
7. If necessary, your computer starts to download and install **SupportAssist**.




 **NOTE:** Review on-screen instructions for browser-specific instructions.

8. Click **View Drivers for My System**.
9. Click **Download and Install** to download and install all driver updates detected for your computer.
10. Select a location to save the files.
11. If prompted, approve requests from **User Account Control** to make changes on the system.
12. The application installs all drivers and updates identified.




 **NOTE:** Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.

13. For manual download and installation, click **Category**.
14. Click **Audio** in the drop-down list.
15. Click **Download** to download the audio driver for your computer.
16. After the download is complete, navigate to the folder where you saved the audio driver file.
17. Double-click the audio driver file icon and follow the instructions on the screen to install the driver.




Downloading the graphics driver

1. Turn on your computer.
2. Go to www.dell.com/support.
3. Enter the Service Tag of your computer, and then click **Submit**.
 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
4. Click **Drivers & downloads**.
5. Click the **Detect Drivers** button.
6. Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
7. If necessary, your computer starts to download and install **SupportAssist**.
 **NOTE:** Review on-screen instructions for browser-specific instructions.
8. Click **View Drivers for My System**.
9. Click **Download and Install** to download and install all driver updates detected for your computer.
10. Select a location to save the files.
11. If prompted, approve requests from **User Account Control** to make changes on the system.
12. The application installs all drivers and updates identified.
 **NOTE:** Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.
13. For manual download and installation, click **Category**.
14. Click **Video** in the drop-down list.
15. Click **Download** to download the graphics driver for your computer.
16. After the download is complete, navigate to the folder where you saved the graphics driver file.
17. Double-click the graphics driver file icon and follow the instructions on the screen to install the driver.




Downloading the USB driver

1. Turn on your computer.
2. Go to www.dell.com/support.
3. Enter the Service Tag of your computer, and then click **Submit**.
 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
4. Click **Drivers & downloads**.
5. Click the **Detect Drivers** button.
6. Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
7. If necessary, your computer starts to download and install **SupportAssist**.
 **NOTE:** Review on-screen instructions for browser-specific instructions.
8. Click **View Drivers for My System**.
9. Click **Download and Install** to download and install all driver updates detected for your computer.
10. Select a location to save the files.
11. If prompted, approve requests from **User Account Control** to make changes on the system.
12. The application installs all drivers and updates identified.
 **NOTE:** Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.
13. For manual download and installation, click **Category**.
14. Click **Chipset** in the drop-down list.
15. Click **Download** to download the USB driver for your computer.
16. After the download is complete, navigate to the folder where you saved the USB driver file.
17. Double-click the USB driver file icon and follow the instructions on the screen to install the driver.




Downloading the WiFi driver

1. Turn on your computer.
2. Go to www.dell.com/support.
3. Enter the Service Tag of your computer, and then click **Submit**.
 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
4. Click **Drivers & downloads**.
5. Click the **Detect Drivers** button.
6. Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
7. If necessary, your computer starts to download and install **SupportAssist**.
 **NOTE:** Review on-screen instructions for browser-specific instructions.
8. Click **View Drivers for My System**.
9. Click **Download and Install** to download and install all driver updates detected for your computer.
10. Select a location to save the files.
11. If prompted, approve requests from **User Account Control** to make changes on the system.
12. The application installs all drivers and updates identified.
 **NOTE:** Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.
13. For manual download and installation, click **Category**.
14. Click **Network** in the drop-down list.
15. Click **Download** to download the WiFi driver for your computer.
16. After the download is complete, navigate to the folder where you saved the WiFi driver file.
17. Double-click the WiFi driver icon and follow the instructions on the screen to install the driver.




Downloading the media-card reader driver

1. Turn on your computer.
2. Go to www.dell.com/support.
3. Enter the Service Tag of your computer, and then click **Submit**.
 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
4. Click **Drivers & downloads**.
5. Click the **Detect Drivers** button.
6. Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
7. If necessary, your computer starts to download and install **SupportAssist**.
 **NOTE:** Review on-screen instructions for browser-specific instructions.
8. Click **View Drivers for My System**.
9. Click **Download and Install** to download and install all driver updates detected for your computer.
10. Select a location to save the files.
11. If prompted, approve requests from **User Account Control** to make changes on the system.
12. The application installs all drivers and updates identified.
 **NOTE:** Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.
13. For manual download and installation, click **Category**.
14. Click **Chipset** in the drop-down list.
15. Click **Download** to download the media-card reader driver for your computer.
16. After the download is complete, navigate to the folder where you saved the media-card reader driver file.
17. Double-click the media-card reader driver file icon and follow the instructions on the screen to install the driver.

Downloading the chipset driver

1. Turn on your computer.
2. Go to www.dell.com/support.
3. Enter the Service Tag of your computer, and then click **Submit**.
 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
4. Click **Drivers & downloads**.
5. Click the **Detect Drivers** button.
6. Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
7. If necessary, your computer starts to download and install **SupportAssist**.
 **NOTE:** Review on-screen instructions for browser-specific instructions.
8. Click **View Drivers for My System**.
9. Click **Download and Install** to download and install all driver updates detected for your computer.
10. Select a location to save the files.
11. If prompted, approve requests from **User Account Control** to make changes on the system.
12. The application installs all drivers and updates identified.
 **NOTE:** Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.
13. For manual download and installation, click **Category**.
14. Click **Chipset** in the drop-down list.
15. Click **Download** to download the chipset driver for your computer.
16. After the download is complete, navigate to the folder where you saved the saved the chipset driver file.
17. Double-click the chipset driver file icon and follow the instructions on the screen to install the driver.

Downloading the network driver



1. Turn on your computer.
2. Go to www.dell.com/support.
3. Enter the Service Tag of your computer, and then click **Submit**.
 **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
4. Click **Drivers & downloads**.
5. Click the **Detect Drivers** button.
6. Review and agree to the Terms and Conditions to use **SupportAssist**, then click **Continue**.
7. If necessary, your computer starts to download and install **SupportAssist**.
 **NOTE:** Review on-screen instructions for browser-specific instructions.
8. Click **View Drivers for My System**.
9. Click **Download and Install** to download and install all driver updates detected for your computer.
10. Select a location to save the files.
11. If prompted, approve requests from **User Account Control** to make changes on the system.
12. The application installs all drivers and updates identified.
 **NOTE:** Not all files can be installed automatically. Review the installation summary to identify if manual installation is necessary.
13. For manual download and installation, click **Category**.
14. Click **Network** in the drop-down list.
15. Click **Download** to download the network driver for your computer.
16. After the download is complete, navigate to the folder where you saved the network driver file.
17. Double-click the network driver file icon and follow the instructions on the screen to install the driver.

Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:



Table 54. Self-help resources

Self-help resources	Resource location
Information about Dell products and services	https://www.dell.com/
Dell Support	
Tips	
Contact Support	In Windows search, type <code>Contact Support</code> , and press Enter.
Online help for operating system	<ul style="list-style-type: none"> Windows: https://www.dell.com/support/windows Linux: https://www.dell.com/support/linux
Troubleshooting information, user manuals, set up instructions, product specifications, technical help blogs, drivers, software updates, and so on.	https://www.dell.com/support/home/
Dell knowledge base articles for various of system concerns:	<ol style="list-style-type: none"> Go to https://www.dell.com/support/home/?app=knowledgebase. Type the subject or keyword in the Search box. Click Search to retrieve the related articles.
Learn and get more information about your product:	<p>Dell provides several online and telephone-based support and service options. If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog.</p> <ul style="list-style-type: none"> Select Detect Product. Locate your product through the drop-down menu under View Products. Enter the Service Tag number or Product ID in the search bar. Once on product support page, scroll down to Manuals and Documents section to preview all the Manuals, documents, and other information for your product.

Contacting Dell

Dell provides several online and telephone-based support and service options. If you do not have an active Internet connection, you can find contact information about your purchase invoice, packing slip, bill, or Dell product catalog. Availability varies by country/region and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Go to <https://www.dell.com/support/>.
 2. Select your country/region from the drop-down menu on the lower right corner of the page.
 3. For **customized support**:
 - a. Enter your system Service Tag in the **Enter your Service Tag** field.
 - b. Click **submit**.
 - The support page that lists the various support categories is displayed.
 4. For **general support**:
 - a. Select your product category.
 - b. Select your product segment.
 - c. Select your product.
 - The support page that lists the various support categories is displayed.
 5. For contact details of Dell Global Technical Support, see <https://www.dell.com/contactdell>.

 **NOTE:** The Contact Technical Support page is displayed with details to call, chat, or email the Dell Global Technical Support team.
-  **NOTE:** Availability varies by country/region and product, and some services may not be available in your area.